

Programmable Controller
MELSEC-F

FX3U SERIES PROGRAMMABLE CONTROLLERS

USER'S MANUAL

Hardware Edition

Main Unit

AC Power Type

FX3U-□MR/ES
FX3U-□MT/ES
FX3U-□MT/ESS
FX3U-□MS/ES
FX3U-□MR/UA1

DC Power Type

FX3U-□MR/DS
FX3U-□MT/DS
FX3U-□MT/DSS

Input/Output Powered Extension Unit

FX2N-□E□-□

Input/Output Extension Block

FX2N-8E□-□
FX2N-16E□-□

Special Adapter

FX3U-4HSX-ADP

Display Module

FX3U-7DM

Memory Cassette

FX3U-FLROM-□



FX^{3U}



Safety Precautions


(Read these precautions before use.)

Before installation, operation, maintenance or inspection of this product, thoroughly read through and understand this manual and all of the associated manuals. Also, take care to handle the module properly and safely.

If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

This manual classifies the safety precautions into two categories:  **WARNING** and  **CAUTION**.


| | |
|--|---|
|  WARNING | Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury. |
|  CAUTION | Indicates that incorrect handling may cause hazardous conditions, resulting in medium or slight personal injury or physical damage. |


Depending on the circumstances, procedures indicated by  **CAUTION** may also cause severe injury.

It is important to follow all precautions for personal safety.

Store this manual in a safe place so that it can be taken out and read whenever necessary. Always forward it to the end user.

1. DESIGN PRECAUTIONS


|  WARNING | Reference |
|---|---|
| <ul style="list-style-type: none">• Make sure to have the following safety circuits outside of the PLC to ensure safe system operation even during external power supply problems or PLC failure. Otherwise, malfunctions may cause serious accidents.<ol style="list-style-type: none">1) Most importantly, have the following: an emergency stop circuit, a protection circuit, an interlock circuit for opposite movements (such as normal vs. reverse rotation), and an interlock circuit (to prevent damage to the equipment at the upper and lower positioning limits).2) Note that when the PLC CPU detects an error, such as a watchdog timer error, during self-diagnosis, all outputs are turned off. Also, when an error that cannot be detected by the PLC CPU occurs in an input/output control block, output control may be disabled. External circuits and mechanisms should be designed to ensure safe machinery operation in such a case.3) Note that the output current of the 24V DC service power supply varies depending on the model and the absence/presence of extension blocks. If an overload occurs, the voltage automatically drops, inputs in the PLC are disabled, and all outputs are turned off. External circuits and mechanisms should be designed to ensure safe machinery operation in such a case.4) Note that when an error occurs in a relay, triac or transistor output device, the output could be held either on or off. For output signals that may lead to serious accidents, external circuits and mechanisms should be designed to ensure safe machinery operation in such a case. | 145 170 191 234 254 296 319 359 446 |

|  CAUTION | Reference |
|---|---|
| <ul style="list-style-type: none">• Do not bundle the control line together with or lay it close to the main circuit or power line. As a guideline, lay the control line at least 100mm (3.94") or more away from the main circuit or power line. Noise may cause malfunctions.• Install module so that excessive force will not be applied to peripheral device connectors. Failure to do so may result in wire damage/breakage or PLC failure. | 145 170 191 234 254 296 319 359 446 |

Safety Precautions

(Read these precautions before use.)

2. SECURITY PRECAUTIONS


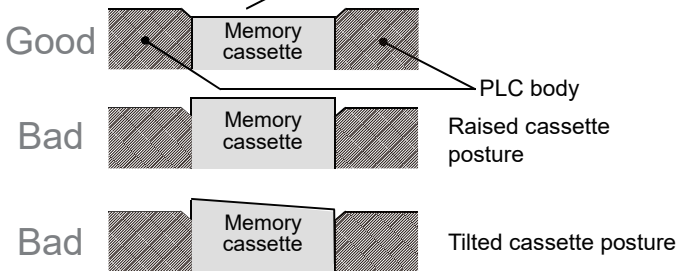
|  WARNING | Reference |
|---|---|
| <ul style="list-style-type: none">To maintain the security (confidentiality, integrity, and availability) of the programmable controller and the system against unauthorized access, denial-of-service (DoS) attacks, computer viruses, and other cyberattacks from unreliable networks and devices via network, take appropriate measures such as firewalls, virtual private networks (VPNs), and antivirus solutions. | 145 170 191 234 254 296 319 359 446 |

3. INSTALLATION PRECAUTIONS

|  WARNING | Reference |
|---|------------|
| <ul style="list-style-type: none">Make sure to cut off all phases of the power supply externally before attempting installation or wiring work. Failure to do so may cause electric shock or damage to the product. | 145 446 |

Safety Precautions


(Read these precautions before use.)


| <div style="text-align: center;">  CAUTION </div> | Reference | | | | |
|--|--|---------------|--|-----------------------------|---|
| <ul style="list-style-type: none"> Use the product within the generic environment specifications described in section 4.1 of this manual. Never use the product in areas with excessive dust, oily smoke, conductive dusts, corrosive gas (salt air, Cl₂, H₂S, SO₂ or NO₂), flammable gas, vibration or impacts, or expose it to high temperature, condensation, or rain and wind. If the product is used in such conditions, electric shock, fire, malfunctions, deterioration or damage may occur. Do not touch the conductive parts of the product directly. Doing so may cause device failures or malfunctions. Install the product securely using a DIN rail or mounting screws. <table border="1" data-bbox="280 591 1299 694"> <tr> <td>FX2N-10GM, FX2N-20GM, and terminal block</td><td>DIN rail only</td></tr> <tr> <td>Main unit, FX2N Series I/O extension unit/block, FX0N/FX2N/FX3U Series special function block, and special adapter</td><td>DIN rail or direct mounting</td></tr> </table> <ul style="list-style-type: none"> Install the product on a flat surface. If the mounting surface is rough, undue force will be applied to the PC board, thereby causing nonconformities. Make sure to affix the expansion board with tapping screws. Tightening torque should follow the specifications in the manual. Loose connections may cause malfunctions. When drilling screw holes or wiring, make sure that cutting and wiring debris do not enter the ventilation slits. Failure to do so may cause fire, equipment failures or malfunctions. Be sure to remove the dust proof sheet from the PLC's ventilation port when installation work is completed. Failure to do so may cause fire, equipment failures or malfunctions. Connect the extension cables, peripheral device cables, input/output cables and battery connecting cable securely to their designated connectors. Loose connections may cause malfunctions. Connect the display module, memory cassette, and expansion board securely to their designated connectors. Loose connections may cause malfunctions. Turn off the power to the PLC before attaching or detaching the following devices. Failure to do so may cause device failures or malfunctions. <ul style="list-style-type: none"> Peripheral devices, display modules, expansion boards and special adapters Extension units/blocks and FX Series terminal blocks Battery and memory cassette Connect the memory cassette securely to the appropriate connector. Loose connections may cause malfunctions. Installing the cassette in a raised or tilted posture can also cause malfunctions. Cross-sectional drawing (memory cassette installation position) <p style="text-align: center;">Cross-section drawing (memory cassette installation condition)</p> <div style="text-align: center;"> <p>Press the 4 corners in approx. 0.4mm(0.02")</p>  </div> | FX2N-10GM, FX2N-20GM, and terminal block | DIN rail only | Main unit, FX2N Series I/O extension unit/block, FX0N/FX2N/FX3U Series special function block, and special adapter | DIN rail or direct mounting | <div style="text-align: right;"> 146 447 470 </div> |
| FX2N-10GM, FX2N-20GM, and terminal block | DIN rail only | | | | |
| Main unit, FX2N Series I/O extension unit/block, FX0N/FX2N/FX3U Series special function block, and special adapter | DIN rail or direct mounting | | | | |

Safety Precautions

(Read these precautions before use.)

4. WIRING PRECAUTIONS


|  WARNING | Reference |
|--|--|
| <ul style="list-style-type: none"> Make sure to cut off all phases of the power supply externally before attempting installation or wiring work. Failure to do so may cause electric shock or damage to the product. Make sure to attach the terminal cover, offered as an accessory, before turning on the power or initiating operation after installation or wiring work. Failure to do so may cause electric shock. The temperature rating of the cable should be 80°C or more. | 146 170 173 177 191 234 254 296 319 447 |


|  CAUTION | Reference |
|---|---|
| <ul style="list-style-type: none"> Do not supply power to the [24+] and [24V] terminals (24V DC service power supply) on the main unit or extension units. Doing so may cause damage to the product. Perform class D grounding (grounding resistance: 100 Ω or less) to the grounding terminal on the main unit and extension units with a wire 2 mm² or thicker. Do not use common grounding with heavy electrical systems (refer to Section 9.4). Connect the AC power supply wiring to the dedicated terminals described in this manual. If an AC power supply is connected to a DC input/output terminal or DC power supply terminal, the PLC will burn out. Connect the DC power supply wiring to the dedicated terminals described in this manual. If an AC power supply is connected to a DC input/output terminal or DC power supply terminal, the PLC will burn out. Do not wire vacant terminals externally. Doing so may damage the product. When drilling screw holes or wiring, make sure that cutting and wiring debris do not enter the ventilation slits. Failure to do so may cause fire, equipment failures or malfunctions. Make sure to properly wire the FX3U Series main unit and FX0N/FX2N/FX3U Series extension equipment in accordance with the following precautions. Failure to do so may cause electric shock, equipment failures, a short-circuit, wire breakage, malfunctions, or damage to the product. <ul style="list-style-type: none"> The disposal size of the cable end should follow the dimensions described in the manual. Tightening torque should follow the specifications in the manual. Tighten the screws using a Phillips-head screwdriver No.2 (shaft diameter 6mm (0.24") or less). Make sure that the screwdriver does not touch the partition part of the terminal block. Make sure to properly wire to the terminal block (European type) in accordance with the following precautions. Failure to do so may cause electric shock, equipment failures, a short-circuit, wire breakage, malfunctions, or damage to the product. <ul style="list-style-type: none"> The disposal size of the cable end should follow the dimensions described in the manual. Tightening torque should follow the specifications in the manual. Twist the end of strand wire and make sure that there are no loose wires. Do not solder-plate the electric wire ends. Do not connect more than the specified number of wires or electric wires of unspecified size. Affix the electric wires so that neither the terminal block nor the connected parts are directly stressed. Make sure to properly wire to the FX Series terminal blocks in accordance with the following precautions. Failure to do so may cause electric shock, equipment failures, a short-circuit, wire breakage, malfunctions, or damage to the product. <ul style="list-style-type: none"> The disposal size of the cable end should follow the dimensions described in the manual. Tightening torque should follow the specifications in the manual. Tighten the screws using a Phillips-head screwdriver No.2 (shaft diameter 6mm (0.24") or less). Make sure that the screwdriver does not touch the partition part of the terminal block. | 147 171 173 177 192 235 240 248 249 253 255 297 320 447 456 |

Safety Precautions

(Read these precautions before use.)

5. STARTUP AND MAINTENANCE PRECAUTIONS

|  WARNING | Reference |
|---|-------------------|
| <ul style="list-style-type: none"> Do not touch any terminal while the PLC's power is on. Doing so may cause electric shock or malfunctions. Before cleaning or retightening terminals, cut off all phases of the power supply externally. Failure to do so may cause electric shock. Use the battery for memory backup correctly in conformance to this manual. <ul style="list-style-type: none"> Use the battery only for the specified purpose. Connect the battery correctly. Do not charge, disassemble, heat, put in fire, short-circuit, connect reversely, weld, swallow or burn the battery, or apply excessive forces (vibration, impact, drop, etc.) to the battery. Do not store or use the battery at high temperatures or expose to direct sunlight. Do not expose to water, bring near fire or touch liquid leakage or other contents directly. Incorrect handling of the battery may cause heat excessive generation, bursting, ignition, liquid leakage or deformation, and lead to injury, fire or failures and malfunctions of facilities and other equipment. When replacing the battery, make sure to use our specified product (FX3U-32BL). When a battery error occurs ("BATT" LED is lit in red), follow the description in this manual. Before modifying or disrupting the program in operation or running the PLC, carefully read through this manual and the associated manuals and ensure the safety of the operation. An operation error may damage the machinery or cause accidents. Do not change the program in the PLC from two or more peripheral equipment devices at the same time. (i.e. from a programming tool and a GOT) Doing so may cause destruction or malfunction of the PLC program. | 271 388 477 |

|  CAUTION | Reference |
|--|--------------------------|
| <ul style="list-style-type: none"> Turn off the power to the PLC before attaching or detaching the memory cassette. If the memory cassette is attached or detached while the PLC's power is on, the data in the memory may be destroyed, or the memory cassette may be damaged. Do not disassemble or modify the PLC. Doing so may cause fire, equipment failures, or malfunctions. For repair, contact your local Mitsubishi Electric representative. Turn off the power to the PLC before connecting or disconnecting any extension cable. Failure to do so may cause equipment failures or malfunctions. Turn off the power to the PLC before attaching or detaching the following devices. Failure to do so may cause equipment failures or malfunctions. <ul style="list-style-type: none"> Peripheral devices, display module, expansion boards, and special adapters Extension units/blocks and FX Series terminal blocks Battery and memory cassette Do not use the chemicals for cleaning. If there is the possibility of touching the PLC inside a control panel in maintenance, make sure to discharge to avoid the influence of static electricity. Since there are risks such as burn injuries, please do not touch the surface of the equipment with bare hands when it is operating in an environment which exceeds ambient temperature of 50°C. | 271 388 469 477 |


6. DISPOSAL PRECAUTIONS

|  CAUTION | Reference |
|--|-----------|
| <ul style="list-style-type: none"> Please contact a certified electronic waste disposal company for the environmentally safe recycling and disposal of your device. When disposing of batteries, separate them from other waste according to local regulations. (For details of the Battery Directive in EU countries, refer to Appendix F) | 271 |

Safety Precautions

(Read these precautions before use.)

7. TRANSPORTATION AND STORAGE PRECAUTIONS

|  CAUTION | Reference |
|---|------------|
| <ul style="list-style-type: none">• Before transporting the PLC, turn on the power to the PLC to check that the BATT LED is off. If the PLC is transported with the BATT LED on or the battery exhausted, the battery-backed data may be unstable during transportation.• The PLC is a precision instrument. During transportation, avoid impacts larger than those specified in the general specifications (section 4.1). Failure to do so may cause failures in the PLC. After transportation, verify the operations of the PLC.• When transporting lithium batteries, follow required transportation regulations. (For details of the regulated products, refer to Appendix E) | 272 477 |

FX3U Series Programmable Controllers

User's Manual - Hardware Edition

| | |
|-----------------|-------------|
| Manual number | JY997D16501 |
| Manual revision | Y |
| Date | 6/2024 |

Foreword

This manual contains text, diagrams and explanations which will guide the reader in the correct installation, safe use and operation of the FX3U Series Programmable Controllers and should be read and understood before attempting to install or use the unit.

And, store this manual in a safe place so that you can take it out and read it whenever necessary. Always forward it to the end user.

| |
|--|
| <p>This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.</p> |
|--|

Outline Precautions

- This manual provides information for the use of the FX3U Series Programmable Controllers. The manual has been written to be used by trained and competent personnel. The definition of such a person or persons is as follows;
 - 1) Any engineer who is responsible for the planning, design and construction of automatic equipment using the product associated with this manual should be of a competent nature, trained and qualified to the local and national standards required to fulfill that role. These engineers should be fully aware of all aspects of safety with regards to automated equipment.
 - 2) Any commissioning or service engineer must be of a competent nature, trained and qualified to the local and national standards required to fulfill that job. These engineers should also be trained in the use and maintenance of the completed product. This includes being completely familiar with all associated documentation for the said product. All maintenance should be carried out according to established safety practices.
 - 3) All operators of the completed equipment should be trained to use that product in a safe and coordinated manner in compliance to established safety practices. The operators should also be familiar with documentation which is connected with the actual operation of the completed equipment.

Note: The term 'completed equipment' refers to a third party constructed device which contains or uses the product associated with this manual

- This product has been manufactured as a general-purpose part for general industries, and has not been designed or manufactured to be incorporated in a device or system used in purposes related to human life.
- Before using the product for special purposes such as nuclear power, electric power, aerospace, medicine or passenger movement vehicles, consult with Mitsubishi Electric.
- This product has been manufactured under strict quality control. However when installing the product where major accidents or losses could occur if the product fails, install appropriate backup or failsafe functions in the system.
- When combining this product with other products, please confirm the standard and the code, or regulations with which the user should follow. Moreover, please confirm the compatibility of this product to the system, machine, and apparatus with which a user is using.
- If in doubt at any stage during the installation of the product, always consult a professional electrical engineer who is qualified and trained to the local and national standards. If in doubt about the operation or use, please consult your local Mitsubishi Electric representative.
- Since the examples indicated by this manual, technical bulletin, catalog, etc. are used as a reference, please use it after confirming the function and safety of the equipment and system. Mitsubishi Electric will accept no responsibility for actual use of the product based on these illustrative examples.
- This manual content, specification etc. may be changed without a notice for improvement.
- The information in this manual has been carefully checked and is believed to be accurate; however, if you have noticed a doubtful point, a doubtful error, etc., please contact your local Mitsubishi Electric representative.

Registration

Anywire and AnyWireASLINK are either registered trademarks or trademarks of Anywire Corporation. The company names, system names and product names mentioned in this manual are either registered trademarks or trademarks of their respective companies.

In some cases, trademark symbols such as TM or ® are not specified in this manual.

Table of Contents

| | |
|---------------------------------|------------|
| SAFETY PRECAUTIONS | (1) |
|---------------------------------|------------|

| | |
|--|-----------|
| Standards | 15 |
| Certification of UL, cUL standards | 15 |
| Compliance with EC directive (CE Marking) | 16 |
| Requirement for Compliance with EMC directive | 16 |
| Requirement for Compliance with LVD directive | 18 |
| Caution for compliance with EC Directive | 20 |
| Compliance with UKCA marking | 21 |
| 1. Introduction | 23 |
| 1.1 Introduction of Manuals | 23 |
| 1.1.1 Classification of major components in this manual | 23 |
| 1.1.2 Manual organization and position of this manual | 25 |
| 1.1.3 List of manuals | 26 |
| 1.2 Generic Names and Abbreviations Used in Manuals | 33 |
| 2. Features and Part Names | 36 |
| 2.1 Major Features | 36 |
| 2.2 Names and Functions of Parts | 38 |
| 2.2.1 Front Panel | 38 |
| 2.2.2 Sides | 40 |
| 3. Introduction of Products (Compliant with Overseas Standards) | 41 |
| 3.1 List of Products (to be Connected) and Interpretation of Model Names | 41 |
| 3.1.1 [A] Main units | 42 |
| 3.1.2 [B] Input/output powered extension units | 43 |
| 3.1.3 [C] Input/output extension blocks | 44 |
| 3.1.4 [D] [E] Special function units/blocks | 45 |
| 3.1.5 [F] Display modules and holder | 47 |
| 3.1.6 [G] Expansion boards | 48 |
| 3.1.7 [H] Special adapters | 48 |
| 3.1.8 [I] Extension power supply unit | 49 |
| 3.1.9 [J] Extension cables and connector conversion adapter | |
| [K] Battery [L] Memory cassettes | 50 |
| 3.1.10 [M] FX Series terminal blocks (cables and connectors) | 51 |
| 3.1.11 [N] Remote I/O | 51 |
| 3.1.12 [O] Power supply unit | 51 |
| 3.2 Connector Types and Cables for Program Communication | 52 |
| 3.2.1 Programming tool | 53 |
| 3.2.2 Communication cables | 53 |
| 3.2.3 Converters and interface | 54 |
| 4. Specifications, External Dimensions and Terminal Layout (Main Units) | 55 |
| 4.1 Generic Specifications | 55 |
| 4.1.1 Dielectric withstand voltage test and insulation resistance test | 56 |
| 4.2 Power Supply Specifications | 57 |
| 4.2.1 AC Power Supply/DC Input Type | 57 |

| | |
|---|----|
| 4.2.2 DC Power Supply/DC Input Type | 58 |
| 4.2.3 AC Power Supply/AC Input Type | 58 |
| 4.3 Input Specifications | 59 |
| 4.3.1 24V DC input (sink/source) type | 59 |
| 4.3.2 100V AC input type | 60 |
| 4.4 Output Specifications | 61 |
| 4.4.1 Relay output type | 61 |
| 4.4.2 Product life of relay contacts | 62 |
| 4.4.3 Transistor output (sink) type | 63 |
| 4.4.4 Transistor output (source) type | 64 |
| 4.4.5 Triac output type | 65 |
| 4.5 Performance Specifications | 66 |
| 4.6 External Dimensions (Weight and Installation) | 69 |
| 4.6.1 FX3U-16M□, FX3U-32M□ | 69 |
| 4.6.2 FX3U-48M□, FX3U-64M□, FX3U-80M□, FX3U-128M□ | 70 |
| 4.7 Terminal Layout | 71 |
| 4.7.1 Interpretation | 71 |
| 4.7.2 FX3U-16M□ | 72 |
| 4.7.3 FX3U-32M□ | 73 |
| 4.7.4 FX3U-48M□ | 74 |
| 4.7.5 FX3U-64M□ | 75 |
| 4.7.6 FX3U-80M□ | 76 |
| 4.7.7 FX3U-128M□ | 77 |

5. Version Information and Peripheral Equipment Connectability 78

| | |
|--|----|
| 5.1 Version Upgrade History | 78 |
| 5.1.1 How to look at manufacturer's serial number | 78 |
| 5.1.2 Version check method | 79 |
| 5.1.3 Version upgrade history | 79 |
| 5.2 Programming Tool Applicability | 80 |
| 5.2.1 Applicable versions of programming tool | 80 |
| 5.2.2 In case of programming tool (version) not applicable | 81 |
| 5.2.3 Program transfer speed and programming tools | 81 |
| 5.2.4 Cautions on connecting peripheral equipment by way of expansion board or special adapter | 82 |
| 5.2.5 Cautions on write during RUN | 83 |
| 5.3 Cautions on using transparent function by way of USB in GOT1000 Series | 87 |
| 5.4 Cautions on using transparent port (2-port) function of GOT-F900 Series | 88 |
| 5.5 Other Peripheral Equipment Applicability | 89 |
| 5.5.1 Other Peripheral Equipment Applicability | 89 |

6. Examination of System Configuration 90

| | |
|--|-----|
| 6.1 Configuration of a Whole System | 90 |
| 6.1.1 List of system components | 91 |
| 6.1.2 System configuration with special adapters | 93 |
| 6.2 Rules of System Configuration | 94 |
| 6.3 Number of Input/Output Points and Maximum Number of Input/Output Points | 96 |
| 6.3.1 Calculation of number of input/output points | 96 |
| 6.3.2 Maximum number of input/output points when CC-Link master is used | 98 |
| 6.3.3 Maximum number of input/output points when AnyWireASLINK master is used | 99 |
| 6.3.4 Maximum number of input/output points when AS-i master is used | 100 |
| 6.4 Number of Connected Special Extension Devices (Including Extension Cable) | 101 |
| 6.4.1 Expansion board and special adapter | 101 |
| 6.4.2 Special function units/blocks, High-speed input/output special adapter | 101 |
| 6.4.3 Extension cable | 102 |
| 6.5 Expansion of Main Unit (Calculation of Current Consumption) | 102 |
| 6.5.1 Quick reference matrix - when only input/output devices are added (AC Power Supply/DC Input Type) | 103 |

| | | |
|-------|---|-----|
| 6.5.2 | When special extension devices are also added [calculation of current consumption] (AC Power Supply/DC Input Type)..... | 104 |
| 6.5.3 | Quick reference matrix [when only input/output devices are added] (DC Power Type) | 107 |
| 6.5.4 | When special extension devices are also added [calculation of current consumption] (DC Power Type)..... | 108 |
| 6.5.5 | Quick reference matrix [when only input/output devices are added] (AC Power Supply/AC Input Type)..... | 111 |
| 6.5.6 | When special extension devices are also added [calculation of current consumption] (AC Power Supply/AC Input Type)..... | 112 |
| 6.6 | Expansion of FX2N Series I/O Powered Extension Unit (Calculation of Current Consumption) | 115 |
| 6.6.1 | Quick reference matrix (when only input/output devices are added)..... | 115 |
| 6.6.2 | When special extension devices are also added (calculation of current consumption)..... | 118 |
| 6.7 | Expansion of Extension Power Supply Unit (FX3U-1PSU-5V)..... | 120 |
| 6.8 | Number of Input/Output (Occupied) Points and Current Consumption | 123 |
| 6.8.1 | [A] Main units..... | 124 |
| 6.8.2 | [B] Expansion boards | 126 |
| 6.8.3 | [C] Special adapters | 126 |
| 6.8.4 | [D] Input/output powered extension units/blocks | 127 |
| 6.8.5 | [E] Special extension devices..... | 128 |
| 6.8.6 | [G] Display module | 129 |
| 6.8.7 | [H] Extension power supply unit | 129 |
| 6.9 | Example of System Configuration and System Modification..... | 130 |
| 6.9.1 | Example system configuration..... | 130 |
| 6.9.2 | Expansion of main unit | 131 |
| 6.9.3 | Re-examination of suitability for configuration..... | 134 |

7. Assignment of Input/Output Numbers (X/Y) and Unit Numbers 139

| | | |
|-------|---|-----|
| 7.1 | Assignment of Input/Output Numbers (X/Y)..... | 139 |
| 7.1.1 | Concept of assigning | 139 |
| 7.1.2 | Example of assigning | 140 |
| 7.1.3 | Application of I/O number label | 141 |
| 7.2 | Unit Numbers of Special Function Units/Blocks | 142 |
| 7.2.1 | Concept of assigning | 142 |
| 7.2.2 | Example of assigning | 143 |
| 7.2.3 | Application of unit number labels..... | 144 |
| 7.3 | Application of the trimmer layout label | 144 |

8. Installation In Enclosure 145

| | | |
|-------|---|-----|
| 8.1 | Generic Specifications | 148 |
| 8.2 | Installation location..... | 149 |
| 8.2.1 | Installation location in enclosure..... | 149 |
| 8.2.2 | Spaces in enclosure | 150 |
| 8.3 | Layout in Enclosure..... | 151 |
| 8.3.1 | 1-stage layout..... | 151 |
| 8.3.2 | 2-stage layout..... | 151 |
| 8.4 | Examination for Installing Method in Enclosure | 153 |
| 8.4.1 | Installing methods..... | 153 |
| 8.4.2 | Cautions on examining installing method | 153 |
| 8.4.3 | Examples of installation..... | 153 |
| 8.5 | Procedures for Installing on and Detaching from DIN Rail..... | 155 |
| 8.5.1 | Preparation for installation..... | 155 |
| 8.5.2 | Installation of main unit..... | 156 |
| 8.5.3 | Installation of input/output powered extension unit/block and special function unit/block | 157 |
| 8.5.4 | Removal of main unit..... | 158 |
| 8.6 | Procedures for Installing Directly (with M4 Screws)..... | 159 |
| 8.6.1 | Hole pitches for direct mounting | 159 |
| 8.6.2 | Example of mounting hole pitches..... | 162 |

| | |
|--|-----|
| 8.6.3 Installation of main unit..... | 163 |
| 8.6.4 Installation of input/output powered extension unit/block and special function unit/block | 163 |
| 8.7 Connecting Methods for Main Unit and Extension Devices | 164 |
| 8.7.1 Connection of extension devices..... | 164 |
| 8.7.2 Connecting method A - connection of expansion board..... | 165 |
| 8.7.3 Connecting method B - connection of special adapter..... | 166 |
| 8.7.4 Connecting method C - connection of powered extension unit/block to main unit | 167 |
| 8.7.5 Connecting method D - connection of powered extension units/blocks | 167 |
| 8.7.6 Connecting method E - connection of extension cable and FX2N-CNV-BC..... | 168 |
| 8.7.7 Connecting method F - connection of input/output powered extension unit..... | 168 |
| 8.7.8 Connecting method G - connection of extension block to input/output powered extension unit | 169 |

| | |
|---|------------|
| 9. Preparation for Wiring and Power Supply Wiring Procedures | 170 |
|---|------------|

| | |
|---|-----|
| 9.1 Preparation for Wiring | 172 |
| 9.1.1 Wiring procedures | 172 |
| 9.1.2 Removal and installation of quick-release terminal block (Except for the FX3U-16M□) | 172 |
| 9.2 Cable Connecting Procedures | 173 |
| 9.2.1 Input/output terminal block (power supply and input/output wiring)..... | 173 |
| 9.2.2 Input/output connectors | 176 |
| 9.2.3 Terminal block for Europe [expansion board and special adapters]..... | 177 |
| 9.2.4 Grounding terminal of the FX3U-ENET-ADP | 179 |
| 9.3 Power Supply Specifications..... | 180 |
| 9.3.1 AC Power Supply Type | 180 |
| 9.3.2 DC Power Supply Type | 181 |
| 9.4 Grounding | 182 |
| 9.5 Examples of External Wiring [AC Power Supply/DC Input Type]..... | 183 |
| 9.5.1 Example of input/output wiring with 24V DC service power supply..... | 183 |
| 9.5.2 Example of sink input [-common] wiring | 184 |
| 9.5.3 Example of source input [+common] wiring..... | 185 |
| 9.5.4 An external wiring example for the extension power supply unit (sink input [-common]) | 186 |
| 9.5.5 An external wiring example for the extension power supply unit (source input [+common]) | 187 |
| 9.6 Examples of External Wiring [DC Power Supply/DC Input Type] | 188 |
| 9.6.1 Example of sink input [-common] wiring | 188 |
| 9.6.2 Example of source input [+common] wiring..... | 189 |
| 9.7 Examples of External Wiring [AC Power Supply/AC Input Type]..... | 190 |
| 9.7.1 Example of AC input wiring | 190 |

| | |
|---|------------|
| 10. Input Wiring Procedures (Input Interruption and Pulse Catch) | 191 |
|---|------------|

| | |
|---|-----|
| 10.1 Before Starting Input Wiring | 193 |
| 10.1.1 Sink and source input (24V DC input type) | 193 |
| 10.2 24V DC Input Type (Common to Sink/Source Input) | 194 |
| 10.2.1 Input specifications (main unit)..... | 194 |
| 10.2.2 Handling of 24V DC input | 195 |
| 10.2.3 Instructions for connecting input devices..... | 196 |
| 10.2.4 Examples of external wiring (sink input) [AC Power Supply Type]..... | 198 |
| 10.2.5 Example of external wiring (source input) [AC Power Supply Type] | 200 |
| 10.2.6 Examples of external wiring (sink input) [DC power supply type]..... | 201 |
| 10.2.7 Example of external wiring (source input) [DC Power Supply Type]..... | 203 |
| 10.3 100V AC Input Type..... | 204 |
| 10.3.1 Input specifications (main unit)..... | 204 |
| 10.3.2 Handling of 100V AC Input | 205 |
| 10.3.3 Example of external wiring | 206 |
| 10.4 Input Interruption (I00□ to I50□) - With Delay Function..... | 207 |
| 10.4.1 Allocation of pointers to input numbers (input signal ON/OFF duration) | 207 |
| 10.4.2 Input interruption delay function | 207 |
| 10.4.3 Cautions for input interruption | 207 |
| 10.4.4 Examples of external wiring..... | 208 |

| | |
|---|-----|
| 10.5 Pulse Catch (M8170 to M8177) | 209 |
| 10.5.1 Allocation of special memories to input numbers (ON duration of input signals) | 209 |
| 10.5.2 Cautions for pulse catch | 209 |
| 10.5.3 Examples of external wiring..... | 210 |

| | |
|--|------------|
| 11. Use of High-speed Counters (C235 to C255) | 211 |
|--|------------|

| | |
|--|-----|
| 11.1 Outline | 211 |
| 11.2 Input Specifications | 212 |
| 11.2.1 High-speed input special adapter (FX3U-4HSX-ADP)..... | 212 |
| 11.2.2 Cautions on connecting mating device..... | 212 |
| 11.3 Types of Counting and Operations | 213 |
| 11.3.1 Classification according to counting method | 213 |
| 11.3.2 Types and input signal forms..... | 213 |
| 11.3.3 High-speed counter device notations | 213 |
| 11.4 List of Device Numbers and Functions | 214 |
| 11.5 Allocation of Device Numbers to Input Numbers | 216 |
| 11.5.1 Allocation table | 216 |
| 11.5.2 Inhibition of redundant use of input numbers | 217 |
| 11.6 Handling of High-speed Counters | 218 |
| 11.6.1 1-phase 1-count input..... | 218 |
| 11.6.2 1-phase 2-count input..... | 219 |
| 11.6.3 2-phase 2-count input..... | 220 |
| 11.7 Timing of Updating of Current Value and Comparison of Current Value | 221 |
| 11.7.1 Timing of updating of current value | 221 |
| 11.7.2 Comparison of current value | 221 |
| 11.8 Conditions for Hardware Counter to be Handled as Software Counter | 222 |
| 11.8.1 Conditions under which counters are handled as software counters | 222 |
| 11.8.2 Method of confirming operation status of counters..... | 222 |
| 11.9 Calculation of Response Frequency and Overall Frequency..... | 223 |
| 11.9.1 Response frequencies of hardware counters..... | 223 |
| 11.9.2 Response frequencies and overall frequency of software counters | 223 |
| 11.10 Examples of External Wiring (Rotary Encoder)..... | 226 |
| 11.10.1 1-phase 1-input [C235 to C245] | 226 |
| 11.10.2 2-phase 2-input [C251 to C255] | 227 |
| 11.10.3 Cautions for the other side device..... | 228 |
| 11.11 Related Devices and Function Switching Procedures | 229 |
| 11.11.1 Related devices..... | 229 |
| 11.11.2 [Function switching] switching of logic of external reset input signal..... | 231 |
| 11.11.3 [Function switching] switching of allocation and functions of input terminals | 231 |
| 11.11.4 [Function switching] procedures for using 2-phase 2-count input counters C251 to C255 in 4 edge count mode..... | 232 |
| 11.12 Cautions on Use..... | 233 |

| | |
|-------------------------------------|------------|
| 12. Output Wiring Procedures | 234 |
|-------------------------------------|------------|

| | |
|--|-----|
| 12.1 Sink and Source Output (Transistor)..... | 236 |
| 12.2 External Wiring for Relay Output..... | 237 |
| 12.2.1 Output specifications (main unit) relay output | 237 |
| 12.2.2 Product life of relay contacts | 238 |
| 12.2.3 Handling of relay output..... | 238 |
| 12.2.4 External wiring precautions | 239 |
| 12.2.5 Example of external wiring | 240 |
| 12.3 External Wiring of Transistor Output (Sink/Source) Type | 241 |
| 12.3.1 Output specifications (main unit) transistor output (sink) type | 242 |
| 12.3.2 Output specifications (main unit) transistor output (source) type | 243 |
| 12.3.3 Handling of transistor output..... | 244 |
| 12.3.4 External wiring precautions | 246 |
| 12.3.5 Example of external wiring | 248 |

| | |
|---|-----|
| 12.4 External Wiring for Triac (SSR) Output Type | 250 |
| 12.4.1 Output specification (main unit) triac output type | 250 |
| 12.4.2 Handling of triac output..... | 251 |
| 12.4.3 External wiring precautions | 252 |
| 12.4.4 Example of external wiring | 253 |

| | |
|--|------------|
| 13. Examples of Wiring for Various Uses | 254 |
|--|------------|

| | |
|--|-----|
| 13.1 Notes about Examples of Wiring | 255 |
| 13.2 Digital Switch [DSW Instruction (FNC 72)/BIN Instruction (FNC 19)] | 256 |
| 13.2.1 When DSW instructions are used..... | 256 |
| 13.2.2 When BIN instructions are used | 259 |
| 13.3 Ten Key Input [TKY Instruction (FNC 70)] | 260 |
| 13.4 Hexadecimal Input [HKY Instruction (FNC 71)]..... | 261 |
| 13.5 Input Matrix [MTR Instruction (FNC 52)] | 264 |
| 13.6 Seven Segment with Latch [SEGL Instruction (FNC 74)/BCD Instruction (FNC 18)] | 267 |
| 13.6.1 When SEGL instructions are used | 267 |
| 13.6.2 When BCD instructions are used | 269 |

| | |
|--|------------|
| 14. Test Operation, Adjustment, Maintenance and Troubleshooting | 271 |
|--|------------|

| | |
|---|-----|
| 14.1 Preparation for Test Operation..... | 272 |
| 14.1.1 Preliminary inspection [power OFF] | 272 |
| 14.1.2 Connection to built-in programming connector..... | 272 |
| 14.1.3 Writing of program and program check [power ON and PLC stopped] | 273 |
| 14.2 Running and Stopping Procedures [Power ON]..... | 274 |
| 14.2.1 Methods of running and stopping | 274 |
| 14.2.2 Use of several running/stopping methods | 275 |
| 14.3 Operation and Test [Power ON and PLC Running] | 276 |
| 14.3.1 Self-diagnostic function | 276 |
| 14.3.2 Test functions | 276 |
| 14.3.3 Program modification function | 277 |
| 14.4 Maintenance and Periodic Inspection | 278 |
| 14.4.1 Procedures for checking model name | 278 |
| 14.4.2 Periodic inspection - battery life, etc..... | 278 |
| 14.4.3 Maintenance - product life of relay contacts | 279 |
| 14.4.4 Procedures for replacing battery | 280 |
| 14.5 Troubleshooting with LEDs | 281 |
| 14.5.1 POWER LED [on/flashing/off]..... | 281 |
| 14.5.2 BATT LED [on/off] | 281 |
| 14.5.3 ERROR LED [on/flashing/off] | 282 |
| 14.6 Judgment by Error Codes and Representation of Error Codes | 283 |
| 14.6.1 Operation and check on display module (FX _{3U} -7DM) | 283 |
| 14.6.2 Operation and check by GX developer..... | 284 |
| 14.6.3 Representation of errors..... | 285 |
| 14.6.4 Error Code List and Action | 286 |
| 14.7 Troubleshooting | 294 |
| 14.7.1 Output does not operate (main unit and input/output extension blocks) | 294 |
| 14.7.2 24V DC input does not operate (main unit and input/output extension blocks)..... | 294 |
| 14.7.3 Cautions on registering a keyword | 295 |
| 14.7.4 Cautions on using block password..... | 295 |

| | |
|---|------------|
| 15. FX_{2N}-32/48E*-* (Input/Output Powered Extension Units) | 296 |
|---|------------|

| | |
|-----------------------------------|-----|
| 15.1 Outline..... | 298 |
| 15.1.1 Product configuration..... | 298 |
| 15.1.2 Product list..... | 298 |

| | |
|---|-----|
| 15.2 Power Supply Specifications (Power Supply Input/24V DC Service Power Supply) | 299 |
| 15.2.1 Weight, accessories, etc..... | 299 |
| 15.2.2 Part names | 300 |
| 15.3 FX2N-32ER-ES/UL, FX2N-48ER-ES/UL, FX2N-48ER-DS | 302 |
| 15.3.1 Product specifications..... | 302 |
| 15.3.2 External dimensions | 303 |
| 15.3.3 Terminal layout..... | 304 |
| 15.4 FX2N-32ET-ESS/UL, FX2N-48ET-ESS/UL, FX2N-48ET-DSS | 305 |
| 15.4.1 Product specifications..... | 305 |
| 15.4.2 External dimensions | 306 |
| 15.4.3 Terminal layout..... | 307 |
| 15.5 FX2N-32ER, FX2N-48ER, FX2N-48ER-D | 308 |
| 15.5.1 Product specifications..... | 308 |
| 15.5.2 External dimensions | 309 |
| 15.5.3 Terminal layout..... | 310 |
| 15.6 FX2N-32ET, FX2N-48ET, FX2N-48ET-D | 311 |
| 15.6.1 Product specifications..... | 311 |
| 15.6.2 External dimensions | 312 |
| 15.6.3 Terminal layout..... | 313 |
| 15.7 FX2N-32ES | 314 |
| 15.7.1 Product specifications..... | 314 |
| 15.7.2 External dimensions | 315 |
| 15.7.3 Terminal layout..... | 315 |
| 15.8 FX2N-48ER-UA1/UL | 316 |
| 15.8.1 Product specifications..... | 316 |
| 15.8.2 External dimensions | 317 |
| 15.8.3 Terminal layout..... | 318 |

16. FX2N-8/16E*-(Input/Output Extension Blocks)

319

| | |
|--|-----|
| 16.1 Outline..... | 320 |
| 16.1.1 Product type | 320 |
| 16.1.2 List of products | 321 |
| 16.2 FX2N-8ER-ES/UL (24V DC Sink/Source Input, Relay Output) | 323 |
| 16.2.1 Product specifications..... | 323 |
| 16.2.2 Parts identification and terminal arrangement | 324 |
| 16.2.3 External dimensions | 325 |
| 16.3 FX2N-8ER (24V DC Sink Input, Relay Output) | 326 |
| 16.3.1 Product specifications..... | 326 |
| 16.3.2 Parts identification and terminal arrangement | 327 |
| 16.3.3 External dimensions | 328 |
| 16.4 FX2N-8EX-ES/UL, FX2N-16EX-ES/UL (24V DC Sink/Source Input) | 329 |
| 16.4.1 Product specifications..... | 329 |
| 16.4.2 Parts identification and terminal arrangement | 330 |
| 16.4.3 External dimensions | 331 |
| 16.5 FX2N-8EX, FX2N-16EX and FX2N-16EX-C | 332 |
| 16.5.1 Product specifications..... | 332 |
| 16.5.2 Parts identification and terminal arrangement | 333 |
| 16.5.3 External dimensions | 334 |
| 16.6 FX2N-16EXL-C (5V DC Input: 16 Points)..... | 336 |
| 16.6.1 Product specifications..... | 336 |
| 16.6.2 Parts identification and terminal arrangement | 337 |
| 16.6.3 External dimensions | 337 |
| 16.6.4 Example of wiring | 337 |
| 16.7 FX2N-8EX-UA1/UL (100V AC Input)..... | 339 |
| 16.7.1 Product specifications..... | 339 |
| 16.7.2 Parts identification and terminal arrangement | 340 |
| 16.7.3 External dimensions | 340 |
| 16.8 FX2N-8EYR-ES/UL, FX2N-8EYR-S-ES/UL, FX2N-16EYR-ES/UL (Relay Output) | 341 |
| 16.8.1 Product specifications..... | 341 |
| 16.8.2 Parts identification and terminal arrangement | 342 |

| | |
|--|-----|
| 16.8.3 External dimensions | 344 |
| 16.9 FX2N-8EYT-ESS/UL, FX2N-16EYT-ESS/UL (Transistor Output) | 345 |
| 16.9.1 Product specifications..... | 345 |
| 16.9.2 Parts identification and terminal arrangement | 346 |
| 16.9.3 External dimensions | 347 |
| 16.10 FX2N-8EYR, FX2N-16EYR (Relay Output) | 348 |
| 16.10.1 Product specifications..... | 348 |
| 16.10.2 Parts identification and terminal arrangement..... | 349 |
| 16.10.3 External dimensions | 350 |
| 16.11 FX2N-8EYT, FX2N-16EYT and FX2N-16EYT-C (Transistor Output) | 351 |
| 16.11.1 Product specifications..... | 351 |
| 16.11.2 Parts identification and terminal arrangement..... | 352 |
| 16.11.3 External dimensions | 353 |
| 16.12 FX2N-8EYT-H (Transistor Output) | 355 |
| 16.12.1 Product specifications..... | 355 |
| 16.12.2 Parts identification and terminal arrangement..... | 356 |
| 16.12.3 External dimensions | 356 |
| 16.13 FX2N-16EYS (Triac Output: 16 Points)..... | 357 |
| 16.13.1 Product specifications..... | 357 |
| 16.13.2 Parts identification and terminal arrangement..... | 358 |
| 16.13.3 External dimensions | 358 |

| | |
|---|------------|
| 17. FX3U-1PSU-5V (Extension Power Supply Unit) | 359 |
|---|------------|

| | |
|---|-----|
| 17.1 Introduction | 359 |
| 17.2 Specifications | 360 |
| 17.2.1 Generic Specifications..... | 360 |
| 17.2.2 Performance Specifications..... | 360 |
| 17.2.3 External Dimensions..... | 360 |
| 17.3 Extension Power Supply Unit Related Precaution | 360 |

| | |
|--|------------|
| 18. Other Extension Devices and Optional Units (External Dimensions and Terminal Arrangement) | 361 |
|--|------------|

| | |
|---|-----|
| 18.1 Special Function Units/Blocks..... | 361 |
| 18.1.1 FX0N-3A | 361 |
| 18.1.2 FX2N-2AD..... | 361 |
| 18.1.3 FX2N-2DA..... | 362 |
| 18.1.4 FX3U-4AD..... | 362 |
| 18.1.5 FX3U-4DA..... | 363 |
| 18.1.6 FX2N-4AD..... | 363 |
| 18.1.7 FX2N-4DA..... | 364 |
| 18.1.8 FX2N-4AD-PT | 364 |
| 18.1.9 FX2N-4AD-TC..... | 365 |
| 18.1.10 FX2N-5A | 365 |
| 18.1.11 FX3U-4LC | 366 |
| 18.1.12 FX2N-2LC | 366 |
| 18.1.13 FX2N-8AD..... | 367 |
| 18.1.14 FX3U-2HC | 367 |
| 18.1.15 FX2N-1HC | 368 |
| 18.1.16 FX3U-20SSC-H | 368 |
| 18.1.17 FX3U-1PG | 369 |
| 18.1.18 FX2N-1PG(-E) | 369 |
| 18.1.19 FX2N-10PG | 370 |
| 18.1.20 FX2N-10GM..... | 370 |
| 18.1.21 FX2N-20GM..... | 371 |
| 18.1.22 FX2N-1RM(-E)-SET | 371 |
| 18.1.23 FX2N-232IF | 372 |
| 18.1.24 FX2N-32ASI-M..... | 372 |
| 18.1.25 FX3U-128ASL-M..... | 373 |

| | | |
|---------|------------------------------------|-----|
| 18.1.26 | FX3U-64DP-M | 373 |
| 18.1.27 | FX3U-32DP | 374 |
| 18.1.28 | FX2N-64CL-M | 374 |
| 18.1.29 | FX3U-16CCL-M | 375 |
| 18.1.30 | FX2N-16CCL-M | 375 |
| 18.1.31 | FX2N-32CCL | 376 |
| 18.1.32 | FX3U-64CCL | 376 |
| 18.1.33 | FX2N-16LNK-M | 377 |
| 18.2 | Extension Power Supply Unit | 377 |
| 18.2.1 | FX3U-1PSU-5V | 377 |
| 18.3 | Special Adapters | 378 |
| 18.3.1 | FX3U-4AD-ADP | 378 |
| 18.3.2 | FX3U-4DA-ADP | 378 |
| 18.3.3 | FX3U-3A-ADP | 378 |
| 18.3.4 | FX3U-4AD-PT(W)-ADP | 379 |
| 18.3.5 | FX3U-4AD-PNK-ADP | 379 |
| 18.3.6 | FX3U-4AD-TC-ADP | 379 |
| 18.3.7 | FX3U-232ADP(-MB) | 380 |
| 18.3.8 | FX3U-485ADP(-MB) | 380 |
| 18.3.9 | FX3U-ENET-ADP | 381 |
| 18.3.10 | FX3U-CF-ADP | 381 |
| 18.3.11 | FX3U-4HSX-ADP | 382 |
| 18.3.12 | FX3U-2HSY-ADP | 382 |
| 18.4 | Expansion Board | 383 |
| 18.4.1 | FX3U-USB-BD | 383 |
| 18.4.2 | FX3U-232-BD | 383 |
| 18.4.3 | FX3U-422-BD | 383 |
| 18.4.4 | FX3U-485-BD | 384 |
| 18.4.5 | FX3U-8AV-BD | 384 |
| 18.4.6 | FX3U-CNV-BD | 384 |
| 18.5 | Power Supply | 385 |
| 18.5.1 | FX2N-20PSU | 385 |
| 18.6 | Connector Conversion Adapter | 385 |
| 18.6.1 | FX2N-CNV-BC | 385 |
| 18.7 | Interface Module | 386 |
| 18.7.1 | FX-232AWC-H | 386 |
| 18.7.2 | FX-USB-AW | 386 |
| 18.8 | Display Module | 387 |
| 18.8.1 | FX3U-7DM | 387 |
| 18.8.2 | FX3U-7DM-HLD | 387 |

19. FX3U-7DM (Display Module)

388

| | | |
|--------|---|-----|
| 19.1 | Description of Products (Introduction of Related Products) | 389 |
| 19.2 | Specifications | 390 |
| 19.2.1 | Display/switch specifications | 390 |
| 19.2.2 | Parts layout | 390 |
| 19.2.3 | External dimensions | 390 |
| 19.3 | Installation and Removal | 391 |
| 19.4 | Summary of Functions | 392 |
| 19.5 | Procedure for Accessing the Menu Screen from the Title Screen | 393 |
| 19.5.1 | Title screen | 393 |
| 19.5.2 | Top screen (time display) | 393 |
| 19.5.3 | Menu screen | 393 |
| 19.6 | Menu Structure | 394 |
| 19.7 | Monitor/Test Mode [Excluding User-Registered Devices] | 396 |
| 19.7.1 | Relevant devices | 396 |
| 19.7.2 | Monitor mode operation | 397 |
| 19.7.3 | Monitor screen & status display | 398 |
| 19.7.4 | Test mode operation | 400 |
| 19.7.5 | Test mode operation notes | 403 |

| | |
|--|-----|
| 19.8 Monitor/Test Mode [User-Registered Devices] | 404 |
| 19.8.1 Monitor mode operation..... | 404 |
| 19.8.2 Test mode operation..... | 405 |
| 19.9 Error Check | 405 |
| 19.10 LANGUAGE (Menu Display Language Setting)..... | 406 |
| 19.10.1 Changing to Japanese menus..... | 406 |
| 19.10.2 Changing to English menus..... | 407 |
| 19.10.3 D8302 changes by program & related devices..... | 407 |
| 19.11 Contrast..... | 408 |
| 19.12 Clock Menu (Current Time Setting)..... | 409 |
| 19.12.1 Current time setting procedure | 409 |
| 19.12.2 Displaying the current time | 410 |
| 19.12.3 Changing the current time's "Year" from 2-digit format to 4-digit format | 410 |
| 19.13 Keyword (Entry code)..... | 411 |
| 19.13.1 Keyword (Entry code) types & levels..... | 411 |
| 19.13.2 Level-specific restrictions screen list | 412 |
| 19.13.3 Keyword (Entry code) storage..... | 413 |
| 19.13.4 Screens requiring keywords (entry codes) for access..... | 413 |
| 19.13.5 Canceling an keyword (entry code)..... | 414 |
| 19.13.6 Enabling an entry code..... | 415 |
| 19.14 Device All-Clear | 415 |
| 19.14.1 Device all-clear operation | 415 |
| 19.15 PLC Status | 416 |
| 19.15.1 Display operation..... | 416 |
| 19.15.2 PLC status display items | 417 |
| 19.16 Scan Time (Scan Time Display)..... | 418 |
| 19.16.1 Scan time display operation | 418 |
| 19.17 Cassette (Memory Cassette Transfers) | 418 |
| 19.17.1 Transfer from internal RAM to memory cassette (Cassette <- RAM)..... | 419 |
| 19.17.2 Transfer from memory cassette to internal RAM (Cassette -> RAM)..... | 420 |
| 19.17.3 Memory cassette & internal RAM consistency check (Cassette : RAM) | 421 |
| 19.18 System Information (Restrictions From PLC)..... | 422 |
| 19.18.1 System information list | 422 |
| 19.18.2 System information setting program example | 423 |
| 19.19 User (User-Registered Device Setting)..... | 424 |
| 19.19.1 System information - user-registered device setting | 424 |
| 19.19.2 Precaution when setting 3 or fewer devices | 424 |
| 19.19.3 Program example 1 (when 4 devices are displayed as user-registered devices) | 425 |
| 19.19.4 Program example 2 (when 3 or fewer devices are displayed as user-registered devices) | 426 |
| 19.19.5 Program example 3 (when 5 or more devices are displayed as user-registered devices) | 427 |
| 19.20 Operation Button ON/OFF Information | 429 |
| 19.20.1 Various applications | 429 |
| 19.20.2 System information - operation button ON/OFF information | 429 |
| 19.21 Specifying a Hexadecimal Current Value Display Format | 430 |
| 19.21.1 System information - specifying a hexadecimal current value display format | 430 |
| 19.21.2 Program example 1 (specifying a hexadecimal data display format) | 430 |
| 19.21.3 Program example 2 (specifying a decadal data display format)..... | 430 |
| 19.22 Display Screen Protect Function..... | 431 |
| 19.22.1 Keyword (Entry code) & display screen protect function levels and corresponding restrictions | 431 |
| 19.22.2 Relationship between keyword (entry code) & display screen protect function..... | 432 |
| 19.22.3 Keyword (Entry code) levels..... | 432 |
| 19.22.4 System information - display screen protect function | 433 |
| 19.22.5 Program example (screen protect function setting)..... | 433 |
| 19.22.6 Pointers for using the display screen protect function..... | 433 |
| 19.23 User Message Display Function | 434 |
| 19.23.1 System information - user message display function | 434 |
| 19.23.2 Shift JIS code arrangement precautions | 434 |
| 19.23.3 Displaying a word device current value as a message..... | 435 |
| 19.23.4 Program example 1 (user messages display switching) | 435 |
| 19.23.5 Program example 2 ([+] / [-] buttons for user message switching)..... | 436 |
| 19.23.6 Program example 3 (user messages plus data display)..... | 437 |
| 19.23.7 Character data input procedure..... | 440 |

| | |
|---|-----|
| 19.24 Operation Error Messages & Corrective Actions | 443 |
| 19.24.1 When a "Fatal error occurred" message appears | 444 |
| 19.25 Menu Display Characters - Japanese & English Display Character Correspondence Table | 445 |

| | |
|---|------------|
| 20. FX-16/32E*-*-TB (Terminal Block) | 446 |
|---|------------|

| | |
|--|-----|
| 20.1 Overview | 448 |
| 20.1.1 Product configuration | 449 |
| 20.2 External Dimensions & Component Names | 450 |
| 20.3 Terminal Arrangement | 451 |
| 20.4 Installation Work | 453 |
| 20.4.1 Mounting | 453 |
| 20.4.2 Removal | 453 |
| 20.4.3 Input/output cable connection | 453 |
| 20.4.4 Connection to terminal block | 454 |
| 20.5 FX-16E-TB, FX-32E-TB | 455 |
| 20.5.1 Internal circuit | 455 |
| 20.5.2 Example of input external wiring | 456 |
| 20.5.3 Output external wiring | 456 |
| 20.6 FX-16EX-A1-TB | 457 |
| 20.6.1 Specifications | 457 |
| 20.6.2 Internal circuit | 458 |
| 20.6.3 Example of input external wiring | 458 |
| 20.7 FX-16EYR-TB | 459 |
| 20.7.1 Specifications | 459 |
| 20.7.2 Internal circuit | 460 |
| 20.7.3 Example of output external wiring | 460 |
| 20.7.4 External wiring precautions | 461 |
| 20.7.5 Product life of relay output contacts | 462 |
| 20.8 FX-16EYT-TB, FX-16EYT-H-TB | 463 |
| 20.8.1 Specifications | 463 |
| 20.8.2 Internal circuit | 464 |
| 20.8.3 Example of output external wiring | 464 |
| 20.8.4 External wiring precautions | 465 |
| 20.9 FX-16EYS-TB | 466 |
| 20.9.1 Specifications | 466 |
| 20.9.2 Internal circuit | 467 |
| 20.9.3 Example of output external wiring | 467 |
| 20.9.4 External wiring precautions | 468 |

| | |
|---|------------|
| 21. FX_{3U}-FLROM-16/64/64L/1M (Memory Cassette) | 469 |
|---|------------|

| | |
|---|-----|
| 21.1 Specifications | 469 |
| 21.1.1 Electrical specifications | 469 |
| 21.1.2 Component names & external dimensions | 469 |
| 21.2 Installation & Removal | 470 |
| 21.2.1 Memory cassette installation | 470 |
| 21.2.2 Memory cassette removal | 471 |
| 21.3 Saved Data Content | 472 |
| 21.4 PROTECT Switch | 473 |
| 21.4.1 PROTECT switch setting | 473 |
| 21.4.2 PROTECT switch operation | 473 |
| 21.4.3 Precautions when setting and using the switch | 473 |
| 21.5 Memory Cassette <-> PLC (RAM Memory) Transfers Using the Loader Function | 474 |
| 21.5.1 Tool for pressing the [WR] and [RD] keys | 474 |
| 21.5.2 Writing (WR: 64L -> PLC) | 474 |
| 21.5.3 Reading (RD: 64L <- PLC) | 475 |
| 21.6 Transfers By Display Module Operation | 476 |

| | |
|--|------------|
| 21.7 Operation Precautions | 476 |
| 22. FX3U-32BL (Battery) | 477 |
| 22.1 Battery Purpose | 477 |
| 22.2 Specifications | 477 |
| 22.2.1 Differences between main unit's internal battery and the optional battery | 478 |
| 22.3 Battery Handling..... | 478 |
| 22.3.1 Battery life & replacement guidelines | 478 |
| 22.3.2 Reading the date of manufacture | 478 |
| 22.3.3 Special "battery low-voltage" device & notification program example | 479 |
| 22.4 Battery-Free Operation | 479 |
| 22.5 Battery Replacement..... | 480 |
| 22.6 Battery Related Precautions | 481 |
| Appendix A: Operation of Special Devices (M8000 -, D8000 -) | 482 |
| Appendix A-1 Special Auxiliary Relay (M8000 to M8511) | 482 |
| Appendix A-2 Special Data Register (D8000 to D8511)..... | 491 |
| Appendix A-3 Analog special adapters [M8260 to M8299 and D8260 to D8299]..... | 501 |
| Appendix A-3-1 Special auxiliary relays (M8260 to M8299)..... | 501 |
| Appendix A-3-2 Special data registers (D8260 to D8299)..... | 503 |
| Appendix B: Instruction List | 505 |
| Appendix B-1 Basic Instructions | 505 |
| Appendix B-2 Step Ladder Instructions | 505 |
| Appendix B-3 Applied Instructions ... in Ascending Order of FNC Number | 506 |
| Appendix C: Character-code | 510 |
| Appendix C-1 ASCII Code Table | 510 |
| Appendix D: Discontinued models | 512 |
| Appendix E: Precautions for Battery Transportation | 514 |
| Appendix E-1 Regulated FX3U Series products | 514 |
| Appendix E-2 Transport guidelines..... | 514 |
| Appendix F: Handling of Batteries and Devices with Built-in Batteries in EU Member States | 516 |
| Appendix F-1 Disposal precautions | 516 |
| Appendix F-2 Exportation precautions..... | 516 |
| Appendix F-3 Regulated FX3U Series products..... | 517 |
| Warranty..... | 518 |
| Revised History | 519 |

Standards

Certification of UL, cUL standards

FX3U series main units, FX3U series special adapters and FX2N input/output extension units/blocks supporting UL, cUL standards are as follows:

UL, cUL file number : E95239

Models :

MELSEC FX3U series manufactured

| | | | |
|--|------------------|-----------------|-----------------|
| FX3U-★ ★MR/ES | FX3U-★ ★MT/ES | FX3U-★ ★MT/ESS | |
| Where ★ ★ indicates:16,32,48,64,80,128 | | | |
| FX3U-★ ★MR/DS | FX3U-★ ★MT/DS | FX3U-★ ★MT/DSS | |
| Where ★ ★ indicates:16,32,48,64,80 | | | |
| FX3U-★ ★MS/ES | FX3U-★ ★MR/UA1 | | |
| Where ★ ★ indicates:32,64 | | | |
| FX3U-232ADP(-MB) | FX3U-485ADP(-MB) | FX3U-ENET-ADP | |
| FX3U-4AD-ADP | FX3U-4DA-ADP | FX3U-3A-ADP | FX3U-4AD-PT-ADP |
| FX3U-4AD-PTW-ADP | FX3U-4AD-PNK-ADP | FX3U-4AD-TC-ADP | |
| FX3U-4HSX-ADP | FX3U-2HSY-ADP | | |
| FX3U-CF-ADP | | | |

Models :

MELSEC FX2N series manufactured

| | | | |
|---------------------------|-------------------|-------------------|-------------------|
| FX2N-★ ★ER-ES/UL | FX2N-★ ★ET-ESS/UL | | |
| Where ★ ★ indicates:32,48 | | | |
| FX2N-48ER-DS | FX2N-48ET-DSS | FX2N-48ER-UA1/UL | |
| FX2N-8ER-ES/UL | FX2N-8EX-ES/UL | FX2N-8EYR-ES/UL | FX2N-8EYR-S-ES/UL |
| FX2N-8EYT-ESS/UL | FX2N-8EX-UA1/UL | | |
| FX2N-16EX-ES/UL | FX2N-16EYR-ES/UL | FX2N-16EYT-ESS/UL | FX2N-16EYS |

Compliance with EC directive (CE Marking)

This product complies with EC directive, however, this document does not guarantee that a mechanical system including this product will comply with EC directive.

Compliance to EMC directive and LVD directive of the entire mechanical module should be checked by the user / manufacturer. For more details please contact to the local Mitsubishi Electric sales site.

Requirement for Compliance with EMC directive

The following products have shown compliance through direct testing (of the identified standards below) and design analysis (through the creation of a technical construction file) to the European Directive for Electromagnetic Compatibility (2014/30/EU) when used as directed by the appropriate documentation.

Type : Programmable Controller (Open Type Equipment)

Models : MELSEC FX3U series manufactured

| | | | | |
|--------------------------|------------------------------------|------------------|-----------------|-----------------|
| from May 1st, 2005 | FX3U-★ ★MR/ES | | | |
| | Where ★ ★ indicates:16,32,48,64,80 | | | |
| | FX3U-4HSX-ADP | FX3U-2HSY-ADP | | |
| | FX3U-FLROM-16 | FX3U-FLROM-64L | | |
| | FX3U-7DM | | | |
| from June 1st, 2005 | FX3U-232ADP | FX3U-485ADP | | |
| | FX3U-4AD-ADP | FX3U-4DA-ADP | FX3U-4AD-PT-ADP | FX3U-4AD-TC-ADP |
| | FX3U-232-BD | FX3U-422-BD | FX3U-485-BD | FX3U-CNV-BD |
| | FX3U-USB-BD | | | |
| | FX3U-FLROM-64 | | | |
| from November 1st, 2005 | FX3U-★ ★MT/ES | FX3U-★ ★MT/ESS | | |
| | Where ★ ★ indicates:16,32,48,64,80 | | | |
| from February 1st, 2006 | FX3U-128MR/ES | FX3U-128MT/ES | FX3U-128MT/ESS | |
| | FX3U-★ ★MR/DS | FX3U-★ ★MT/DS | FX3U-★ ★MT/DSS | |
| | Where ★ ★ indicates:16,32,48,64,80 | | | |
| from April 1st, 2007 | FX3U-232ADP-MB | FX3U-485ADP-MB | | |
| from December 1st, 2007 | FX3U-4AD-PTW-ADP | FX3U-4AD-PNK-ADP | | |
| from June 1st, 2009 | FX3U-3A-ADP | FX3U-CF-ADP | | |
| from August 1st, 2010 | FX3U-8AV-BD | | | |
| from September 1st, 2010 | FX3U-★ ★MS/ES | FX3U-★ ★MR/UA1 | | |
| | Where ★ ★ indicates:32,64 | | | |
| from May 1st, 2011 | FX3U-FLROM-1M | | | |
| from February 1st, 2012 | FX3U-ENET-ADP | | | |

| Standard | Remark |
|---|--|
| EN61131-2:2007 Programmable controllers - Equipment requirements and tests | <p>Compliance with all relevant aspects of the standard.</p> <p>EMI</p> <ul style="list-style-type: none"> • Radiated Emission • Conducted Emission <p>EMS</p> <ul style="list-style-type: none"> • Radiated electromagnetic field • Fast transient burst • Electrostatic discharge • High-energy surge • Voltage drops and interruptions • Conducted RF • Power frequency magnetic field |

Models : MELSEC FX_{2N} series manufactured

| | | | |
|--------------------------|--------------------------------|--------------------------------|--------------------------------|
| from July 1st, 1997 | FX _{2N} -★ ★ER-ES/UL | FX _{2N} -★ ★ET-ESS/UL | |
| | Where ★ ★ indicates:32,48 | | |
| | FX _{2N} -16EX-ES/UL | FX _{2N} -16EYR-ES/UL | FX _{2N} -16EYT-ESS/UL |
| from April 1st, 1998 | FX _{2N} -48ER-DS | FX _{2N} -48ET-DSS | |
| from August 1st, 1998 | FX _{2N} -48ER-UA1/UL | | |
| from August 1st, 2005 | FX _{2N} -8ER-ES/UL | FX _{2N} -8EX-ES/UL | FX _{2N} -8EYR-ES/UL |
| | FX _{2N} -8EYT-ESS/UL | | |
| from September 1st, 2010 | FX _{2N} -8EYR-S-ES/UL | | |

For the products above, PLCs manufactured
before March 31st, 2002 are compliant with EN50081-2 (EN61000-6-4) and EN50082-2
from April 1st, 2002 to April 30th, 2006 are compliant with EN50081-2 (EN61000-6-4) and EN61131-2:1994
+A11:1996+A12:2000
after May 1st, 2006 are compliant with EN61131-2:2007

| Standard | | Remark |
|--|--|---|
| EN61000-6-4:2007 | - Generic emission standard Industrial environment | Compliance with all relevant aspects of the standard. |
| EN50081-2:1993 | Electromagnetic compatibility | <ul style="list-style-type: none"> • Emission-Enclosure port • Emission-Low voltage AC mains port • Emission-Telecommunications/network port |
| EN50082-2:1995 | Electromagnetic compatibility - Generic immunity standard Industrial environment | Compliance with all relevant aspects of the standard. <ul style="list-style-type: none"> • RF immunity • Fast Transients • ESD • Conducted • Power magnetic fields |
| EN61131-2:1994 /A11:1996 /A12:2000 | Programmable controllers - Equipment requirements and tests | Compliance with all relevant aspects of the standard. <ul style="list-style-type: none"> • Radiated electromagnetic field • Fast transient burst • Electrostatic discharge • Damped oscillatory wave |
| EN61131-2:2007 | Programmable controllers - Equipment requirements and tests | Compliance with all relevant aspects of the standard. EMI <ul style="list-style-type: none"> • Radiated Emission • Conducted Emission EMS <ul style="list-style-type: none"> • Radiated electromagnetic field • Fast transient burst • Electrostatic discharge • High-energy surge • Voltage drops and interruptions • Conducted RF • Power frequency magnetic field |

Requirement for Compliance with LVD directive

The following products have shown compliance through direct testing (of the identified standards below) and design analysis (through the creation of a technical construction file) to the European Directive for Low Voltage (2014/35/EU) when used as directed by the appropriate documentation.

Type : Programmable Controller (Open Type Equipment)

Models : MELSEC FX3U series manufactured

from May 1st, 2005 FX3U-★ ★MR/ES

Where ★ ★ indicates:16,32,48,64,80

from November 1st, 2005 FX3U-★ ★MT/ES FX3U-★ ★MT/ESS

Where ★ ★ indicates:16,32,48,64,80

from February 1st, 2006 FX3U-128MR/ES FX3U-128MT/ES FX3U-128MT/ESS

FX3U-★ ★MR/DS

Where ★ ★ indicates:16,32,48,64,80

from September 1st, 2010 FX3U-★ ★MS/ES FX3U-★ ★MR/UA1

Where ★ ★ indicates:32,64

For the products above, PLCs manufactured

before October 31st, 2018 are compliant with EN61131-2: 2007,

PLCs manufactured after November 1st, 2018 are compliant with EN61131-2: 2007 and EN61010-2-201: 2013.*¹

*1. For some models, PLCs manufactured in March, 2018 are compliant with LVD directive successively.

| Standard | Remark |
|---|--|
| EN61131-2:2007 Programmable controllers - Equipment requirements and tests | The equipment has been assessed as a component for fitting in a suitable control box which meets the requirements of EN61131-2:2007 |
| EN61010-2-201: 2013 Safety of electrical equipment for measurement, control, and test | The equipment has been assessed as a component for fitting in a suitable control box which meets the requirements of EN61010-2-201: 2013 |

Models : MELSEC FX_{2N} series manufactured

from July 1st, 1997 FX_{2N}-★ ★ER-ES/UL FX_{2N}-★ ★ET-ESS/UL
 Where ★ ★ indicates:32,48
 FX_{2N}-16EYR-ES/UL
 from April 1st, 1998 FX_{2N}-48ER-DS
 from August 1st, 1998 FX_{2N}-48ER-UA1/UL
 from August 1st, 2005 FX_{2N}-8ER-ES/UL FX_{2N}-8EYR-ES/UL
 from September 1st, 2010 FX_{2N}-8EYR-S-ES/UL

For the products above, PLCs manufactured
 before March 31st, 2002 are compliant with IEC1010-1
 from April 1st, 2002 to April 30th, 2006 are compliant with EN61131-2:1994+A11:1996+A12:2000
 from May 1st, 2006 to April 30th, 2018 are compliant with EN61131-2:2007
 after May 1st, 2018 are compliant with EN61131-2: 2007 and EN61010-2-201: 2013.*¹

*1. For some models, PLCs manufactured in March, 2018 are compliant with LVD directive successively.

| Standard | | Remark |
|------------------------------------|---|---|
| IEC1010-1:1990 /A1:1992 | Safety requirements for electrical equipment for measurement, control, and laboratory use - General requirements | The equipment has been assessed as a component for fitting in a suitable control box which meets the requirements of IEC 1010-1:1990+A1:1992 |
| EN61131-2:1994 /A11:1996 /A12:2000 | Programmable controllers - Equipment requirements and tests | The equipment has been assessed as a component for fitting in a suitable control box which meets the requirements of EN61131-2:1994+A11:1996+A12:2000 |
| EN61131-2:2007 | Programmable controllers - Equipment requirements and tests | The equipment has been assessed as a component for fitting in a suitable control box which meets the requirements of EN61131-2:2007 |
| EN61010-2-201: 2013 | Safety of electrical equipment for measurement, control, and test | The equipment has been assessed as a component for fitting in a suitable control box which meets the requirements of EN61010-2-201: 2013 |

Caution for compliance with EC Directive

- Please use the FX3U Series programmable controllers while installed in conductive shielded control panels under a general industrial environment.
- Programmable controllers are open-type devices that must be installed and used within conductive control panels. Please secure the control box lid to the control box (for conduction). Installation within a control box greatly affects the safety of the system and aids in shielding noise from the programmable controller.
- For the control panel, use the product having sufficient strength, fire protectiveness and shielding property to an installation environment.
- 24 V DC of the power supply must be supplied from the circuit double/reinforced insulated from the main power supply (MAINS).

Caution for compliance with the LVD directive (EN61010-2-201:2013)*1

- To an external connection port other than AC power supply terminal and AC input/output terminal, connect the circuit separated from a dangerous voltage by a double/reinforced insulation.
- Between the commons having the adjacent relay output terminals, if an external power supply is higher than 120 V AC, the insulation is basic.
Therefore, when using 120 V AC or higher external power supply and 30 V DC/AC or lower external power supply between the adjacent commons, do not handle 30 V DC/AC or lower external power supply as a touchable part, (When handling 30 V DC/AC or lower external power supply as a touchable part, add a basic insulation.)
- Do not wire two or more crimp terminals to one terminal. (If the wiring with two or more wires is needed, take an appropriate action such as adding an external terminal.)
- For crimp terminals to be used for the wiring applied with 30 V AC or higher, use the products with insulating sleeves.
- Cutoff device such as a breaker or a circuit protector should be installed in accordance with the following precautions.
 - Use EN60947-1 or EN60947-3 standards.
 - Place the cutoff device so that it can be operated easily.
 - Specify that the cutoff device is for this equipment.

*1. For the time of compliance with the LVD directive (EN61010-2-201:2013), refer to Requirement for Compliance with LVD directive.

Caution for Analog Products in use

The analog special adapters have been found to be compliant to the European standards in the aforesaid manual and directive. However, for the very best performance from what are in fact delicate measuring and controlled output devices, Mitsubishi Electric would like to make the following points;

As analog devices are sensitive by nature, their use should be considered carefully. For users of proprietary cables (integral with sensors or actuators), these users should follow those manufacturers' installation requirements.

Mitsubishi Electric recommends that shielded cables be used. If NO other EMC protection is provided, users may experience temporary induced errors not exceeding +10%/-10% in very heavy industrial areas.

However, Mitsubishi Electric suggests that if adequate EMC precautions are followed for the users complete control system.

- Sensitive analog cables should not be laid in the same trunking or cable conduit as high voltage cabling. Where possible, users should run analog cables separately.
- Good cable shielding should be used. When terminating the shield at Earth - ensure that no earth loops are accidentally created.
- When reading analog values, EMC induced errors can be smoothed out by averaging the readings. This can be achieved either through functions on the analog special adapters/blocks or through a user's program in the FX3U Series PLC main unit.

Compliance with UKCA marking

The requirements for compliance with the UKCA marking are the same as those with the EC Directive (CE marking).

MEMO

1. Introduction

This manual explains the procedures for selecting the system components, main unit specifications and procedures for installing the main unit, specifications for the input/output powered extension units/blocks, and procedures for adding input/output devices, and procedures for operating the display module etc. FX3U PLCs can make various kinds of control in combination with the main unit functions and many extension devices (expansion board, special adapters and special function units/blocks). The detailed explanation of the sequence instructions, communication control, analog control and positioning control are given in separate manuals.

→ For information on manual organization, refer to Subsection 1.1.2.

1.1 Introduction of Manuals

1.1.1 Classification of major components in this manual

1. Main unit (Chapter 1 to 14)

| Division | Outline | Reference |
|---|--|------------|
| Introduction of manuals | This chapter contains explanations of the procedures for obtaining the manuals and the abbreviations. | Chapter 1 |
| Features and part names | This chapter contains explanations of the product features and the names and functions of the parts. | Chapter 2 |
| Introduction of product | This chapter contains explanations of the structures for model names, extension products, and compliance to overseas standards. | Chapter 3 |
| Specifications | This chapter contains explanations of the specifications for power supply and input/output, external dimensions and terminal block layout. | Chapter 4 |
| Version information | This chapter contains explanation for upgrading of FX3U PLCs and information for the application of programming tools. | Chapter 5 |
| System configuration | Procedure for determining whether or not a system configuration is possible. Extension device current consumption and configuration examples. | Chapter 6 |
| Input/output No. and unit No. assignment | Input/output assignment procedure for input/output powered extension units/blocks, etc., and unit No. assignment procedure for special function unit/blocks. | Chapter 7 |
| Installation | This chapter contains explanations for the panel layout and the procedures for installing with DIN rail or screws and how to connect extension devices. | Chapter 8 |
| Power supply wiring | This chapter contains explanations of the procedures for preparing for wiring, power supply specifications and instructions for wiring. | Chapter 9 |
| Input wiring | This chapter contains explanations of the input specifications and instructions for wiring. | Chapter 10 |
| High-speed counter | This chapter contains explanations of the procedures for using the high-speed counter (FX3U-4HSX-ADP) examples of programming. | Chapter 11 |
| Output wiring | This chapter contains explanations for the output specifications and instructions for wiring. | Chapter 12 |
| Examples of wiring for each use | This chapter contains explanations of the procedures for wiring input/output devices for main uses. | Chapter 13 |
| Test operation, adjustment, maintenance and error check | This chapter contains explanations of the procedures for test operation and adjustment, maintenance and error check items and measures to be taken upon occurrence of error. | Chapter 14 |

2. Extension devices (Chapter 15 to 18)

| Division | Outline | Reference |
|---|--|------------|
| Input/output powered extension units | This chapter contains explanations for the input/output specifications, external dimensions and terminal layout for each product. | Chapter 15 |
| Input/output extension blocks | | Chapter 16 |
| Extension power supply unit | This chapter contains explanations of specifications for the extension power supply unit and external dimensions. | Chapter 17 |
| Extension products for special functions, such as analog control, positioning and communication | This chapter contains explanations for the external dimensions and terminal layout (For details, refer to the manual for each extension device). | Chapter 18 |

3. Optional products (Chapter 19 to 22)


| Division | Outline | Reference |
|---------------------------|---|------------|
| Display module | This chapter contains explanation of the specifications, external dimensions, mounting procedures and operating procedures for display modules. | Chapter 19 |
| FX Series terminal blocks | This chapter contains explanations of the procedures for wiring FX-16/32E□-TB. | Chapter 20 |
| Memory cassette | This chapter contains explanations of the specifications for the memory cassette and the installation procedures. | Chapter 21 |
| Battery | This chapter contains explanations of the procedures for replacing the battery and detecting battery voltage drop. | Chapter 22 |

4. Others (Appendices A to F)

| Division | Outline | Reference |
|---|--|------------|
| List of special devices | This chapter contains an explanation list of the special auxiliary relays (M8000 to M8511) and special data registers (D8000 to D8511) (For details, refer to the programming manual.) | Appendix A |
| List of instructions | This chapter contains an explanation list of the basic instructions and applied instructions (For details, refer to the programming manual.) | Appendix B |
| List of character codes | This chapter contains an explanation list of the character codes that can be displayed on the display module (FX3U-7DM) | Appendix C |
| List of discontinued models | The discontinued MELSEC-F Series PLC models and programming tools described in this manual. | Appendix D |
| Precautions for battery transportation | This chapter contains explanations for transport regulations and guidelines. | Appendix E |
| Handling of batteries and devices with Built-in batteries in EU member states | This chapter contains explanations for the disposal precautions of batteries and exporting batteries to EU member states. | Appendix F |

1.1.2 Manual organization and position of this manual

This manual describes detail on the hardware, including the system configuration, selection, installation and wiring. The instructions, communication control, analog control and positioning control are explained in separate manuals. Refer to the manuals as needed.

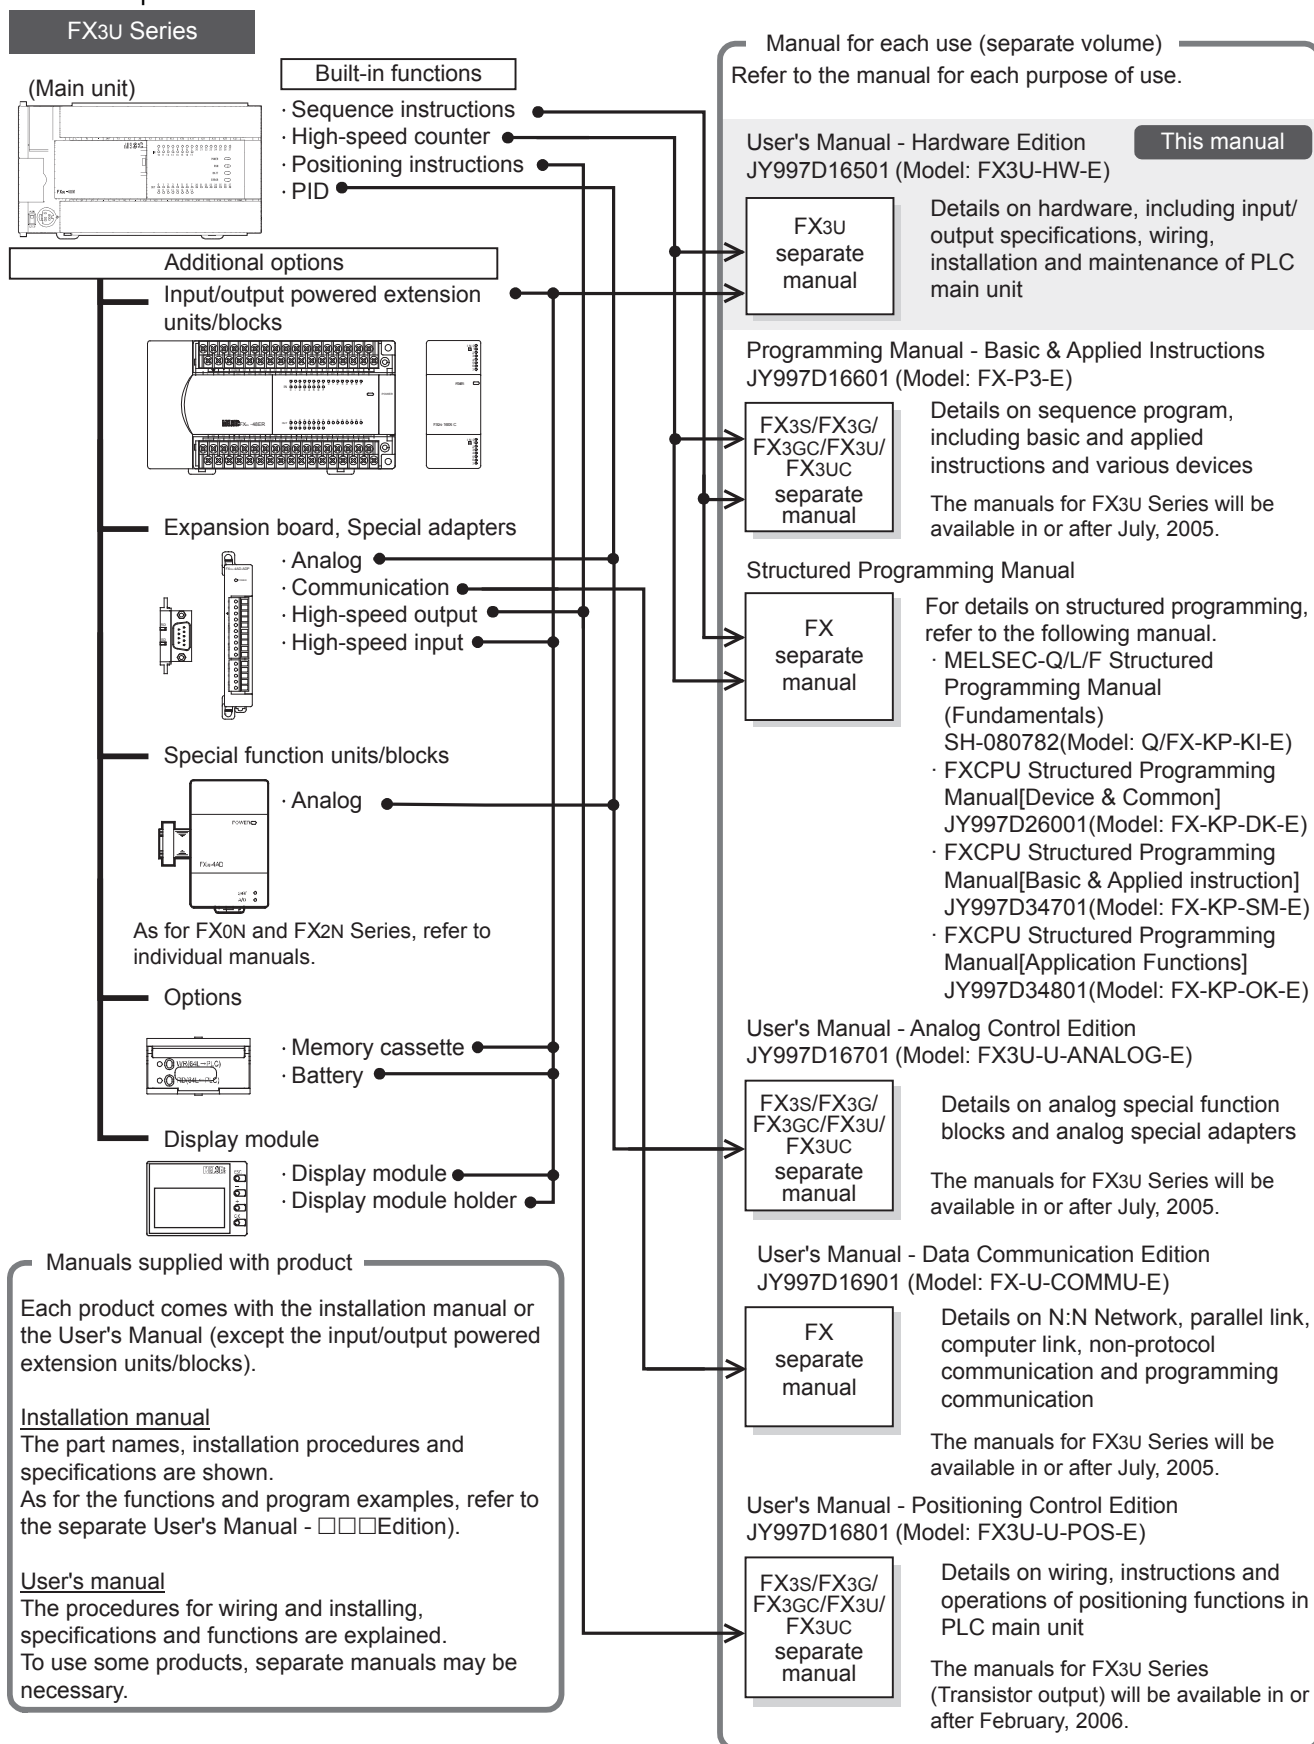

1.1.3 List of manuals

FX3U Series PLC main units supplied only with the hardware manual.

For details on the hardware of FX3U Series, refer to this manual.

For instructions for programming and hardware information on special function devices, refer to the relevant manuals.

⊙: Indispensable manuals ✓: Manuals necessary for some purposes △: Manuals with separate volumes for details

| | | Manual title | Manual number | Contents | Model name code |
|--|-----------------------|--|---------------|---|-----------------|
| Manuals for PLC main unit | | | | | |
| ■FX3U PLC main unit | | | | | |
| △ | Supplied with product | FX3U Series HARDWARE MANUAL | JY997D50301 | Extractions of descriptions of input/output specifications, wiring and installation of FX3U Series PLC main unit from FX3U Series User's Manual - Hardware Edition. For the detailed explanation, refer to this manual. | — |
| ⊙ | Separate volume | FX3U Series User's Manual - Hardware Edition (this manual) | JY997D16501 | Details on hardware of FX3U Series PLC main unit, including input/output specifications, wiring, installation and maintenance. | 09R516 |
| ■Programming | | | | | |
| ⊙ | Separate volume | FX3S/FX3G/FX3GC/FX3U/FX3UC Series Programming Manual - Basic & Applied Instruction Edition | JY997D16601 | Details on sequence programming for FX3S/FX3G/FX3GC/FX3U/FX3UC Series, including explanation for basic instructions, applied instructions and various devices. | 09R517 |
| ✓ | Separate volume | MELSEC-Q/L/F Structured Programming Manual (Fundamentals) | SH-080782 | Programming methods, specifications, functions, etc. required to create structured programs. | 13JW06 |
| ✓ | Separate volume | FX CPU Structured Programming Manual [Device & Common] | JY997D26001 | Devices, parameters, etc. provided in structured projects of GX Works2. | 09R925 |
| ✓ | Separate volume | FX CPU Structured Programming Manual [Basic & Applied Instruction] | JY997D34701 | Sequence instructions provided in structured projects of GX Works2. | 09R926 |
| ✓ | Separate volume | FX CPU Structured Programming Manual [Application Functions] | JY997D34801 | Application functions provided in structured projects of GX Works2. | 09R927 |
| ■FX Series terminal block | | | | | |
| ✓ | Supplied with product | FX INPUT AND OUTPUT TERMINAL BLOCKS USER'S GUIDE | JY992D50401 | Handling procedures for FX Series terminal block. | — |
| Manuals for communication control | | | | | |
| ■Common | | | | | |
| ✓ | Separate volume | FX Series User's Manual - Data Communication Edition | JY997D16901 | Details on N:N Network, parallel link, computer link and non-protocol communication (RS instructions, FX2N-232IF). | 09R715 |
| ✓ | Separate volume | FX3S/FX3G/FX3GC/FX3U/FX3UC Series User's Manual - MODBUS Serial Communication Edition | JY997D26201 | Details on MODBUS serial communication in FX3S/FX3G/FX3GC/FX3U/FX3UC PLCs. | — |

| | | Manual title | Manual number | Contents | Model name code |
|---|-----------------------|------------------------------------|---------------|--|-----------------|
| ■RS-232C/RS-422/RS-485/USB communication | | | | | |
| When using each product, refer also to the User's Manual - Hardware Edition for the PLC main unit to be installed and FX Series User's Manual - Data Communication Edition. | | | | | |
| For the MODBUS communication, refer to the FX3S/FX3G/FX3GC/FX3U/FX3UC Series User's Manual - MODBUS Serial Communication Edition. | | | | | |
| △ | Supplied with product | FX3U-USB-BD User's Manual | JY997D13501 | System configuration of the USB communication expansion board and procedures for installing the driver. | — |
| △ | Supplied with product | FX3U-232-BD Installation Manual | JY997D12901 | Handling procedures for the RS-232C communication expansion board. | — |
| △ | Supplied with product | FX3U-232ADP-MB Installation Manual | JY997D26401 | Details on handling the RS-232C communication special adapter. | — |
| △ | Supplied with product | FX3U-232ADP Installation Manual | JY997D13701 | Handling procedures for the RS-232C communication special adapter. | — |
| △ | Supplied with product | FX2N-232IF Hardware Manual | JY992D73501 | Handling procedures for the RS-232C communication special function block. | — |
| △ | Supplied with product | FX3U-422-BD Installation Manual | JY997D13101 | Handling procedures for the RS-422 communication expansion board. | — |
| △ | Supplied with product | FX3U-485-BD Installation Manual | JY997D13001 | Handling procedures for the RS-485 communication expansion board. | — |
| △ | Supplied with product | FX3U-485ADP-MB Installation Manual | JY997D26301 | Details on handling the RS-485 communication special adapter. | — |
| △ | Supplied with product | FX3U-485ADP Installation Manual | JY997D13801 | Handling procedures for the RS-485 communication special adapter. | — |
| ✓ | Supplied with product | FX-485PC-IF Hardware Manual | JY992D81801 | Handling procedures for the RS-232C/RS-485 conversion interface. | — |
| ■Ethernet, CC-Link, CC-Link/LT, AnyWireASLINK, PROFIBUS-DP, MELSEC I/O LINK, and AS-i | | | | | |
| When using each product, also refer to the User's Manual - Hardware Edition for the PLC main unit to be installed. | | | | | |
| △ | Supplied with product | FX3U-ENET-ADP Installation Manual | JY997D47401 | Handling procedures for the FX3U-ENET-ADP Ethernet communication special adapter. When using, also refer to FX3U-ENET-ADP User's Manual. | — |
| ✓ | Separate volume | FX3U-ENET-ADP User's Manual | JY997D45801 | Details on FX3U-ENET-ADP Ethernet communication special adapter. | 09R725 |
| △ | Supplied with product | FX3U-16CCL-M Installation Manual | JY997D43401 | Handling procedures for the CC-Link master special function block. When using, also refer to FX3U-16CCL-M User's Manual. | — |
| ✓ | Separate volume | FX3U-16CCL-M User's Manual | JY997D43601 | Details on CC-Link master special function block. | 09R724 |
| △ | Supplied with product | FX2N-16CCL-M Hardware Manual | JY992D93201 | Handling procedures for the CC-Link master special function block. When using, also refer to FX2N-16CCL-M User's Manual. | — |
| ✓ | Separate volume | FX2N-16CCL-M User's Manual | JY992D93101 | Details on CC-Link master special function block. | 09R710 |
| △ | Supplied with product | FX3U-64CCL Installation Manual | JY997D29801 | Details on handling the CC-Link interface special function block. When using, also refer to the FX3U-64CCL User's Manual. | — |
| ✓ | Separate volume | FX3U-64CCL User's Manual | JY997D30401 | Details on the CC-Link interface special function block. | 09R718 |

| | |
|----|-------------------------------------|
| 1 | Introduction |
| 2 | Features and Part Names |
| 3 | Product Introduction |
| 4 | Specifications |
| 5 | Version and Peripheral Devices |
| 6 | System Configuration |
| 7 | Input/Output Nos., Unit Nos. |
| 8 | Installation |
| 9 | Preparation and Power Supply Wiring |
| 10 | Input Wiring |

| | | Manual title | Manual number | Contents | Model name code |
|--|-----------------------|---|---|---|-----------------|
| △ | Supplied with product | FX2N-32CCL Installation Manual | JY997D52401 | Handling procedures for the CC-Link remote device station special function block. When using, also refer to FX2N-32CCL User's Manual. | — |
| ✓ | Separate volume | FX2N-32CCL User's Manual | JY992D71801 | Details on the CC-Link remote device station special function block. | 09R711 |
| ✓ | Supplied with product | Remote I/O station, remote device station and intelligent device station for CC-Link | As for the remote I/O station, remote device station and intelligent device station for CC-Link, refer to the relevant manuals and related documents. | | — |
| △ | Supplied with product | FX2N-64CL-M User's Manual - Hardware Volume | JY997D05401 | Handling procedures for the CC-Link/LT master special function block. When using, also refer to FX2N-64CL-M User's Manual - Details. | — |
| ✓ | Separate volume | FX2N-64CL-M User's Manual - Detailed Volume | JY997D08501 | Details on the CC-Link/LT master special function block. | — |
| ✓ | Supplied with product | Remote I/O station, remote device station, power supply adapter and dedicated power supply for CC-Link/LT | As for the remote I/O station, remote device station power supply adapter and dedicated power supply for CC-Link/LT, refer to the relevant manuals and related documents. | | — |
| △ | Supplied with product | FX3U-128ASL-M Installation Manual | JY997D51901 | Handling procedures for the FX3U-128ASL-M AnyWireASLINK master block. When using, also refer to FX3U-128ASL-M User's Manual. | — |
| ✓ | Separate volume | FX3U-128ASL-M User's Manual | JY997D52101 | Details on FX3U-128ASL-M AnyWireASLINK master block. | 09R731 |
| △ | Supplied with product | FX3U-64DP-M Installation Manual | JY997D19901 | Handling procedures for the FX3U-64DP-M PROFIBUS-DP master block. When using, also refer to FX3U-64DP-M User's Manual. | — |
| ✓ | Separate volume | FX3U-64DP-M User's Manual | JY997D19201 | Details on FX3U-64DP-M PROFIBUS-DP master block. | 09R632 |
| △ | Supplied with product | FX3U-32DP Installation Manual | JY997D24901 | Handling procedures for the FX3U-32DP PROFIBUS-DP Interface block. When using, also refer to FX3U-32DP User's Manual. | — |
| ✓ | Separate volume | FX3U-32DP User's Manual | JY997D25201 | Details on FX3U-32DP PROFIBUS-DP Interface block. | 09R633 |
| ✓ | Supplied with product | FX2N-32ASI-M User's Manual | JY992D76901 | Handling procedures for the AS-i system master special function block. | — |
| ✓ | Supplied with product | FX2N-16LNK-M User's Manual | JY992D72101 | Handling procedures for the MELSEC I/O LINK master special function block. | 09R703 |
| Manuals for analog/temperature control | | | | | |
| ■ Common | | | | | |
| ✓ | Separate volume | FX3S/FX3G/FX3GC/FX3U/FX3UC Series User's Manual - Analog Control Edition | JY997D16701 | Details on analog special function block (FX3U-4AD, FX3U-4DA, FX3UC-4AD) and analog special adapter (FX3U-***-ADP). | 09R619 |
| ■ Analog input, temperature input and temperature control | | | | | |
| When using each product, also refer to the User's Manual - Hardware Edition for the PLC main unit to be installed. | | | | | |
| ✓ | Supplied with product | FX2N-2AD User's Guide | JY992D74701 | Handling procedures for the 2-ch analog input special function block. | — |
| △ | Supplied with product | FX3U-4AD Installation Manual | JY997D20701 | Handling procedures for the 4-ch analog input special function block. When using, also refer to FX3S/FX3G/FX3GC/FX3U/FX3UC Series User's Manual - Analog Control Edition. | — |

| | | Manual title | Manual number | Contents | Model name code |
|--|-----------------------|--------------------------------|---------------|--|-----------------|
| △ | Supplied with product | FX3U-4AD-ADP User's Manual | JY997D13901 | Handling procedures for the 4-ch analog input special adapter. When using, also refer to FX3S/FX3G/FX3GC/FX3U/FX3UC Series User's Manual - Analog Control Edition. | — |
| ✓ | Supplied with product | FX2N-4AD User's Guide | JY992D65201 | Handling procedures for the 4-ch analog input special function block. | — |
| ✓ | Supplied with product | FX2N-8AD User's Manual | JY992D86001 | Handling procedures for the 8-ch analog input special function block (to be used also for thermocouple input). | 09R608 |
| △ | Supplied with product | FX3U-4AD-PT-ADP User's Manual | JY997D14701 | Handling procedures for the 4-ch Pt100 temperature sensor input special adapter. When using, also refer to FX3S/FX3G/FX3GC/FX3U/FX3UC Series User's Manual - Analog Control Edition. | — |
| △ | Supplied with product | FX3U-4AD-PTW-ADP User's Manual | JY997D29101 | Details on handling the 4-ch Pt100 temperature sensor input special adapter. When using, also refer to FX3S/FX3G/FX3GC/FX3U/FX3UC Series User's Manual - Analog Control Edition. | — |
| △ | Supplied with product | FX3U-4AD-PNK-ADP User's Manual | JY997D29201 | Details on handling the 4-ch Pt1000/Ni1000 temperature sensor input special adapter. When using, also refer to FX3S/FX3G/FX3GC/FX3U/FX3UC Series User's Manual - Analog Control Edition. | — |
| ✓ | Supplied with product | FX2N-4AD-PT User's Guide | JY992D65601 | Handling procedures for the 4-ch Pt100 temperature sensor input special function block. | — |
| △ | Supplied with product | FX3U-4AD-TC-ADP User's Manual | JY997D14801 | Handling procedures for the 4-ch thermocouple input special adapter. When using, also refer to FX3S/FX3G/FX3GC/FX3U/FX3UC Series User's Manual - Analog Control Edition. | — |
| ✓ | Supplied with product | FX2N-4AD-TC User's Guide | JY992D65501 | Handling procedures for the 4-ch thermocouple input special function block. | — |
| △ | Supplied with product | FX2N-2LC User's Guide | JY992D85601 | Handling procedures for the 2-ch temperature control special function block. When using, also refer to FX2N-2LC User's Manual. | — |
| ✓ | Separate volume | FX2N-2LC User's Manual | JY992D85801 | Handling procedures for the 2-ch temperature control special function block. | 09R607 |
| △ | Supplied with product | FX3U-4LC Installation Manual | JY997D38901 | Handling procedures for the 4-ch temperature control special function block. When using, also refer to FX3U-4LC User's Manual. | — |
| ✓ | Separate volume | FX3U-4LC User's Manual | JY997D39101 | Handling procedures for the 4-ch temperature control special function block. | 09R625 |
| ■Analog output | | | | | |
| When using each product, also refer to the User's Manual - Hardware Edition for the PLC main unit to be installed. | | | | | |
| ✓ | Supplied with product | FX2N-2DA User's Guide | JY992D74901 | Handling procedures for the 2-ch analog output special function block. | — |
| △ | Supplied with product | FX3U-4DA Installation Manual | JY997D20801 | Handling procedures for the 4-ch analog output special function block. When using, also refer to FX3S/FX3G/FX3GC/FX3U/FX3UC Series User's Manual - Analog Control Edition. | — |

| | |
|----|-------------------------------------|
| 1 | Introduction |
| 2 | Features and Part Names |
| 3 | Product Introduction |
| 4 | Specifications |
| 5 | Version and Peripheral Devices |
| 6 | System Configuration |
| 7 | Input/Output Nos., Unit Nos. |
| 8 | Installation |
| 9 | Preparation and Power Supply Wiring |
| 10 | Input Wiring |

| | | Manual title | Manual number | Contents | Model name code |
|--|-----------------------|---|---------------|--|-----------------|
| △ | Supplied with product | FX3U-4DA-ADP User's Manual | JY997D14001 | Handling procedures for the 4-ch analog output special adapter. When using, also refer to FX3S/FX3G/FX3GC/FX3U/FX3UC Series User's Manual - Analog Control Edition. | — |
| ✓ | Supplied with product | FX2N-4DA User's Guide | JY992D65901 | Handling procedures for the 4-ch analog output special function block. | — |
| ■Analog input/output (mixed) | | | | | |
| When using each product, also refer to the User's Manual - Hardware Edition for the PLC main unit to be installed. | | | | | |
| △ | Supplied with product | FX3U-3A-ADP User's Manual | JY997D35601 | Handling procedures for the 2-ch analog input and 1-ch analog output special adapter. When using, also refer to FX3S/FX3G/FX3GC/FX3U/FX3UC Series User's Manual - Analog Control Edition. | — |
| ✓ | Supplied with product | FX0N-3A User's Guide | JY992D49001 | Handling procedures for the 2-ch analog input and 1-ch analog output special function block. | — |
| ✓ | Supplied with product | FX2N-5A User's Manual | JY997D11401 | Handling procedures for the 4-ch analog input and 1-ch analog output special function block. | 09R616 |
| Manuals for high-speed counter | | | | | |
| ■High-speed counter | | | | | |
| When using each product, also refer to the User's Manual - Hardware Edition for the PLC main unit to be installed. | | | | | |
| △ | Supplied with product | FX3U-4HSX-ADP Installation Manual | JY997D16301 | Handling procedures for the high-speed input special adapter. | — |
| ✓ | Supplied with product | FX2N-1HC User's Guide | JY992D65401 | Handling procedures for the 1-ch high-speed counter special function block. | — |
| ✓ | Supplied with product | FX3U-2HC User's Manual | JY997D36701 | Handling procedures for the 2-ch high-speed counter special function block. | — |
| Manuals for positioning control | | | | | |
| ■Common | | | | | |
| ✓ | Separate volume | FX3S/FX3G/FX3GC/FX3U/FX3UC Series User's Manual - Positioning Control Edition | JY997D16801 | Details on positioning functions of FX3S/FX3G/FX3GC/FX3U/FX3UC Series. | 09R620 |
| ■Pulse output and positioning | | | | | |
| When using each product, also refer to the User's Manual - Hardware Edition for the PLC main unit to be installed. | | | | | |
| △ | Supplied with product | FX3U-2HSY-ADP Installation Manual | JY997D16401 | Handling procedures for the high-speed output special adapter. When using, also refer to FX3S/FX3G/FX3GC/FX3U/FX3UC Series User's Manual - Positioning Control Edition. | — |
| △ | Supplied with product | FX3U-1PG Installation Manual | JY997D47101 | Handling procedures for the 1-axis pulse output block. When using, also refer to FX3U-1PG User's Manual. | — |
| ✓ | Separate volume | FX3U-1PG User's Manual | JY997D47301 | Details on 1-axis pulse output block. | 09R629 |
| △ | Supplied with product | FX2N-1PG Installation Manual | JY997D50601 | Handling procedures for the 1-axis pulse output block. When using, also refer to FX2N/FX-1PG User's Manual. | — |
| ✓ | Separate volume | FX2N/FX-1PG User's Manual | JY992D65301 | Handling procedures for the 1-axis pulse output block. | 09R610 |

| | | Manual title | Manual number | Contents | Model name code |
|--|-----------------------|---|---------------|--|-----------------|
| △ | Supplied with product | FX2N-10PG Installation Manual | JY992D91901 | Handling procedures for the 1-axis pulse output block. When using, also refer to FX2N-10PG User's Manual. | — |
| ✓ | Separate volume | FX2N-10PG User's Manual | JY992D93401 | Details on 1-axis pulse output block. | 09R611 |
| △ | Supplied with product | FX2N-10GM User's Guide | JY992D77701 | Handling procedures for the 1-axis positioning special function unit. When using, also refer to FX2N-10GM/FX2N-20GM Handy Manual. | — |
| △ | Supplied with product | FX2N-20GM User's Guide | JY992D77601 | Handling procedures for the 2-axis positioning special function unit. When using, also refer to FX2N-10GM/FX2N-20GM Handy Manual. | — |
| ✓ | Separate volume | FX2N-10GM/FX2N-20GM Hardware/Programming Manual | JY992D77801 | Handling procedures for the 1-axis/2-axis positioning special function unit. | 09R612 |
| ■Programmable cam switch | | | | | |
| When using each product, also refer to the User's Manual - Hardware Edition for the PLC main unit to be installed. | | | | | |
| ✓ | Supplied with product | FX2N-1RM-E-SET User's Manual | JY992D71101 | Handling procedures for the programmable cam switch special function unit. | 09R614 |
| Manuals for FX3U-20SSC-H Positioning Block | | | | | |
| △ | Supplied with product | FX3U-20SSC-H Installation Manual | JY997D21101 | Handling procedures for the 2-axis positioning special function block. When using, also refer to FX3U-20SSC-H User's Manual. | — |
| ✓ | Separate volume | FX3U-20SSC-H User's Manual | JY997D21301 | Describes FX3U-20SSC-H Positioning block details. | 09R622 |
| ✓ | Supplied with product | FX Configurator-FP Operation Manual | JY997D21801 | Describes operation details on FX Configurator-FP Configuration Software. | 09R916 |
| Manuals for FX3U-CF-ADP | | | | | |
| △ | Supplied with product | FX3U-CF-ADP Installation Manual | JY997D35201 | Describes FX3U-CF-ADP specification extracted from the FX3U-CF-ADP User's Manual. When using, also refer to FX3U-CF-ADP User's Manual. | — |
| ✓ | Separate volume | FX3U-CF-ADP User's Manual | JY997D35401 | Describes FX3U-CF-ADP CF card special adapter details. | 09R720 |
| Manuals for FX-30P | | | | | |
| △ | Supplied with product | FX-30P Installation Manual | JY997D34201 | Describes FX-30P specification extracted from the FX-30P Operation manual. When using, also refer to FX-30P Operation manual. | — |
| ✓ | Separate volume | FX-30P Operation Manual | JY997D34401 | Describes Handy Programming Panel FX-30P details. | 09R924 |
| Other manuals | | | | | |
| When using each product, also refer to the User's Manual - Hardware Edition for the PLC main unit to be installed. | | | | | |
| ■Variable analog potentiometers | | | | | |
| △ | Supplied with product | FX3U-8AV-BD User's Manual | JY997D40901 | Handling procedures for the 8-ch variable analog potentiometers expansion board When using, also refer to FX3S/FX3G/FX3GC/FX3U/FX3UC Series Programming Manual - Basic & Applied Instruction Edition. | — |
| ■Connector conversion | | | | | |
| △ | Supplied with product | FX3U-CNV-BD Installation Manual | JY997D13601 | Handling procedures for the conversion function expansion board for connectors for connecting communication, CF card and analog special adapters. | — |

| | | Manual title | Manual number | Contents | Model name code |
|--------------------------------------|-----------------------|---|---------------|---|-----------------|
| ■Battery (maintenance option) | | | | | |
| △ | Supplied with product | FX3U-32BL Battery | JY997D14101 | Battery life and handling procedures. | — |
| ■Display module | | | | | |
| △ | Supplied with product | FX3U-7DM User's Manual | JY997D17101 | Procedures for mounting and handling the display module. | — |
| ■Display module holder | | | | | |
| △ | Supplied with product | FX3U-7DM-HLD User's Manual | JY997D15401 | Procedures for mounting and handling the display module holder. | — |
| ■Memory cassette | | | | | |
| △ | Supplied with product | FX3U-FLROM-16/64/64L/1M Hardware Manual | JY997D12801 | Specifications and operating procedures of the memory cassette. | — |
| ■Extension power supply unit | | | | | |
| △ | Supplied with product | FX3U-1PSU-5V Installation Manual | JY997D22501 | Specifications and operating procedures of the extension power supply unit. | — |

1.2 Generic Names and Abbreviations Used in Manuals

| Abbreviation/ generic name | Description |
|--|---|
| PLCs | |
| FX3U Series | Generic name for FX3U Series PLCs |
| FX2N Series | Generic name for FX2N Series PLCs |
| FX0N Series | Generic name for FX0N Series PLCs |
| FX3U PLCs or main units | Abbreviation of FX3U Series PLC main units |
| FX3UC PLCs or main units | Abbreviation of FX3UC Series PLC main units |
| Expansion boards | Generic name for the following models FX3U-USB-BD, FX3U-232-BD, FX3U-422-BD, FX3U-485-BD, FX3U-8AV-BD, FX3U-CNV-BD |
| Special adapters | Generic name for high-speed input-output special adapters, communication special adapters, CF card special adapter and analog special adapters |
| High-speed input/output special adapters | Generic name for the following models FX3U-4HSX-ADP, FX3U-2HSY-ADP |
| Communication special adapters | Generic name for the following models FX3U-232ADP(-MB), FX3U-485ADP(-MB), FX3U-ENET-ADP |
| CF card special adapter CF-ADP | Generic name for the following model FX3U-CF-ADP |
| Analog special adapters | Generic name for the following models FX3U-4AD-ADP, FX3U-4DA-ADP, FX3U-3A-ADP, FX3U-4AD-PT-ADP, FX3U-4AD-PTW-ADP, FX3U-4AD-PNK-ADP, FX3U-4AD-TC-ADP |
| Extension devices | Generic name for FX3U Series extension devices, FX2N Series extension devices, FX2NC Series extension devices and FX0N Series extension devices The devices that can be added depending on the main unit to be used. For applicable devices, refer to the User's Manual - Hardware Edition for the main unit to be used. |
| FX3U Series extension devices | Generic name for FX3U Series special function blocks |
| FX2N Series extension devices | Generic name for FX2N Series input/output powered extension units, FX2N Series input/output extension blocks, FX2N Series special function units and FX2N Series special function blocks |
| FX0N Series extension devices | Generic name for FX0N Series special function block |
| Input/output extension devices | Generic name for FX2N Series input/output powered extension units, FX2N Series input/output extension blocks The devices that can be added depending on the main unit to be used. For applicable devices, refer to the User's Manual - Hardware Edition for the main unit to be used. |
| FX2N Series input/output powered extension units | Generic name for the following models FX2N-32ER-ES/UL, FX2N-32ER, FX2N-32ES, FX2N-32ET-ESS/UL, FX2N-32ET, FX2N-48ER, FX2N-48ER-ES/UL, FX2N-48ET, FX2N-48ET-ESS/UL, FX2N-48ER-UA1/UL, FX2N-48ER-DS, FX2N-48ET-DSS, FX2N-48ER-D, FX2N-48ET-D The devices that can be added depending on the main unit to be used. For applicable devices, refer to the User's Manual - Hardware Edition for the main unit to be used. |
| FX2N Series input/output extension blocks | Generic name for the following models FX2N-8ER-ES/UL, FX2N-8ER |
| FX2N Series input extension blocks | Generic name for the following models FX2N-16EX-ES/UL, FX2N-16EX, FX2N-16EX-C, FX2N-16EXL-C, FX2N-8EX-ES/UL, FX2N-8EX-UA1/UL, FX2N-8EX |
| FX2N Series output extension blocks | Generic name for the following models FX2N-16EYR-ES/UL, FX2N-16EYR, FX2N-16EYT-ESS/UL, FX2N-16EYT, FX2N-16EYS, FX2N-16EYT-C, FX2N-8EYR-ES/UL, FX2N-8EYR-S-ES/UL, FX2N-8EYT-ESS/UL, FX2N-8EYR, FX2N-8EYT, FX2N-8EYT-H |
| Special function units/blocks | Generic name for FX2N Series special function units, FX3U Series special function blocks, FX2N Series special function blocks and FX0N Series special function blocks The devices that can be added depending on the main unit to be used. For applicable devices, refer to the User's Manual - Hardware Edition for the main unit to be used. |
| FX3U Series special function blocks | Generic name for the following models FX3U-16CCL-M, FX3U-64CCL, FX3U-128ASL-M, FX3U-64DP-M, FX3U-32DP, FX3U-4AD, FX3U-4LC, FX3U-4DA, FX3U-2HC, FX3U-1PG, FX3U-20SSC-H |

| Abbreviation/ generic name | Description |
|-------------------------------------|--|
| FX2N Series special function units | Generic name for the following models FX2N-10GM, FX2N-20GM, FX2N-1RM(-E)-SET |
| FX2N Series special function blocks | Generic name for the following models FX2N-232IF, FX2N-16CCL-M, FX2N-32CCL, FX2N-64CL-M, FX2N-16LNK-M, FX2N-32ASI-M, FX2N-2AD, FX2N-4AD, FX2N-8AD, FX2N-4AD-PT, FX2N-4AD-TC, FX2N-2LC, FX2N-2DA, FX2N-4DA, FX2N-5A, FX2N-1HC, FX2N-1PG(-E), FX2N-10PG The devices that can be added depending on the main unit to be used. For applicable devices, refer to the User's Manual - Hardware Edition for the main unit to be used. |
| FX0N Series special function blocks | Generic name for the following models FX0N-3A |
| Display module | Generic name for the following models FX3U-7DM |
| Memory cassettes | Generic name for the following models FX3U-FLROM-16, FX3U-FLROM-64, FX3U-FLROM-64L, FX3U-FLROM-1M |
| Battery | Abbreviation of model FX3U-32BL battery |
| FX Series terminal blocks | Generic name for the following models FX-16E-TB, FX-32E-TB, FX-16EX-A1-TB, FX-16EYR-TB, FX-16EYS-TB, FX-16EYT-TB, FX-16EYT-H-TB The devices that can be added depending on the main unit to be used. For applicable devices, refer to the User's Manual - Hardware Edition for the main unit to be used. |
| Extension cables | Generic name for the following models FX0N-30EC, FX0N-65EC |
| Input/output cables | Generic name for the following models FX-16E-500CAB-S, FX-16E-□□□CAB, FX-16E-□□□CAB-R, FX-A32E-□□□CAB 150, 300 or 500 is entered in □□□. |
| Connectors for input/output | Generic name for the following models FX2C-I/O-CON, FX2C-I/O-CON-S, FX2C-I/O-CON-SA |
| CC-Link master | Generic name for the following models FX3U-16CCL-M, FX2N-16CCL-M |
| Intelligent device stations | Abbreviation of FX3U-64CCL interface block |
| Remote I/O stations | Remote stations that handle information in bit units only |
| Remote device stations | Abbreviation of FX2N-32CCL interface block |
| Remote stations | Generic name for remote I/O stations and remote device stations |
| Power supply adapter | Unit to be connected to supply power to the CC-Link/LT system |
| Dedicated power supply | Power supply to be connected to supply power to the CC-Link/LT system |
| AnyWireASLINK master | Abbreviation of model FX3U-128ASL-M AnyWireASLINK master block |
| AS-i master | Abbreviation of model FX2N-32ASI-M AS-i system master block |
| Peripheral devices | Generic name for programming software, handy programming panel (HPP) and indicator |
| Programming tool | Generic name for programming software and handy programming panel (HPP) |
| Programming software | Generic name for GX Works2, GX Developer and FX-PCS/WIN (-E) |
| GX Works2 | Abbreviation of programming software packages SW□DNC-GXW2-J and SW□DNC-GXW2-E |
| GX Developer | Abbreviation of programming software packages SW□D5C-GPPW-J and SW□D5C-GPPW-E |
| FX-PCS/WIN (-E) | Abbreviation of programming software packages FX-PCS/WIN and FX-PCS/WIN-E |
| Handy programming panels (HPP) | Generic name for the following models FX-30P, FX-20P(-E)-SET0, FX-20P(-E), FX-10P-SET0, FX-10P(-E) |
| USB/RS-422 converters | Abbreviation of FX-USB-AW |
| RS-232C/RS-422 converters | Generic name for the following models FX-232AW, FX-232AWC, FX-232AWC-H |
| RS-232C/RS-485 converters | Abbreviation of FX-485PC-IF |
| Indicators | |
| GOT1000 Series | Generic name for GT16, GT15, GT14, GT11 and GT10 |
| GOT-900 Series | Generic name for GOT-A900 Series and GOT-F900 Series |
| GOT-A900 Series | Generic name for GOT-A900 Series |
| GOT-F900 Series | Generic name for GOT-F900 Series |

| Abbreviation/ generic name | Description |
|-------------------------------------|--|
| Manuals | |
| FX3U Hardware Edition | Abbreviation of FX3U Series User's Manual - Hardware Edition |
| Programming manual | Abbreviation of FX3S/FX3G/FX3GC/FX3U/FX3UC Series Programming Manual - Basic & Applied Instruction Edition |
| Data Communication Edition | Abbreviation of FX Series User's Manual - Data Communication Edition |
| MODBUS Serial Communication Edition | Abbreviation of FX3S/FX3G/FX3GC/FX3U/FX3UC Series User's Manual - MODBUS Serial Communication Edition |
| Analog Control Edition | Abbreviation of FX3S/FX3G/FX3GC/FX3U/FX3UC Series User's Manual - Analog Control Edition |
| Positioning Control Edition | Abbreviation of FX3S/FX3G/FX3GC/FX3U/FX3UC Series User's Manual - Positioning Control Edition |

1

Introduction

2

Features and
Part Names

3

Product
Introduction

4

Specifications

5

Version and
Peripheral
Devices

6

System
Configuration

7

Input/Output
Nos., Unit Nos.

8

Installation

9

Preparation and
Power Supply
Wiring

10

Input Wiring

2. Features and Part Names

2.1 Major Features

1. Basic functions

[Up to 384 input/output points]

The number of input/output points (up to 256 points) wired directly to the PLC and remote input/output points (up to 256 points) on the network (CC-Link) can be increased to 384 points in total.

[Powered extension units/blocks that can be connected]

FX2N Series input/output powered extension units/blocks can be connected.
Up to 8 FX0N/FX2N/FX3U Series special function units/blocks can be connected.
(Among FX0N Series, only FX0N-3A can be connected.)

[Program memory]

The PLC has a 64K-step RAM memory.
Use of the memory cassette enables the program memory to be used as flash memory.

[Operation instructions]

Various instructions, such as floating-point and character string processing instructions and scaling instructions, are provided.

[Built-in RUN/STOP switch]

The PLC can be started and stopped with the built-in switch.
RUN and STOP commands can be given to the PLC through a general-purpose input terminal or peripheral device.

[Writing during RUN]

The programming software for personal computer enables you to modify the program while the PLC is running.

[Built-in clock function]

The PLC has a clock function to control the time.

[Programming tool]

Use a version of a programming tool supporting the FX3U.

→ **Refer to Chapter 5 "Version Information and Peripheral Equipment Connectability" in this manual.**

*For peripheral devices not applicable to FX3U Series, specify FX2N Series or FX2 Series for model selection, and you can program the sequence. In this case, use instructions and devices within the ranges common to FX3U Series and the selected model of PLC.

[Remote debugging of program]

Use of programming software (GX Works2, GX Developer) enables you to remotely transfer programs and monitor PLC operation through a modem connected to the RS-232C expansion board and RS-232C communication special adapter.

2. Input/output high-speed processing functions of main unit

[High-speed counter function]

- 1) Input terminals of main unit
 - Input of open collector transistor output
 - 1-phase 100 kHz x 6 points + 10 kHz x 2 points
 - 2-phase 50 kHz x 2 points
- 2) Input terminals of high-speed input special adapter (FX3U-4HSX-ADP)
 - Input of differential line driver
 - 1-phase 200 kHz x 8 points (when 2 units are connected)
 - 2-phase 100 kHz x 2 points (when 2 units are connected)

→ **Refer to Chapter 11 "Use of High-speed Counters (C235 to C255)" in this manual and Programming Manual.**

[Pulse catch function]

Signals with short ON width or OFF width can be captured without a complicated program.

→ **Refer to Chapter 10 "Input Wiring Procedures (Input Interruption and Pulse Catch)" in this manual and Programming Manual.**

| Input terminal | Signal ON/OFF width |
|----------------|---------------------|
| X000 to X005 | 5μs |
| X006, X007 | 50μs |

[Input interruption function (with delay function)]

Interruption routines can be processed preferentially by external signals with the minimum ON or OFF width of 5 μs (X000 to X005).

(Timer interruption and high-speed counter interruption functions are also provided.)

→ **Refer to Chapter 10 "Input Wiring Procedures (Input Interruption and Pulse Catch)" in this manual and Programming Manual.**

[Pulse output function]

- 1) When output terminals in the transistor output type main unit are used, pulses of up to 100 kHz can be output simultaneously to three axes (Y000, Y001 and Y002).
- 2) When two high-speed output special adapters FX3U-2HSY-ADP are used, pulses (differential line driver outputs) of up to 200 kHz can be output simultaneously to four axes.

→ **Refer to Positioning Control Edition.**

[Various positioning instructions]

→ **Refer to Positioning Control Edition.**

| Instruction | Description |
|-------------|--|
| DSZR | Mechanical zero return instruction with DOG search function |
| ABS | Instruction to read the current value from our servo amplifier with absolute position (ABS) detecting function |
| DRVI | Positioning (relative positioning) to specify the movement from the current position |
| DRVA | Positioning (absolute positioning) to specify the target position based on the current value 0 |
| PLSV | Instruction to change the pulse train output frequency |
| DVIT | Positioning for fixed-feed interruption drive |
| TBL | Instruction for positioning based on batch setting of positioning operation, moving distance and speed |

3. Display functions (display module)

FX3U-7DM Display Module (option) can be incorporated in the PLC.

The display module can be mounted on the panel by using the display module holder (option).

[Monitor/test function]

Devices can be monitored and tested by operating the buttons on the display module.

The button operations can be inhibited by the user program.

[Message display function]

User messages can be displayed on the display module by the user program.

[Other functions]

On the display module, you can set the time, adjust the contrast and display the PLC version and error codes.

4. Communication and network functions

The expansion board, special adapter and special function block for each communication function can be connected.

[Kinds of communication functions]

- Programming communication (RS-232C/RS-422/USB)
- N:N Network
- Parallel link

- Computer link
- Inverter communication
- Non-protocol communication (RS-232C/RS-485)
→ **Refer to Data Communication Edition.**

- MODBUS communication (Supported in Ver. 2.40 or later)
→ **Refer to MODBUS Serial Communication Edition.**

- Ethernet (Supported in Ver. 3.10 or later)
→ **Refer to FX3U-ENET-ADP User's Manual.**

- CC-Link
 - Master station (Compatible with CC-Link Ver. 2.00 and Ver. 1.10): FX3U-16CCL-M
 - Master station (Compatible with CC-Link Ver. 1.10): FX2N-16CCL-M
 - Intelligent device station: FX3U-64CCL
 - Remote device station: FX2N-32CCL
→ **Refer to the manual for each product.**

- CC-Link/LT
 - Master station: FX2N-64CL-M
 - Remote I/O station, Remote device station
→ **Refer to the manual for each product.**

- MELSEC I/O LINK
 - Master station: FX2N-16LNK-M
 - Remote I/O station
→ **Refer to the manual for each product.**

- AnyWireASLINK
 - Master station: FX3U-128ASL-M^{*1}
 - Slave station
→ **Refer to the manual for each product.**

^{*1}1. Note that the warranty, etc. on this product differs from that on other programmable controller products. For details, refer to FX3U-128ASL-M User's Manual.

- PROFIBUS-DP
 - Master station: FX3U-64DP-M
 - Slave station: FX3U-32DP
→ **Refer to the manual for each product.**

- AS-i system
 - Master station: FX2N-32ASI-M
 - Slave station
→ **Refer to the manual for each product.**

5. Analog functions

The special adapter and special function block for each analog function are connected.

→ **For information not given in Analog Control Edition, Refer to the manual for each product.**


[Kinds of analog functions]

- Voltage/current input
- Voltage/current output
- Temperature sensor input (thermocouple and platinum resistance thermometer sensor)
- Temperature control

2.2 Names and Functions of Parts

2.2.1 Front Panel

Factory default configuration (standard)

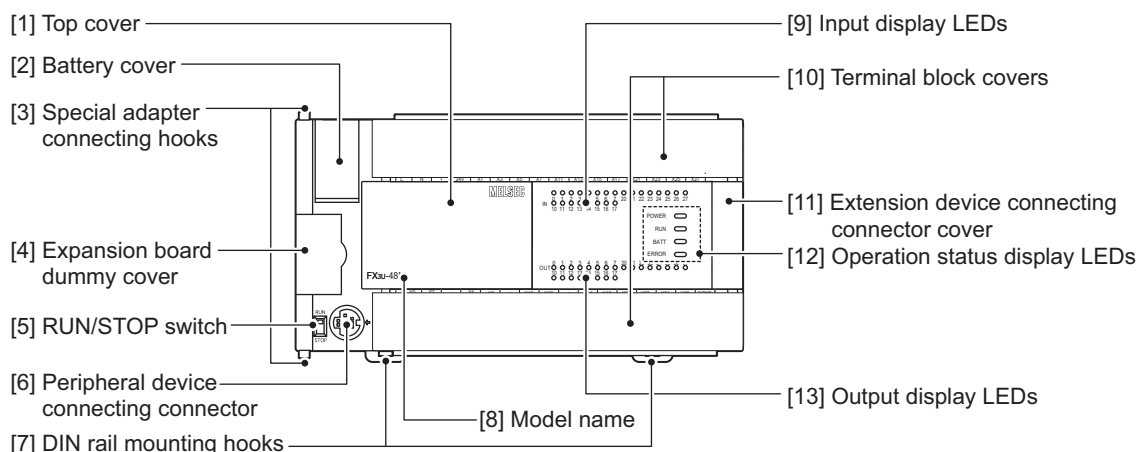

- | | |
|---|--|
| [1] Top cover | Mount the memory cassette under this cover. When FX3U-7DM (display module) is used, replace this cover with the cover supplied with FX3U-7DM. |
| [2] Battery cover | The battery (standard accessory) is set under this cover. When replacing it with a new one, open this cover. |
| [3] Special adapter connecting hooks (2 places) | When connecting the special adapter, secure it with these hooks. |
| [4] Expansion board dummy cover | Remove this dummy cover, and mount an expansion board. |
| [5] RUN/STOP switch | To stop writing (batch) of the sequence program or operation, set the switch to STOP (slide it downward). To start operation (run the machine), set it to RUN (slide it upward). |
| [6] Peripheral device connecting connector | Connect a programming tool to program a sequence. → For details on applicable peripheral devices, refer to Chapter 5. |
| [7] DIN rail mounting hooks | The main unit can be installed on a 35 mm (1.38") wide DIN46277 rail. |
| [8] Model name (abbreviation) | The model name of the main unit is indicated. Check the nameplate on the right side for the model name. |
| [9] Input display LEDs (red) | When an input terminal (X000 or more) is turned on, the corresponding LED is lit. |
| [10] Terminal block covers | The covers can be opened about 90° for wiring. Keep the covers closed while the PLC is running (the unit power is on). |
| [11] Extension device connecting connector cover | Connect the extension cables of input/output powered extension unit/block or special function unit/block to the extension device connecting connectors under this cover. FX3U Series extension devices, FX2N Series extension devices and FX0N Series extension devices can be connected. → For details on the extension devices, refer to Chapter 15, Chapter 16 and Section 18.1. |

[12] **Operation status display LEDs**

The operation status of the PLC can be checked with the LEDs. The LEDs turn off, light and flash according to the following table.


→ For details on the operation status, refer to Section 14.5.

| LED name | Display color | Description |
|----------|---------------|--|
| POWER | Green | On while power is on the PLC. |
| RUN | Green | On while the PLC is running. |
| BATT.V | Red | Lights when the battery voltage drops. |
| ERROR | Red | Flashing when a program error occurs. |
| | Red | Lights when a CPU error occurs. |

[13] **Output display LEDs (red)**

When an output terminal (Y000 or more) is turned on, the corresponding LED is lit.

When the terminal block covers are open

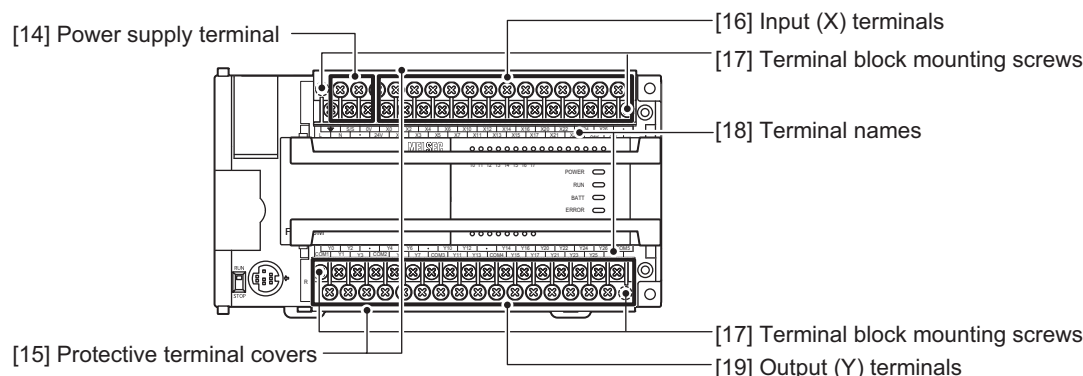

[14] **Power supply terminal**

Connect the power supply to the main unit.

[15] **Protective terminal covers**

A protective terminal cover (refer to the following drawing) is fitted to the lower stage of each terminal block. (FX3U-00M□/ES(S), DS(S), and UA1 are equipped.) The cover prevents fingers from touching terminals, thereby improving safety.



[16] **Input (X) terminals**

Wire switches and sensors to the terminals.

[17] **Terminal block mounting screws**

If the main unit must be replaced, loosen the screws (slightly loosen the left and right screws), and the upper part of the terminal block can be removed. (On FX3U-16M□, the terminal block cannot be removed.)

[18] **Terminal names**


The signal names for power supply, input and output terminals are shown.

⏏ shows a function grounding terminal.

[19] **Output (Y) terminals**

Wire loads (contactors, solenoid valves, etc.) to be driven to the terminals.

When the display module (FX3U-7DM) is installed

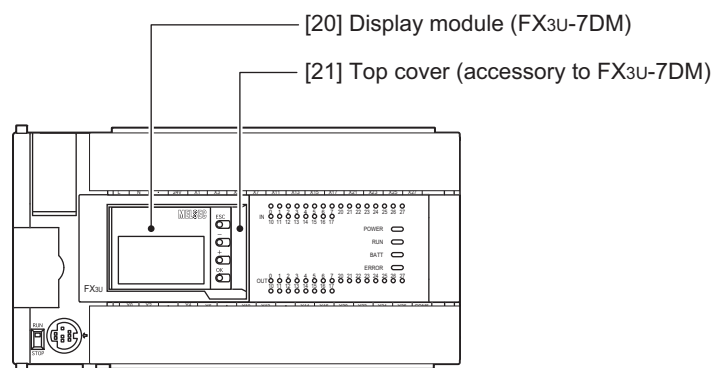


[20] **Display module (FX3U-7DM)**

The display module (option) can be installed.

[21] **Top cover (accessory to FX3U-7DM)**

A square hole is made so that the display module can be seen. Replace the original top cover with this cover.

2.2.2 Sides

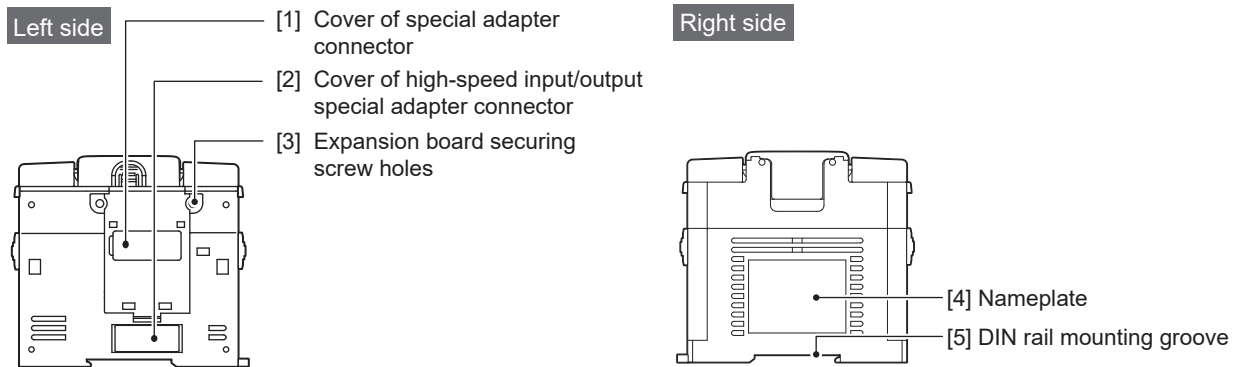

[1] **Cover of special adapter connector**

Remove this cover, and connect the 1st special adapter to the connector (when the expansion board is installed).

When the expansion board is not installed, the connector is not provided.

[2] **Cover of high-speed input/output special adapter connector**

Remove this cover, and connect the first high-speed input special adapter (FX3U-4HSX-ADP) or high-speed output special adapter (FX3U-2HSY-ADP) to the connector. When the communication/analog/CF card special adapter is connected, this connector is not used.

[3] **Expansion board securing screw holes (2 places)**

These holes are designed to secure the expansion board with screws (supplied with the expansion board). The expansion board dummy cover is fitted before shipment. Remove the dummy cover, and fit the board.

[4] **Nameplate**

The product model name, control number and power supply specifications are shown.

→ **For details on the manufacturer's serial number, refer to Subsection 5.1.1.**

△ is a mark that instructs to use the cable with an appropriate temperature rating (80°C or more) for wiring.


[5] **DIN rail mounting groove**

The unit can be installed on a 35 mm (1.38") wide DIN46277 rail.

3. Introduction of Products (Compliant with Overseas Standards)

3.1 List of Products (to be Connected) and Interpretation of Model Names

The following system configuration is classified into product groups A to O in the product introduction sections given below.

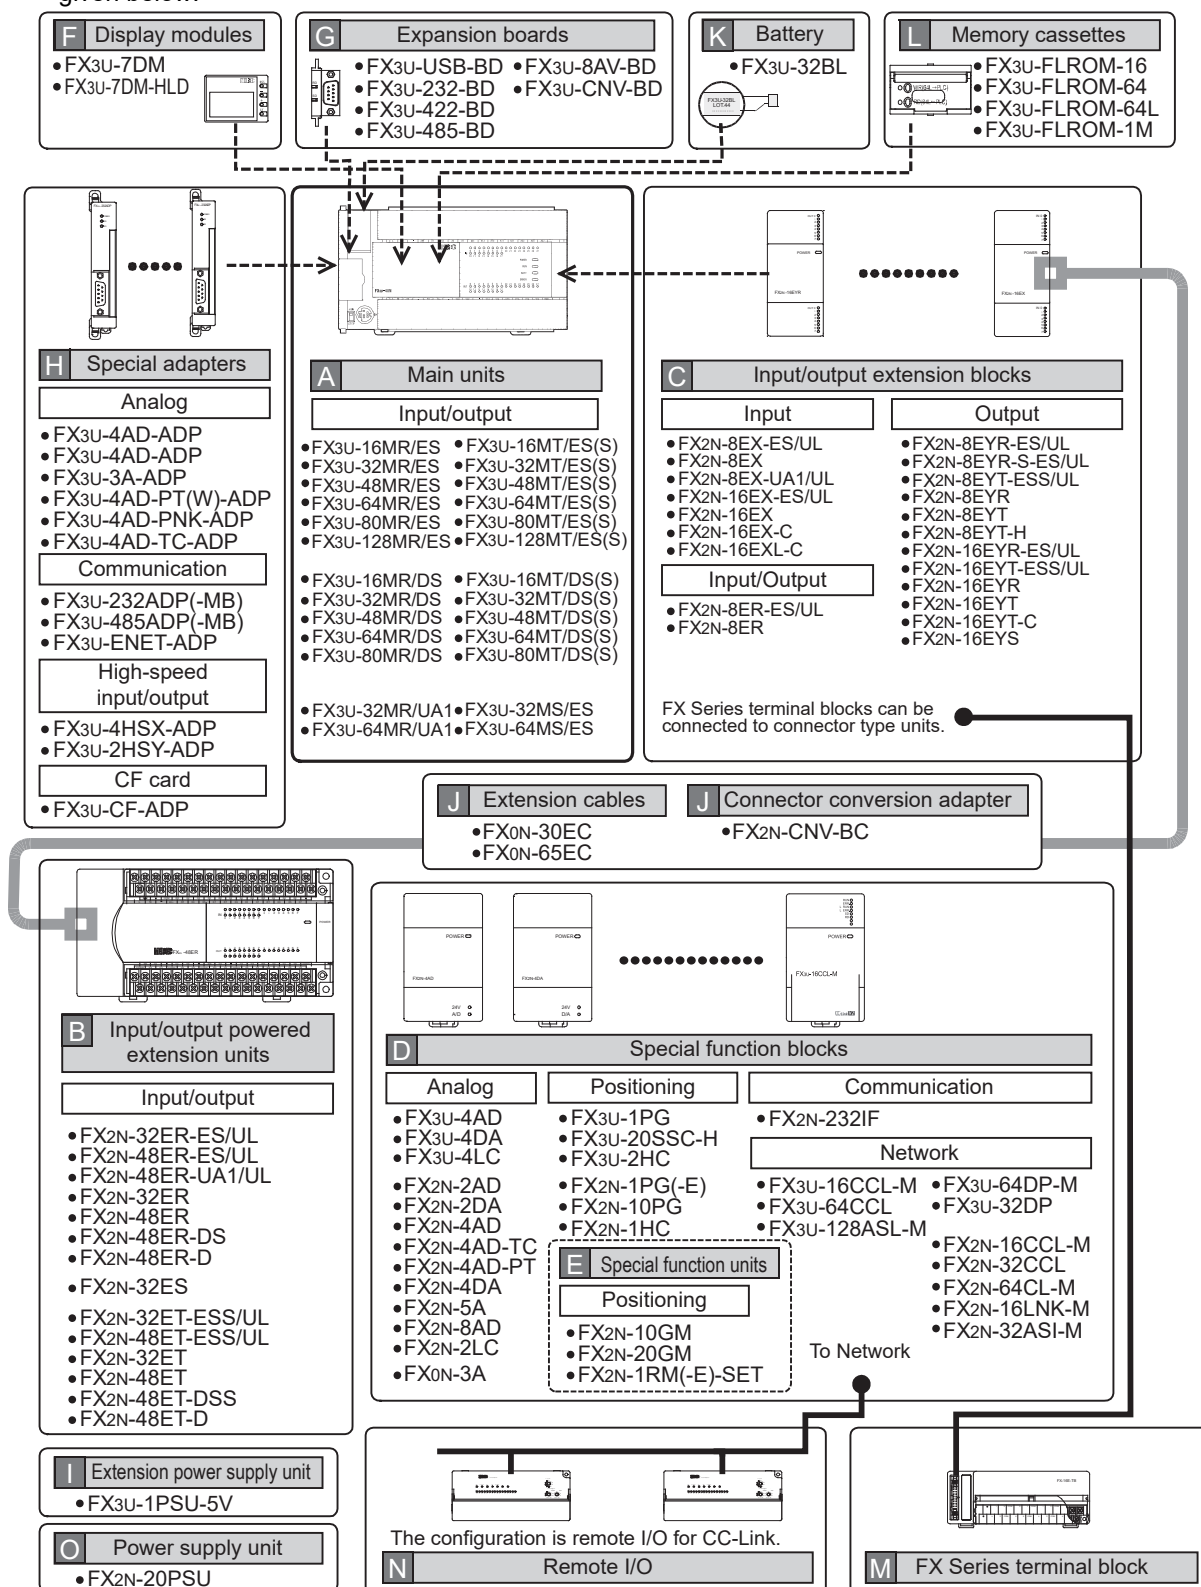

3.1.1 [A] Main units

A

The main unit incorporates a CPU, memory, input and output terminals and power supply. To establish a system, at least one main unit is necessary.

FX3U — ○ ○ M □ / □

Series name

Total number of input and output points

Main unit

Power supply Input/output type: Connection on terminal block

- R/ES : AC power supply/24V DC (sink/source) input/relay output
- T/ES : AC power supply/24V DC (sink/source) input/transistor (sink) output
- T/ESS: AC power supply/24V DC (sink/source) input/transistor (source) output
- S/ES : AC power supply/24V DC (sink/source) input/triac (SSR) output
- R/DS : DC power supply/24V DC (sink/source) input/relay output
- T/DS : DC power supply/24V DC (sink/source) input/transistor (sink) output
- T/DSS: DC power supply/24V DC (sink/source) input/transistor (source) output
- R/UA1: AC power supply/100V AC input/relay output

Incorporating power supply, CPU, memory and input/output

✓ : Compliance with standard or self-declaration □ : Not targeted – : Not applicable

| Number of input/output points | | | Model name | Output type (connection form: terminal block) | CE | | UL cUL | Marine |
|--|------------------------------|-------------------------------|----------------|---|-----|-----|-----------|--------|
| Total number of points | Number of input points | Number of output points | | | EMC | LVD | | |
| AC power supply common to 24V DC sink and source input | | | | | | | | |
| 16 | 8 | 8 | FX3U-16MR/ES | Relay | ✓ | ✓ | ✓ | * |
| 16 | 8 | 8 | FX3U-16MT/ES | Transistor (sink) | ✓ | ✓ | ✓ | * |
| 16 | 8 | 8 | FX3U-16MT/ESS | Transistor (source) | ✓ | ✓ | ✓ | * |
| 32 | 16 | 16 | FX3U-32MR/ES | Relay | ✓ | ✓ | ✓ | * |
| 32 | 16 | 16 | FX3U-32MT/ES | Transistor (sink) | ✓ | ✓ | ✓ | * |
| 32 | 16 | 16 | FX3U-32MT/ESS | Transistor (source) | ✓ | ✓ | ✓ | * |
| 32 | 16 | 16 | FX3U-32MS/ES | Triac | ✓ | ✓ | ✓ | * |
| 48 | 24 | 24 | FX3U-48MR/ES | Relay | ✓ | ✓ | ✓ | * |
| 48 | 24 | 24 | FX3U-48MT/ES | Transistor (sink) | ✓ | ✓ | ✓ | * |
| 48 | 24 | 24 | FX3U-48MT/ESS | Transistor (source) | ✓ | ✓ | ✓ | * |
| 64 | 32 | 32 | FX3U-64MR/ES | Relay | ✓ | ✓ | ✓ | * |
| 64 | 32 | 32 | FX3U-64MT/ES | Transistor (sink) | ✓ | ✓ | ✓ | * |
| 64 | 32 | 32 | FX3U-64MT/ESS | Transistor (source) | ✓ | ✓ | ✓ | * |
| 64 | 32 | 32 | FX3U-64MS/ES | Triac | ✓ | ✓ | ✓ | * |
| 80 | 40 | 40 | FX3U-80MR/ES | Relay | ✓ | ✓ | ✓ | * |
| 80 | 40 | 40 | FX3U-80MT/ES | Transistor (sink) | ✓ | ✓ | ✓ | * |
| 80 | 40 | 40 | FX3U-80MT/ESS | Transistor (source) | ✓ | ✓ | ✓ | * |
| 128 | 64 | 64 | FX3U-128MR/ES | Relay | ✓ | ✓ | ✓ | * |
| 128 | 64 | 64 | FX3U-128MT/ES | Transistor (sink) | ✓ | ✓ | ✓ | * |
| 128 | 64 | 64 | FX3U-128MT/ESS | Transistor (source) | ✓ | ✓ | ✓ | * |
| DC power supply common to 24V DC sink and source input | | | | | | | | |
| 16 | 8 | 8 | FX3U-16MR/DS | Relay | ✓ | ✓ | ✓ | * |
| 16 | 8 | 8 | FX3U-16MT/DS | Transistor (sink) | ✓ | □ | ✓ | * |
| 16 | 8 | 8 | FX3U-16MT/DSS | Transistor (source) | ✓ | □ | ✓ | * |
| 32 | 16 | 16 | FX3U-32MR/DS | Relay | ✓ | ✓ | ✓ | * |
| 32 | 16 | 16 | FX3U-32MT/DS | Transistor (sink) | ✓ | □ | ✓ | * |
| 32 | 16 | 16 | FX3U-32MT/DSS | Transistor (source) | ✓ | □ | ✓ | * |
| 48 | 24 | 24 | FX3U-48MR/DS | Relay | ✓ | ✓ | ✓ | * |
| 48 | 24 | 24 | FX3U-48MT/DS | Transistor (sink) | ✓ | □ | ✓ | * |
| 48 | 24 | 24 | FX3U-48MT/DSS | Transistor (source) | ✓ | □ | ✓ | * |
| 64 | 32 | 32 | FX3U-64MR/DS | Relay | ✓ | ✓ | ✓ | * |
| 64 | 32 | 32 | FX3U-64MT/DS | Transistor (sink) | ✓ | □ | ✓ | * |
| 64 | 32 | 32 | FX3U-64MT/DSS | Transistor (source) | ✓ | □ | ✓ | * |
| 80 | 40 | 40 | FX3U-80MR/DS | Relay | ✓ | ✓ | ✓ | * |
| 80 | 40 | 40 | FX3U-80MT/DS | Transistor (sink) | ✓ | □ | ✓ | * |
| 80 | 40 | 40 | FX3U-80MT/DSS | Transistor (source) | ✓ | □ | ✓ | * |

* Please consult with Mitsubishi Electric for information on marine standard practices and the corresponding types of equipment.

→ For more information on CE, UL and cUL, refer to Page 15 or later.

✓ : Compliance with standard or self-declaration □ : Not targeted – : Not applicable


| Number of input/output points | | | Model name | Output type (connection form: terminal block) | CE | | UL cUL | Marine |
|--|------------------------------|-------------------------------|---------------|---|-----|-----|-----------|--------|
| Total number of points | Number of input points | Number of output points | | | EMC | LVD | | |
| AC power supply only for 100V AC input | | | | | | | | |
| 32 | 16 | 16 | FX3U-32MR/UA1 | Relay | ✓ | ✓ | ✓ | *1 |
| 64 | 32 | 32 | FX3U-64MR/UA1 | Relay | ✓ | ✓ | ✓ | *1 |

*1. Please consult with Mitsubishi Electric for information on marine standard practices and the corresponding types of equipment.

→ For more information on CE, UL and cUL, refer to Page 15 or later.

3.1.2 [B] Input/output powered extension units

B The input/output powered extension unit incorporates a power supply circuit and input and output terminals. It is designed to add input and output terminals. It can supply power to extension devices connected on the downstream side.

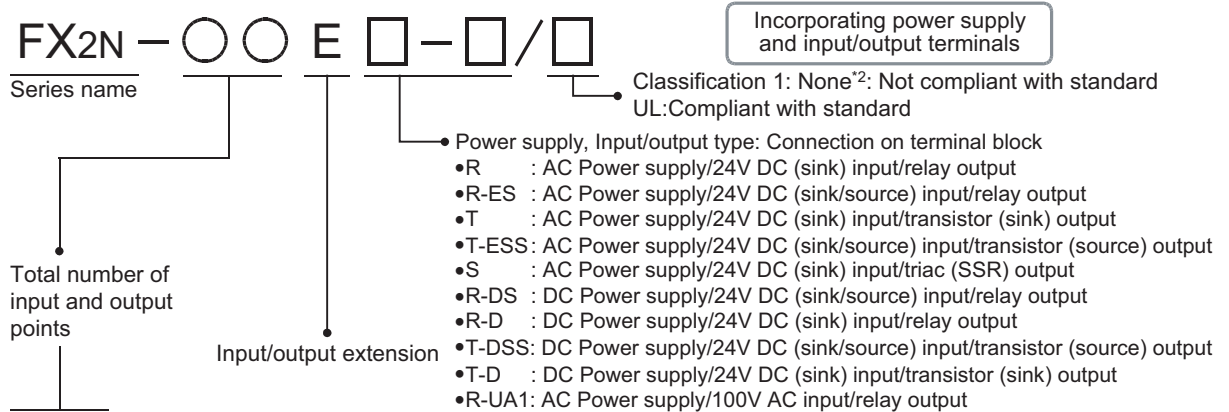

✓ : Compliance with standard or self-declaration □ : Not targeted – : Not applicable

| Number of input/output points | | | Model name | Output type (connection form: terminal block) | CE | | UL cUL | Marine |
|--|------------------------------|-------------------------------|------------------|---|-----|-----|-----------|--------|
| Total number of points | Number of input points | Number of output points | | | EMC | LVD | | |
| AC power supply common to 24V DC sink and source input | | | | | | | | |
| 32 | 16 | 16 | FX2N-32ER-ES/UL | Relay | ✓ | ✓ | ✓ | *3 |
| 32 | 16 | 16 | FX2N-32ET-ESS/UL | Transistor (source) | ✓ | ✓ | ✓ | *3 |
| 48 | 24 | 24 | FX2N-48ER-ES/UL | Relay | ✓ | ✓ | ✓ | *3 |
| 48 | 24 | 24 | FX2N-48ET-ESS/UL | Transistor (source) | ✓ | ✓ | ✓ | *3 |
| AC power supply only for 24V DC sink input | | | | | | | | |
| 32 | 16 | 16 | FX2N-32ER | Relay | — | — | — | — |
| 32 | 16 | 16 | FX2N-32ET | Transistor (sink) | — | — | — | — |
| 32 | 16 | 16 | FX2N-32ES | Triac | — | — | — | — |
| 48 | 24 | 24 | FX2N-48ER | Relay | — | — | — | — |
| 48 | 24 | 24 | FX2N-48ET | Transistor (sink) | — | — | — | — |
| DC power supply common to 24V DC sink and source input | | | | | | | | |
| 48 | 24 | 24 | FX2N-48ER-DS | Relay | ✓ | ✓ | ✓ | — |
| 48 | 24 | 24 | FX2N-48ET-DSS | Transistor (source) | ✓ | □ | ✓ | — |
| DC power supply only for 24V DC sink input | | | | | | | | |
| 48 | 24 | 24 | FX2N-48ER-D | Relay | — | — | — | — |
| 48 | 24 | 24 | FX2N-48ET-D | Transistor (sink) | — | — | — | — |
| AC power supply only for 100V AC input | | | | | | | | |
| 48 | 24 | 24 | FX2N-48ER-UA1/UL | Relay | ✓ | ✓ | ✓ | — |

*2. FX2N-48ER-DS and FX2N-48ET-DSS comply to UL standard.

*3. Please consult with Mitsubishi Electric for information on marine standard practices and the corresponding types of equipment.

→ For more information on CE, UL and cUL, refer to Page 15 or later.

3.1.3 [C] Input/output extension blocks



The input/output extension block has built-in input or output terminals to add input or output terminals.

FX2N — ○ ○ E □ — □ / □

Series name

Total number of input and output points

Input/output extension

Incorporating input or output terminals

Classification 1: None: Not compliant with standard
UL: Compliant with standard

- Input/output type: Connection on terminal block or with connector
- ER : 24V DC(sink)input/relay output/terminal block
- ER-ES : 24V DC(sink/source)input/relay output/terminal block
- X : 24V DC (sink) input/terminal block
- X-C : 24V DC (sink) input/connector
- X-ES : 24V DC (sink/source) input/terminal block
- XL-C : 5V DC input/connector
- X-UA1 : 100V AC input/terminal block
- YR : Relay output/terminal block
- YR-ES : Relay output/terminal block
- YR-S-ES : Relay output (separate reference terminals (Commons))/terminal block
- YT : Transistor (sink) output/terminal block
- YT-H : Transistor (sink) output/terminal block
- YT-C : Transistor (sink) output/connector
- YT-ESS : Transistor (source) output/terminal block
- YS : Triac (SSR) output/terminal block

✓ : Compliance with standard or self-declaration □ : Not targeted – : Not applicable

| Number of input/output points | | | Model name | Input type | Output type | Connection form | CE | | UL cUL | Marine |
|-------------------------------|------------------------|-------------------------|-------------------|------------|---------------------|-----------------|-----|-----|--------|--------|
| Total number of points | Number of input points | Number of output points | | | | | EMC | LVD | | |
| Input/Output extension type | | | | | | | | | | |
| 16*1 | 4 | 4 | FX2N-8ER-ES/UL | 24V DC | Relay | Terminal block | ✓ | ✓ | ✓ | *2 |
| 16*1 | 4 | 4 | FX2N-8ER | 24V DC | Relay | Terminal block | — | — | — | — |
| Input extension type | | | | | | | | | | |
| 8 | 8 | - | FX2N-8EX-ES/UL | 24V DC | — | Terminal block | ✓ | □ | ✓ | *2 |
| 8 | 8 | - | FX2N-8EX | 24V DC | — | Terminal block | — | — | — | — |
| 8 | 8 | - | FX2N-8EX-UA1/UL | 100V AC | — | Terminal block | — | — | ✓ | — |
| 16 | 16 | - | FX2N-16EX-ES/UL | 24V DC | — | Terminal block | ✓ | □ | ✓ | *2 |
| 16 | 16 | - | FX2N-16EX | 24V DC | — | Terminal block | — | — | — | — |
| 16 | 16 | - | FX2N-16EX-C | 24V DC | — | Connector | — | — | — | — |
| 16 | 16 | - | FX2N-16EXL-C | 5V DC | — | Connector | — | — | — | — |
| Output extension type | | | | | | | | | | |
| 8 | - | 8 | FX2N-8EYR-ES/UL | — | Relay | Terminal block | ✓ | ✓ | ✓ | *2 |
| 8 | - | 8 | FX2N-8EYR-S-ES/UL | — | Relay | Terminal block | ✓ | ✓ | ✓ | — |
| 8 | - | 8 | FX2N-8EYT-ESS/UL | — | Transistor (source) | Terminal block | ✓ | □ | ✓ | *2 |
| 8 | - | 8 | FX2N-8EYR | — | Relay | Terminal block | — | — | — | — |
| 8 | - | 8 | FX2N-8EYT | — | Transistor (sink) | Terminal block | — | — | — | — |
| 8 | - | 8 | FX2N-8EYT-H | — | Transistor (sink) | Terminal block | — | — | — | — |
| 16 | - | 16 | FX2N-16EYR-ES/UL | — | Relay | Terminal block | ✓ | ✓ | ✓ | *2 |
| 16 | - | 16 | FX2N-16EYT-ESS/UL | — | Transistor (source) | Terminal block | ✓ | □ | ✓ | *2 |
| 16 | - | 16 | FX2N-16EYR | — | Relay | Terminal block | — | — | — | — |
| 16 | - | 16 | FX2N-16EYT | — | Transistor (sink) | Terminal block | — | — | — | — |
| 16 | - | 16 | FX2N-16EYT-C | — | Transistor (sink) | Connector | — | — | — | — |
| 16 | - | 16 | FX2N-16EYS | — | Triac | Terminal block | — | — | ✓ | — |

*1. Four inputs and four outputs are occupied as unused numbers.

*2. Please consult with Mitsubishi Electric for information on marine standard practices and the corresponding types of equipment.

→ For more information on CE, UL and cUL, refer to Page 15 or later.

3.1.4 [D] [E] Special function units/blocks

For details on each product, refer to the product manual.

1. Analog control

✓ : Compliance with standard or self-declaration □ : Not targeted – : Not applicable

D

| Model name | Analog | | Description | CE | | UL cUL | Marine |
|---------------------------|---------|--------|---|-----|-----|-----------|--------|
| | Input | Output | | EMC | LVD | | |
| Analog input | | | | | | | |
| FX3U-4AD | 4ch | – | Voltage/current input | ✓ | □ | ✓ | – |
| FX2N-2AD | 2ch | – | Voltage/current input | ✓ | □ | ✓ | * |
| FX2N-4AD | 4ch | – | Voltage/current input | ✓ | □ | ✓ | * |
| FX2N-8AD | 8ch | – | Voltage/current/temperature (thermocouple) input | ✓ | □ | ✓ | * |
| FX2N-4AD-PT | 4ch | – | Temperature (resistance thermometer sensor) input | ✓ | □ | ✓ | * |
| FX2N-4AD-TC | 4ch | – | Temperature (thermocouple) input | ✓ | □ | ✓ | * |
| Analog output | | | | | | | |
| FX3U-4DA | – | 4ch | Voltage/current output | ✓ | □ | ✓ | – |
| FX2N-2DA | – | 2ch | Voltage/current output | ✓ | □ | ✓ | * |
| FX2N-4DA | – | 4ch | Voltage/current output | ✓ | □ | ✓ | * |
| Analog input/output mixed | | | | | | | |
| FX0N-3A | 2ch | 1ch | Voltage/current input/output | ✓ | □ | – | * |
| FX2N-5A | 4ch | 1ch | Voltage/current input/output | ✓ | □ | ✓ | * |
| Temperature control | | | | | | | |
| FX3U-4LC | 4 loops | – | Temperature control (resistance thermometer sensor/ thermocouple/micro voltage input) | ✓ | □ | ✓ | – |
| FX2N-2LC | 2 loops | – | Temperature control (resistance thermometer sensor/ thermocouple) | ✓ | □ | ✓ | – |

* Please consult with Mitsubishi Electric for information on marine standard practices and the corresponding types of equipment.

→ For more information on CE, UL and cUL, refer to Page 15 or later.

2. High-speed counter

✓ : Compliance with standard or self-declaration □ : Not targeted – : Not applicable

D

| Model name | Description | CE | | UL cUL | Marine |
|------------|-------------------------|-----|-----|-----------|--------|
| | | EMC | LVD | | |
| FX3U-2HC | 2-ch high-speed counter | ✓ | □ | ✓ | – |
| FX2N-1HC | 1-ch high-speed counter | ✓ | □ | ✓ | * |

* Please consult with Mitsubishi Electric for information on marine standard practices and the corresponding types of equipment.

→ For more information on CE, UL and cUL, refer to Page 15 or later.

3. Pulse output and positioning

✓ : Compliance with standard or self-declaration □ : Not targeted – : Not applicable

D
E

| Model name | Description | CE | | UL cUL | Marine |
|----------------------------|---|-----|-----|-----------|--------|
| | | EMC | LVD | | |
| FX3U-1PG D | Pulse output for independent 1-axis control [200 kHz transistor output] | ✓ | □ | ✓ | – |
| FX2N-1PG D | Pulse output for independent 1-axis control [100 kHz transistor output] | – | – | – | – |
| FX2N-1PG-E D | Pulse output for independent 1-axis control [100 kHz transistor output] | ✓ | □ | ✓ | *2 |
| FX2N-10PG D | Pulse output for independent 1-axis control [1 MHz differential line driver output] | ✓ | □ | ✓ | – |
| FX3U-20SSC-H D | Simultaneous 2-axis (independent 2-axis) control [Applicable to SSCNET III] | ✓ | □ | ✓*3 | – |
| FX2N-10GM E | Pulse output for independent 1-axis control [200 kHz transistor output] | ✓ | □ | ✓ | – |
| FX2N-20GM E | Pulse output for simultaneous 2-axis (independent 2-axis) control [200 kHz transistor output] | ✓ | □ | ✓ | – |
| FX2N-1RM-SET E *1 | 1-axis programmable cam switch (manual in Japanese supplied) | – | – | – | – |
| FX2N-1RM-E-SET E *1 | 1-axis programmable cam switch (manual in English supplied) | ✓ | □ | – | *2 |

→ For more information on CE, UL and cUL, refer to Page 15 or later.

- *1. Up to 3 units can be connected to one system. Connect them to the end of the system. For details, refer to FX2N-1RM(-E)-SET Handy Manual.

| Number of connected units | Number of input/output points occupied | Count of number of connected special function units/blocks |
|---------------------------|--|--|
| 1 unit | 8 points | 1 |
| 2 units | | |
| 3 units | | |

- *2. Please consult with Mitsubishi Electric for information on marine standard practices and the corresponding types of equipment.
*3. Products manufactured in and after June, 2006 will comply with the UL and cUL standards.

4. Data link and communication functions

✓ : Compliance with standard or self-declaration □ : Not targeted – : Not applicable

D

| Model name | Description | CE | | UL cUL | Marine |
|---------------|---|-----|-----|-----------|--------|
| | | EMC | LVD | | |
| FX2N-232IF | 1-ch RS-232C non-protocol communication | ✓ | □ | – | *1 |
| FX3U-16CCL-M | Master for CC-Link (Compatible with Ver. 2.00 and Ver. 1.10) Connectable stations: Remote I/O station, Remote device station, Intelligent device station | ✓ | □ | ✓ | – |
| FX2N-16CCL-M | Master for CC-Link (Compatible with Ver. 1.10) Connectable stations: Remote I/O station, Remote device station | ✓ | □ | – | – |
| FX3U-64CCL | CC-Link interface (Intelligent device station) [1 to 4 stations occupied] | ✓ | □ | ✓ | – |
| FX2N-32CCL | CC-Link interface (Remote device station) [1 to 4 stations occupied] | ✓ | □ | – | – |
| FX2N-64CL-M | Master for CC-Link/LT | ✓ | □ | ✓ | – |
| FX3U-128ASL-M | Master for AnyWireASLINK | ✓ | □ | ✓*2 | – |
| FX3U-64DP-M | Master for PROFIBUS-DP | ✓ | □ | ✓ | *1 |
| FX3U-32DP | Slave station for PROFIBUS-DP | ✓ | □ | ✓ | *1 |
| FX2N-16LNK-M | Master for MELSEC I/O Link | ✓ | ✓ | ✓ | – |
| FX2N-32ASI-M | Master for AS-i system | ✓ | □ | – | – |

- *1. Please consult with Mitsubishi Electric for information on marine standard practices and the corresponding types of equipment.
*2. Products manufactured in and after December, 2014 will comply with the UL and cUL standards.
→ **For more information on CE, UL and cUL, refer to Page 15 or later.**

3.1.5 [F] Display modules and holder

✓ : Compliance with standard or self-declaration □ : Not targeted – : Not applicable

F

| Model name | Description | CE | | UL cUL | Marine |
|----------------|--|-----|-----|-----------|--------|
| | | EMC | LVD | | |
| FX3U-7DM | Display module that can be incorporated in FX3U Series main unit | ✓*1 | □ | – | *2 |
| FX3U-7DM-HLD | Holder and extension cable to fit FX3U-7DM display module on panel | – | – | – | – |
| FX-10DM(-SET0) | Display module to be connected to peripheral device connector with cable (manual in Japanese supplied) | – | – | – | – |
| FX-10DM-E | Display module to be connected to peripheral device connector with cable (manual in English supplied) | ✓ | □ | – | – |

- *1. Products manufactured in and after May, 2005 will comply with the overseas standard.
*2. Please consult with Mitsubishi Electric for information on marine standard practices and the corresponding types of equipment.
→ **For more information on CE, UL and cUL, refer to Page 15 or later.**

3.1.6 [G] Expansion boards

✓ : Compliance with standard or self-declaration □ : Not targeted – : Not applicable

| Model name | Description | CE | | UL cUL | Marine |
|-------------|--|-----|-----|-----------|--------|
| | | EMC | LVD | | |
| FX3U-CNV-BD | Conversion of connector for fitting special adapter | ✓*1 | □ | – | *2 |
| FX3U-232-BD | For RS-232C communication | ✓*1 | □ | – | *2 |
| FX3U-422-BD | For RS-422 communication (having the same function as that of peripheral device connector incorporated in main unit) | ✓*1 | □ | – | *2 |
| FX3U-485-BD | For RS-485 communication | ✓*1 | □ | – | *2 |
| FX3U-USB-BD | For USB communication (for personal computer for programming) | ✓*1 | □ | – | *2 |
| FX3U-8AV-BD | For 8ch analog volume | ✓ | □ | – | – |

*1. Products manufactured in and after June, 2005 will comply with the overseas standard.

*2. Please consult with Mitsubishi Electric for information on marine standard practices and the corresponding types of equipment.

→ For more information on CE, UL and cUL, refer to Page 15 or later.

3.1.7 [H] Special adapters

1. Analog functions

✓ : Compliance with standard or self-declaration □ : Not targeted – : Not applicable

| Model name | Description | CE | | UL cUL | Marine |
|------------------|--|-----|-----|-----------|--------|
| | | EMC | LVD | | |
| FX3U-4AD-ADP | 4-ch voltage input/current input | ✓*1 | □ | ✓*1 | *2 |
| FX3U-4DA-ADP | 4-ch voltage output/current output | ✓*1 | □ | ✓*1 | *2 |
| FX3U-3A-ADP | 2-ch voltage input/current input 1-ch voltage output/current output | ✓ | □ | ✓ | – |
| FX3U-4AD-PT-ADP | 4-ch platinum resistance thermometer sensor input | ✓*1 | □ | ✓*1 | *2 |
| FX3U-4AD-PTW-ADP | 4-ch platinum resistance thermometer sensor input (-100 to 600°C) | ✓ | □ | ✓ | – |
| FX3U-4AD-PNK-ADP | 4-ch temperature sensor input (Pt1000/Ni1000 resistance thermometer sensor) input | ✓ | □ | ✓ | – |
| FX3U-4AD-TC-ADP | 4-ch thermocouple (K, J type) temperature sensor input | ✓*1 | □ | ✓*1 | *2 |

*1. Products manufactured in and after June, 2005 will comply with the overseas standard.

*2. Please consult with Mitsubishi Electric for information on marine standard practices and the corresponding types of equipment.

→ For more information on CE, UL and cUL, refer to Page 15 or later.

2. Communication functions

✓ : Compliance with standard or self-declaration □ : Not targeted – : Not applicable

| Model name | Description | CE | | UL | Marine |
|----------------|------------------------|-----|-----|-----|--------|
| | | EMC | LVD | cUL | |
| FX3U-232ADP-MB | RS-232C communication | ✓ | □ | ✓ | *2 |
| FX3U-232ADP | RS-232C communication | ✓*1 | □ | ✓*1 | *2 |
| FX3U-485ADP-MB | RS-485 communication | ✓ | □ | ✓ | *2 |
| FX3U-485ADP | RS-485 communication | ✓*1 | □ | ✓*1 | *2 |
| FX3U-ENET-ADP | Ethernet communication | ✓ | □ | ✓ | – |

*1. Products manufactured in and after June, 2005 will comply with the overseas standard.

*2. Please consult with Mitsubishi Electric for information on marine standard practices and the corresponding types of equipment.

→ For more information on CE, UL and cUL, refer to Page 15 or later.

3. CF card functions

✓ : Compliance with standard or self-declaration □ : Not targeted – : Not applicable

| Model name | Description | CE | | UL | Marine |
|-------------|-------------------------|-----|-----|-----|--------|
| | | EMC | LVD | cUL | |
| FX3U-CF-ADP | CF card special adapter | ✓ | □ | ✓ | – |

→ For more information on CE, UL and cUL, refer to Page 15 or later.

4. High-speed input/output functions

✓ : Compliance with standard or self-declaration □ : Not targeted – : Not applicable

| Model name | Description | CE | | UL | Marine |
|---------------|--|-----|-----|-----|--------|
| | | EMC | LVD | cUL | |
| FX3U-4HSX-ADP | For differential line driver input (for high-speed counter) | ✓ | □ | ✓ | * |
| FX3U-2HSY-ADP | For differential line driver output (for positioning output) | ✓ | □ | ✓ | * |

* Please consult with Mitsubishi Electric for information on marine standard practices and the corresponding types of equipment.

→ For more information on CE, UL and cUL, refer to Page 15 or later.

3.1.8 [I] Extension power supply unit

✓ : Compliance with standard or self-declaration □ : Not targeted – : Not applicable

| Model name | Description | Driving power supply | CE | | UL | Marine |
|--------------|---------------------------------|----------------------|-----|-----|-----|--------|
| | | | EMC | LVD | cUL | |
| FX3U-1PSU-5V | Extension power supply 5V DC 1A | 100 to 240V AC | ✓ | ✓ | ✓ | – |

→ For more information on CE, UL and cUL, refer to Page 15 or later.

3.1.9 [J] Extension cables and connector conversion adapter [K] Battery [L] Memory cassettes

✓ : Compliance with standard or self-declaration □ : Not targeted – : Not applicable

| | Classification | Model name | Description | CE | | UL cUL | Marine |
|-------------|--------------------------------------|----------------|--|-----|-----|-----------|--------|
| | | | | EMC | LVD | | |
| J K L | Extension cables J | FX0N-65EC*1 | 0.65m (2'1") These cables are used to mount input/output extension units/blocks for FX2N and special function units/blocks (except for the FX2N-10GM and FX2N-20GM) away from the main unit. | – | – | – | – |
| | | FX0N-30EC*1 | 0.3m (0'11") | – | – | – | – |
| | | FX2N-GM-65EC | 0.65m (2'1") This cable is used when FX2N-10GM or FX2N-20GM is mounted at the top of the extension units/blocks. | – | – | – | – |
| | Connector conversion adapter J | FX2N-CNV-BC | Connector conversion adapter to connect input/output extension blocks for FX2N and special function blocks with model FX0N-30/65EC extension cable | – | – | – | – |
| | Battery K | FX3U-32BL | This battery backs up the following data. • Program memory in built-in RAM • Keep devices (battery backup devices) • Results of sampling trace • Time on clock | – | – | – | – |
| L | Memory cassettes L | FX3U-FLROM-16 | 16k-step flash memory | ✓ | □ | – | *3 |
| | | FX3U-FLROM-64 | 64k-step flash memory | ✓*2 | □ | – | *3 |
| | | FX3U-FLROM-64L | 64k-step flash memory (with transfer switch) | ✓ | □ | – | *3 |
| | | FX3U-FLROM-1M | 64k-step flash memory (There is an area dedicated to the storage of symbolic information.) | ✓ | □ | – | *3 |

*1. When the extension cable (FX0N-30EC or FX0N-65EC) is used, use up to one cable for one system.
When an extension block is added, use FX2N-CNV-BC in addition to the cable.
These extension cables are unusable for FX2N-10GM and FX2N-20GM.

*2. Products manufactured in and after June, 2005 will comply with the overseas standard.

*3. Please consult with Mitsubishi Electric for information on marine standard practices and the corresponding types of equipment.

→ For more information on CE, UL and cUL, refer to Page 15 or later.

3.1.10 [M] FX Series terminal blocks (cables and connectors)

1. FX Series terminal blocks

✓ : Compliance with standard or self-declaration □ : Not targeted – : Not applicable

M

| Model name | Number of input points | Number of output points | Function | CE | | UL cUL | Marine |
|---------------|---|-------------------------|--|-----|-----|--------|--------|
| | | | | EMC | LVD | | |
| FX-16E-TB | 16 input points or 16 output points | | To be directly connected to the PLC input/output connector | – | – | ✓ | – |
| FX-32E-TB | 32 input points, 32 output points or 16 input/output points | | | – | – | ✓ | – |
| FX-16EX-A1-TB | 16 | – | 100V AC input | – | – | ✓ | – |
| FX-16EYR-TB | – | 16 | Relay output | – | – | ✓ | – |
| FX-16EYS-TB | – | 16 | Triac output | – | – | – | – |
| FX-16EYT-TB | – | 16 | Transistor output (sink) | – | – | ✓ | – |
| FX-16EYT-H-TB | – | 16 | Transistor output (sink) | – | – | – | – |

→ For more information on CE, UL and cUL, refer to Page 15 or later.

2. Input/output cables

| Model name | Shape | |
|-----------------|-------------|--|
| FX-16E-500CAB-S | 5m(16'4") | <ul style="list-style-type: none"> Single wire (Wire color: red) PLC side: A 20-pin connector |
| FX-16E-150CAB | 1.5m(4'11") | <ul style="list-style-type: none"> Flat cables (with tube) A 20-pin connector at both ends |
| FX-16E-300CAB | 3m(9'10") | |
| FX-16E-500CAB | 5m(16'4") | <ul style="list-style-type: none"> Round multicore cables A 20-pin connector at both ends |
| FX-16E-150CAB-R | 1.5m(4'11") | |
| FX-16E-300CAB-R | 3m(9'10") | <ul style="list-style-type: none"> Flat cables (with tube) PLC side: Two 20-pin connectors in 16-point units. Terminal block side: A dedicated connector One common terminal covers 32 input/output terminals. |
| FX-16E-500CAB-R | 5m(16'4") | |
| FX-A32E-150CAB | 1.5m(4'11") | |
| FX-A32E-300CAB | 3m(9'10") | |
| FX-A32E-500CAB | 5m(16'4") | |

3. Input/output connector

| Model name | Function | |
|-----------------|--------------|--|
| FX2c-I/O-CON | 10-piece set | Input/output connector for flat cable |
| FX2c-I/O-CON-S | 5-piece set | Input/output connector for bulk wire for 0.3 mm ² [AGW22] |
| FX2c-I/O-CON-SA | 5-piece set | Input/output connector for bulk wire for 0.5 mm ² [AGW20] |

3.1.11 [N] Remote I/O

N

For the remote I/O of CC-Link, CC-Link/LT, AnyWireASLINK and AS-i, refer to the manual and catalog of each master.

3.1.12 [O] Power supply unit


O

✓ : Compliance with standard or self-declaration □ : Not targeted – : Not applicable

| Model name | Description | Driving power supply | CE | | UL cUL | Marine |
|------------|---------------------|----------------------|-----|-----|--------|--------|
| | | | EMC | LVD | | |
| FX2N-20PSU | 24V DC power supply | 100 to 240V AC | ✓ | ✓ | ✓ | – |

→ For more information on CE, UL and cUL, refer to Page 15 or later.

3.2 Connector Types and Cables for Program Communication

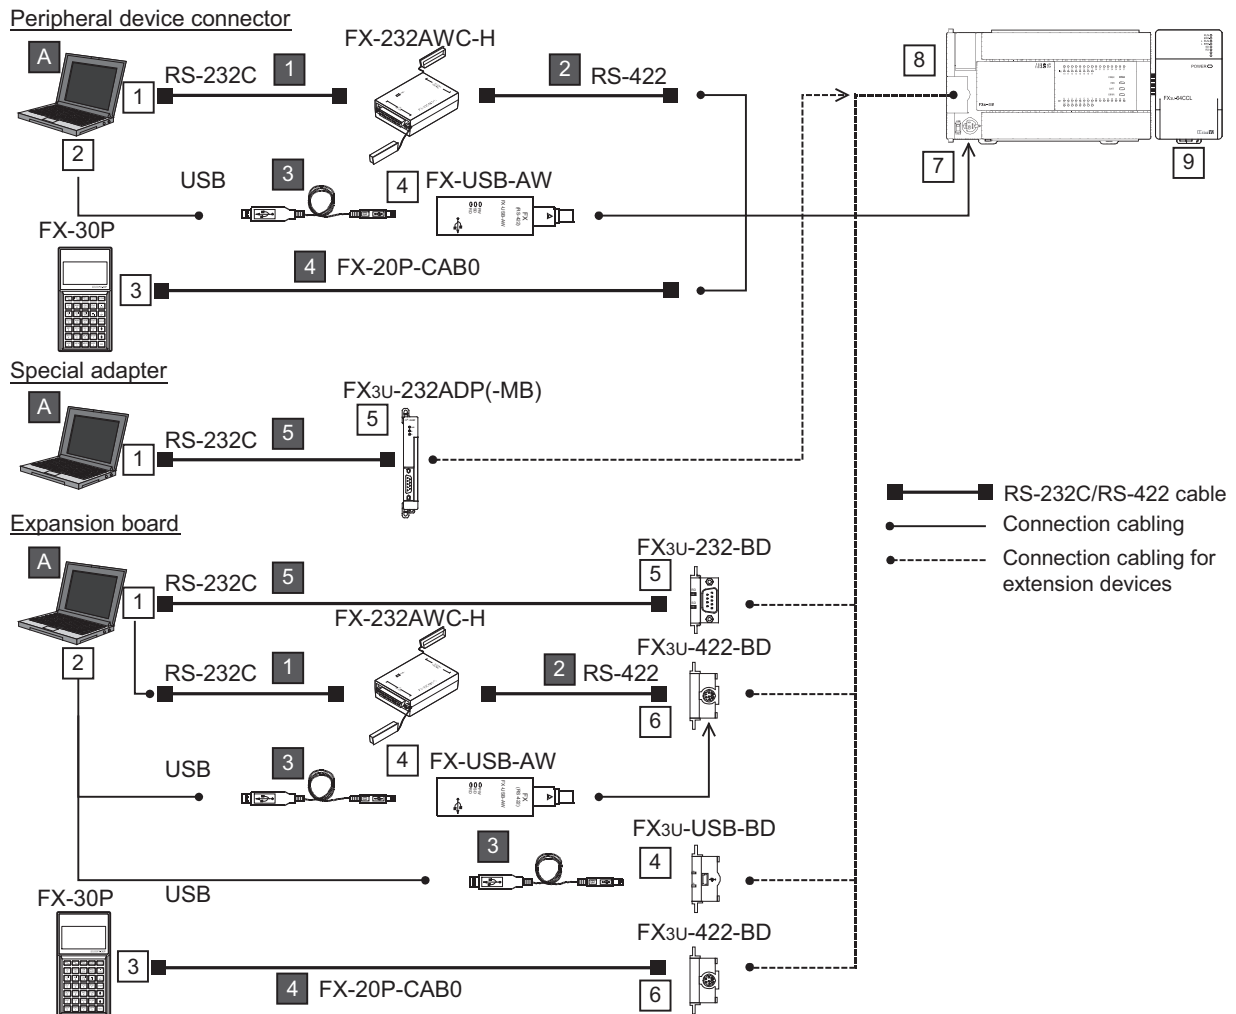

| No. | Shape of connector or combination with cable | | No. | Shape of connector or combination with cable | |
|-----|--|---|-----|---|---------------|
| 1 | D-SUB 9Pin | 2 "FX-422CAB0" + 1 "F2-232CAB-1" + "FX-232AW/FX-232AWC/FX-232AWC-H" | 3 | FX-30PMINI DIN 8Pin [RS-422] | 4 FX-20P-CAB0 |
| | | 5 FX-232CAB-1 | 4 | FX3U-USB-BD USB Mini-B connector [USB2.0] FX-USB-AW USB Mini-B connector [USB2.0] | |
| | Half pitch 14Pin | 2 "FX-422CAB0" + 1 "F2-232CAB-2" + "FX-232AW/FX-232AWC/FX-232AWC-H" | 5 | FX3U-232-BD D-SUB 9Pin [RS-232C] FX3U-232ADP(-MB) D-SUB 9Pin [RS-232C] | |
| | | 5 FX-232CAB-2 | 6 | FX3U-422-BD MINI DIN 8Pin [RS-422] | |
| | D-SUB 25Pin | 2 "FX-422CAB0" + 1 "F2-232CAB" + "FX-232AW/FX-232AWC/FX-232AWC-H" | 7 | Peripheral device connector [RS-422] MINI DIN 8Pin | |
| | | 5 F2-232CAB-1 | 8 | Expansion board (special adapter) connector | |
| 2 | USB A connector | 3 USB cable (supplied with FX-USB-AW or FX3U-USB-BD) | 9 | FX3U-64CCL CC-Link connection terminal block For details, refer to the FX3U-64CCL user's manual. | |

*1. When FX-232AW or FX-232AWC is used, the communication baud rate is 19,200 bps or less.

→ For details, refer to Subsection 3.2.3.

3.2.1 Programming tool

The following programming tool supports FX3U Series PLCs.

| Model name | Description |
|--------------|--|
| GX Works2 | Version 1.07H or later of SW□DNC-GXW2-J supports the FX3U. Version 1.08J or later of SW□DNC-GXW2-E supports the FX3U. |
| GX Developer | Version 8.23Z or later of SW□D5C-GPPW-J supports the FX3U. Version 8.24A or later of SW□D5C-GPPW-E supports the FX3U. Although versions earlier than 8.23Z(-J) or 8.24A(-E) can be used for programming by selecting the model "FX3U(C)" or "FX2N(C)", restrictions apply. |
| FX-30P | FX-30P supports from the first version. |

→ For more information, refer to Chapter 5 "Version Information and Peripheral Equipment Connectability".

3.2.2 Communication cables

✓ : Compliance with standard or self-declaration □ : Not targeted – : Not applicable

| 1 | Model name | Description | CE | | UL cUL | Marine |
|---------------|-----------------|---|-----|-----|-----------|--------|
| | | | EMC | LVD | | |
| 2 | USB cable | | | | | |
| 3 | USB cable 3 | 3m (9'10") USB A plug ↔ USB Mini-B plug For connection between personal computer and FX3U-USB-BD | - | - | - | - |
| 4 | | USB cable (3m(9'10")) supplied with FX3U-USB-BD or commercially available cable (up to 5m(16'4")) | | | | |
| RS-232C cable | | | | | | |
| F2-232CAB-1 1 | 3m (9'10") | D-SUB 9Pin ↔ D-SUB 25Pin For connection between personal computer and RS-232C/RS-422 converter | - | - | - | - |
| F2-232CAB 1 | 3m (9'10") | D-SUB 25Pin ↔ D-SUB 25Pin For connection between personal computer and RS-232C/RS-422 converter | - | - | - | - |
| F2-232CAB-2 1 | 3m (9'10") | Half-pitch 14-pin↔ D-SUB 25Pin For connection between personal computer and RS-232C/RS-422 converter | - | - | - | - |
| FX-232CAB-1 4 | 3m (9'10") | D-SUB 9Pin ↔ D-SUB 9Pin For connection between personal computer and FX3U- 232-BD, FX3U-232ADP(-MB) | - | - | - | - |
| FX-232CAB-2 4 | 3m (9'10") | Half-pitch14Pin ↔ D-SUB 9Pin For connection between personal computer and FX3U- 232-BD, FX3U-232ADP(-MB) | - | - | - | - |
| RS-422 cable | | | | | | |
| FX-422CAB0 2 | 1.5m (4'11") | D-SUB 25Pin ↔ MINI DIN 8Pin For connection between RS-232C/RS-422 converter and FX3U programming port FX3U-422-BD | - | - | - | - |

3.2.3 Converters and interface

✓ : Compliance with standard or self-declaration □ : Not targeted – : Not applicable

| Model name | Description | CE | | UL cUL | Marine |
|---------------------------|---|-----|-----|-----------|--------|
| | | EMC | LVD | | |
| RS-232C/RS-422 Converters | | | | | |
| FX-232AWC-H*1 | RS-232C/RS-422 converter (high-speed type) Communication speed: Applicable to 9,600 to 115,000 bps . | ✓*2 | □ | — | — |
| FX-232AW | RS-232C/RS-422 converters | — | — | — | — |
| FX-232AWC | Communication speed: Applicable to 9,600/19,200 bps | — | — | — | — |
| USB Interface | | | | | |
| FX-USB-AW*1 | USB-RS-422 converter (with 3m(9'10") USB cable) | ✓*3 | □ | — | — |

*1. When the programming software is not applicable to FX_{3U} or FX_{3UC}, the converter is applicable only to 9,600 or 19,200 bps.

*2. Products manufactured in and after July, 2004 conform to the overseas standard.

*3. Products manufactured in and after August, 2004 conform to the overseas standard.

4. Specifications, External Dimensions and Terminal Layout (Main Units)

This Chapter explains the specifications, external dimensions and terminal layout of the main units.

→ For input/output powered extension unit specifications, refer to Chapter 15.

→ For input/output extension block specifications, refer to Chapter 16.


4.1 Generic Specifications

| Item | Specification | | | | |
|--------------------------------|---|----------------|--|---------------------|--|
| Ambient temperature | 0 to 55°C (32 to 131°F) when operating and -25 to 75°C (-13 to 167°F) when stored | | | | |
| Ambient humidity | 5 to 95%RH (no condensation) when operating | | | | |
| Vibration resistance*1 | | Frequency (Hz) | Acceleration (m/s ²) | Half amplitude (mm) | Sweep Count for X, Y, Z: 10 times (80 min in each direction) |
| | When installed on DIN rail | 10 to 57 | – | 0.035 | |
| | | 57 to 150 | 4.9 | – | |
| | When installed directly | 10 to 57 | – | 0.075 | |
| | | 57 to 150 | 9.8 | – | |
| Shock resistance*1 | 147 m/s ² Acceleration, Action time: 11ms, 3 times by half-sine pulse in each direction X, Y, and Z | | | | |
| Noise resistance | By noise simulator at noise voltage of 1,000 Vp-p, noise width of 1 μs, rise time of 1 ns and period of 30 to 100 Hz | | | | |
| Dielectric withstand voltage*3 | 1.5kV AC for one minute | | Between each terminals and ground terminal | | |
| | 500V AC for one minute | | | | |
| Insulation resistance*3 | 5 MΩ or higher by 500 V DC insulation resistance tester | | | | |
| Grounding | Class D grounding (grounding resistance: 100 Ω or less) <Common grounding with a heavy electrical system is not allowed>*2 | | | | |
| Working atmosphere | Free from corrosive or flammable gas and excessive conductive dust | | | | |
| Working altitude | <2000m*4 | | | | |
| Installation location | Inside a control panel*5 | | | | |
| Overvoltage category | II or less | | | | |
| Pollution degree | 2 or less | | | | |

*1. The criterion is shown in IEC61131-2.

*2. Ground the PLC independently or jointly.

→ Refer to Section 9.4.

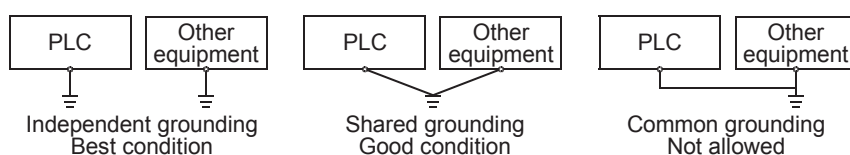

- *3. For more information on the dielectric withstand voltage test and the insulation resistance test of the terminals of each product, refer to the following.
→ **Refer to Subsection 4.1.1.**
- *4. Do not use the PLC under pressure higher than the atmospheric pressure. Doing so may damage the PLC.
- *5. The programmable controller is assumed to be installed in an environment equivalent to indoor.

4.1.1 Dielectric withstand voltage test and insulation resistance test

Perform dielectric withstand voltage test and insulation resistance test at the following voltage between each terminals and the main unit ground terminal.

| Between terminals | Dielectric strength | Insulation resistance | Remarks |
|--|---------------------|---|--|
| Terminals of main unit and input/output powered extension unit/block | | | |
| Between power supply terminal (AC power supply) and ground terminal | 1.5kV AC for 1 min | 5 MΩ or higher by 500 V DC insulation resistance tester | — |
| Between power supply terminal (DC power supply) and ground terminal | 500V AC for 1 min | | — |
| Between 24V DC service power supply connected to input terminal (24V DC) and ground terminal | 500V AC for 1 min | | — |
| Between input terminal (100V AC) and ground terminal | 1.5kV AC for 1 min | | — |
| Between output terminal (relay) and ground terminal | 1.5kV AC for 1 min | | — |
| Between output terminal (transistor) and ground terminal | 500V AC for 1 min | | — |
| Between output terminal (triac) and ground terminal | 1.5kV AC for 1 min | | — |
| Terminals of expansion board, special adapter and special function unit/block | | | |
| Between terminal of expansion board (except for the FX3U-USB-BD and FX3U-CNV-BD) and ground terminal | Not allowed | Not allowed | Since the expansion board and the main unit CPU are not insulated, it is not allowed to perform the dielectric withstand voltage test and insulation resistance test between them. |
| Between terminal of expansion board (FX3U-USB-BD) and ground terminal | Not allowed | Not allowed | Do not perform the dielectric withstand voltage test and insulation resistance test between the communication line and the main unit CPU. |
| Between terminal of special adapter and ground terminal | 500V AC for 1 min | 5 MΩ or higher by 500 V DC insulation resistance tester | — |
| Special function unit/block | Each manual | | Refer to the manual for each special function unit/block. |

4.2 Power Supply Specifications

The specifications for the main unit power supply are explained below.

For the power (current) consumed by the special function units/blocks, refer to this manual or the special function units/blocks manual.

4.2.1 AC Power Supply/DC Input Type

| Item | Specifications | | | | | |
|--|--|------------------|------------------|------------------|------------------|-------------------|
| | FX3U-16M□/ E□ | FX3U-32M□/ E□ | FX3U-48M□/ E□ | FX3U-64M□/ E□ | FX3U-80M□/ E□ | FX3U-128M□/ E□ |
| Supply voltage | 100 to 240V AC | | | | | |
| Voltage fluctuation range | -15%, +10% | | | | | |
| Rated frequency | 50 / 60 Hz | | | | | |
| Allowable instantaneous power failure time | Operation can be continued upon occurrence of instantaneous power failure for 10 ms or less. When the supply voltage is 200V AC, the time can be change to 10 to 100 ms by editing the user program. | | | | | |
| Power fuse | 250V, 3.15A | | 250V, 5A | | | |
| Rush current | 30 A max. 5 ms or less/100V AC, 65 A max. 5 ms or less/200V AC | | | | | |
| Power consumption*1 | 30 W | 35 W | 40 W | 45 W | 50 W | 65 W |
| 24V DC service power supply*2 | 400 mA or less | | 600 mA or less | | | |
| 5V DC built-in power supply*3 | 500 mA or less | | | | | |

*1. These power consumption values are maximum values which apply to the main unit's 24V DC service power supply when there are input/output extension blocks and special function units/blocks.
→ **For input/output powered extension units/blocks power consumption information, refer to Section 15.2.**

*2. When input/output extension blocks are connected, 24V DC service power is consumed by the blocks, and the power to be consumed by the main unit is reduced.
→ **For details on 24V DC service power supply, refer to Section 6.5.**

*3. The power supply is not for external use.
The current capacity specified above is for the input/output extension blocks, special function blocks, special adapters and expansion boards.

4.2.2 DC Power Supply/DC Input Type

| Item | Specifications | | | | |
|--|---|--------------|--------------|--------------|--------------|
| | FX3U-16M□/D□ | FX3U-32M□/D□ | FX3U-48M□/D□ | FX3U-64M□/D□ | FX3U-80M□/D□ |
| Supply voltage | 24V DC | | | | |
| Voltage fluctuation range | -30%, +20%*3 | | | | |
| Allowable instantaneous power failure time | Operation can be continued upon occurrence of instantaneous power failure for 5 ms or less. | | | | |
| Power fuse | 250V, 3.15A | | 250V, 5A | | |
| Rush current | 35 A max. 0.5 ms or less/24V DC | | | | |
| Power consumption*1 | 25 W | 30 W | 35 W | 40 W | 45 W |
| 24V DC service power supply | — | | | | |
| 5V DC built-in power supply*2 | 500 mA or less | | | | |

*1. This power consumption is the value maximized by input/output extension blocks and special function units/blocks connected to the main unit.

→ **For input/output powered extension units/blocks power consumption information, refer to Section 15.2.**

*2. The power supply is not for external use.
The current capacity specified above is for the input/output extension blocks, special function blocks, special adapters and expansion boards.

*3. When supply voltage is 16.8-19.2 V DC, the connectable extension equipment decreases.
For details, refer to Subsection 6.5.3 or 6.5.4.

4.2.3 AC Power Supply/AC Input Type

| Item | Specifications | |
|--|--|---------------|
| | FX3U-32MR/UA1 | FX3U-64MR/UA1 |
| Supply voltage | 100 to 240V AC | |
| Voltage fluctuation range | -15%, +10% | |
| Rated frequency | 50/60 Hz | |
| Allowable instantaneous power failure time | Operation can be continued upon occurrence of instantaneous power failure for 10 ms or less. When the supply voltage is 200V AC, the time can be change to 10 to 100 ms by editing the user program. | |
| Power fuse | 250V, 5A | |
| Rush current | 30 A max. 5 ms or less/100V AC, 65A max. 5 ms or less/200V AC | |
| Power consumption ^{*1} | 35 W | 45 W |
| 24V DC service power supply | — | |
| 5V DC built-in power supply ^{*2} | 500 mA or less | |

*1. This power consumption is the value maximized by input/output extension blocks and special function units/blocks connected to the main unit.

→ **For input/output powered extension units/blocks power consumption information, refer to Section 15.2.**

*2. The power supply is not for external use.
The current capacity specified above is for the input/output extension blocks, special function blocks, special adapters and expansion boards.

4.3 Input Specifications

The main unit input specifications are explained below.

4.3.1 24V DC input (sink/source) type

The input numbers in the table indicate the main unit terminal numbers. "X010 or more" means the numbers from X010 to the largest number that the main unit has.
(The input numbers for FX3U-16M□ are X000 to X007.)

→ For details on input and source input, refer to Subsection 10.1.1.

| Item | | Specifications | | | | | |
|---|--------------|--|-------------------------------------|---------------------|---------------------|---------------------|----------------------|
| | | FX3U-16M□/ □S(S) | FX3U-32M□/ □S(S) | FX3U-48M□/ □S(S) | FX3U-64M□/ □S(S) | FX3U-80M□/ □S(S) | FX3U-128M□/ □S(S) |
| Number of input points | | 8 points | 16 points | 24 points | 32 points | 40 points | 64 points |
| Input connecting type | | Fixed terminal block (M3 screw) | Removable terminal block (M3 screw) | | | | |
| Input form | | sink/source | | | | | |
| Input signal voltage | | AC power type: 24V DC ±10% DC power type: 24 V DC -30%, +20% | | | | | |
| Input impedance | X000 to X005 | 3.9 kΩ | | | | | |
| | X006,X007 | 3.3 kΩ | | | | | |
| | X010 or more | — | 4.3 kΩ | | | | |
| Input signal current | X000 to X005 | 6 mA / 24V DC | | | | | |
| | X006,X007 | 7 mA / 24V DC | | | | | |
| | X010 or more | — | 5 mA / 24V DC | | | | |
| ON input sensitivity current | X000 to X005 | 3.5 mA or more | | | | | |
| | X006,X007 | 4.5 mA or more | | | | | |
| | X010 or more | — | 3.5 mA or more | | | | |
| OFF input sensitivity current | | 1.5 mA or less | | | | | |
| Input response time | | Approx. 10 ms | | | | | |
| Input signal form (Input sensor form) | | No-voltage contact input Sink input: NPN open collector transistor Source input: PNP open collector transistor | | | | | |
| Input circuit insulation | | Photocoupler insulation | | | | | |
| Input operation display | | LED on panel lights when photocoupler is driven. | | | | | |
| Input circuit configuration *1 Input impedance | | • AC power supply type | | | | | |
| | | Sink input wiring | | | Source input wiring | | |
| | | | | | | | |
| | | 100 to 240V AC | | | | | |
| | | • DC power supply type | | | | | |
| | | Sink input wiring | | | Source input wiring | | |
| | | | | | | | |
| 24V DC | | | | | | | |

*2. Do not connect with (0V) and (24V) terminals.

4.3.2 100V AC input type

→ For handling of 100V AC input, refer to Subsection 10.3.2.

| Item | Specifications | |
|---|--|----------------------------|
| | FX _{3U} -32MR/UA1 | FX _{3U} -64MR/UA1 |
| Input points | 16 points | 32 points |
| Connection type | Removable terminal block (M3 screw) | |
| Input form | AC input | |
| Input signal voltage | 100 to 120V AC +10%, -15% 50/60Hz | |
| Input impedance | Approx. 21k Ω /50Hz Approx. 18k Ω /60Hz | |
| Input signal current | 4.7 mA/100V AC 50 Hz (70% or less when turned on simultaneously) 6.2 mA/110V AC 60 Hz (70% or less when turned on simultaneously) | |
| ON input sensitivity current | 3.8 mA or more | |
| OFF input sensitivity current | 1.7 mA or less | |
| Input response time | 30 ms or less (A high-speed receiving is improper) | |
| Input signal form | Contact input | |
| Input circuit insulation | Photo-coupler insulation | |
| Indication of input operation | LED on panel lights when input. | |
| Input circuit diagram *1 Input impedance | | |


4.4 Output Specifications

The main unit output specifications are explained below.

4.4.1 Relay output type

The output numbers in the table indicate the main unit terminal numbers. "Y010 or more" means the numbers from Y010 to the largest number that the main unit has.

(The output numbers of FX3U-16MR/ES are Y000 to Y007.)
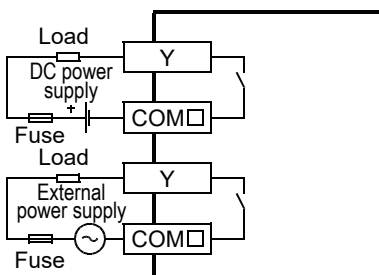
| Item | | Relay output specifications | | | | | |
|------------------------------|-----------------|---|-------------------------------------|--------------|--------------|--------------|---------------|
| | | FX3U-16MR/□S | FX3U-32MR/□S | FX3U-48MR/□S | FX3U-64MR/□S | FX3U-80MR/□S | FX3U-128MR/ES |
| Number of output points | | 8 points | 16 points | 24 points | 32 points | 40 points | 64 points |
| Connecting type | | Fixed terminal block (M3 screw) | Removable terminal block (M3 screw) | | | | |
| Output type | | Relay | | | | | |
| External power supply | | 30V DC or less or 240V AC or less (250V AC or less when the unit does not comply with CE, UL or cUL standards) | | | | | |
| Max. load | Resistance load | 2 A / point The total load current of resistance loads per common terminal should be the following value. → For details on the common terminal for each model, refer to the terminal block layout. <ul style="list-style-type: none">1 output point/common terminal: 2 A or less4 output points/common terminal: 8 A or less8 output points/common terminal: 8 A or less | | | | | |
| | Inductive load | 80 VA → For the product life, refer to Subsection 4.4.2. → For cautions on external wiring, refer to Subsection 12.2.4. | | | | | |
| Min. load | | 5V DC, 2 mA (reference value) | | | | | |
| Open circuit leakage current | | — | | | | | |
| Response time | OFF→ON | Approx. 10 ms | | | | | |
| | ON→OFF | Approx. 10 ms | | | | | |
| Circuit insulation | | Mechanical insulation | | | | | |
| Display of output operation | | LED on panel lights when power is applied to relay coil. | | | | | |
| Output circuit configuration | | <div></div> <p>A number (1 or more) is entered in □ of [COM □].</p> | | | | | |

4.4.2 Product life of relay contacts

The product life of relay contacts varies considerably depending on the load type used. Take care that loads generating reverse electromotive force or rush current may cause poor contact or deposition of contacts which may lead to considerable reduction of the contact product life.

1. Inductive load

Inductive loads generate large reverse electromotive force between contacts at shutdown, which may cause arcing. At a fixed current consumption, as the power factor (phase between current and voltage) gets smaller, the arc energy gets larger.

The standard life of contacts used for Inductive loads, such as contactors and solenoid valves, is 500,000 operations at 20VA.

The following table shows the approximate life of a relay based on the results of an operation life test.

Test condition: 1 sec. ON / 1 sec.OFF

| Load capacity | | Contact life |
|---------------|------------------|-----------------|
| 20 VA | 0.2 A / 100V AC | 3,000,000 times |
| | 0.1 A / 200V AC | |
| 35 VA | 0.35 A / 100V AC | 1,000,000 times |
| | 0.17 A / 200V AC | |
| 80 VA | 0.8 A / 100V AC | 200,000 times |
| | 0.4 A / 200V AC | |

The product life of relay contacts becomes considerably shorter than the above conditions when the rush overcurrent is shut down.

→ **For precautions on using inductive loads, refer to Subsection 12.2.4 2.**

Some types of inductive loads generate rush current 5 to 15 times the stationary current at activation. Make sure that the rush current does not exceed the current corresponding to the maximum specified resistance load.

2. Lamp load

Lamp loads generally generate rush current 10 to 15 times the stationary current. Make sure that the rush current does not exceed the current corresponding to the maximum specified resistance load.

3. Capacitive load


Capacitive loads can generate rush current 20 to 40 times the stationary current. Make sure that the rush current does not exceed the current corresponding to the maximum specified resistance load. Capacitive loads such as capacitors may be present in electronic circuit loads including inverters.

→ **For the maximum specified resistance load, refer to Subsection 4.4.1.**

4.4.3 Transistor output (sink) type

The output numbers in the table indicate the main unit terminal numbers. "Y010 or more" means the numbers from Y010 to the largest number that the main unit has.


(The output numbers of FX3U-16MT/□S are Y000 to Y007.)
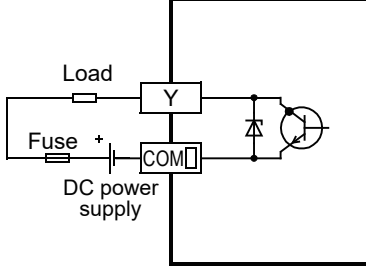
| Item | | Transistor output (sink) specifications | | | | | |
|------------------------------|-----------------|---|-------------------------------------|--------------|--------------|--------------|---------------|
| | | FX3U-16MT/□S | FX3U-32MT/□S | FX3U-48MT/□S | FX3U-64MT/□S | FX3U-80MT/□S | FX3U-128MT/ES |
| Number of output points | | 8 points | 16 points | 24 points | 32 points | 40 points | 64 points |
| Connecting type | | Fixed terminal block (M3 screw) | Removable terminal block (M3 screw) | | | | |
| Output type/form | | Transistor/sink output | | | | | |
| External power supply | | 5-30 V DC | | | | | |
| Max. load | Resistance load | 0.5 A / point The total load current of resistance loads per common terminal should be the following value. → For details on the common terminal for each model, refer to the terminal block layout. <ul style="list-style-type: none">1 output point/common terminal: 0.5 A or less4 output points/common terminal: 0.8 A or less8 output points/common terminal: 1.6 A or less | | | | | |
| | Inductive load | 12W/24V DC The total of inductive loads per common terminal should be the following value. → For details on the common terminal for each model, refer to the terminal block layout. <ul style="list-style-type: none">1 output point/common terminal: 12W or less/24V DC4 output points/common terminal: 19.2W or less/24V DC8 output points/common terminal: 38.4W or less/24V DC | | | | | |
| Open circuit leakage current | | 0.1 mA or less/30V DC | | | | | |
| ON voltage | | 1.5 V or less | | | | | |
| Min. load | | — | | | | | |
| Response time | OFF→ON | Y000 to Y002:5 μs or less/10 mA or more (5-24 V DC) Y003 or more:0.2 ms or less/200 mA or more (at 24V DC) | | | | | |
| | ON→OFF | Y000 to Y002:5 μs or less/10 mA or more (5-24 V DC) Y003 or more:0.2 ms or less/200 mA or more (at 24V DC) | | | | | |
| Circuit insulation | | Photocoupler insulation | | | | | |
| Display of output operation | | LED on panel lights when photocoupler is driven. | | | | | |
| Output circuit configuration | | <div></div> <p>A common number applies to the □ of [COM □].</p> | | | | | |


4.4.4 Transistor output (source) type

The output numbers in the table indicate the main unit terminal numbers. "Y010 or more" means the numbers from Y010 to the largest number that the main unit has.

(The output numbers of FX3U-16MT/□SS are Y000 to Y007.)
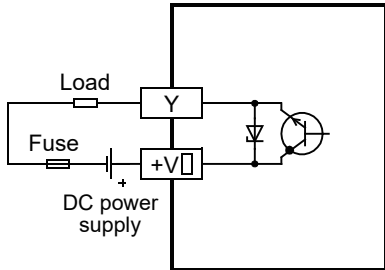
| Item | | Transistor output (source) specifications | | | | | |
|------------------------------|-----------------|---|-------------------------------------|-------------------|-------------------|-------------------|--------------------|
| | | FX3U-16MT/ □SS | FX3U-32MT/ □SS | FX3U-48MT/ □SS | FX3U-64MT/ □SS | FX3U-80MT/ □SS | FX3U-128MT/ ESS |
| Number of output points | | 8 points | 16 points | 24 points | 32 points | 40 points | 64 points |
| Connecting type | | Fixed terminal block (M3 screw) | Removable terminal block (M3 screw) | | | | |
| Output type/form | | Transistor/source output | | | | | |
| External power supply | | 5-30 V DC | | | | | |
| Max. load | Resistance load | 0.5 A / point The total load current of resistance loads per common terminal should be the following value. → For details on the common terminal for each model, refer to the terminal block layout. <ul style="list-style-type: none">1 output point/common terminal: 0.5 A or less4 output points/common terminal: 0.8 A or less8 output points/common terminal: 1.6 A or less | | | | | |
| | Inductive load | 12W/24V DC The total of inductive loads per common terminal should be the following value. → For details on the common terminal for each model, refer to the terminal block layout. <ul style="list-style-type: none">1 output point/common terminal: 12W or less/24V DC4 output points/common terminal: 19.2W or less/24V DC8 output points/common terminal: 38.4W or less/24V DC | | | | | |
| Open circuit leakage current | | 0.1 mA or less/30V DC | | | | | |
| ON voltage | | 1.5 V or less | | | | | |
| Min. load | | — | | | | | |
| Response time | OFF→ON | Y000 to Y002:5 μs or less/10 mA or more (5-24 V DC) Y003 or more:0.2 ms or less/200 mA or more (at 24V DC) | | | | | |
| | ON→OFF | Y000 to Y002:5 μs or less/10 mA or more (5-24 V DC) Y003 or more:0.2 ms or less/200 mA or more (at 24V DC) | | | | | |
| Circuit insulation | | Photocoupler insulation | | | | | |
| Display of output operation | | LED on panel lights when photocoupler is driven. | | | | | |
| Output circuit configuration | | <div></div> <p>A common number applies to the □ of [+V □].</p> | | | | | |

4.4.5 Triac output type
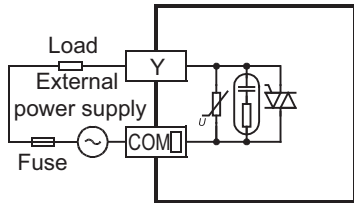
| Item | | Triac output specifications | |
|------------------------------|-----------------|---|---------------------------|
| | | FX _{3U} -32MS/ES | FX _{3U} -64MS/ES |
| Number of output points | | 16 points | 32 points |
| Connecting type | | Removable terminal block (M3 screw) | |
| Output type | | Triac output (SSR) | |
| External power supply | | 85 to 242V AC | |
| Max. load | | 0.3 A / point | |
| | Resistance load | The total load current of resistance loads per common terminal should be the following value. → For details on the common terminal for each model, refer to the terminal block layout. <ul style="list-style-type: none"> 4 output points/common terminal: 0.8 A or less 8 output points/common terminal: 0.8 A or less | |
| | Inductive load | 15VA/100V AC, 30VA/200V AC | |
| Open circuit leakage current | | 1 mA/100V AC, 2 mA/200V AC | |
| Min. load | | 0.4VA/100V AC, 1.6VA/200V AC | |
| Response time | OFF→ON | 1 ms or less | |
| | ON→OFF | 10 ms or less | |
| Circuit insulation | | Photo-thyristor insulation | |
| Display of output operation | | LED on panel lights when photo-thyristor is driven. | |
| Output circuit configuration | |  <p>A common number applies to the □ of [COM□].</p> | |

4.5 Performance Specifications

The performance specifications are common to FX3U Series PLCs.

| Item | | Performance |
|------------------------------------|--|---|
| Operation control system | | Stored program repetitive operation system (dedicated LSI) with interruption function |
| Input/output control system | | Batch processing system (when END instruction is executed) Input/output refresh instruction and pulse catch function are provided. |
| Programming language | | Relay symbol system + step-ladder system (SFC notation possible) |
| Program memory | Max. memory capacity | 64000-step (2k-, 4k-, 8k-, 16k- or 32k-step memory can be selected by parameter settings.) Comments and file registers can be created in the program memory by parameter settings. • Comments: Up to 6350 points (50 points/500 steps) • File registers: Up to 7000 points (500 points/500 steps) |
| | Built-in memory capacity/type | 64000-step (Symbolic information can be stored.*1)/ RAM (backed up by built-in lithium battery) • Battery life: Approx. 5 years (For details refer to Subsection 22.3.1) |
| | Memory cassette (Option) | Flash memory (The max. memory capacity varies depending on the model of the memory cassette.) • FX3U-FLROM-1M*2: 64000 steps (no loader function, symbolic information can be stored in the dedicated area (1300 kB).) • FX3U-FLROM-64L: 64000 steps (loader function, symbolic information can be stored.*1) • FX3U-FLROM-64: 64000 steps (no loader function, symbolic information can be stored.*1) • FX3U-FLROM-16: 16000 steps (no loader function, symbolic information can be stored.*1) Max. allowable write: 10,000 times |
| | Writing function during running | Provided (Program can be modified while the PLC is running.) → For the writing function during running, refer to Subsection 5.2.5. |
| | Password protection | Provided (with entry code function) |
| Real-time clock | Clock function | Built-in 1980 to 2079 (with correction for leap year) 2- or 4-digit year, accuracy within ±45 seconds/month at 25°C |
| Kinds of instructions | Basic instructions | Ver. 2.30 or later • Sequence instructions: 29 • Step-ladder instructions: 2 Former than Ver. 2.30 • Sequence instructions: 27 • Step-ladder instructions: 2 |
| | Applied instructions | 219 kinds, 498 instructions |
| Processing speed | Basic instructions | 0.065 μs/instruction |
| | Applied instructions | 0.642 μs to several hundred μs/instruction |

*1. Storage of symbolic information is supported in Ver. 3.00 or later. The writable symbolic information capacity varies depending on the parameter setting contents and memory cassette type. Refer to Section 21.3 and the GX Works2 Version 1 Operating Manual (Common) for symbolic information capacity.

*2. Supported in Ver. 3.00 or later.

| Item | | Performance | | |
|-------------------------------|--|----------------------|------------------|--|
| Number of input/output points | (1)Extension-combined number of input points | 248 points | (3) total points | (1) + (2) ≤ (3) total number of points is 256 or less. |
| | (2)Extension-combined number of output points | 248 points | | |
| | (4)Remote I/O number of points (CC-Link) | 256 points or less*1 | | The total number of remote I/O points in CC-Link and AnyWireASLINK must be 256 points or less. |
| | (4)Remote I/O number of points (AnyWireASLINK) | 128 points or less | | |
| | (4)Remote I/O number of points (AS-i) | 248 points or less | | — |
| | (3) + (4) total number of points | 384 points or less | | |
| Input/output relay | Input relay | X000 to X367 | 248 points | The device numbers are octal. The total number of input and output points is 256. |
| | Output relay | Y000 to Y367 | 248 points | |
| Auxiliary relay | For general [changeable] | M0 to M499 | 500 points | The retentive status can be changed by parameter settings. |
| | For keeping [changeable] | M500 to M1023 | 524 points | |
| | For keeping [fixed] | M1024 to M7679 | 6656 points | — |
| | For special | M8000 to M8511 | 512 points | — |
| State | Initial state (for general) [changeable] | S0 to S9 | 10 points | The retentive status can be changed by parameter settings. |
| | For general [changeable] | S10 to S499 | 490 points | |
| | For keeping [changeable] | S500 to S899 | 400 points | |
| | For annunciator (For keeping) [changeable] | S900 to S999 | 100 points | |
| | For keeping [fixed] | S1000 to S4095 | 3096 points | — |
| Timer (on-delay timer) | 100 ms | T0 to T191 | 192 points | 0.1 to 3,276.7 sec |
| | 100 ms [for subroutine/ interruption subroutine] | T192 to T199 | 8 points | 0.1 to 3,276.7 sec |
| | 10 ms | T200 to T245 | 46 points | 0.01 to 327.67 sec |
| | 1 ms accumulating type | T246 to T249 | 4 points | 0.001 to 32.767 sec |
| | 100 ms accumulating type | T250 to T255 | 6 points | 0.1 to 3,276.7 sec |
| | 1 ms | T256 to T511 | 256 points | 0.001 to 32.767 sec |
| Counter | Increment for general (16 bits) [changeable] | C0 to C99 | 100 points | Counting from 0 to 32,767 The retentive status can be changed by parameter settings. |
| | Increment for keeping (16 bits) [changeable] | C100 to C199 | 100 points | |
| | Both directions for general (32 bits) [changeable] | C200 to C219 | 20 points | Counting from -2,147,483,648 to +2,147,483,647 The retentive status can be changed by parameter settings. |
| | Increment for keeping (32 bits) [changeable] | C220 to C234 | 15 points | |

*1. 224 points or less when the FX2N-16CCL-M is used.

| Item | | Performance | | |
|-------------------------------------|---|-----------------------------------|---|---|
| High-speed counter | 1-phase 1-count input in both directions (32 bits) [changeable] | C235 to C245 | Up to 8 points can be used in range from C235 to C255. | Counting from -2,147,483,648 to +2,147,483,647 [For keeping] The retentive status can be changed by parameter settings. → For the high-speed counter operating frequency, refer to the table shown in the next page. |
| | 1-phase 2-count input in both directions (32 bits) [changeable] | C246 to C250 | | |
| | 2-phase 2-count input in both directions (32 bits) [changeable] | C251 to C255 | | |
| Data register (32 bits when paired) | For general (16 bits) [changeable] | D0 to D199 | 200 points | The retentive status can be changed by parameter settings. |
| | For keeping (16 bits) [changeable] | D200 to D511 | 312 points | |
| | For keeping (16 bits) [fixed] <File register> | D512 to D7999 <D1000 to D7999> | 7488 points <7000 points> | D1000 and later in 7488 points of fixed data register for keeping can be set as file register points in 500-point units by changing the parameter settings. |
| | For special (16 bits) | D8000 to D8511 | 512 points | |
| | For index (16 bits) | V0 to V7 Z0 to Z7 | 16 points | |
| Extension register (16 bits) | | R0 to R32767 | 32768 points | Retained by battery during power failure |
| Extension file register (16 bits) | | ER0 to ER32767 | 32768 points | Usable only when memory cassette is mounted |
| Pointer | For branching of JUMP and CALL | P0 to P4095 | 4096 points | For CJ instructions and CALL instructions |
| | Input interruption and input delay interruption | I0□□ to I5□□ | 6 points | - |
| | Timer interruption | I6□□ to I8□□ | 3 points | |
| | Counter interruption | I010 to I060 | 6 points | For HSCS instructions |
| Nesting | For master control | N0 to N7 | 8 points | For MC instructions |
| Constant | Decimal number (K) | 16 bits | -32,768 to +32,767 | |
| | | 32 bits | -2,147,483,648 to +2,147,483,647 | |
| | Hexadecimal number (H) | 16 bits | 0 to FFFF | |
| | | 32 bits | 0 to FFFFFFFF | |
| | Real number (E) | 32 bits | -1.0 x 2 ¹²⁸ to -1.0 x 2 ⁻¹²⁶ , 0, 1.0 x 2 ⁻¹²⁶ to 1.0 x 2 ¹²⁸ Decimal-point and exponential notations are possible. | |
| | Character string (" ") | Character string | Designation by characters enclosed with " " Up to 32 one-byte characters can be used for a constant in an instruction. | |

Operating frequency of high-speed counter

For hardware and software counter device numbers, refer to the following section.


→ Refer to Section 11.5.

| Kind of high-speed counter | | Input terminals (X000 to X007) of main unit | High-speed input special adapter (FX _{3U} -4HSX-ADP) |
|----------------------------|---------|---|---|
| Hardware counter | 1-phase | 100 kHz x 6 points, 10 kHz x 2 points | 200 kHz x 8 points |
| | 2-phase | 50 kHz (multiply by 1), 50 kHz (multiply by 4) | 100 kHz (multiply by 1), 100 kHz (multiply by 4) |
| Software counter | 1-phase | 40 kHz | 40 kHz |
| | 2-phase | 40 kHz (multiply by 1), 10 kHz (multiply by 4) | 40 kHz (multiply by 1), 10 kHz (multiply by 4) |

4.6 External Dimensions (Weight and Installation)

The external dimensions of the main unit are explained.

4.6.1 FX3U-16M□, FX3U-32M□

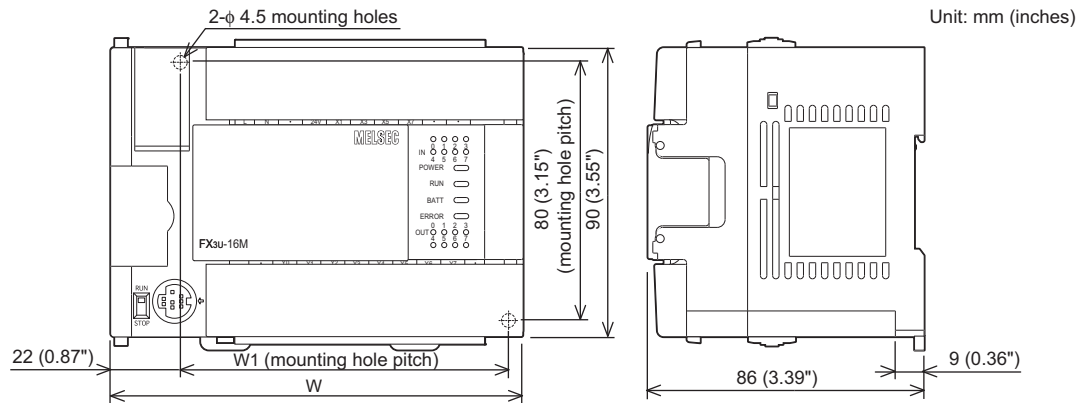


| Series | Model name | W: mm (inches) | W1: mm (inches) | MASS (weight): kg (lbs) |
|-----------|-----------------|----------------|-----------------|-------------------------|
| FX3U-16M□ | FX3U-16MR/ES | 130 (5.12") | 103 (4.06") | Approx. 0.6 (1.32lbs) |
| | FX3U-16MT/ES | | | |
| | FX3U-16MT/ESS | | | |
| | FX3U-16MR/DS | | | |
| | FX3U-16MT/DS | | | |
| | FX3U-16MT/DSS | | | |
| FX3U-32M□ | FX3U-32MR/ES | 150 (5.91") | 123 (4.85") | Approx. 0.65 (1.43lbs) |
| | FX3U-32MT/ES | | | |
| | FX3U-32MT/ESS | | | |
| | FX3U-32MS/ES | | | |
| | FX3U-32MR/DS | | | |
| | FX3U-32MT/DS | | | |
| | FX3U-32MT/DSS | | | |
| | FX3U-32MR/UA1*1 | 182 (7.17") | 155 (6.11") | Approx. 0.85 (1.87lbs) |

*1. FX3U-32MR/UA1 uses 4-φ4.5 mounting holes.
The position of the mounting hole is equivalent to FX3U-48M□.

- 1) Accessories
 - Dust proof protection sheet
 - Manual supplied with product
- 2) Installation
 - 35 mm (1.38") wide DIN rail or Direct installation (with screws) (M4 x 2)

4.6.2 FX3U-48M□, FX3U-64M□, FX3U-80M□, FX3U-128M□

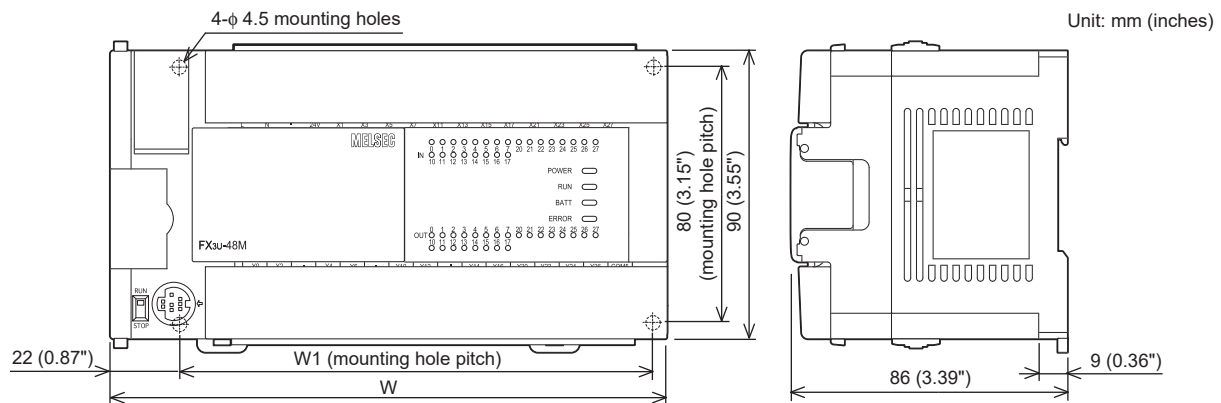

| Series | Model name | W: mm (inches) | W1: mm (inches) | MASS (weight): kg (lbs) |
|------------|----------------|----------------|-----------------|-------------------------|
| FX3U-48M□ | FX3U-48MR/ES | 182 (7.17") | 155 (6.11") | Approx. 0.85 (1.87lbs) |
| | FX3U-48MT/ES | | | |
| | FX3U-48MT/ESS | | | |
| | FX3U-48MR/DS | | | |
| | FX3U-48MT/DS | | | |
| | FX3U-48MT/DSS | | | |
| FX3U-64M□ | FX3U-64MR/ES | 220 (8.67") | 193 (7.6") | Approx. 1.00 (2.2lbs) |
| | FX3U-64MT/ES | | | |
| | FX3U-64MT/ESS | | | |
| | FX3U-64MS/ES | | | |
| | FX3U-64MR/DS | | | |
| | FX3U-64MT/DS | | | |
| | FX3U-64MT/DSS | | | |
| FX3U-80M□ | FX3U-64MR/UA1 | 285 (11.23") | 258 (10.16") | Approx. 1.20 (2.64lbs) |
| | FX3U-80MR/ES | 285 (11.23") | 258 (10.16") | Approx. 1.20 (2.64lbs) |
| | FX3U-80MT/ES | | | |
| | FX3U-80MT/ESS | | | |
| | FX3U-80MR/DS | | | |
| | FX3U-80MT/DS | | | |
| FX3U-128M□ | FX3U-80MT/DSS | | | |
| | FX3U-128MR/ES | 350 (13.78") | 323 (12.72") | Approx. 1.80 (3.96lbs) |
| | FX3U-128MT/ES | | | |
| | FX3U-128MT/ESS | | | |


- 1) Accessories
 - Dust proof protection sheet
 - Manual supplied with product
- 2) Installation
 - 35 mm (1.38") wide DIN rail or Direct installation (with screws) (M4 x 4)

4.7 Terminal Layout

The terminal layout in the main unit is shown below.

4.7.1 Interpretation


Interpretation of terminal block layout

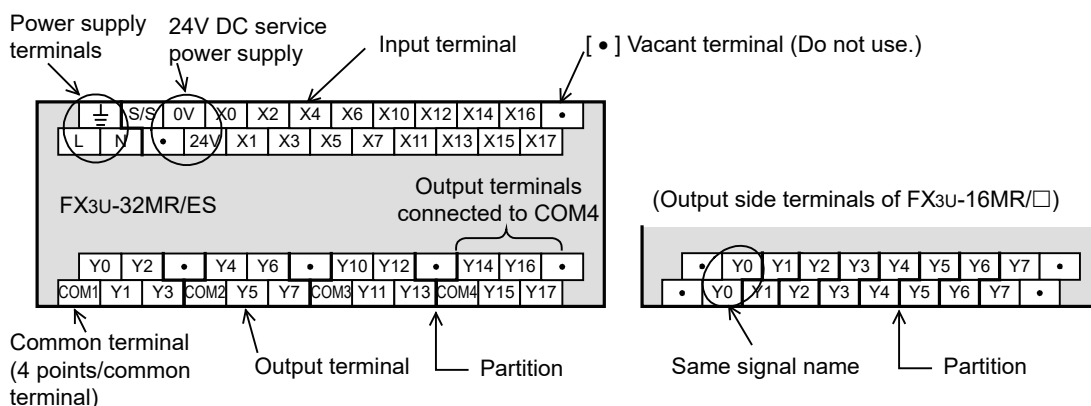

- Indication of Power supply terminals
The AC power type has [L] and [N] terminals, whereas the DC power type has [⊕] and [⊖] terminals.
For external wiring, make sure to read the power supply wiring described later.
→ Refer to Chapter 9.
- Indication of 24V DC service power supply
The AC power type has [0V] and [24V] terminals, whereas the DC power type shows [(0V)] and [(24V)] since the DC power type does not have the service power supply.
Between [0V]-[0V] terminals and between [24V]-[24V] terminals of FX3U-64M□/FX3U-80M□/FX3U-128M□ (AC power type), the terminals are connected internally, and short-circuit is not required.
Do not connect with [(0V)] and [(24V)] terminals.
For external wiring, make sure to read the power supply wiring described later.
→ Refer to Chapter 9.
- Indication of Input terminal
Both AC and DC power type have the same input terminals, however, the external input wiring differs from each other.
For external wiring, make sure to read the input wiring described later.
→ Refer to Chapter 10.
- Indication of output terminals connected to common terminal (COM□)
One common terminal covers 1, 4 or 8 output points.
The output numbers (Y) connected to a common terminal are enclosed with heavy partition lines.
For transistor output (source) type, [COM□] is [+V□].
- Output terminals of FX3U-16MR/□ (top right figure)
One output point is connected to one common terminal.
Both ends of a relay output contact are wired, and the same signal name is shown on both sides.
For external wiring, make sure to read the output wiring described later.
→ Refer to Chapter 12.

4.7.2 FX3U-16M□


- AC power supply/DC input type

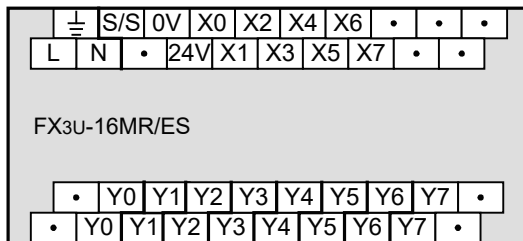


FX3U-16MT/ES



 FX3U-16MT/ESS




- DC power supply/DC input type

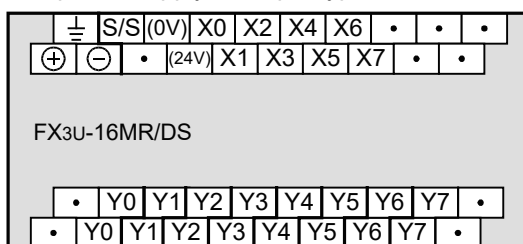

FX3U-16MT/DS



 FX3U-16MT/DSS



4.7.3 FX3U-32M□

- AC power supply/DC input type

| | | | | | | | | | | | |
|--|-----|----|------|----|----|------|-----|-----|------|-----|-----|
| $\frac{\perp}{\equiv}$ | S/S | 0V | X0 | X2 | X4 | X6 | X10 | X12 | X14 | X16 | • |
| L | N | • | 24V | X1 | X3 | X5 | X7 | X11 | X13 | X15 | X17 |
| FX3U-32MR/ES, FX3U-32MT/ES, FX3U-32MS/ES | | | | | | | | | | | |
| Y0 | Y2 | • | Y4 | Y6 | • | Y10 | Y12 | • | Y14 | Y16 | • |
| COM1 | Y1 | Y3 | COM2 | Y5 | Y7 | COM3 | Y11 | Y13 | COM4 | Y15 | Y17 |

FX3U-32MT/ESS

| | | | | | | | | | | | |
|-----|----|----|-----|----|----|-----|-----|-----|-----|-----|-----|
| Y0 | Y2 | • | Y4 | Y6 | • | Y10 | Y12 | • | Y14 | Y16 | • |
| +V0 | Y1 | Y3 | +V1 | Y5 | Y7 | +V2 | Y11 | Y13 | +V3 | Y15 | Y17 |

- DC power supply/DC input type

| | | | | | | | | | | | |
|------------------------|---------|----|-------|----|----|-----|-----|-----|-----|-----|-----|
| $\frac{\perp}{\equiv}$ | S/S(0V) | X0 | X2 | X4 | X6 | X10 | X12 | X14 | X16 | • | |
| ⊕ | ⊖ | • | (24V) | X1 | X3 | X5 | X7 | X11 | X13 | X15 | X17 |

FX3U-32MR/DS, FX3U-32MT/DS

| | | | | | | | | | | | |
|------|----|----|------|----|----|------|-----|-----|------|-----|-----|
| Y0 | Y2 | • | Y4 | Y6 | • | Y10 | Y12 | • | Y14 | Y16 | • |
| COM1 | Y1 | Y3 | COM2 | Y5 | Y7 | COM3 | Y11 | Y13 | COM4 | Y15 | Y17 |

FX3U-32MT/DSS

| | | | | | | | | | | | |
|-----|----|----|-----|----|----|-----|-----|-----|-----|-----|-----|
| Y0 | Y2 | • | Y4 | Y6 | • | Y10 | Y12 | • | Y14 | Y16 | • |
| +V0 | Y1 | Y3 | +V1 | Y5 | Y7 | +V2 | Y11 | Y13 | +V3 | Y15 | Y17 |

- AC power supply/AC input type

| | | | | | | | | | | | | | | | |
|------------------------|----|-----|-----|------|----|----|----|----|------|-----|-----|-----|------|-----|-----|
| $\frac{\perp}{\equiv}$ | • | COM | COM | X0 | X2 | X4 | X6 | • | • | X10 | X12 | X14 | X16 | • | • |
| L | N | • | • | • | X1 | X3 | X5 | X7 | • | • | X11 | X13 | X15 | X17 | • |
| FX3U-32MR/UA1 | | | | | | | | | | | | | | | |
| Y0 | Y2 | • | • | Y4 | Y6 | • | • | • | Y10 | Y12 | • | • | Y14 | Y16 | • |
| COM1 | Y1 | Y3 | • | COM2 | Y5 | Y7 | • | • | COM3 | Y11 | Y13 | • | COM4 | Y15 | Y17 |

4.7.4 FX3U-48M□

- AC power supply/DC input type

| | | | | | | | | | | | | | | | |
|----------------------------|-----|----|------|----|----|------|-----|-----|------|-----|-----|-----|-----|-----|------|
| $\frac{\perp}{\perp}$ | S/S | 0V | X0 | X2 | X4 | X6 | X10 | X12 | X14 | X16 | X20 | X22 | X24 | X26 | • |
| L | N | • | 24V | X1 | X3 | X5 | X7 | X11 | X13 | X15 | X17 | X21 | X23 | X25 | X27 |
| FX3U-48MR/ES, FX3U-48MT/ES | | | | | | | | | | | | | | | |
| Y0 | Y2 | • | Y4 | Y6 | • | Y10 | Y12 | • | Y14 | Y16 | Y20 | Y22 | Y24 | Y26 | COM5 |
| COM1 | Y1 | Y3 | COM2 | Y5 | Y7 | COM3 | Y11 | Y13 | COM4 | Y15 | Y17 | Y21 | Y23 | Y25 | Y27 |

FX3U-48MT/ESS

| | | | | | | | | | | | | | | | |
|-----|----|----|-----|----|----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| Y0 | Y2 | • | Y4 | Y6 | • | Y10 | Y12 | • | Y14 | Y16 | Y20 | Y22 | Y24 | Y26 | +V4 |
| +V0 | Y1 | Y3 | +V1 | Y5 | Y7 | +V2 | Y11 | Y13 | +V3 | Y15 | Y17 | Y21 | Y23 | Y25 | Y27 |

- DC power supply/DC input type

| | | | | | | | | | | | | | | | |
|----------------------------|-----|------|-------|----|----|------|-----|-----|------|-----|-----|-----|-----|-----|------|
| $\frac{\perp}{\perp}$ | S/S | (0V) | X0 | X2 | X4 | X6 | X10 | X12 | X14 | X16 | X20 | X22 | X24 | X26 | • |
| ⊕ | ⊖ | • | (24V) | X1 | X3 | X5 | X7 | X11 | X13 | X15 | X17 | X21 | X23 | X25 | X27 |
| FX3U-48MR/DS, FX3U-48MT/DS | | | | | | | | | | | | | | | |
| Y0 | Y2 | • | Y4 | Y6 | • | Y10 | Y12 | • | Y14 | Y16 | Y20 | Y22 | Y24 | Y26 | COM5 |
| COM1 | Y1 | Y3 | COM2 | Y5 | Y7 | COM3 | Y11 | Y13 | COM4 | Y15 | Y17 | Y21 | Y23 | Y25 | Y27 |

FX3U-48MT/DSS

| | | | | | | | | | | | | | | | |
|-----|----|----|-----|----|----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| Y0 | Y2 | • | Y4 | Y6 | • | Y10 | Y12 | • | Y14 | Y16 | Y20 | Y22 | Y24 | Y26 | +V4 |
| +V0 | Y1 | Y3 | +V1 | Y5 | Y7 | +V2 | Y11 | Y13 | +V3 | Y15 | Y17 | Y21 | Y23 | Y25 | Y27 |

4.7.5 FX3U-64M□

- AC power supply/DC input type

| | | | | | | | | | | | | | | | | | | | | |
|-----------------------|-----|----|-----|-----|----|----|----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| $\frac{\perp}{\perp}$ | S/S | 0V | 0V | X0 | X2 | X4 | X6 | X10 | X12 | X14 | X16 | X20 | X22 | X24 | X26 | X30 | X32 | X34 | X36 | • |
| L | N | • | 24V | 24V | X1 | X3 | X5 | X7 | X11 | X13 | X15 | X17 | X21 | X23 | X25 | X27 | X31 | X33 | X35 | X37 |

FX3U-64MR/ES, FX3U-64MT/ES, FX3U-64MS/ES

| | | | | | | | | | | | | | | | | | | | | |
|------|----|----|------|----|----|------|-----|-----|------|-----|-----|------|-----|-----|-----|-----|-----|-----|-----|------|
| Y0 | Y2 | • | Y4 | Y6 | • | Y10 | Y12 | • | Y14 | Y16 | • | Y20 | Y22 | Y24 | Y26 | Y30 | Y32 | Y34 | Y36 | COM6 |
| COM1 | Y1 | Y3 | COM2 | Y5 | Y7 | COM3 | Y11 | Y13 | COM4 | Y15 | Y17 | COM5 | Y21 | Y23 | Y25 | Y27 | Y31 | Y33 | Y35 | Y37 |

FX3U-64MT/ESS

| | | | | | | | | | | | | | | | | | | | | |
|-----|----|----|-----|----|----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| Y0 | Y2 | • | Y4 | Y6 | • | Y10 | Y12 | • | Y14 | Y16 | • | Y20 | Y22 | Y24 | Y26 | Y30 | Y32 | Y34 | Y36 | +V5 |
| +V0 | Y1 | Y3 | +V1 | Y5 | Y7 | +V2 | Y11 | Y13 | +V3 | Y15 | Y17 | +V4 | Y21 | Y23 | Y25 | Y27 | Y31 | Y33 | Y35 | Y37 |

- DC power supply/DC input type

| | | | | | | | | | | | | | | | | | | | | |
|-----------------------|-----|------|-------|-------|----|----|----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| $\frac{\perp}{\perp}$ | S/S | (0V) | (0V) | X0 | X2 | X4 | X6 | X10 | X12 | X14 | X16 | X20 | X22 | X24 | X26 | X30 | X32 | X34 | X36 | • |
| ⊕ | ⊖ | • | (24V) | (24V) | X1 | X3 | X5 | X7 | X11 | X13 | X15 | X17 | X21 | X23 | X25 | X27 | X31 | X33 | X35 | X37 |


FX3U-64MR/DS, FX3U-64MT/DS

| | | | | | | | | | | | | | | | | | | | | |
|------|----|----|------|----|----|------|-----|-----|------|-----|-----|------|-----|-----|-----|-----|-----|-----|-----|------|
| Y0 | Y2 | • | Y4 | Y6 | • | Y10 | Y12 | • | Y14 | Y16 | • | Y20 | Y22 | Y24 | Y26 | Y30 | Y32 | Y34 | Y36 | COM6 |
| COM1 | Y1 | Y3 | COM2 | Y5 | Y7 | COM3 | Y11 | Y13 | COM4 | Y15 | Y17 | COM5 | Y21 | Y23 | Y25 | Y27 | Y31 | Y33 | Y35 | Y37 |

FX3U-64MT/DSS


| | | | | | | | | | | | | | | | | | | | | |
|-----|----|----|-----|----|----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| Y0 | Y2 | • | Y4 | Y6 | • | Y10 | Y12 | • | Y14 | Y16 | • | Y20 | Y22 | Y24 | Y26 | Y30 | Y32 | Y34 | Y36 | +V5 |
| +V0 | Y1 | Y3 | +V1 | Y5 | Y7 | +V2 | Y11 | Y13 | +V3 | Y15 | Y17 | +V4 | Y21 | Y23 | Y25 | Y27 | Y31 | Y33 | Y35 | Y37 |

- AC power supply/AC input type

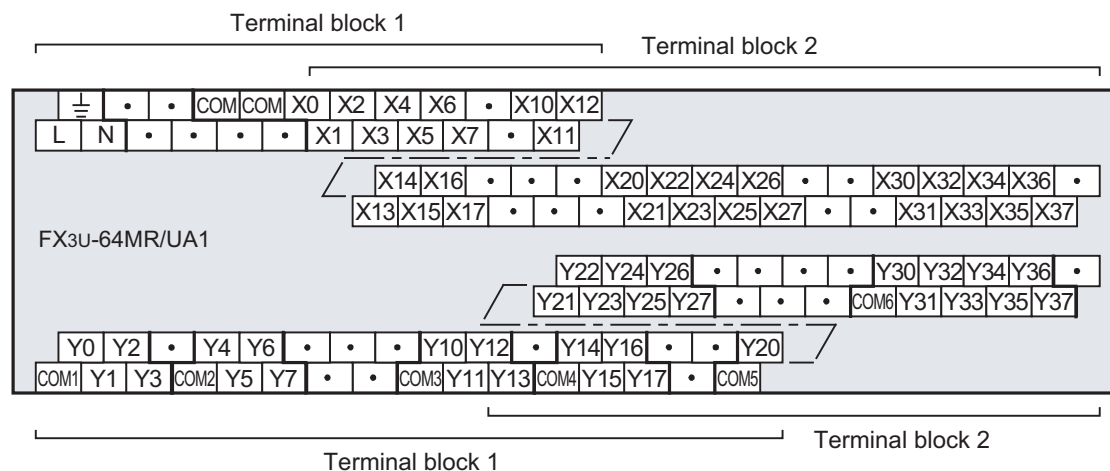


4.7.6 FX3U-80M□


- AC power supply/DC input type

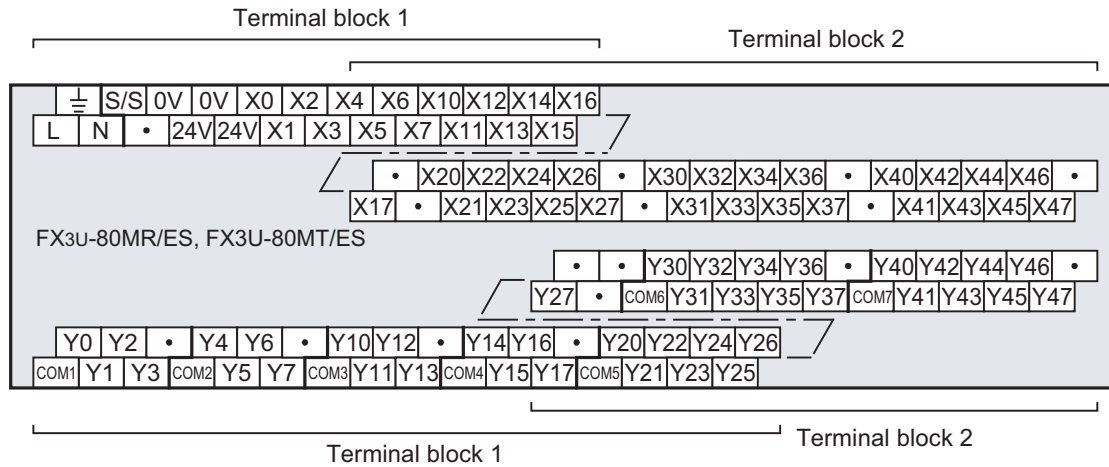


FX3U-80MT/ESS

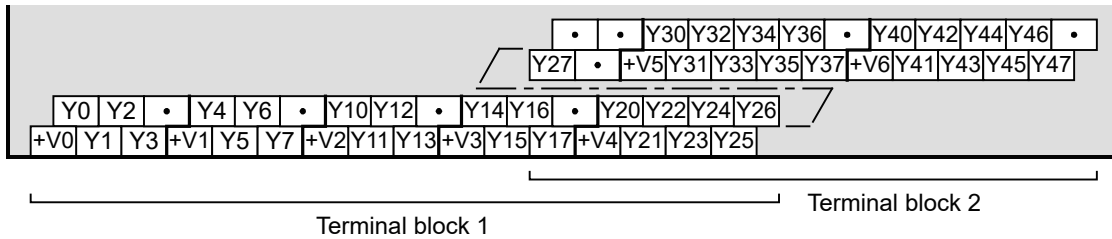

- DC power supply/DC input type

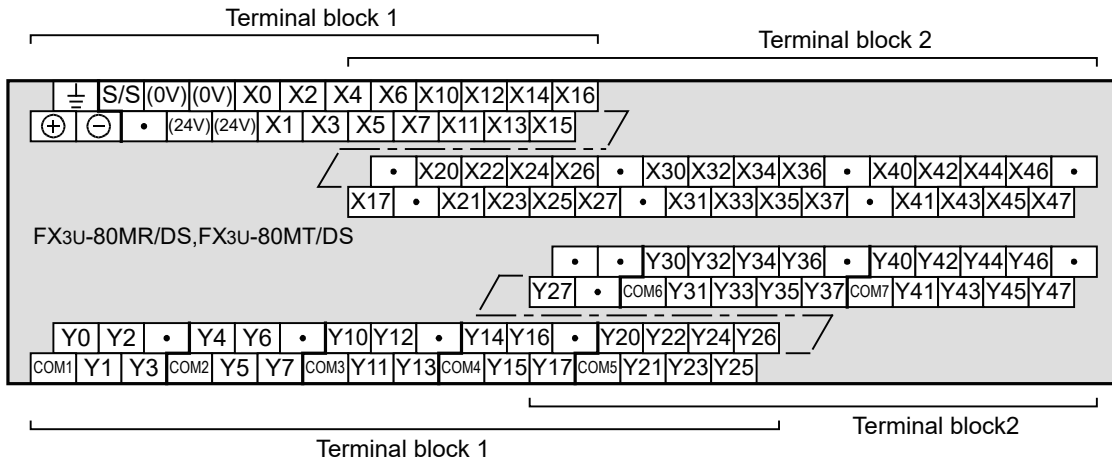


FX3U-80MT/DSS

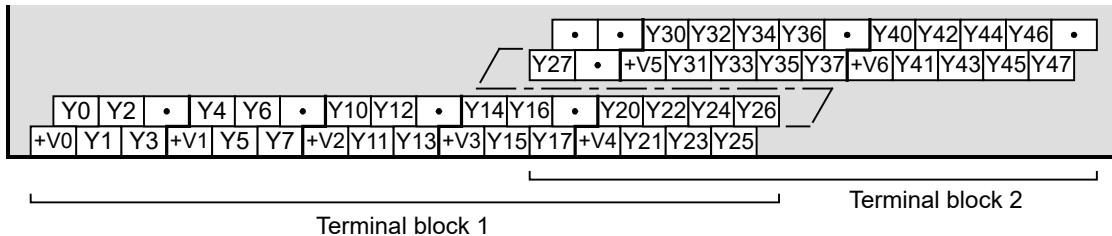

4.7.7 FX3U-128M□

- AC power supply/DC input type

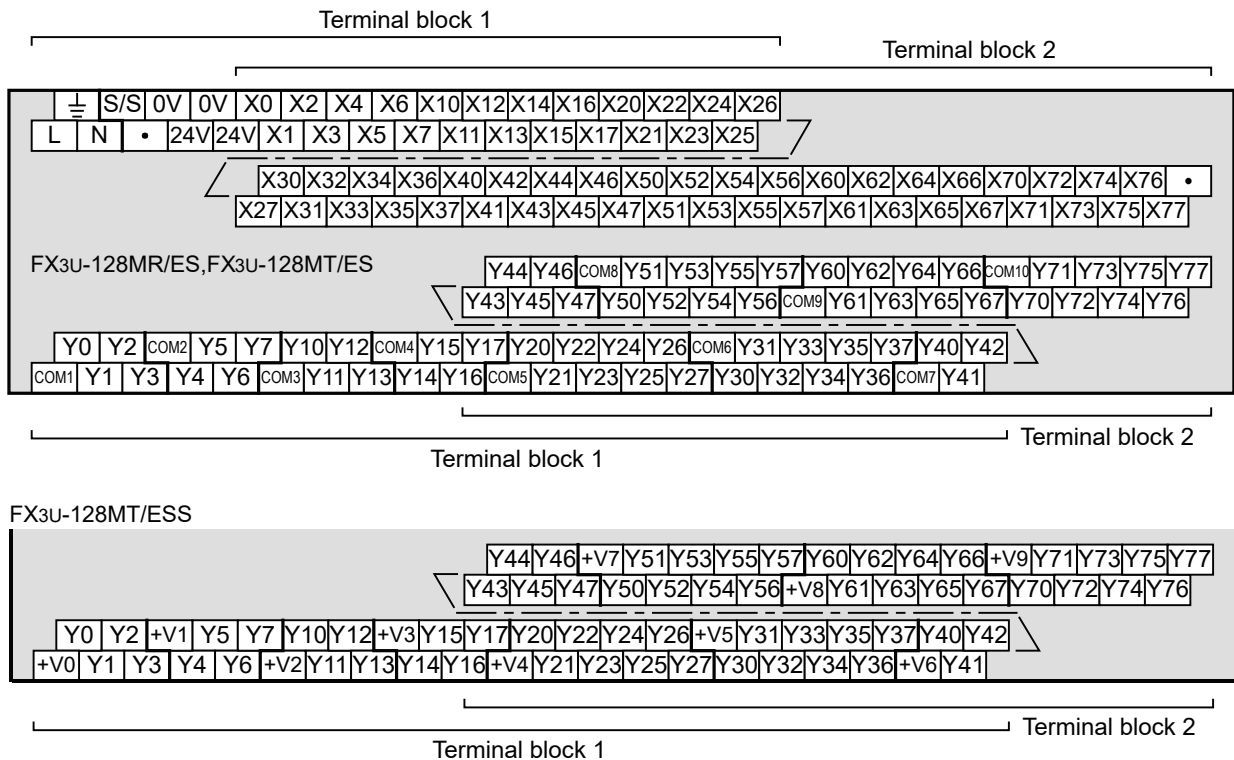

5. Version Information and Peripheral Equipment Connectivity


5.1 Version Upgrade History

5.1.1 How to look at manufacturer's serial number

The year and month of production of the product can be checked on the nameplate, and "LOT" indicated on the front of the product.

1. Checking the nameplate

The year and month of production of the product can be checked from the manufacturer's serial number S/N indicated on the label adhered to the right side of the product.

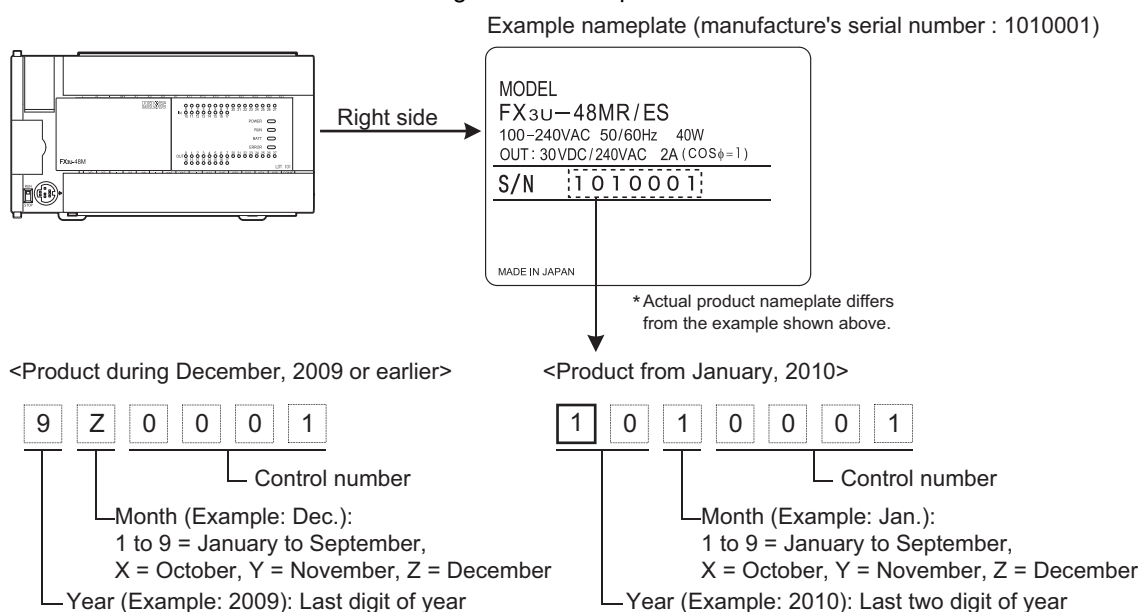


2. Checking the front of the product

The year and month of production of the product can be checked from the manufacturer's serial number "LOT" on the front (at the bottom) of the product.

* Products manufactured in and after January 2009 or later.


Example: FX3U-48MR/ES

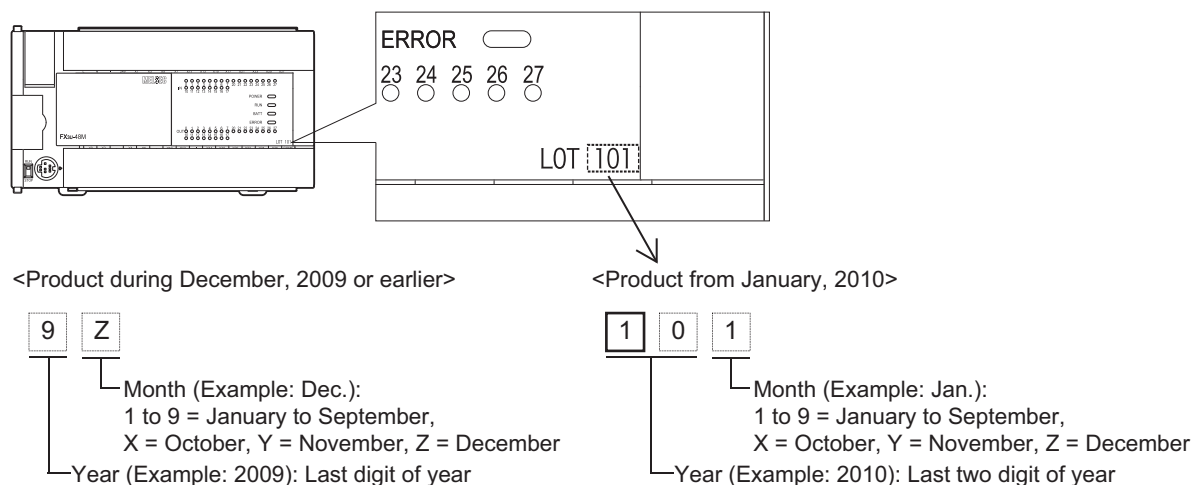

5.1.2 Version check method

The PLC version can be checked by reading the last three digits of device D8001/D8101, or the PLC version can be checked in "PLC Status" in the display module.

→ For the operating procedure of the display module, refer to Chapter 19.

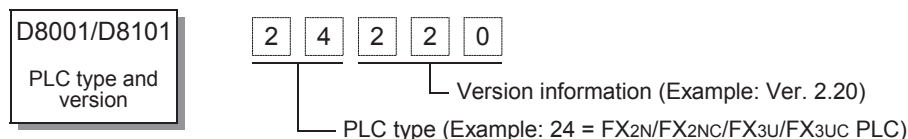

5.1.3 Version upgrade history

| Version | Manufacturer's serial number | Contents of version upgrade |
|-----------|------------------------------|---|
| Ver. 2.20 | 55**** (May, 2005) | First product Corresponds to FX3UC PLC Ver. 2.20. |
| Ver. 2.30 | 5Y**** (November, 2005) | The following instructions are added or their functions are enhanced: MEP and MEF instructions are added. The functions of the MUL (FNC 22), DIV (FNC 23) and RS2 (FNC 87) instructions are enhanced. |
| Ver. 2.40 | 74**** (April, 2007) | <ul style="list-style-type: none"> Supports of the MODBUS communication function. Supports the following instruction. ADPRW (FNC276) |
| Ver. 2.41 | 7Y**** (November, 2007) | The functions of the following instructions are enhanced: The baud rate "38400 bps" is supported in RS and RS2 instructions, inverter communication instructions and computer link. |
| Ver. 2.61 | 97**** (July, 2009) | <ul style="list-style-type: none"> Support of the following 6 instructions: FLCRT (FNC300), FLDEL (FNC301), FLWR (FNC302), FLRD (FNC303), FLCMD (FNC304), FLSTRD (FNC305) Supports customer keyword and permanent PLC lock. Supports connection of following special adapters: <ul style="list-style-type: none"> - FX3U-3A-ADP - FX3U-CF-ADP Supports the hardware error function of FX3U-4DA-ADP. |
| Ver. 2.70 | 107**** (July, 2010) | <ul style="list-style-type: none"> Support of the following 3 instructions: VRRD (FNC 85), VRSC (FNC 86), IVMC (FNC275) Supports connection of following analog volume expansion board: <ul style="list-style-type: none"> - FX3U-8AV-BD Supports the under-scale detection function of the FX3U-4AD-ADP and FX3U-3A-ADP. |
| Ver. 3.00 | 115**** (May, 2011) | <ul style="list-style-type: none"> Supports storage of symbolic information. Supports the setting "Read-protect the execution program." for block passwords. Special block error condition (D8166) is added. Supports connection of following memory cassette: <ul style="list-style-type: none"> - FX3U-FLROM-1M |
| Ver. 3.10 | 11Y**** (November, 2011) | <ul style="list-style-type: none"> Supports the following functions of the FX3U-16CCL-M: <ul style="list-style-type: none"> - Network parameter - Accessing the other station from CC-Link - Remote device station initialization procedure registration - CC-Link diagnostics Supports connection of following special adapter: <ul style="list-style-type: none"> - FX3U-ENET-ADP Special parameter error (M8489 and D8489) is added. |

5.2 Programming Tool Applicability

5.2.1 Applicable versions of programming tool

1. GX Works2

- GX Works2 English version (SW□DNC-GXW2-E) is applicable to FX3U PLCs from the following versions.

| FX3U PLC version | Model name (Media model name is shown below.) | Applicable GX Works2 version | Remarks |
|------------------|---|---------------------------------|---------|
| Before Ver. 2.70 | GX Works2 SW□DNC-GXW2-E | Ver. 1.08J or later | - |
| Before Ver. 3.00 | | Ver. 1.48A or later | |
| Before Ver. 3.10 | | Ver. 1.62Q or later | |
| Ver. 3.10 | | Ver. 1.73B or later | |

- GX Works2 Japanese version (SW□DNC-GXW2-J) is applicable to FX3U PLCs from the following versions.

| FX3U PLC version | Model name (Media model name is shown below.) | Applicable GX Works2 version | Remarks |
|------------------|---|---------------------------------|---|
| Before Ver. 2.70 | GX Works2 SW□DNC-GXW2-J | Ver. 1.07H or later | - |
| Before Ver. 3.00 | | Ver. 1.45X or later | |
| Before Ver. 3.10 | | Ver. 1.56J or later | |
| Ver. 3.10 | | Ver. 1.73B or later | The setting of FX3U-ENET-ADP is supported in Ver. 1.90U or later. |

2. GX Developer

- GX Developer English version (SW□D5C-GPPW-E) is applicable to FX3U PLCs from the following versions.

| FX3U PLC version | Model name (Media model name is shown below.) | Applicable GX Developer version | Remarks |
|------------------|---|------------------------------------|---|
| Before Ver. 2.30 | GX Developer SW□D5C-GPPW-E | Ver. 8.24A or later | - |
| Before Ver. 2.41 | | Ver. 8.29F or later | |
| Before Ver. 2.61 | | Ver. 8.29F or later | |
| Ver. 2.61 | | Ver. 8.82L or later | Ver. 8.89T and later versions support the baud rate "38400 bps" in the communication setting for RS and RS2 instructions, inverter communication and computer link. |

- GX Developer Japanese version (SW□D5C-GPPW-J) is applicable to FX3U PLCs from the following versions.

| FX3U PLC version | Model name (Media model name is shown below.) | Applicable GX Developer version | Remarks |
|------------------|---|------------------------------------|---|
| Before Ver. 2.30 | GX Developer SW□D5C-GPPW-J | Ver. 8.23Z or later | - |
| Before Ver. 2.41 | | Ver. 8.29F or later | |
| Before Ver. 2.61 | | Ver. 8.29F or later | |
| Ver. 2.61 | | Ver. 8.82L or later | Ver. 8.88S and later versions support the baud rate "38400 bps" in the communication setting for RS and RS2 instructions, inverter communication and computer link. |

3. FX-30P

FX-30P is applicable to FX3U PLCs from the following version.

| FX3U PLC version | Model name | Applicable FX-30P version | Remarks |
|------------------|------------|---------------------------|---------|
| Before Ver. 2.41 | FX-30P | Ver. 1.00 or later | - |
| Ver. 2.70 | | Ver. 1.20 or later | |

5.2.2 In case of programming tool (version) not applicable

Inapplicable programming tools can programme by setting alternative model.

1. Alternative model setting

| Model to be programmed | Model to be set | | | | | Priority High → Low |
|------------------------|-----------------|---|-------|---|------|---------------------|
| FX3U PLC | FX3U(C) | → | FX3UC | → | FX2N | → FX2 |

2. Contents of restrictions

- Programming is enabled only in the function ranges such as instructions, device ranges and program sizes available in a PLC selected as the alternative model.
- When "FX3UC" is selected, programs and functions of applied instructions added from the corresponding version are different.
- Change the parameters such as the memory capacity and file register capacity using a programming tool allowing selection of "FX3U(C)" or "FX3UC".

5.2.3 Program transfer speed and programming tools

1. RS-422/RS-232C/USB communication

The FX3U PLC can write and read programs and perform monitoring at 115.2 kbps through RS-422/RS-232C/USB communication.


- 1) 115.2 kbps supported programming tools
GX Works2 (Ver. 1.08J or later), GX Developer (Ver. 8.18U or later), FX-30P (Ver. 1.00 or later)
- 2) 115.2 kbps supported interfaces
 - Standard built-in port or expansion board FX3U-422-BD for RS-422
When the RS-232C/RS-422 converter FX-232AWC-H or USB/RS-422 converter FX-USB-AW is connected.
 - Expansion board FX3U-232-BD for RS-232C
 - Special adapter FX3U-232ADP(-MB) for RS-232C
 - Expansion board FX3U-USB-BD for USB
- 3) In programming tools not supporting 115.2 kbps
Communication is executed at 9,600 or 19,200 bps.

5.2.4 Cautions on connecting peripheral equipment by way of expansion board or special adapter

When connecting peripheral equipment (programming tool or GOT [CPU direct connection]) by way of the FX3U-232-BD, FX3U-422-BD, FX3U-USB-BD or FX3U-232ADP(-MB), set the connection channel (CH1 or CH2) as follows. If the connection channel is not specified with the status below, communication error may occur in the connected peripheral equipment.

→ For details, refer to the **Data Communication Edition**.

- Set to "K0" the special data register for communication format setting of the channel connecting the peripheral equipment (CH1: D8400 or D8120, CH2: D8420).
- Set the communication parameter "PLC system [2]" of the channel connecting the peripheral equipment to "Not set" (as shown in the window below).

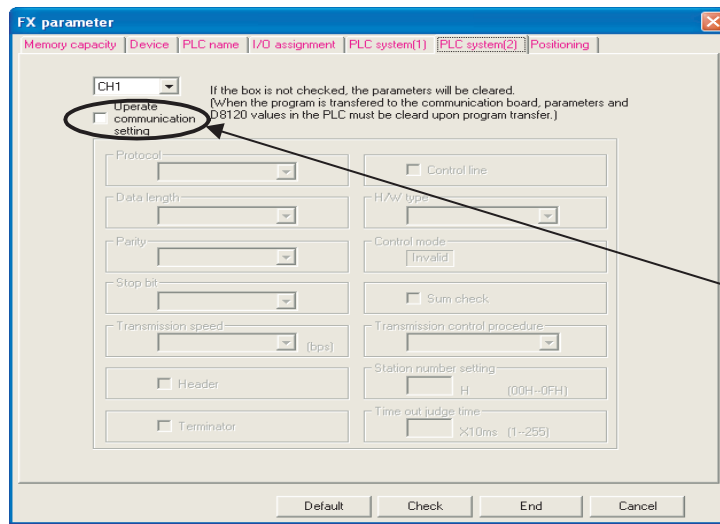

Leave this unchecked.

5.2.5 Cautions on write during RUN

In FX3U PLCs, write during RUN (program changes in the RUN mode) is enabled using the following programming tools.

→ For the operating procedure of and cautions on write during RUN, refer to the manual of the used programming tool.

Programming tools supporting write during RUN

- English version

| Programming tool | PLC | Version | Remarks |
|---|------|---------------------|---|
| GX Works2 ^{*1} (SW□DNC-GXW2-E) | FX3U | Ver. 1.08J or later | Writing in the instruction and device ranges during RUN is supported in FX3U and FX3UC PLCs earlier than Ver. 2.70. |
| | | Ver. 1.48A or later | Writing in the instruction and device ranges during RUN is supported in FX3U and FX3UC PLCs Ver. 2.70. |
| GX Developer ^{*2} (SW□D5C-GPPW-E) | FX3U | Ver. 7.00A or later | Writing in the instruction and device ranges during RUN is supported in FX2N PLCs Ver. 3.00. |
| | | Ver. 8.18U or later | Writing in the instruction and device ranges during RUN is supported in FX3UC PLCs earlier than Ver. 2.20. |
| | | Ver. 8.24A or later | Writing in the instruction and device ranges during RUN is supported in FX3U and FX3UC PLCs earlier than Ver. 2.30. |
| | | Ver. 8.29F or later | Writing in the instruction and device ranges during RUN is supported in FX3U and FX3UC PLCs earlier than Ver. 2.61. |
| | | Ver. 8.82L or later | Writing in the instruction and device ranges during RUN is supported in FX3U and FX3UC PLCs Ver. 2.61. |
| FX-PCS/WIN-E ^{*2} | FX3U | Ver. 1.00 or later | Writing in the instruction and device ranges during RUN is supported in FX2N PLCs Ver. 1.00. |
| | | Ver. 3.10 or later | Writing in the instruction and device ranges during RUN is supported in FX2N PLCs Ver. 3.00. |

- Japanese version

| Programming tool | PLC | Version | Remarks |
|---|------|---------------------|---|
| GX Works2 ^{*1} (SW□DNC-GXW2-J) | FX3U | Ver. 1.07H or later | Writing in the instruction and device ranges during RUN is supported in FX3U and FX3UC PLCs earlier than Ver. 2.70. |
| | | Ver. 1.45X or later | Writing in the instruction and device ranges during RUN is supported in FX3U and FX3UC PLCs Ver. 2.70. |
| GX Developer ^{*2} (SW□D5C-GPPW-J) | FX3U | Ver. 7.00A or later | Writing in the instruction and device ranges during RUN is supported in FX2N PLCs Ver. 3.00. |
| | | Ver. 8.13P or later | Writing in the instruction and device ranges during RUN is supported in FX3UC PLCs earlier than Ver. 1.30. |
| | | Ver. 8.18U or later | Writing in the instruction and device ranges during RUN is supported in FX3UC PLCs earlier than Ver. 2.20. |
| | | Ver. 8.23Z or later | Writing in the instruction and device ranges during RUN is supported in FX3U and FX3UC PLCs earlier than Ver. 2.30. |
| | | Ver. 8.29F or later | Writing in the instruction and device ranges during RUN is supported in FX3U and FX3UC PLCs earlier than Ver. 2.61. |
| | | Ver. 8.82L or later | Writing in the instruction and device ranges during RUN is supported in FX3U and FX3UC PLCs Ver. 2.61. |
| FX-PCS/WIN ^{*2} | FX3U | Ver. 1.00 or later | Writing in the instruction and device ranges during RUN is supported in FX2 PLCs Ver. 3.30. |
| | | Ver. 2.00 or later | Writing in the instruction and device ranges during RUN is supported in FX2N PLCs Ver. 1.00. |
| | | Ver. 4.20 or later | Writing in the instruction and device ranges during RUN is supported in FX2N PLCs Ver. 3.00. |


*1. Write during RUN is not possible with a SFC program.

*2. Write during RUN is not possible with a list program or a SFC program.

Cautions on write during RUN

| Item | Caution |
|---|--|
| Program memories which can be written in RUN mode | Built-in RAM and optional memory cassette (whose write protect switch is set to OFF) |
| Number of program steps which can be written for circuit change in RUN mode | <ul style="list-style-type: none"> • GX Works2 Ver. 1.08J or later • GX Developer Ver. 8.24A or later 256 steps or less after edition (addition/deletion) (including NOP immediately after circuit blocks except final circuit) |
| | <ul style="list-style-type: none"> • GX Developer Ver. 8.22Y or former • FX-PCS/WIN(-E) 127 steps or less after edition (addition/deletion) (including NOP immediately after circuit blocks except final circuit) |
| Circuit blocks which cannot be written in RUN mode | Circuit blocks ^{*1} in which labels P and I are added, deleted or changed in edited circuits Circuit blocks in which 1-ms timers (T246 to T249 and T256 to T511) are added in edited circuits Circuit blocks in which the following instructions are included in edited circuits <ul style="list-style-type: none"> • Instruction to output high-speed counters C235 to C255 (OUT instruction) • SORT2 (FNC149), TBL (FNC152), RBFM (FNC278) and WBFM (FNC279) instructions |

*1. Circuit blocks cannot be edited to insert a label as shown below when written during RUN.

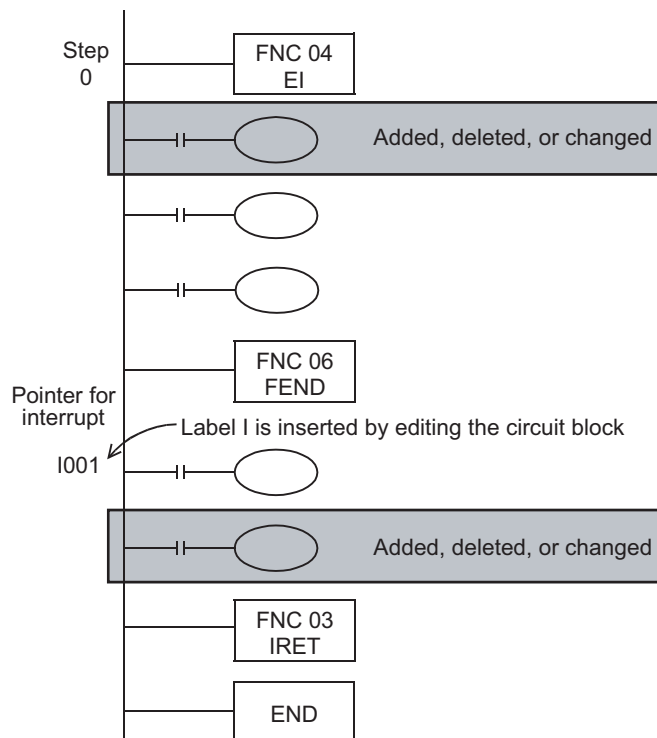

| Item | Caution | | | | | | | | |
|--|---|--|-----------------------------------|------------------------------------|-----|--------------|--------------|----|------------|
| Circuit blocks which require attention on operation after write during RUN | Avoid write during RUN to a circuit block including the following instructions during execution. If write during RUN is executed to such a circuit block, the PLC decelerates and stops pulse output. <ul style="list-style-type: none">DSZR (FNC150), DVIT (FNC151), ZRN (FNC156), PLSV (FNC157) instructions [with acceleration/deceleration operation], DRVI (FNC158) and DRVA (FNC159) instructions | | | | | | | | |
| | Avoid write during RUN to a circuit block including the following instruction during execution. If write during RUN is executed to such a circuit block, the PLC immediately stops pulse output. <ul style="list-style-type: none">PLSV (FNC157) instruction [without acceleration/deceleration operation] | | | | | | | | |
| | Avoid write during RUN to a circuit block including the following instructions during execution. <ul style="list-style-type: none">PLSY (FNC 50), PWM (FNC 58) and PLSR (FNC 59) instructions | | | | | | | | |
| | Avoid write during RUN to a circuit block including the following instructions during execution of communication. If write during RUN is executed to such a circuit block, the PLC may stop communication after that. If the PLC stops communication, set the PLC to the STOP mode once, and then set it to the RUN mode again. <ul style="list-style-type: none">IVCK (FNC270), IVDR (FNC271), IVRD (FNC272), IVWR (FNC273), IVBWR (FNC274), IVMC (FNC275) and ADPRW (FNC276) instructions | | | | | | | | |
| | During RUN, avoid writing to a circuit block including the following instruction under execution. If such writing is executed during RUN, instructions being executed are canceled. <ul style="list-style-type: none">FLCRT (FNC300), FLDEL (FNC301), FLWR (FNC302), FLRD (FNC303), FLCMD (FNC304) and FLSTRD (FNC305) instructions | | | | | | | | |
| | When writing to a circuit block during RUN, which includes the following instructions, the following results. <ul style="list-style-type: none">Instructions for falling edge pulse When write during RUN is completed for a circuit including an instruction for falling edge pulse (LDF, ANDF, or ORF instruction), the instruction for falling edge pulse is not executed without regard to the ON/OFF status of the target device. When write during RUN is completed for a circuit including an instruction for falling edge pulse (PLF instruction), the instruction for falling edge pulse is not executed without regard to the ON/OFF status of the device that is set as the operation condition. It is necessary to set to ON the target device or operation condition device once and then set it to OFF for executing the instruction for falling edge pulse.Instructions for rising edge pulse When write during RUN is completed for a circuit including an instruction for rising edge pulse, the instruction for rising edge pulse is executed if a target device of the instruction for rising edge pulse or the operation condition device is ON. Target instructions for rising edge pulse: LDP, ANDP, ORP, and pulse operation type applied instructions (such as MOVP) <table><tr><th>Contact ON/OFF status (while write during RUN is executed)</th><th>Instruction for rising edge pulse</th><th>Instruction for falling edge pulse</th></tr><tr><td>OFF</td><td>Not executed</td><td>Not executed</td></tr><tr><td>ON</td><td>Executed*1</td><td>Not executed</td></tr></table> | Contact ON/OFF status (while write during RUN is executed) | Instruction for rising edge pulse | Instruction for falling edge pulse | OFF | Not executed | Not executed | ON | Executed*1 |
| Contact ON/OFF status (while write during RUN is executed) | Instruction for rising edge pulse | Instruction for falling edge pulse | | | | | | | |
| OFF | Not executed | Not executed | | | | | | | |
| ON | Executed*1 | Not executed | | | | | | | |
| *1. The PLS instruction is not executed. | | | | | | | | | |

| Item | Caution | | | | | | | | | |
|--|---|--|-----------------|-----------------|-----|---------------------|---------------------|----|-----------------|---------------------|
| Circuit blocks which require attention on operation after write during RUN | <p>When writing to a circuit block during RUN, which includes the following instructions, the following results.</p> <ul style="list-style-type: none">MEP instruction (Conversion of operation result to leading edge pulse instruction) When completing Write during RUN to a circuit including the MEP instruction, the execution result of the MEP instruction turns ON (conducting state) if the operation result up to the MEP instruction is ON.MEF instruction (Conversion of operation result to trailing edge pulse instruction) When completing Write during RUN to a circuit including the MEF instruction, the execution result of the MEF instruction turns OFF (nonconducting state) regardless of the operation result (ON or OFF) up to the MEF instruction. When the operation result up to the MEF instruction is set to ON once and then set to OFF, the execution result of the MEF instruction turns ON (conducting state). <table><tr><th>Operation result up to MEP/MEF instruction</th><th>MEP instruction</th><th>MEF instruction</th></tr><tr><td>OFF</td><td>OFF (nonconducting)</td><td>OFF (nonconducting)</td></tr><tr><td>ON</td><td>ON (conducting)</td><td>OFF (nonconducting)</td></tr></table> | Operation result up to MEP/MEF instruction | MEP instruction | MEF instruction | OFF | OFF (nonconducting) | OFF (nonconducting) | ON | ON (conducting) | OFF (nonconducting) |
| Operation result up to MEP/MEF instruction | MEP instruction | MEF instruction | | | | | | | | |
| OFF | OFF (nonconducting) | OFF (nonconducting) | | | | | | | | |
| ON | ON (conducting) | OFF (nonconducting) | | | | | | | | |
| Others | <ul style="list-style-type: none">When writing during RUN with GX Works2 Ver. 1.08J or later, GX Developer Ver. 8.18U or later, the program is as follows. When the number of program steps is reduced by deletion of contacts, coils and applied instructions, the program capacity becomes smaller by as many as the reduced number of steps.FX3U Ver. 3.00 or later, GX Works2 Ver. 1.62Q or later. Writing during RUN is enabled only when the protection status (valid or invalid) by the setting "Read-protect the execution program." for the block password is same as the protection status of the PLC designated as the target of writing during RUN.Errors cannot be detected in write during RUN even in a circuit which causes errors. Errors are detected after the PLC is stopped once, and then run again. | | | | | | | | | |

5.3 Cautions on using transparent function by way of USB in GOT1000 Series

When monitoring circuits, device registration, etc. or reading/writing programs in an FX3U PLC from GX Developer Ver. 8.22Y or later using the transparent function by way of USB in the GOT1000 Series, make sure to execute the following setting.


If the following setting is not provided, a communication error occurs.

| | GX Developer Ver. 8.21X or former | GX Developer Ver. 8.22Y or later*1 |
|---|---|---|
| When using transparent function by way of USB in GOT1000 Series | Not supported (not available) | Setting shown below is required. |
| When using transparent function by way of RS-232C in GOT1000 Series | Set "COM port" and "Transmission speed" on "PC side I/F Serial setting" dialog box. | Select "RS-232C" in setting shown below, and set "COM port" and "Transmission speed". |
| When directly connecting GX Developer to PLC | | |

*1. GX Developer Ver. 8.24A or later supports the FX3U Series.

Setting in GX Developer (Ver. 8.22Y or later)

- 1 Select [Online] → [Transfer setup...] to open the "Transfer setup" dialog box.
- 2 Double-click [Serial] in [PC side I/F] to open the "PC side I/F Serial setting" dialog box.
- 3 Select "USB (GOT Transparent mode)".

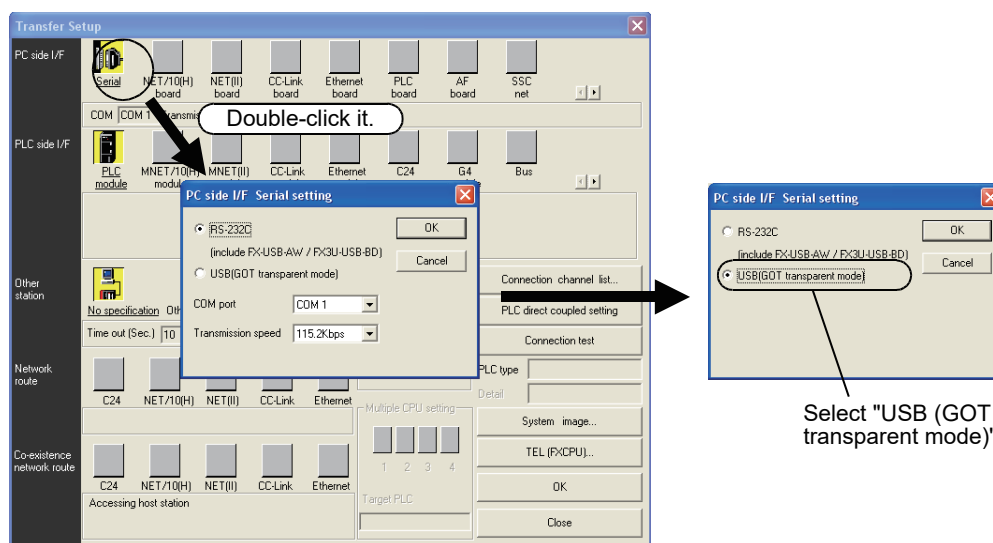

- 4 Click the [OK] button to finish the setting.


5.4 Cautions on using transparent port (2-port) function of GOT-F900 Series

When monitoring circuits, device registration, etc. in an FX3U PLC from GX Developer Ver. 8.18U or later using the transparent (2-port) function in the GOT-F900 Series, make sure to execute the following setting. If the following setting is not provided, write to PLC, read from PLC, verify with PLC, etc. operate normally, but monitoring (ladder monitor, entry datemonitor, etc.) cannot be normally executed.

| | GX Developer Ver. 8.12N or earlier | GX Developer Ver. 8.18U or later | GX Developer Ver. 8.22Y or later |
|--|---|--------------------------------------|---|
| When directly connecting GX Developer to PLC | Set "COM port" and "Transmission speed" on "PC side I/F Serial setting" dialog box. | | Select "RS-232C" on "PC side I/F Serial setting" dialog box, and set "COM port" and "Transmission speed." |
| When using transparent function in GOT-F900 Series | Setting shown below is required. | Setting shown below is not required. | Select "RS-232C" on "PC side I/F Serial setting" dialog box, and execute setting shown below. |

Setting in GX Developer (Ver. 8.18U or later)

- 1 Select [Online] → [Transfer setup...] to open the "Transfer Setup" dialog box.
- 2 Double-click [PLC module] in [PLC side I/F] to open the [PLC side I/F Detailed setting of PLC module] dialog box.
- 3 Put a check mark to the check box [via GOT-F900 transparent mode] as shown below.

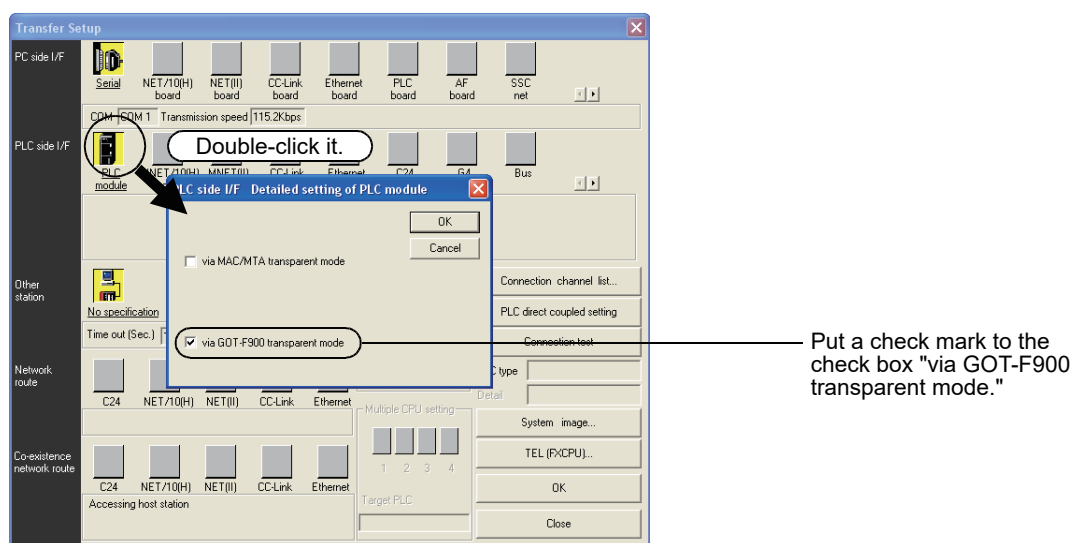

- 4 Click the [OK] button to finish the setting.

5.5 Other Peripheral Equipment Applicability

5.5.1 Other Peripheral Equipment Applicability


| Model name | Applicability | Remarks |
|------------------------|------------------------------------|---|
| GOT1000 Series | Applicable (From first product) | The GOT1000 Series is applicable to the device ranges in the FX3U PLCs. Check the applicability of other items in the GOT manual. |
| F940WGOT | Applicable | For connection using the 2-port interface function*1, refer to Section 5.4. The following restriction applies when connected. |
| F940GOT F940 Handy GOT | Applicable | |
| F930GOT(-K) | Applicable | |
| F920GOT(-K) | Applicable | |
| ET-940 | Applicable | <u>Contents of restrictions</u> Programming is enabled only in the function ranges such as instructions, device ranges and program sizes available in the FX2N and FX2NC PLCs. For applicable models, refer to the GOT manual. |
| FX-10DM (-SET0) | Applicable | The following restriction applies when connected. <u>Contents of restrictions</u> Programming is enabled only in the function ranges such as instructions, device ranges and program sizes available in the FX2N and FX2NC PLCs. For supported models and device ranges, refer to the FX-10DM USER'S MANUAL (JY992D86401). |
| FX-10DU(-E) | Applicable | The following restriction applies when connected. <u>Contents of restrictions</u> It is limited to the device range and function range supported by the highest class model (FX2N or FX2) applicable in the product version. For supported models and device ranges, refer to the FX-10DU-E/ FX-20DU-E User's Manual (JY992D54801). |

*1. The F940GOT and ET-940 whose version is former than Ver. 1.10 do not support the transparent (2-port) function of the GX Developer.

6. Examination of System Configuration

6.1 Configuration of a Whole System

The configuration of a whole system is shown below as an example.

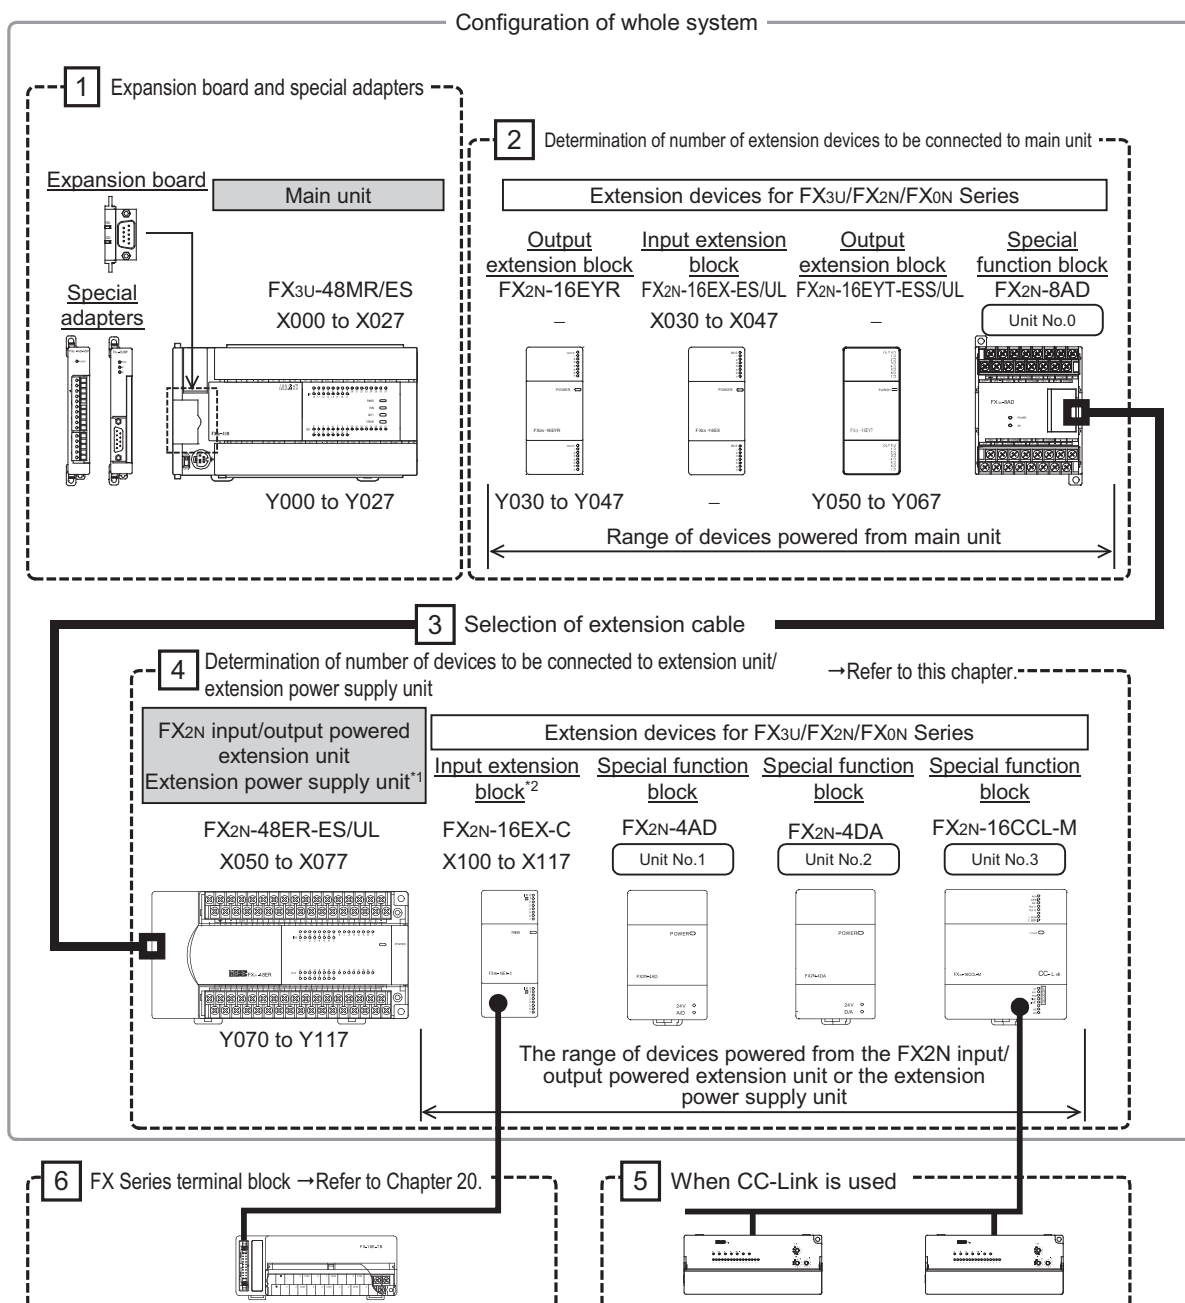

*1. Applicable when the main unit is AC power type.

*2. If an extension power supply unit is connected on the upstream side of an input extension block, the power must be supplied from the main unit's 24V DC service power to the input extension block.

Caution

When using an extension unit, select a power supply type that is the same as the main unit.

6.1.1 List of system components

| Classification | | Types (extracted) *1 | Max. number of connect- able units | Other items to be considered | | | Reference | |
|--|--------------------------|--|---|---|---|--------------------------|-----------|---------------------------|
| | | | | Max. number of input/ output points | Number of input/output (occupied) points | 5V DC power supply | | 24V DC power supply |
| A Main unit | | FX3U-16MR/ES ⋮ FX3U-80MR/ES | 1 unit | ✓ 256 points or less | ✓*6 | — | — | Subsection 6.8.1 |
| D Input/output powered extension unit | | FX2N-32ER FX2N-48ER | Not specified | ✓ 256 points or less | ✓*6 | — | — | Subsection 6.8.4 |
| D Input/output extension block | | FX2N-8EX FX2N-8EYR FX2N-16EX FX2N-16EYR | Not specified | ✓ 256 points or less | ✓*6 | — | ✓ | |
| B Expansion board | | FX3U-232-BD FX3U-422-BD FX3U-CNV-BD | 1 unit | — | — | ✓ | — | Subsection 6.8.2 |
| C Special adapter | Analog | FX3U-4AD-ADP FX3U-4AD-TC-ADP | Up to 4 units | — | — | ✓ | ✓*4 | Subsection 6.8.3 |
| | Communi- cation | FX3U-232ADP(-MB) FX3U-485ADP(-MB) | Up to 2 units*2 | — | — | ✓ | — | |
| | CF card | FX3U-CF-ADP | 1 unit*2 | — | — | ✓ | ✓*4 | |
| | High- speed input | FX3U-4HSX-ADP | Up to 2 units | — | — | ✓ | ✓ | |
| | High- speed output | FX3U-2HSY-ADP | Up to 2 units | — | — | ✓ | ✓ | |
| E Special function unit/block | Analog | FX0N-3A FX2N-2AD FX2N-2DA | Up to 8 units*2 | ✓ 256 points or less | ✓*7 | ✓ | ✓ | Subsection 6.8.5 |
| | | FX2N-4AD FX2N-8AD FX2N-2LC | | ✓ 256 points or less | ✓*7 | ✓ | ✓*4 | |
| | Communi- cation | FX2N-232IF | | ✓ 256 points or less | ✓*7 | ✓ | ✓*4 | |
| | Position- ing | FX2N-10PG FX2N-10GM FX2N-1RM-SET | | ✓ 256 points or less | ✓*7 | ✓ | ✓*4 | |
| | Network | FX2N-64CL-M | | ✓ 256 points or less | ✓*7 | — | ✓*4 | |
| | | FX3U-16CCL-M | | ✓*3 384 points or less | ✓*7 | — | ✓*4 | |
| | | FX2N-32ASI-M | | | | ✓ | | |
| H Extension power supply unit | | FX3U-1PSU-5V | Up to 2 units | — | — | — | — | Chapter 17 |
| Extension cable | | FX0N-30EC FX0N-65EC FX2N-GM-65EC | One of them*5 | — | — | ✓ | — | Subsection 6.4.3 |

*1. For connectable product type, refer to the following chapter.


→ For details, refer to Chapter 3 "Introduction of Products (Compliant with Overseas Standards)".

- *2. For some products, there are restrictions on combination and number of connected units.
 - **For details on the special adapters, refer to Subsection 6.4.1.**
 - **For details on the special function units/blocks, refer to Subsection 6.4.2.**
- *3. When CC-Link master, etc is used, the maximum number of input/output points is 384.
 - **For details, refer to Section 6.3 "Number of Input/Output Points and Maximum Number of Input/Output Points" .**
- *4. When the special function units/blocks and special adapters are externally wired to 24V DC power supply, the current consumed by them is added to the current consumption.
- *5. One extension cable can be used on a system. The cable to be used depends on the products to be added. The extension cable must be selected carefully.
 - **For an outline of the extension cable, refer to Subsection 6.4.3 "Extension cable".**
- *6. The number of input/output points varies depending on the type.
- *7. The special function units/blocks (except for the FX_{2N}-16LNK-M) occupy eight input/output points each.
 - **For details on the special function units/blocks, refer to Subsection 6.4.2.**

6.1.2 System configuration with special adapters


1. When high-speed input/output special adapters are used

When only high-speed input/output special adapters are connected, the adapters can be used without an expansion board.

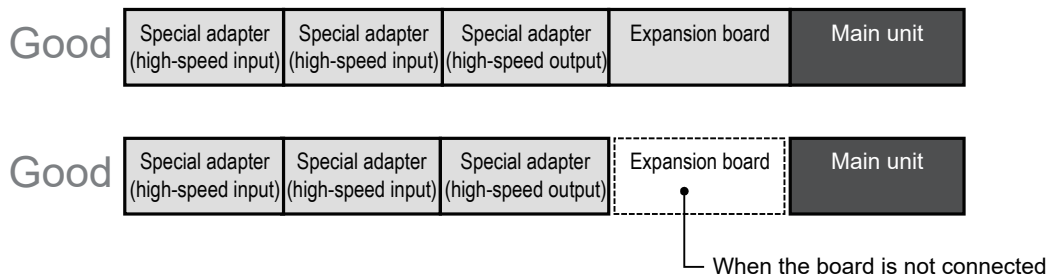


2. When analog, communication and CF card special adapters are used

1) Analog, communication and CF card special adapters must be used with an expansion board.

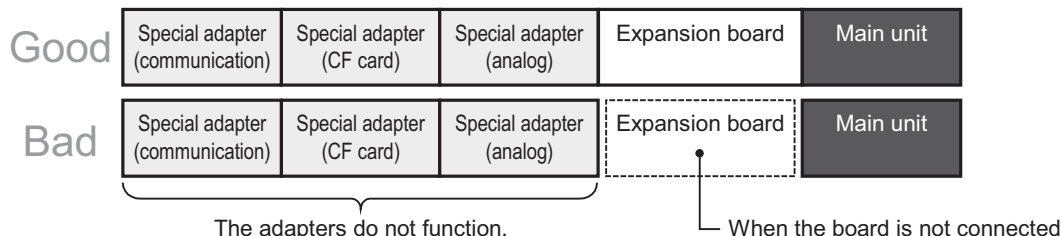


2) When an expansion board (other than the FX3U-CNV-BD) is used, one communication and CF card special adapter may be used.

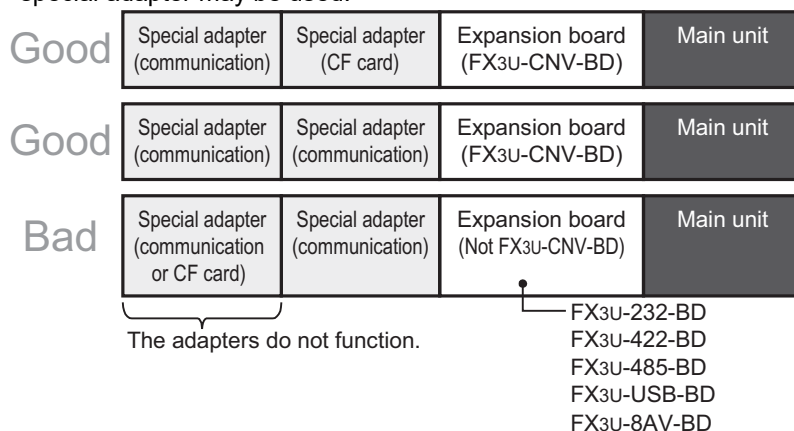

3. When high-speed input/output, analog, communication and CF card adapters are used

When these adapters are used, connect the high-speed input/output special adapters on the left side of the main unit.

The high-speed input/output special adapters cannot be connected on the downstream side of any communication, analog and CF card special adapter.

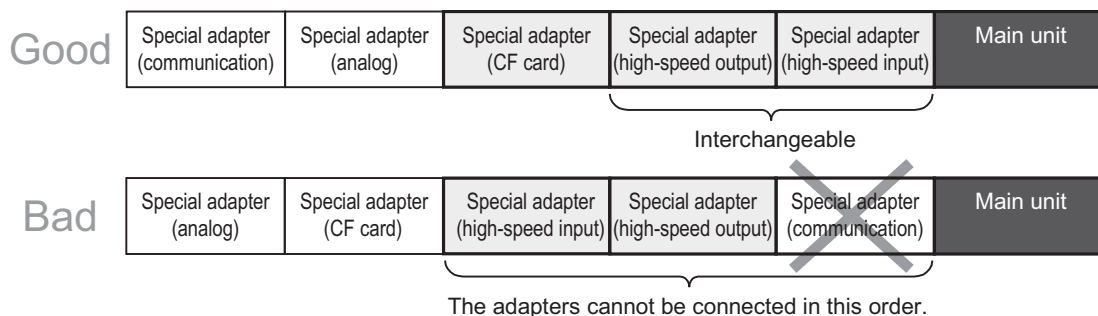


6.2 Rules of System Configuration

The system configuration must meet the following three requirements.

1 Number of input/output points

The total number of input/output points and remote I/O points on CC-Link, AnyWireASLINK and AS-i system must be 384 points or less on the whole system.

→ For details, refer to Section 6.3 "Number of Input/Output Points and Maximum Number of Input/Output Points".

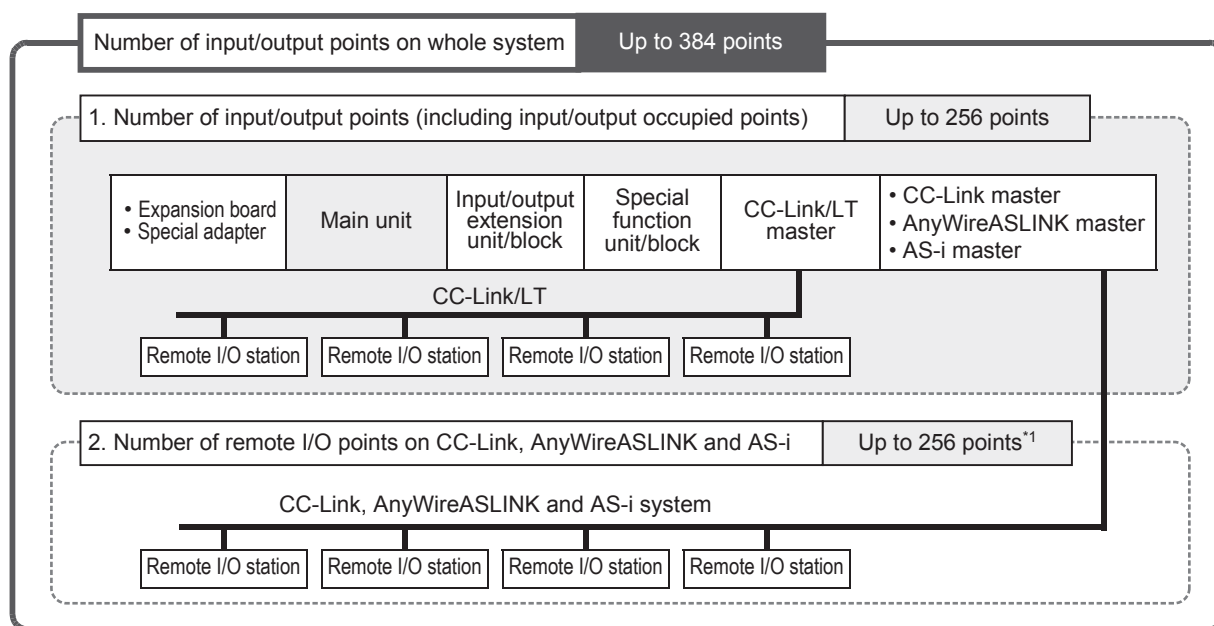

*1. The maximum number of remote input/output points varies depending on the network type.
For details, refer to the following.

→ When CC-Link master is used, refer to Subsection 6.3.2.


→ When AnyWireASLINK master is used, refer to Subsection 6.3.3.

→ When AS-i master is used, refer to Subsection 6.3.4.

2 Number of connected special extension devices

The numbers of connectable expansion boards, special adapters and special function units/blocks are shown below.

→ For details, refer to Section 6.4 "Number of Connected Special Extension Devices (Including Extension Cable)".

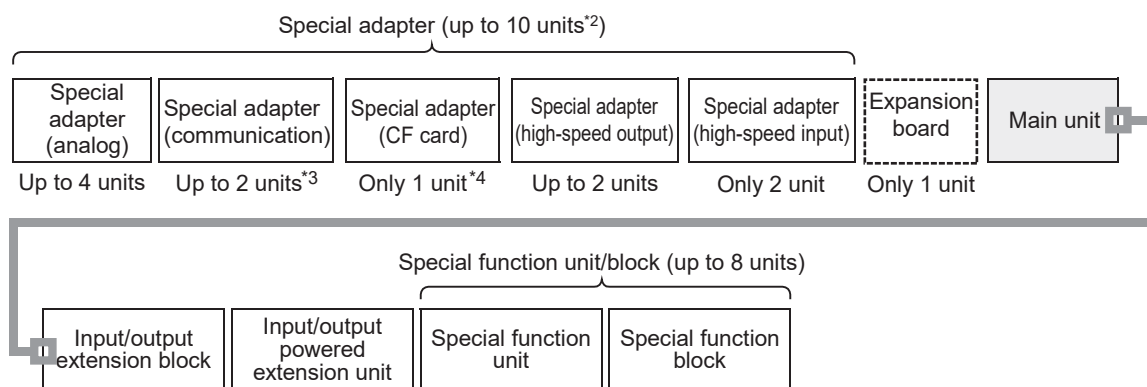

*2. When an expansion board other than FX3U-CNV-BD is used, up to 9 adapters can be connected.


*3. When an expansion board other than the FX3U-CNV-BD or a CF card special adapter is used, only 1 unit can be connected.

*4. When the total number of expansion boards used other than the FX3U-CNV-BD and communication special adapters is 2, no unit can be connected.

3 Calculation of current consumption

The power is supplied to each connected device from the built-in power supply of the main unit, the input/output powered extension unit or the extension power supply unit.

There are three types of built-in power supplies; 24V DC service power, 5V DC power and internal 24V DC power. The power to be consumed varies depending on the type of product to be added.

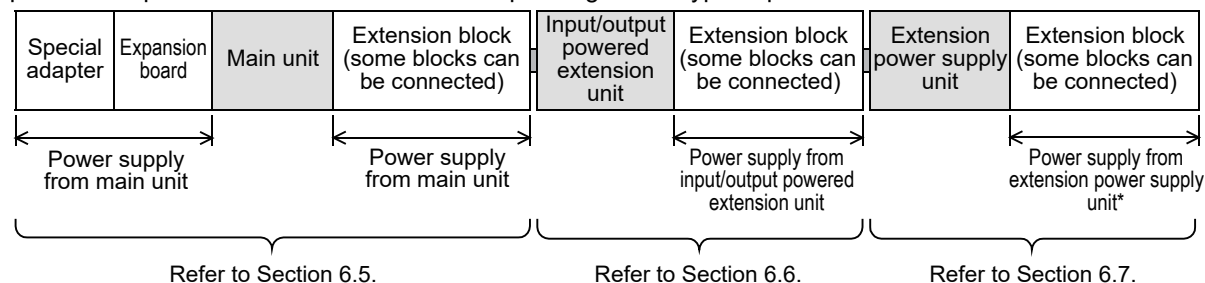

* When connecting an input extension block on the downstream side of an extension power supply unit, supply the power to the input extension block from the nearest main unit on the upstream side, or from an input/output powered extension unit on the upstream side of the extension power supply unit.

In the example above, the input/output powered extension unit supplies the power to extension blocks.

→ For details, refer to Section 6.5 "Expansion of Main Unit (Calculation of Current Consumption)".

→ For details, refer to Section 6.6 "Expansion of FX2N Series I/O Powered Extension Unit (Calculation of Current Consumption)".

→ For details, refer to Section 6.7 "Expansion of Extension Power Supply Unit (FX3U-1PSU-5V)".

1

Introduction

2

Features and
Part Names

3

Product
Introduction

4

Specifications

5

Version and
Peripheral
Devices

6

System
Configuration

7

Input/Output
Nos., Unit Nos.

8

Installation

9

Preparation and
Power Supply
Wiring

10

Input Wiring

6.3 Number of Input/Output Points and Maximum Number of Input/Output Points

6.3.1 Calculation of number of input/output points

To obtain the total number of input/output points, count the input/output points of input/output powered extension units/blocks and the input/output occupied points of special function units/blocks.
The number of remote I/O points on CC-Link, AnyWireASLINK and AS-i master network must be excluded.

1 Total the number of input/output points on the main unit and the number of those on the input/output powered extension units/blocks.

To obtain the total number of input/output points, count the input points (X000 and more) and output points (Y000 and more) of the main unit and input/output powered extension units/blocks.
The number of input/output points of each type of device is shown on the list below.

→ The list of numbers of input/output points is shown in Section 6.8.

2 Count the input/output points of the remote I/O stations connected on FX2N-64CL-M or FX2N-16LNK-M network.

Add the number of remote I/O points to the number of input/output points from the main unit and input/output powered extension units/blocks calculated in the above step.


→ For the method of calculating the number of remote I/O points, refer to the manual of each master.

3 Count the number of input/output occupied points of special function units/blocks.

The number of occupied input/output points per unit is 8.

The number of occupied input/output points of each type of device can be obtained by the following formula or from the list shown below.

→ For a list of occupied input/output points, refer to Section 6.8.

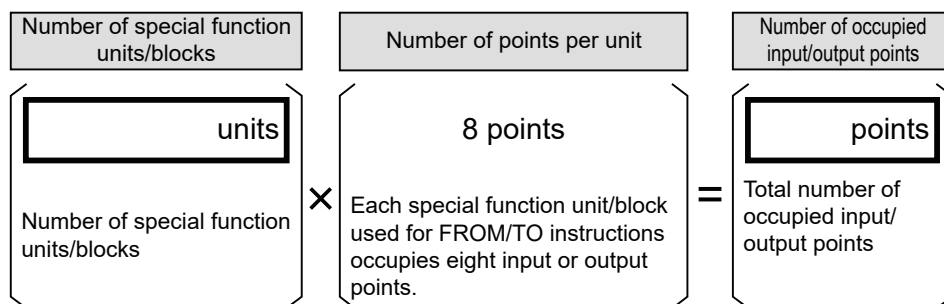


When connecting the special function units/blocks, take into consideration the combination, number of units/blocks and connecting order.

→ For details, refer to Subsection 6.4.2.

4 Calculate the total number of input/output points.

Total the number of points counted in Steps 1, 2 and 3, and check that it does not exceed 256 points (maximum number of input/output points).

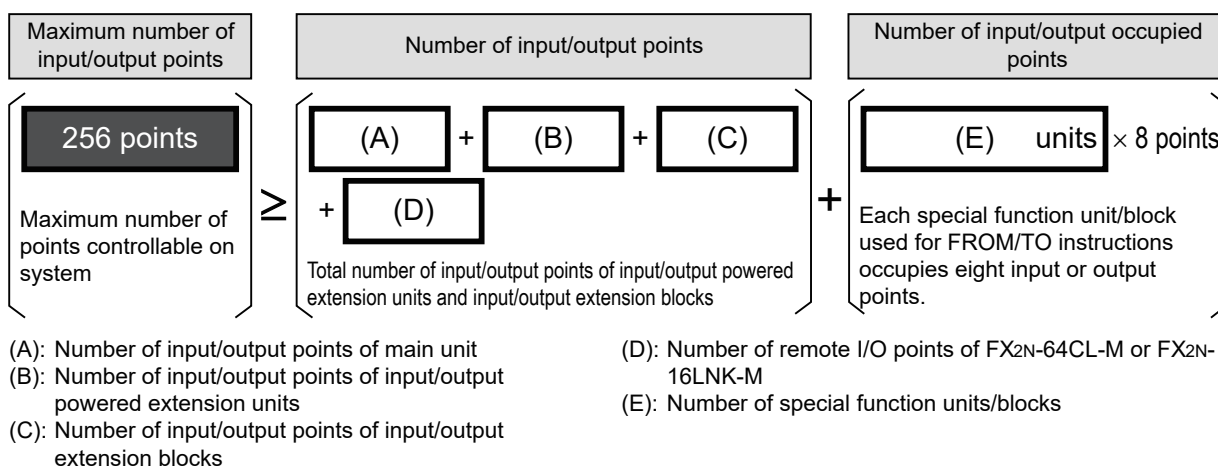

5 When CC-Link, AnyWireASLINK and AS-i master is used, count the remote I/O points.

When CC-Link, AnyWireASLINK and AS-i master is used, the total number of input/output points of the remote I/O stations connected on the network and the number of input/output points calculated in the previous step are 384 or less.

For details, refer to the following subsection.

1. FX3U-16CCL-M, FX2N-16CCL-M (CC-Link master)

Calculate the number of remote I/O points connected on the network in the following step.

→ When CC-Link master is used, refer to Subsection 6.3.2.

2. FX3U-128ASL-M (AnyWireASLINK master)

Calculate the number of remote I/O points connected on the network in the following step.

→ When AnyWireASLINK master is used, refer to Subsection 6.3.3.

3. FX2N-32ASI-M (AS-i master)


Calculate the number of remote I/O points connected on the network in the following step.

→ When AS-i master is used, refer to Subsection 6.3.4.

6.3.2 Maximum number of input/output points when CC-Link master is used

1. Calculation of maximum number of input/output points

When CC-Link master block is used, the following maximum number of input/output points can be connected.

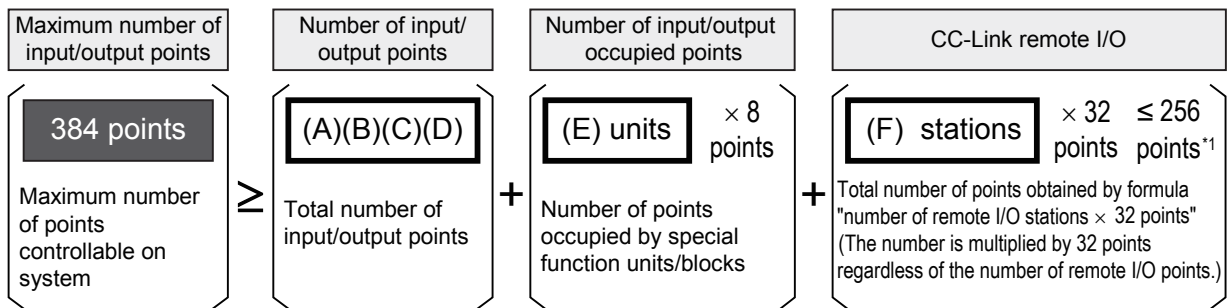

For details, refer to Subsection 6.3.1.

(A): Number of input/output points of main unit
(B): Number of input/output points of input/output powered extension units
(C): Number of input/output points of input/output extension blocks

(D): Number of remote I/O points of FX2N-64CL-M or FX2N-16LNK-M
(E): Number of input/output points occupied by special function units/blocks
(F): Number of remote I/O stations (units) connected to CC-Link master

*1. 224 points when the FX2N-16CCL-M is used.


The number of CC-Link points is calculated by the formula "32 points × number of stations" even when remote I/O stations having less than 32 points are used.

For details, refer to the manual of the CC-Link master block used.

When using together with the AnyWireASLINK master, make sure that the total number of remote I/O points in CC-Link and AnyWireASLINK master is 256 or less (and that the number of remote I/O points in the AnyWireASLINK master is up to 128). When CC-Link parameters are set by sequence program, all unused remote I/O points are occupied and become unavailable. When connecting the AnyWireASLINK master behind the CC-Link master, set CC-Link parameters using network parameters. For details, refer to FX3U-128ASL-M User's Manual.

2. Procedures for calculating number of input/output points based on example of system configuration


For the main unit, input/output powered extension units/blocks and CC-Link remote I/O stations, the number of input/output points and the total number of points are restricted.

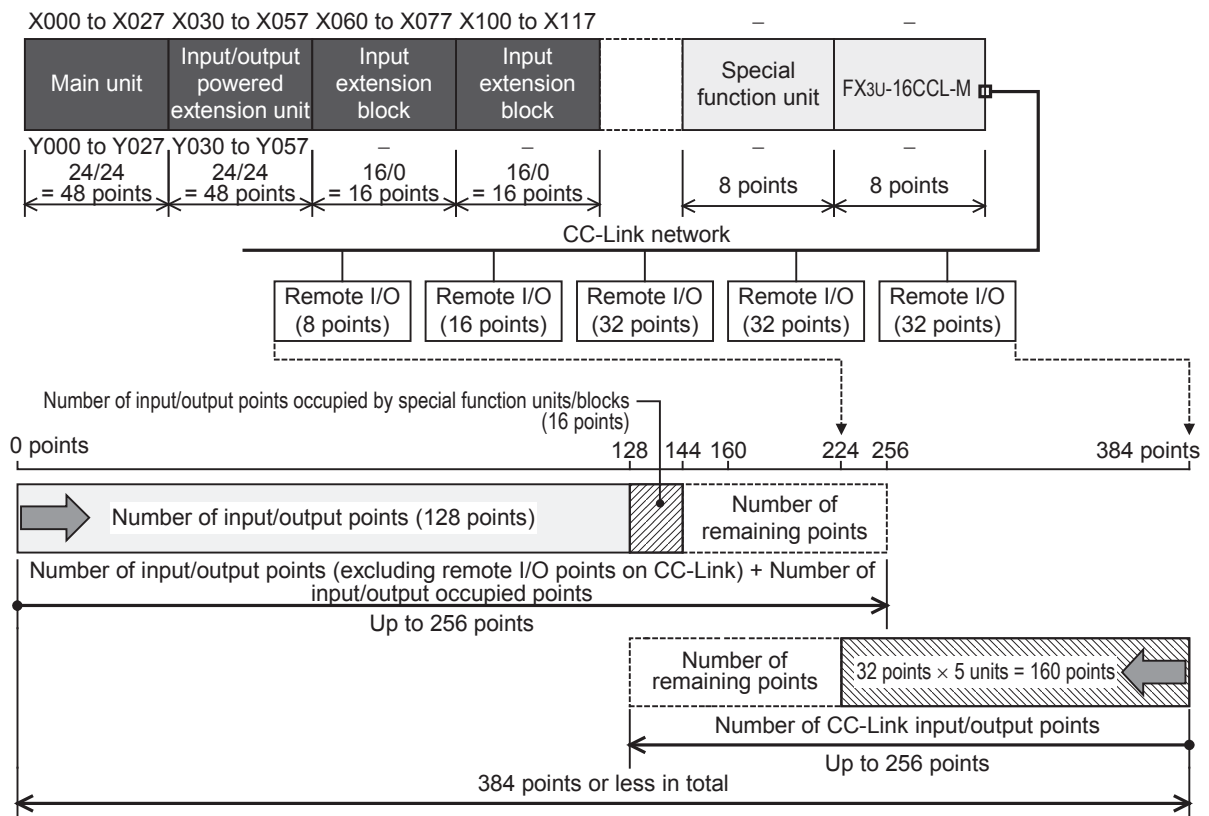

6.3.3 Maximum number of input/output points when AnyWireASLINK master is used

1. Calculation of maximum number of input/output points

When AnyWireASLINK master block is used, the following maximum number of input/output points can be connected.

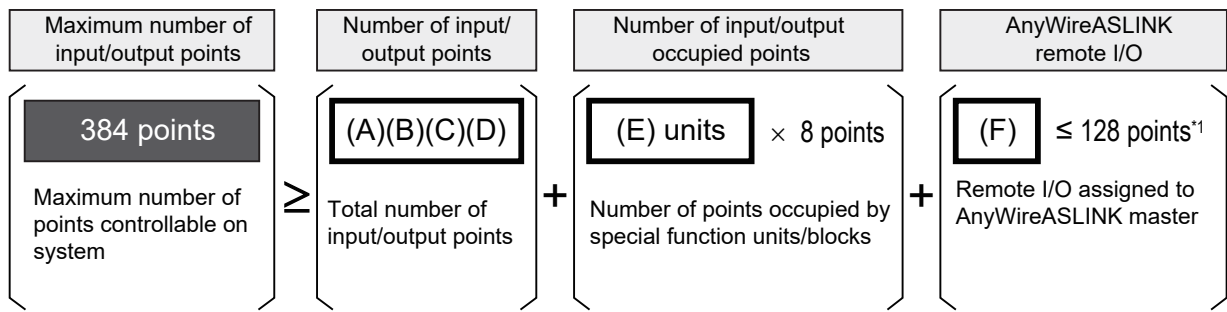


- (A): Number of input/output points of main unit
(B): Number of input/output points of input/output powered extension units
(C): Number of input/output points of input/output extension blocks

- (D): Number of remote I/O points of FX2N-64CL-M or FX2N-16LNK-M
(E): Number of input/output points occupied by special function units/blocks
(F): Number of remote I/O points assigned to AnyWireASLINK master

*1. With regard to remote I/O of the AnyWireASLINK, input/output points set by the rotary switch of the AnyWireASLINK master are assigned. When using together with CC-Link master, make sure that the total number of remote I/O points in CC-Link and AnyWireASLINK master is 256 or less (and that the number of remote I/O points in the AnyWireASLINK master is up to 128). For details, refer to FX3U-128ASL-M User's Manual.

2. Procedures for calculating number of input/output points based on example of system configuration

For the main unit, input/output powered extension units/blocks and AnyWireASLINK, the number of input/output points and the total number of points are restricted.

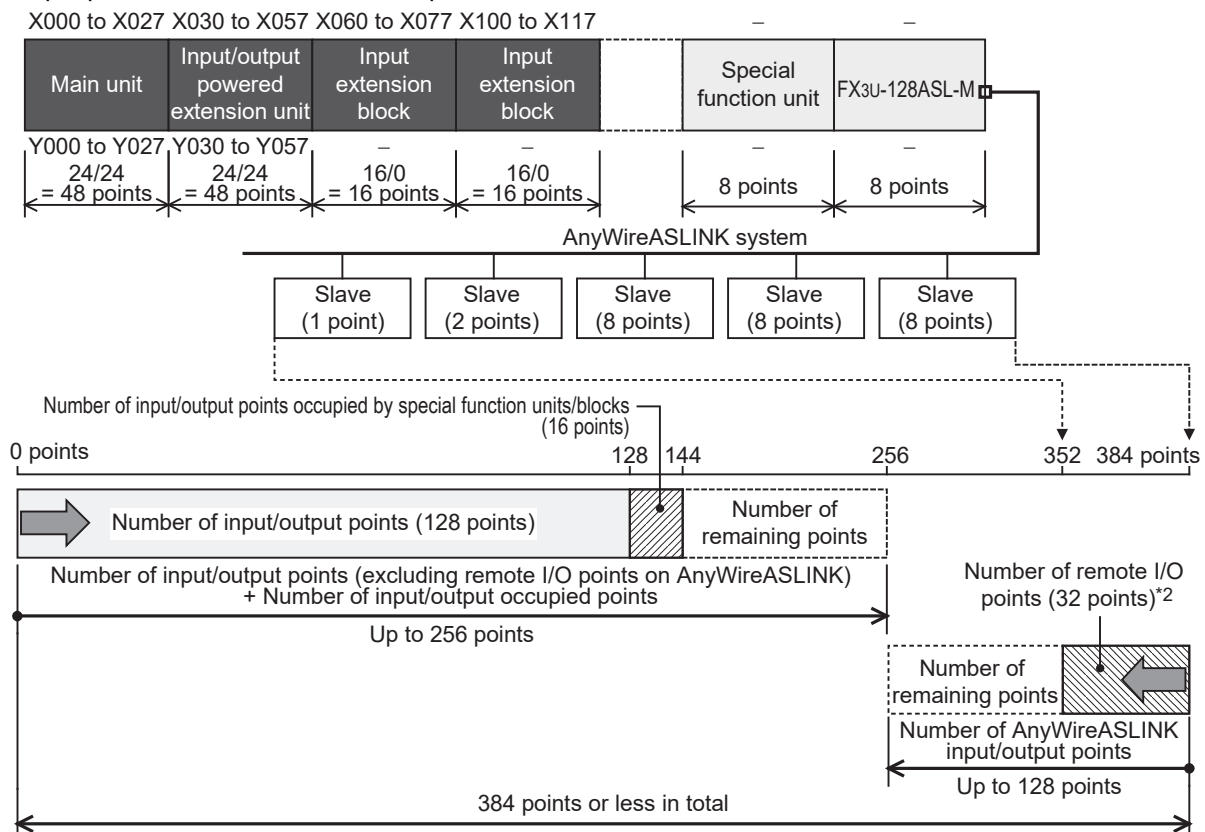


*2. When using 27 remote I/O points (8 points × 3 + 2 points + 1 point) shown above, assign 32 or more input/output points using the rotary switch of the AnyWireASLINK master.

6.3.4 Maximum number of input/output points when AS-i master is used

1. Calculation of maximum number of input/output points

When AS-i system master block is used, the following maximum number of input/output points can be connected.

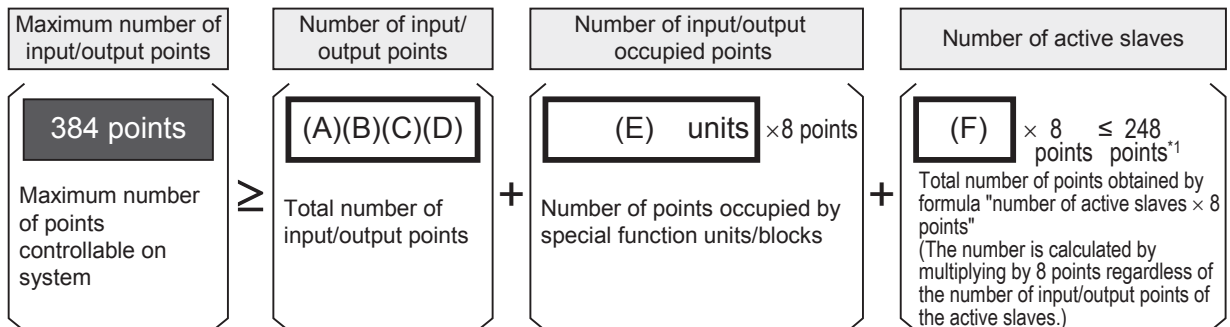

For details, refer to Subsection 6.3.1.


(A): Number of input/output points of main unit
(B): Number of input/output points of input/output powered extension units
(C): Number of input/output points of input/output extension blocks

(D): Number of remote I/O points of FX2N-64CL-M or FX2N-16LNK-M
(E): Number of input/output points occupied by special function units/blocks
(F): Number of active slaves connected to AS-i system master block

*1. Up to 31 slaves can be connected to the AS-i system master block.
The maximum number is calculated by the formula "8 points × number of slaves" regardless of the number of I/O points used on one slave.
For details, refer to AS-i System User's Manual.

2. Procedures for calculating number of input/output points based on example of system configuration

For the main unit, input/output powered extension units/blocks and AS-i system, the number of input/output points and the total number of points are restricted.

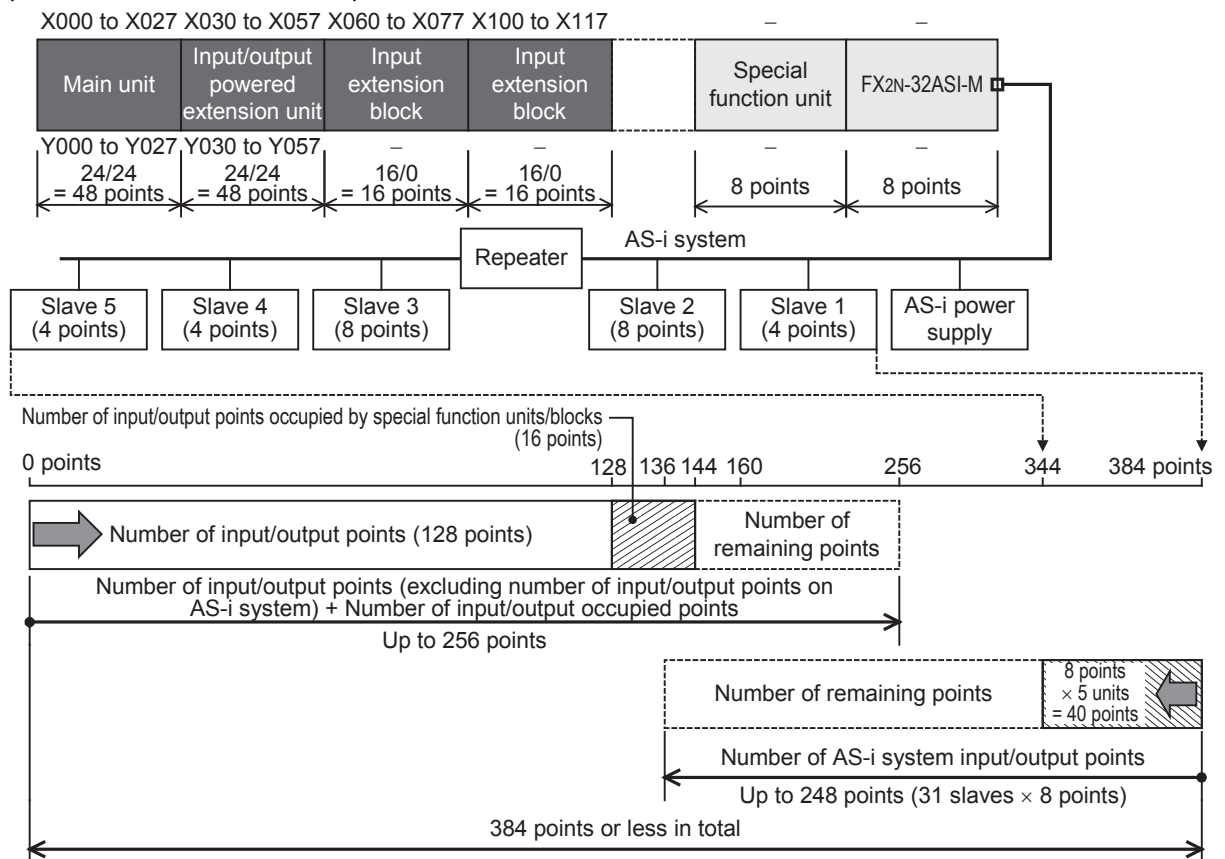

6.4 Number of Connected Special Extension Devices (Including Extension Cable)

6.4.1 Expansion board and special adapter

The number of connected special adapters is restricted depending on the type of special adapters attached as explained below.

The number of communication and CF card special adapters is restricted depending on the combination of an expansion board.

The number of special adapters other than communication and CF card adapters is restricted as shown in the following table.

| Type and function of expansion board to be used | Number of connectable special adapters of each type | | | | |
|--|---|---------|--------|---------------------|----------------------|
| | Communi- cation | CF card | Analog | High-speed input | High-speed output |
| When expansion board is not used | Cannot be connected. | | | 2 unit | 2 unit |
| When FX3U-232-BD, FX3U-422-BD, FX3U-485-BD, FX3U-USB-BD or FX3U-8AV-BD is used | Only 1unit | | 4 unit | 2 unit | 2 unit |
| When FX3U-CNV-BD is used | 2 unit*1 | 1unit | 4 unit | 2 unit | 2 unit |

*1. When a CF card special adapter is used, only 1 unit can be connected.

Only one FX3U-ENET-ADP unit can be connected to a single PLC main unit.

6.4.2 Special function units/blocks, High-speed input/output special adapter

Up to eight special function units/blocks can be connected in one system.

When connecting the following products, take into consideration the combination, number of units/blocks and connecting order.

| Type | Limitations |
|---|---|
| FX3U-16CCCL-M | <ul style="list-style-type: none"> Only one unit can be connected to a single PLC main unit. This master cannot be used together with FX2N-16CCCL-M and FX2N-32ASI-M. |
| FX2N-16CCCL-M | <ul style="list-style-type: none"> When some units are used, a remote I/O station cannot be connected to the second and following master stations. This master cannot be used together with FX3U-16CCCL-M, FX3U-128ASL-M and FX2N-32ASI-M. |
| FX3U-128ASL-M | <ul style="list-style-type: none"> Only one unit can be connected to a single PLC main unit. This master cannot be used together with FX2N-16CCCL-M and FX2N-32ASI-M. |
| FX2N-32ASI-M | <ul style="list-style-type: none"> Only one unit can be connected to a single PLC main unit. This master cannot be used together with FX3U-16CCCL-M, FX3U-128ASL-M and FX2N-16CCCL-M. |
| FX3U-64CCL FX3U-64DP-M | <ul style="list-style-type: none"> Only one unit can be connected to a single PLC main unit. |
| FX2N-1RM(-E)-SET | <ul style="list-style-type: none"> Up to 3 units can be sequentially connected to the end of a system. However, when three units are connected, they are counted as one unit, and the number of input/output occupied points is 8. |
| FX0N-3A FX2N-2AD FX2N-2DA FX3U-64DP-M FX3U-32DP FX3U-4HSX-ADP FX3U-2HSY-ADP | <p>When any of these products is connected to a FX2N Series input/output powered extension unit, the current consumption is restricted.</p> <p>The total current consumption of FX0N-3A, FX2N-2AD and FX2N-2DA must be the following value or less.</p> <ul style="list-style-type: none"> FX2N-32E□: 190mA or less FX2N-48E□: 300mA or less <p>The 5 special function units listed on the left have restrictions in current consumption (internal 24V DC) at startup when connected to FX3U Series main units (DC power type).</p> <p>At the startup of an FX0N-3A, FX2N-2AD, FX2N-2DA, FX3U-64DP-M, FX3U-32DP, FX3U-4HSX-ADP or FX3U-2HSY-ADP, make sure to set the total current consumption (internal 24V DC) less than the following values:</p> <ul style="list-style-type: none"> FX3U-16, 32M□/DS(S) : 640mA or less FX3U-48, 64, 80M□/DS(S): 800mA or less |

6.4.3 Extension cable

One extension cable can be used in a system. The type of cable varies according to the product being connected.

- FX0N-65EC
- FX0N-30EC
- FX2N-GM-65EC (for FX2N-10GM and FX2N-20GM)

6.5 Expansion of Main Unit (Calculation of Current Consumption)

The amount of connectable extension equipment to the main unit varies, depending on the main unit type. Please select equipment compatible with the main unit used.

There are three types of main units:

- AC power supply/DC input type: FX3U-□□M□/ES(S)
- DC power supply type : FX3U-□□M□/DS(S)
- AC power supply/AC input type: FX3U-□□MR/UA1

1. When an AC power supply/DC input type main unit is used

- When only input/output extension devices are added, use the quick reference matrix.

Caution

Except for the FX2N-8ER and FX2N-8ER-ES/UL.

→ **Refer to Subsection 6.5.1 "Quick reference matrix - when only input/output devices are added (AC Power Supply/DC Input Type)".**

- When special extension devices, FX2N-8ER or FX2N-8ER-ES/UL are added, calculate the current consumption to ensure that the total current to be consumed by the added extension devices can be supplied by the built-in power supply.
→ **Refer to Subsection 6.5.2 "When special extension devices are also added [calculation of current consumption] (AC Power Supply/DC Input Type)".**

2. When a DC power supply type main unit is used

- When only input/output extension devices are added, use the quick reference matrix.

Caution

Except for the FX2N-8ER and FX2N-8ER-ES/UL.

→ **Refer to Subsection 6.5.3 "Quick reference matrix [when only input/output devices are added] (DC Power Type)".**

- When special extension devices, FX2N-8ER or FX2N-8ER-ES/UL are added, calculate the current consumption to ensure that the 5V DC and the internal 24V DC power can supply the total current required by the added extension devices.

When the added extension devices include the FX0N-3A, FX2N-2AD, FX2N-2DA, FX3U-64DP-M, FX3U-32DP, FX3U-4HSX-ADP or FX3U-2HSY-ADP, calculate the current consumption (internal 24V DC) at startup.

→ **Refer to Subsection 6.5.4 "When special extension devices are also added [calculation of current consumption] (DC Power Type)".**

3. When an AC power supply/AC input type main unit is used

- When only input/output extension devices are added, use the quick reference matrix.

Caution

Except for the FX2N-8ER and FX2N-8ER-ES/UL.

→ **Refer to Subsection 6.5.5 "Quick reference matrix [when only input/output devices are added] (AC Power Supply/AC Input Type)".**

- When special extension devices, FX2N-8ER or FX2N-8ER-ES/UL are added, calculate the current consumption to ensure that the 5V DC and the internal 24V DC power can supply the total current required by the added extension devices.
→ **Refer to Subsection 6.5.6 "When special extension devices are also added [calculation of current consumption] (AC Power Supply/AC Input Type)".**

6.5.2 When special extension devices are also added [calculation of current consumption] (AC Power Supply/DC Input Type)

1 Select a main unit.

Select a main unit.

Select one main unit appropriate to the required number of input/output points from the following table.

A

| Classification | Type | Input specifications | Output specifications | Number of input/output points [points] | Capacity of built-in power supply | |
|-----------------------|----------------|----------------------|-----------------------|--|-----------------------------------|----------------------------------|
| | | | | | 5V DC power supply [mA] | 24V DC service power supply [mA] |
| | | | | 1 -1 | 1 -2 | 1 -3 |
| A main unit | FX3U-16MR/ES | 24V DC | Relay | 16 | 500 | 400 |
| | FX3U-16MT/ES | | Transistor (sink) | 16 | | |
| | FX3U-16MT/ESS | | Transistor (source) | 16 | | |
| | FX3U-32MR/ES | | Relay | 32 | | |
| | FX3U-32MT/ES | | Transistor (sink) | 32 | | |
| | FX3U-32MT/ESS | | Transistor (source) | 32 | | |
| | FX3U-32MS/ES | | Triac | 32 | | |
| | FX3U-48MR/ES | | Relay | 48 | | 600 |
| | FX3U-48MT/ES | | Transistor (sink) | 48 | | |
| | FX3U-48MT/ESS | | Transistor (source) | 48 | | |
| | FX3U-64MR/ES | | Relay | 64 | | |
| | FX3U-64MT/ES | | Transistor (sink) | 64 | | |
| | FX3U-64MT/ESS | | Transistor (source) | 64 | | |
| | FX3U-64MS/ES | | Triac | 64 | | |
| | FX3U-80MR/ES | | Relay | 80 | | |
| | FX3U-80MT/ES | | Transistor (sink) | 80 | | |
| | FX3U-80MT/ESS | | Transistor (source) | 80 | | |
| | FX3U-128MR/ES | | Relay | 128 | | |
| | FX3U-128MT/ES | | Transistor (sink) | 128 | | |
| | FX3U-128MT/ESS | | Transistor (source) | 128 | | |

When the number of input/output points is insufficient, add input/output extension blocks.

2 Enter the specifications for the selected main unit.

Enter the number of input/output points and power supply type of the main unit according to the above table.

1

| | Classification | Number of connected units | Type | Number of input/output points [points] | Capacity of built-in power supply | |
|--------------------------------|-----------------------|---------------------------|-------|--|-----------------------------------|----------------------------------|
| | | | | | 5V DC power supply [mA] | 24V DC service power supply [mA] |
| | | | | 1 -1 | 1 -2 | 1 -3 |
| With built-in power supply | A main unit | 1 | FX3U- | | | |
| Example of entry→ FX3U-32MR/ES | | | | 32 | 500 | 400 |

3 Enter the specifications for the products to be added.

Enter the data on the input/output extension blocks and special function units/blocks to be connected to the main unit in the following table, and calculate the current.

→ For data on the number of input/output occupied points and current consumption of each type, refer to Section 6.8.

| | Classification | Number of connected units | Type | Number of input/output (occupied) points [points] | Calculation of current consumption of built-in power supply | |
|---|--|---------------------------|-----------------|---|---|--------------------------|
| | | | | | 5V DC power supply [mA] | 24V DC power supply [mA] |
| Enter the products connected to the main unit | B Expansion board | 1 | FX3U- | — | | — |
| | C Special adapter | 10 | FX3U- | — | | |
| | | | FX3U- | — | | |
| | | | FX3U- | — | | |
| | | | FX3U- | — | | |
| | | | FX3U- | — | | |
| | | | FX3U- | — | | |
| | | | FX3U- | — | | |
| | | | FX3U- | — | | |
| | | | FX3U- | — | | |
| | | | FX3U- | — | | |
| | D2 Input/output extension block* | — | FX2N- | | — | |
| | | | FX2N- | | — | |
| | | | FX2N- | | — | |
| | | | FX2N- | | — | |
| | | | FX2N- | | — | |
| | | | FX2N- | | — | |
| | | | FX2N- | | — | |
| | | | FX2N- | | — | |
| | | | FX2N- | | — | |
| | | | FX2N- | | — | |
| | | | FX2N- | | — | |
| | | | FX2N- | | — | |
| | E Special function unit/block | 8 | FX0N/FX2N/FX3U- | | | |
| | | | FX0N/FX2N/FX3U- | | | |
| | | | FX0N/FX2N/FX3U- | | | |
| | | | FX0N/FX2N/FX3U- | | | |
| | | | FX0N/FX2N/FX3U- | | | |
| | | | FX0N/FX2N/FX3U- | | | |
| | | | FX0N/FX2N/FX3U- | | | |
| | | | FX0N/FX2N/FX3U- | | | |
| | G Display module | 1 | FX3U-7DM | — | | — |
| | | | | 2 -1 | 2 -2 | 2 -3 |
| Calculate the totals | | | | | | |

* When connecting the FX3U-1PSU-5V extension power supply unit to a system where the nearest upstream unit to the FX3U-1PSU-5V is a main unit, also enter the current consumption and number of occupied I/O points for the input extension blocks (including FX2N-8ER-ES/UL and FX2N-8ER) that are connected to the FX3U-1PSU- 5V.

4 Determine whether the devices can be connected to the main unit.

Calculate the current to confirm whether the selected extension devices can be connected.

1. Calculate the current consumption of the built-in 24V DC power supply (24V DC service power supply).

The value obtained by this calculation (when the value is positive) indicates the remaining capacity of 24V DC service power supply, and the capacity can be used for external loads.

| Capacity of 24V DC power supply | Current consumption | Calculation result |
|---------------------------------|--|--------------------------------------|
| Main unit | Total of current consumed by extension devices | |
| 1 -3 mA | 2 -3 mA | = <input type="text"/> mA \geq 0mA |

2. Calculate the current consumption of the built-in 5V DC power supply.

| Capacity of 5V DC power supply | Current consumption | Calculation result |
|--------------------------------|--|--------------------------------------|
| Main unit | Total of current consumed by extension devices | |
| 1 -2 mA | 1 -3 mA | = <input type="text"/> mA \geq 0mA |

If the calculation results for the current consumption for the 24V DC power supply and 5V DC power supply are negative values, the current consumption exceeds the capacity of the built-in power supply.

Reconfigure the system configuration, adding input/output powered extension units or extension power supply units.

If the calculation results for the current consumption for the 24V DC power supply and 5V DC power supply are negative values, add an input/output powered extension unit.

→ Refer to Section 6.6 "Expansion of FX2N Series I/O Powered Extension Unit (Calculation of Current Consumption)"

If the calculation results for the current consumption by 5V DC is a negative value, add an extension power supply unit (FX3U-1PSU-5V).

→ Refer to Section 6.7 "Expansion of Extension Power Supply Unit (FX3U-1PSU-5V)"

6.5.3 Quick reference matrix [when only input/output devices are added] (DC Power Type)

The following matrix shows the expandable units up to the ○ mark, where the desired inputs (horizontal axis) and outputs (vertical axis) intersect. System are expandable up to ● mark when the supply voltage is 16.8-19.2 V.

Caution


When FX2N-8ER and FX2N-8ER-ES/UL are added, refer to Subsection 6.5.4.

Select the input/output extension block (number of points) to be connected to the main unit

The DC power type main units have restrictions in expandable I/O points since they lack a built-in service power supply.

DC power supply/DC input type


- 1) FX3U-16MR/DS, FX3U-16MT/DS, FX3U-16MT/DSS, FX3U-32MR/DS, FX3U-32MT/DS, FX3U-32MT/DSS
(These main units do not have a built-in 24V DC service power supply.)

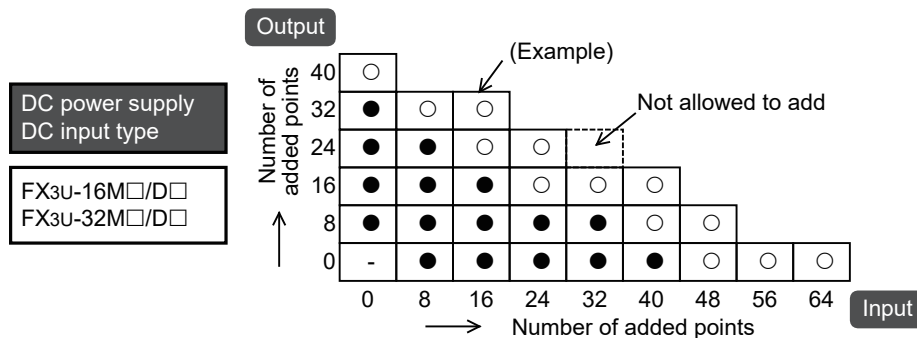

(Example) When adding 16 inputs to FX3U-16MR/DS, a maximum of 32 outputs are expandable.

Note : When adding 16 inputs under the supply voltage 16.8-19.2 V, a maximum of 16 outputs are expandable.

- 2) FX3U-48MR/DS, FX3U-48MT/DS, FX3U-48MT/DSS, FX3U-64MR/DS, FX3U-64MT/DS, FX3U-64MT/DSS, FX3U-80MR/DS, FX3U-80MT/DS, FX3U-80MT/DSS
(These main units do not have a built-in 24V DC service power supply.)

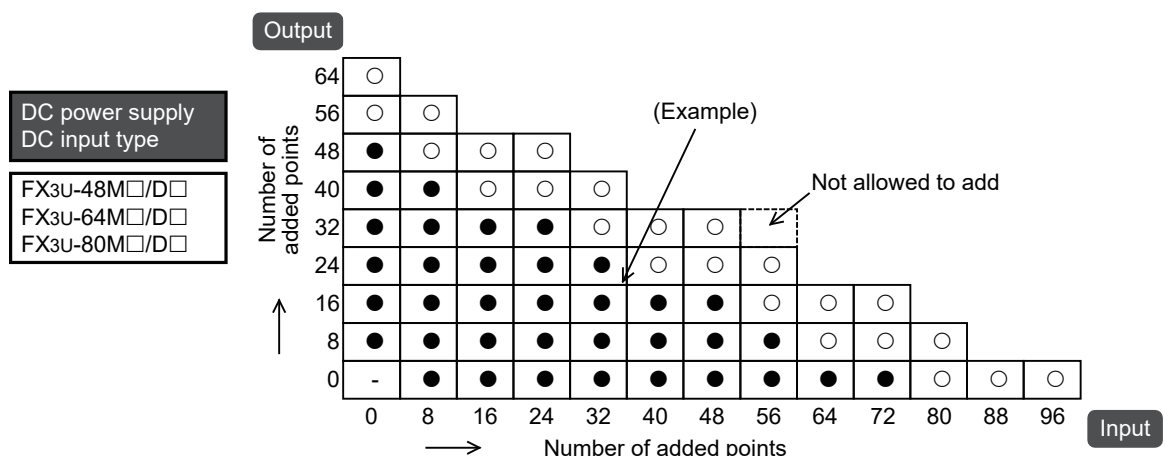

(Example) When adding 32 inputs to FX3U-48MR/DS, a maximum of 40 outputs are expandable.

Note : When adding 32 inputs under the supply voltage 16.8-19.2 V, a maximum of 24 outputs are expandable.

6.5.4 When special extension devices are also added [calculation of current consumption] (DC Power Type)

1 Select a main unit.

Select a main unit.

Select one main unit appropriate to the required number of input/output points from the following table.

A

| Classifi- cation | Type | Input specifi- cations | Output specifications | Number of input/output points [points] | Current supply at startup [mA] | Capacity of built-in power supply | Power supply for internal 24V DC [mA] | |
|---------------------|---------------|------------------------------|--------------------------|---|--------------------------------------|--|--|-------------|
| | | | | | | 5V DC power supply[mA] | | |
| | | | | | 1 -1 | 1 -2 | 1 -3 | 1 -4 |
| A main unit | FX3U-16MR/DS | 24V DC | Relay | 16 | 640 | 500 | 400*1 | |
| | FX3U-16MT/DS | | Transistor (sink) | 16 | | | | |
| | FX3U-16MT/DSS | | Transistor (source) | 16 | | | | |
| | FX3U-32MR/DS | | Relay | 32 | | | | |
| | FX3U-32MT/DS | | Transistor (sink) | 32 | | | | |
| | FX3U-32MT/DSS | | Transistor (source) | 32 | | | | |
| | FX3U-48MR/DS | | Relay | 48 | 800 | | 600*2 | |
| | FX3U-48MT/DS | | Transistor (sink) | 48 | | | | |
| | FX3U-48MT/DSS | | Transistor (source) | 48 | | | | |
| | FX3U-64MR/DS | | Relay | 64 | | | | |
| | FX3U-64MT/DS | | Transistor (sink) | 64 | | | | |
| | FX3U-64MT/DSS | | Transistor (source) | 64 | | | | |
| | FX3U-80MR/DS | | Relay | 80 | | | | |
| | FX3U-80MT/DS | | Transistor (sink) | 80 | | | | |
| | FX3U-80MT/DSS | | Transistor (source) | 80 | | | | |

*1. When the supply voltage of the main unit is 16.8-19.2 V DC, the power supply for the internal 24V DC is 250mA.

*2. When the supply voltage of the main unit is 16.8-19.2 V DC, the power supply for the internal 24V DC is 450mA.

2 Enter the specifications for the selected main unit.

Enter the number of input/output points and power supply type of the main unit according to the above table.

| 1 | Classification | Number of connected units | Type | Number of input/output points [points] | Current supply at startup [mA] | Capacity of built-in power supply 5V DC power supply [mA] | Power supply for internal 24V DC [mA] |
|--------------------------------|----------------|---------------------------|-------|--|--------------------------------|--|---------------------------------------|
| | | | | 1 -1 | 1 -2 | 1 -3 | 1 -4 |
| With built-in power supply | A main unit | 1 | FX3U- | | | | |
| Example of entry→ FX3U-32MR/DS | | | | 32 | 640 | 500 | 400 |

3 Enter the specifications for the products to be added.

Enter the data on the special function units/blocks to be connected to the main unit in the following table, and calculate the current.

→ For data on the number of input/output occupied points and current consumption of each type, refer to Section 6.8.

| | Classification | Number of connected units | Type | Number of input/output (occupied) points [points] | Current consumption at startup [mA] | Calculation of current consumption of built-in power supply | |
|--|---|---------------------------|-----------------|---|-------------------------------------|---|----------------------|
| | | | | | | 5V DC power supply [mA] | Internal 24V DC [mA] |
| Enter the products connected to the main unit. | B Expansion board | 1 | FX3U- | — | — | | — |
| | C Special adapter | 10 | FX3U- | — | | | |
| | | | FX3U- | — | | | |
| | | | FX3U- | — | | | |
| | | | FX3U- | — | | | |
| | | | FX3U- | — | | | |
| | | | FX3U- | — | | | |
| | | | FX3U- | — | | | |
| | | | FX3U- | — | | | |
| | | | FX3U- | — | | | |
| | | | FX3U- | — | | | |
| | D2 Input/output extension block | — | FX2N- | | — | — | |
| | | | FX2N- | | — | — | |
| | | | FX2N- | | — | — | |
| | | | FX2N- | | — | — | |
| | | | FX2N- | | — | — | |
| | | | FX2N- | | — | — | |
| | | | FX2N- | | — | — | |
| | | | FX2N- | | — | — | |
| | | | FX2N- | | — | — | |
| | | | FX2N- | | — | — | |
| | | | FX2N- | | — | — | |
| | E Special function unit/block | 8 | FX0N/FX2N/FX3U- | | | | |
| | | | FX0N/FX2N/FX3U- | | | | |
| | | | FX0N/FX2N/FX3U- | | | | |
| | | | FX0N/FX2N/FX3U- | | | | |
| | | | FX0N/FX2N/FX3U- | | | | |
| | | | FX0N/FX2N/FX3U- | | | | |
| | | | FX0N/FX2N/FX3U- | | | | |
| | | | FX0N/FX2N/FX3U- | | | | |
| | G Display module | 1 | FX3U-7DM | — | — | | — |
| | | | | 2 -1 | 2 -2 | 2 -3 | 2 -4 |
| Calculate the totals. | | | | | | | |

2

1 Introduction
2 Features and Part Names
3 Product Introduction
4 Specifications
5 Version and Peripheral Devices
6 System Configuration
7 Input/Output Nos., Unit Nos.
8 Installation
9 Preparation and Power Supply Wiring
10 Input Wiring

4 Determine whether the devices can be connected to the main unit.

Calculate the current to confirm whether the selected extension devices can be connected.

1. Calculate the current consumption at startup.

| Current supply at startup [mA] | Current consumption at startup [mA] | Calculation result |
|--------------------------------|--|---------------------------------|
| Main unit | Total of current consumed by extension devices | |
| 1 -2 mA | 2 -2 mA | = <input type="text"/> mA ≥ 0mA |

2. Calculate the current consumption of the internal 24V DC.

The positive value from the calculation means it is expandable.

| Power supply capacity for internal 24V DC | Current consumption | Calculation result |
|---|--|---------------------------------|
| Main unit | Total of current consumed by extension devices | |
| 1 -4 mA | 2 -4 mA | = <input type="text"/> mA ≥ 0mA |

3. Calculate the current consumption of the built-in 5V DC power supply.

| Capacity of 5V DC power supply | Current consumption | Calculation result |
|--------------------------------|--|---------------------------------|
| Main unit | Total of current consumed by extension devices | |
| 1 -3 mA | 2 -3 mA | = <input type="text"/> mA ≥ 0mA |

If the calculation results for the current consumption for the startup, the internal 24V DC power supply and 5V DC power supply are negative values, the current consumption exceeds the capacity of the built-in power supply.

Reexamine the system configuration adding input/output powered extension units.

→ Refer to Section 6.6 "Expansion of FX2N Series I/O Powered Extension Unit (Calculation of Current Consumption)".

6.5.5 Quick reference matrix [when only input/output devices are added] (AC Power Supply/AC Input Type)

The following matrix shows the expandable units up to the ○ mark, where the desired inputs (horizontal axis) and outputs (vertical axis) intersect.

Caution

When FX2N-8ER and FX2N-8ER-ES/UL are added, refer to Subsection 6.5.6.

Select the input/output extension block (number of points) to be connected to the main unit


Since the AC power supply/AC input type main unit does not have a built-in service power supply, use an external power supply to connect a DC input type extension block.

Also take into account the limitations on the number of expansion I/O points that can be added to an AC power supply/AC input type main unit. When connecting the FX3U-1PSU-5V extension power supply unit to a system where the nearest upstream unit to the FX3U-1PSU-5V is a main unit, include the current consumption by the input extension blocks connected to the FX3U-1PSU-5V when calculating the total current consumption of the main unit.

AC power supply/AC input type

1) FX3U-32MR/UA1


(These main units do not have a built-in 24V DC service power supply.)

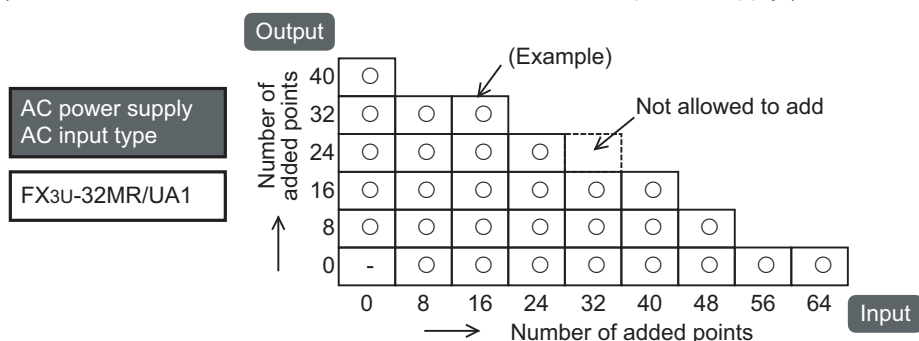

(Example) When adding 16 inputs to FX3U-32MR/UA1, a maximum of 32 outputs are expandable.

2) FX3U-64MR/UA1

(These main units do not have a built-in 24V DC service power supply.)

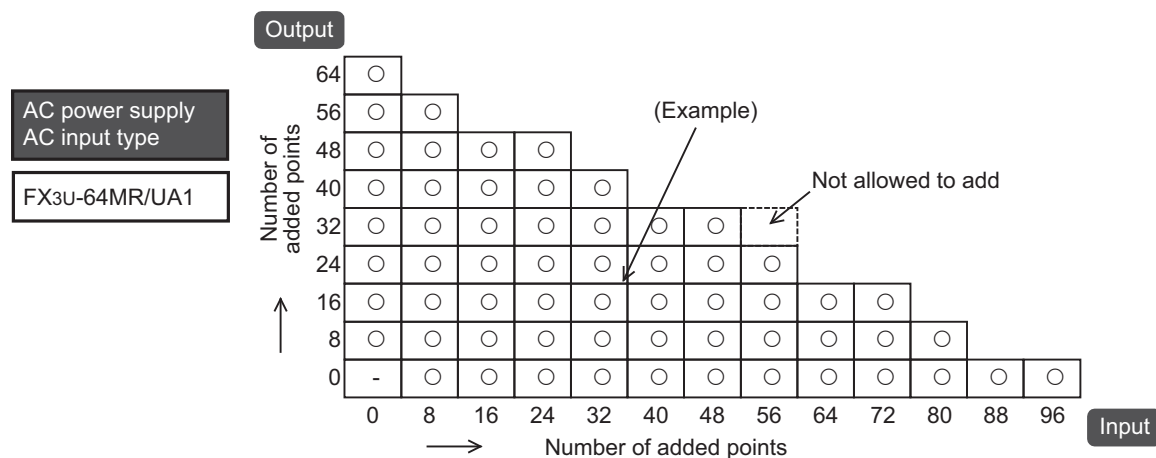

(Example) When adding 32 inputs to FX3U-64MR/UA1, a maximum of 40 outputs are expandable.

6.5.6 When special extension devices are also added [calculation of current consumption] (AC Power Supply/AC Input Type)

1 Select a main unit.

Select a main unit.

Select one main unit appropriate to the required number of input/output points from the following table.

| A | Classifi- cation | Type | Input specifications | Output specifications | Number of input/output points [points] | Capacity of built-in power supply 5V DC power supply[mA] | Power supply for internal 24V DC [mA] |
|----------------|---------------------|---------------|-------------------------|--------------------------|--|--|---|
| | | | | | 1 -1 | 1 -2 | 1 -3 |
| A main unit | | FX3U-32MR/UA1 | 100V AC | Relay | 32 | 500 | 400 |
| | | FX3U-64MR/UA1 | | | 64 | | 600 |

2 Enter the specifications for the selected main unit.

Enter the number of input/output points and power supply type of the main unit according to the above table.

| 1 | | Classification | Number of connected units | Type | Number of input/output points [points] | Capacity of built-in power supply 5V DC power supply [mA] | Power supply for internal 24V DC [mA] |
|---|----------------------------------|----------------|------------------------------|-------|--|---|---|
| | | | | | 1 -1 | 1 -2 | 1 -3 |
| 1 | With built-in power supply | A main unit | 1 | FX3U- | | | |
| | Example of entry→ FX3U-32MR/UA1 | | | | 32 | 500 | 400 |

3 Enter the specifications for the products to be added.

Enter the data on the special function units/blocks to be connected to the main unit in the following table, and calculate the current.

→ For data on the number of input/output occupied points and current consumption of each type, refer to Section 6.8.

| | Classification | Number of connected units | Type | Number of input/output (occupied) points [points] | Calculation of current consumption of built-in power supply | |
|--|--|---------------------------|-----------------|---|---|----------------------|
| | | | | | 5V DC power supply [mA] | Internal 24V DC [mA] |
| Enter the products connected to the main unit. | B Expansion board | 1 | FX3U- | — | | — |
| | C Special adapter | 10 | FX3U- | — | | |
| | | | FX3U- | — | | |
| | | | FX3U- | — | | |
| | | | FX3U- | — | | |
| | | | FX3U- | — | | |
| | | | FX3U- | — | | |
| | | | FX3U- | — | | |
| | | | FX3U- | — | | |
| | | | FX3U- | — | | |
| | | | FX3U- | — | | |
| | D2 Input/output extension block* | — | FX2N- | | — | |
| | | | FX2N- | | — | |
| | | | FX2N- | | — | |
| | | | FX2N- | | — | |
| | | | FX2N- | | — | |
| | | | FX2N- | | — | |
| | | | FX2N- | | — | |
| | | | FX2N- | | — | |
| | | | FX2N- | | — | |
| | | | FX2N- | | — | |
| | | | FX2N- | | — | |
| | | | FX2N- | | — | |
| | E Special function unit/block | 8 | FX0N/FX2N/FX3U- | | | |
| | | | FX0N/FX2N/FX3U- | | | |
| | | | FX0N/FX2N/FX3U- | | | |
| | | | FX0N/FX2N/FX3U- | | | |
| | | | FX0N/FX2N/FX3U- | | | |
| | | | FX0N/FX2N/FX3U- | | | |
| | | | FX0N/FX2N/FX3U- | | | |
| | | | FX0N/FX2N/FX3U- | | | |
| | G Display module | 1 | FX3U-7DM | — | | — |
| | | | | 2 -1 | 2 -2 | 2 -3 |
| Calculate the totals. | | | | | | |

* When connecting the FX3U-1PSU-5V extension power supply unit to a system where the nearest upstream unit to the FX3U-1PSU-5V is a main unit, also enter the current consumption and number of occupied I/O points for the input extension blocks (including FX2N-8ER-ES/UL and FX2N-8ER) that are connected to the FX3U-1PSU- 5V.

4 Determine whether the devices can be connected to the main unit.

Calculate the current to confirm whether the selected extension devices can be connected.

1. Calculate the current consumption of the internal 24V DC.

The positive value from the calculation means it is expandable.

| Power supply capacity for internal 24V DC | Current consumption | Calculation result |
|---|---|--|
| Main unit | Total of current consumed by extension devices | |
| <div style="border: 1px solid black; padding: 5px; display: inline-block;">1-3 mA</div> | <div style="border: 1px solid black; padding: 5px; display: inline-block;">2-3 mA</div> | <div style="border: 1px solid black; padding: 5px; display: inline-block;">= mA</div> ≥ 0mA |

2. Calculate the current consumption of the built-in 5V DC power supply.

| Capacity of 5V DC power supply | Current consumption | Calculation result |
|---|---|--|
| Main unit | Total of current consumed by extension devices | |
| <div style="border: 1px solid black; padding: 5px; display: inline-block;">1-2 mA</div> | <div style="border: 1px solid black; padding: 5px; display: inline-block;">2-2 mA</div> | <div style="border: 1px solid black; padding: 5px; display: inline-block;">= mA</div> ≥ 0mA |

If the calculation results for the current consumption for the startup, the internal 24V DC power supply and 5V DC power supply are negative values, the current consumption exceeds the capacity of the built-in power supply.

Reexamine the system configuration adding input/output powered extension units.

→ **Refer to Section 6.6 "Expansion of FX2N Series I/O Powered Extension Unit (Calculation of Current Consumption)".**

If the calculation results for the current consumption for the internal 24V DC power supply and 5V DC power supply are negative values, add an input/output powered extension unit.


→ **Refer to Section 6.6 "Expansion of FX2N Series I/O Powered Extension Unit (Calculation of Current Consumption)".**

If the calculation results for the current consumption by 5V DC is a negative value, add an extension power supply unit (FX3U-1PSU-5V).

→ **Refer to Section 6.7 "Expansion of Extension Power Supply Unit (FX3U-1PSU-5V)".**

6.6 Expansion of FX2N Series I/O Powered Extension Unit (Calculation of Current Consumption)

If the selected devices in the previous section cannot be connected due to a shortage of current from the main unit's built-in 24V DC service power supply, add an input/output powered extension unit. Since input/output powered extension units have built-in input/output terminals, reexamine the input/output devices connected to the main unit to ensure the required number of points.

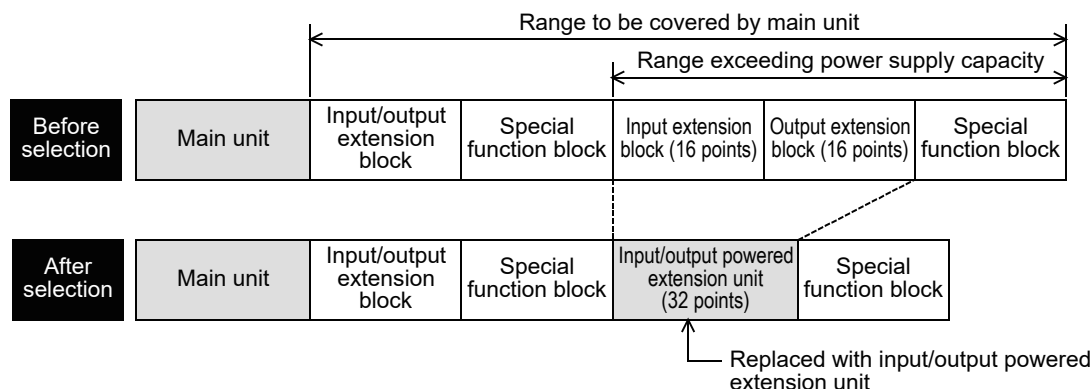

Determine whether extension devices can be connected to the input/output powered extension unit by the following method.

- When only input/output extension devices are added, use the quick reference matrix.
→ Refer to Subsection 6.6.1 "Quick reference matrix (when only input/output devices are added)".
- When also special extension devices are added, calculate the current consumption to ensure that the total current to be consumed by the added extension devices can be supplied by the built-in power supply.
→ Refer to Subsection 6.6.2 "When special extension devices are also added (calculation of current consumption)".

6.6.1 Quick reference matrix (when only input/output devices are added)

In the following quick reference matrix, the value at the intersection of the number of input points to be added (horizontal axis) with the number of output points to be added (vertical axis) indicates the remaining power supply capacity.


1 Select the input/output extension block (number of points) to be connected to the main unit.

Check that the number of input/output points can be added.

When connecting the FX3U-1PSU-5V extension power supply unit to a system where the nearest upstream unit to the FX3U-1PSU-5V is an input/output powered extension unit, include the current consumption by the input extension blocks (including FX2N-8ER-ES/UL and FX2N-8ER) connected to the FX3U-1PSU-5V when calculating the total current consumption of the input/output powered extension unit.


1. AC power supply/DC input type

- FX2N-32ER, FX2N-32ET, FX2N-32ES
FX2N-32ER-ES/UL, FX2N-32ET-ESS/UL

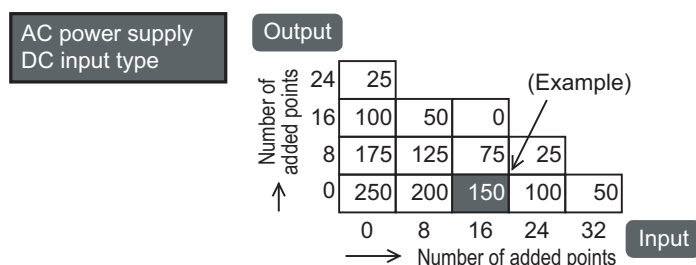

(Example) When a 16-input and 0-output point extension block is connected to FX2N-32ER, the current of the 24V DC service power supply becomes 150 mA or less.


- 2) FX2N-48ER, FX2N-48ET
FX2N-48ER-ES/UL, FX2N-48ET-ESS/UL

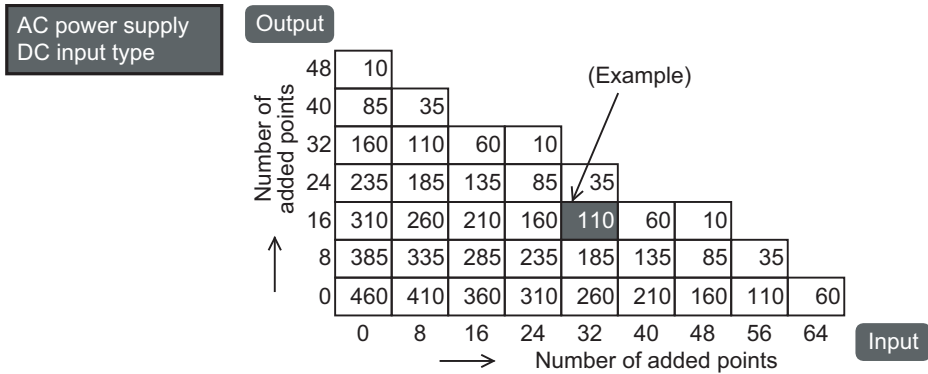

(Example) When a 32-input and 16-output point extension block is connected to FX2N-48ER, the current of 24V DC service power supply becomes 110 mA or less.

2. DC power supply/DC input type


- 1) FX2N-48ER-DS, FX2N-48ET-DSS, FX2N-48ER-D, FX2N-48ET-D
(24V DC service power supply is not provided.)

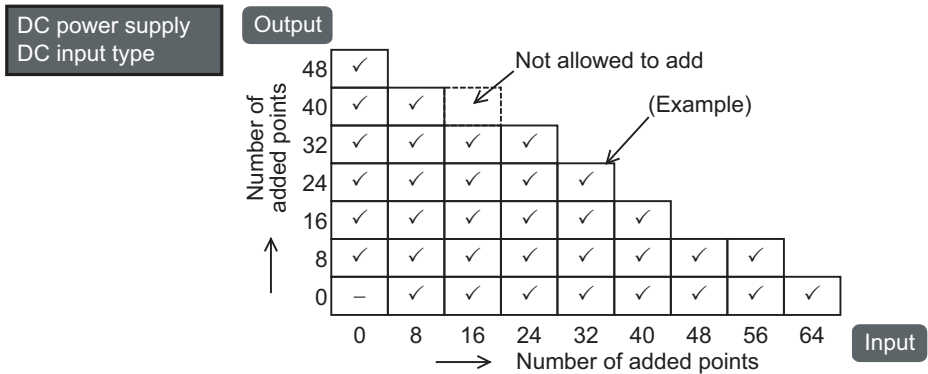

(Example) When adding 32 inputs to FX2N-48ER-DS, a maximum of 24 outputs are expandable.

3. AC power supply/AC input type

- 1) FX2N-48ER-UA1/UL
(24V DC service power supply is not provided. To connect a DC input type extension block, an external power supply is necessary.)

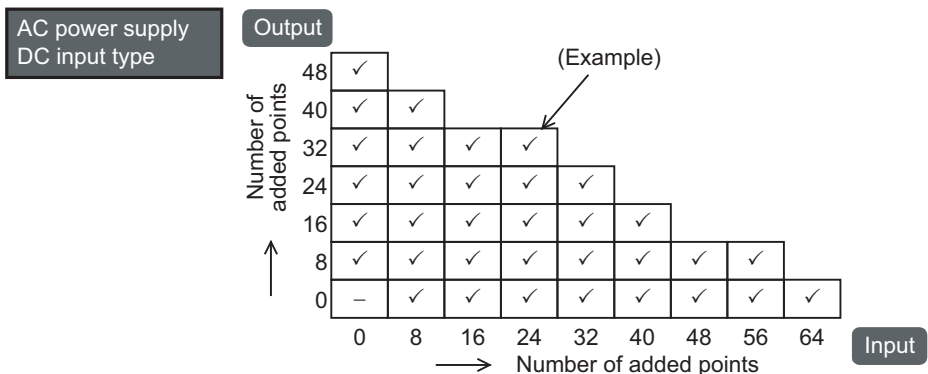

(Example) When adding 24 inputs to FX2N-48ER-UA1/UL, a maximum of 32 outputs are expandable.

2 Check the current capacity of the 24V DC service power supply based on the value shown in the quick reference matrix.

1. In case of AC power supply/DC input type

The remaining power supply capacity (current) can be used as a power supply to loads (sensors or the like). When special adapters and special function units/blocks are connected by external wiring, it is necessary to consider whether they can be covered by the remaining power supply capacity.

2. In case of DC power supply/DC input type

24V DC service power supply is not provided.

3. In case of AC power supply/AC input type

24V DC service power supply is not provided.

3 When the power supply capacity is insufficient, connect another input/output powered extension unit.

When two input/output powered extension units or more are connected, calculate the power supply capacities of the input/output extension blocks and special function units/blocks connected to them, and check the capacity.

1

Introduction

2

Features and
Part Names

3

Product
Introduction

4

Specifications

5

Version and
Peripheral
Devices

6

System
Configuration

7

Input/Output
Nos., Unit Nos.

8

Installation

9

Preparation and
Power Supply
Wiring

10

Input Wiring

6.6.2 When special extension devices are also added (calculation of current consumption)

1 Select an input/output powered extension unit.

→ For data on the number of input/output occupied points and current consumption of each type, refer to Section 6.8.

| Power supply classification | Classification | Number of connected units | Type | Number of input/output points [points] | Capacity of built-in power supply | |
|-----------------------------------|---|---------------------------|-------|--|-----------------------------------|----------------------------------|
| | | | | | 5V DC power supply [mA] | 24V DC service power supply [mA] |
| | | | | 3-1 | 3-2 | 3-3 |
| With built-in power supply | D1 Input/output powered extension unit | — | FX2N- | | | |
| Example of entry→ FX2N-48ER-ES/UL | | | | 48 | 690 | 460 |

2 Enter the specifications for the products to be added.

Enter the data for the input/output extension blocks and special function units/blocks to be connected to the input/output powered extension unit, and calculate the current.

→ For data on the number of input/output occupied points and current consumption of each type, refer to Section 6.8.

| Power supply classification | Classification | Number of connected units | Type | Number of input/output points [points] | Calculation of current consumption of built-in power supply | |
|---|---|---------------------------|-----------------|--|---|--------------------------|
| | | | | | 5V DC power supply [mA] | 24V DC power supply [mA] |
| Enter the products connected to the input/output powered extension unit | <div>D2</div> Input/output extension block*1 | — | FX2N- | | — | |
| | | | FX2N- | | — | |
| | | | FX2N- | | — | |
| | | | FX2N- | | — | |
| | | | FX2N- | | — | |
| | | | FX2N- | | — | |
| | | | FX2N- | | — | |
| | | | FX2N- | | — | |
| | | | FX2N- | | — | |
| | | | FX2N- | | — | |
| | | | FX2N- | | — | |
| | | | FX2N- | | — | |
| | <div>E</div> Special function unit/block | 8*2 | FX0N/FX2N/FX3U- | | | |
| | | | FX0N/FX2N/FX3U- | | | |
| | | | FX0N/FX2N/FX3U- | | | |
| | | | FX0N/FX2N/FX3U- | | | |
| | | | FX0N/FX2N/FX3U- | | | |
| | | | FX0N/FX2N/FX3U- | | | |
| | | | FX0N/FX2N/FX3U- | | | |
| | | | FX0N/FX2N/FX3U- | | | |
| | | | | 4-1 | 4-2 | 4-3 |
| Calculate the totals | | | | | | |

*1. When connecting the FX3U-1PSU-5V extension power supply unit to a system where the nearest upstream unit to the FX3U-1PSU-5V is input/output powered extension unit, also enter the current consumption and number of occupied I/O points for the input extension blocks (including FX2N-8ER-ES/UL and FX2N-8ER) that are connected to the FX3U-1PSU-5V.

*2. A maximum of 8 special function units/blocks are connectable, including the main unit and extension power supply unit.

3 Determine whether FX0N-3A, FX2N-2AD and FX2N-2DA can be added.

Determine the number of analog special function blocks (FX0N-3A, FX2N-2AD and FX2N-2DA) to be connected to the input/output powered extension unit by the following method.

- When connecting to FX2N-32E□

| Analog special function block | | | Total current consumption |
|---|---|---|---|
| FX0N-3A | FX2N-2AD | FX2N-2DA | |
| $90\text{mA} \times \boxed{\text{units}}$ | $+ 50\text{mA} \times \boxed{\text{units}}$ | $+ 85\text{mA} \times \boxed{\text{units}}$ | $= \boxed{\text{mA}} \leq 190\text{mA}$ |

- When connecting to FX2N-48E□

| Analog special function block | | | Total current consumption |
|---|---|---|---|
| FX0N-3A | FX2N-2AD | FX2N-2DA | |
| $90\text{mA} \times \boxed{\text{units}}$ | $+ 50\text{mA} \times \boxed{\text{units}}$ | $+ 85\text{mA} \times \boxed{\text{units}}$ | $= \boxed{\text{mA}} \leq 300\text{mA}$ |

4 Determine whether the devices can be added to the input/output powered extension unit.

Calculate the current to confirm whether the selected extension devices can be connected.

1. Calculate the current consumption of the built-in 24V DC power supply (24V DC service power supply).

The value obtained by this calculation (when the value is positive) indicates the remaining capacity of 24V DC service power supply, and the capacity can be used for external loads.

| Capacity of 24V DC power supply | Current consumption | Calculation result |
|-------------------------------------|--|---------------------------------------|
| Input/output powered extension unit | Total of current consumed by extension devices | |
| $\boxed{3-3} \text{ mA}$ | $\boxed{4-3} \text{ mA}$ | $= \boxed{\text{mA}} \geq 0\text{mA}$ |

2. Calculate the current consumption of the built-in 5V DC power supply.

| Capacity of 5V DC power supply | Current consumption | Calculation result |
|-------------------------------------|--|---------------------------------------|
| Input/output powered extension unit | Total of current consumed by extension devices | |
| $\boxed{3-2} \text{ mA}$ | $\boxed{4-2} \text{ mA}$ | $= \boxed{\text{mA}} \geq 0\text{mA}$ |


If the calculation results for the current consumption of the 24V DC power supply and 5V DC power supply are negative values, the current consumption exceeds the capacity of the built-in power supply. Reconfigure the system, adding input/output powered extension units or extension power supply units.

6.7 Expansion of Extension Power Supply Unit (FX3U-1PSU-5V)

If the selected devices in section 6.5 are not connectable due to the built-in 5V DC power shortage, add an extension power supply unit.

1 Enter the current supply specification of the extension power supply unit.

The output current of the extension power supply unit is proportional to the ambient temperature as shown by the derating curve below. Enter the output current value, based on this derating curve. Also verify that the number of occupied input/output points from input/output extension block(s) connected to the extension power supply unit is less than 32.

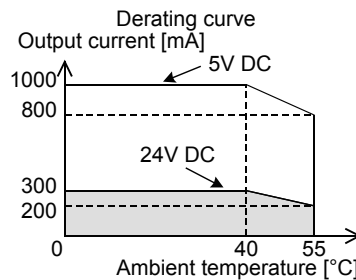

5

| Power supply classification | Classification | Number of connected units | Type | Capacity of built-in power supply | | Connectable I/O occupied points [points] |
|-----------------------------|--|---------------------------|--------------|-----------------------------------|---------------------------------------|--|
| | | | | 5V DC power supply [mA] | Power supply for internal 24V DC [mA] | |
| | | | | 5-1 | 5-2 | 5-3 |
| With built-in power supply | H1 Extension power supply unit | — | FX3U-1PSU-5V | | | 32 |

2 Enter the specifications for the products to be added.

Enter the data on the input/output extension blocks and special function units/blocks to be connected to the input/output powered extension unit, and calculate the current.

→ For data on the number of input/output occupied points and current consumption of each type, refer to Section 6.8.

| Power supply classification | Classification | Number of connected units | Type | Capacity of built-in power supply | | Number of I/O occupied points *1 {points} |
|---|---|---------------------------|-----------------|-----------------------------------|---------------------------------------|---|
| | | | | 5V DC power supply [mA] | Power supply for internal 24V DC [mA] | |
| Enter the products connected to the extension power supply unit | <div>D2</div> Input/output extension block*2 | — | FX2N- | — | | |
| | | | FX2N- | — | | |
| | | | FX2N- | — | | |
| | | | FX2N- | — | | |
| | <div>E</div> Special function unit/block | 8*3 | FX0N/FX2N/FX3U- | | | — |
| | | | FX0N/FX2N/FX3U- | | | — |
| | | | FX0N/FX2N/FX3U- | | | — |
| | | | FX0N/FX2N/FX3U- | | | — |
| | | | FX0N/FX2N/FX3U- | | | — |
| | | | FX0N/FX2N/FX3U- | | | — |
| | | | FX0N/FX2N/FX3U- | | | — |
| | | | FX0N/FX2N/FX3U- | | | — |
| | | | | 6-1 | 6-2 | 6-3 |
| Calculate the totals | | | | | | |

- *1. Input/output occupied points by special function units/blocks are excluded.
- *2. For input extension blocks (including FX2N-8ER-ES/UL, FX2N-8ER), do not include the current consumption by the internal 24V DC. Subtract the internal 24V DC current consumption from the service power supply of the input/output powered extension unit or the nearest main unit (except AC power supply/AC input type) on the upstream side of extension power supply unit.
To connect a DC input type extension block to an AC power supply/AC input type main unit, it is necessary to provide power to the extension block from an external source. Subtract the 24V DC power supply current consumption from the internal 24V DC power supply of the main unit.
→ When the main unit is on the upstream side, refer to Subsection 6.5.1 and 6.5.2.
→ When the input/output powered extension unit is on the upstream side, refer to Subsection 6.6.1 and 6.6.2.
- *3. A maximum of 8 special function units/blocks are connectable, including the main unit and the input/output powered extension unit.

3 Determine whether the devices can be added to the extension power supply unit.

Calculate the current to confirm whether the selected extension devices can be connected.

1. Calculate the current consumption of the built-in 5V DC power supply.

| Capacity of 5V DC power supply | Current consumption | Calculation result |
|--------------------------------|--|--------------------|
| Extension power supply unit | Total of current consumed by extension devices | |
| 5-1 mA | 6-1 mA | = [] mA ≥ 0mA |

2. Calculate the available current supply from the internal 24V DC power supply.

| Power supply capacity for internal 24V DC | Current consumption | Calculation result |
|---|--|--------------------|
| Extension power supply unit | Total of current consumed by extension devices | |
| 5-2 mA | 6-2 mA | = [] mA ≥ 0mA |

3. Calculate the available input/output occupied points (excluding the occupied input/output by special function units/blocks).

| Connectable I/O occupied points | Number of I/O occupied points | Calculation result |
|---------------------------------|---|------------------------|
| Extension power supply unit | Total of I/O occupied points by extension devices | |
| 5-3 points | 6-3 points | = [] points ≥ 0points |

If the calculation result for the 5V DC power supply is a negative value, the current consumption exceeds the power supply capacity.

Reconfigure the system with an extension power supply unit.

If the calculation results for the internal 24V DC power supply and input/output occupied points are negative values, the actual input/output occupied points exceed the connectable input/output occupied points.

Reconfigure the system with an input/output powered extension unit.

6.8 Number of Input/Output (Occupied) Points and Current Consumption

The following tables show the number of input/output points or the number of input/output occupied points for each type of device, along with the power supply type and current consumption values needed for selecting a product.

- Number of input/output points or input/output occupied points on each type of device
- Output current of 5V DC power supply and 24V DC service power supply ^{*1} of main unit and input/output powered extension units
- Current consumed by expansion boards, special adapters, input/output extension blocks, special function units/blocks and display module

^{*1}. The DC power type and AC power supply/AC input type main unit does not have a 24V DC service power supply. Instead, it has an internal 24V DC power supply.

The current consumption is determined differently in the following cases.

- 5V DC and internal 24V DC are supplied to the products through an extension cable, and the current consumption must be calculated
Subtract the current consumption at the internal 24V DC as follows.
 - For the AC power supply/AC input type main unit, subtract the current consumption at the internal 24V DC from the 24V DC service power supply.
 - For the DC power type and AC power supply/AC input type main unit, subtract the current consumption at the internal 24V DC from the power supply for the internal 24V DC.
- The special function units/blocks connected to the AC power supply/AC input type main unit or to the 24V DC service power supply terminal of the input/output powered extension unit consume the external 24V DC. Include the current in the calculation of current consumption.

When the terminal is connected with an external power supply, the current is not included in the calculation of current consumption.

1

Introduction

2

Features and
Part Names

3

Product
Introduction

4

Specifications

5

Version and
Peripheral
Devices

6

System
Configuration

7

Input/Output
Nos., Unit Nos.

8

Installation

9

Preparation and
Power Supply
Wiring

10

Input Wiring

6.8.1 [A] Main units

A

| No. | Type | Input/output | | Output current (mA) | |
|---|----------------|---|--------------------------|-----------------------|--------------------------------|
| | | Number of input/ output points [points] | Input/output [points] | 5V DC power supply | 24V DC service power supply |
| AC power supply/24V DC input/relay output type | | | | | |
| A1 | FX3U-16MR/ES | 16 | 8/8 | 500 | 400 |
| | FX3U-32MR/ES | 32 | 16/16 | | 600 |
| | FX3U-48MR/ES | 48 | 24/24 | | |
| | FX3U-64MR/ES | 64 | 32/32 | | |
| | FX3U-80MR/ES | 80 | 40/40 | | |
| | FX3U-128MR/ES | 128 | 64/64 | | |
| AC power supply/24V DC input/transistor output type | | | | | |
| A1 | FX3U-16MT/ES | 16 | 8/8 | 500 | 400 |
| | FX3U-16MT/ESS | 16 | 8/8 | | 600 |
| | FX3U-32MT/ES | 32 | 16/16 | | |
| | FX3U-32MT/ESS | 32 | 16/16 | | |
| | FX3U-48MT/ES | 48 | 24/24 | | |
| | FX3U-48MT/ESS | 48 | 24/24 | | |
| | FX3U-64MT/ES | 64 | 32/32 | | |
| | FX3U-64MT/ESS | 64 | 32/32 | | |
| | FX3U-80MT/ES | 80 | 40/40 | | |
| | FX3U-80MT/ESS | 80 | 40/40 | | |
| | FX3U-128MT/ES | 128 | 64/64 | | |
| | FX3U-128MT/ESS | 128 | 64/64 | | |
| AC power supply/24V DC input/triac output type | | | | | |
| A1 | FX3U-32MS/ES | 32 | 16/16 | 500 | 400 |
| | FX3U-64MS/ES | 64 | 32/32 | | 600 |
| | | | | | |
| No. | Type | Input/output | | Output current (mA) | |
| | | Number of input/ output points [points] | Input/output [points] | 5V DC power supply | 24V DC service power supply |
| AC power supply/100V AC input/relay output type | | | | | |
| A2 | FX3U-32MR/UA1 | 32 | 16/16 | 500 | 400 |
| | FX3U-64MR/UA1 | 64 | 32/32 | | 600 |

A

| No. | Type | Input/output | | Output current (mA) | | Current supply at startup [mA] ^{*3} |
|---|---------------|--|-----------------------|---------------------|---|--|
| | | Number of input/output points [points] | Input/output [points] | 5V DC power supply | Power supply capacity for internal 24V DC | |
| DC power supply/24V DC input/relay output type | | | | | | |
| A3 | FX3U-16MR/DS | 16 | 8/8 | 500 | 400*1 | 640 |
| | FX3U-32MR/DS | 32 | 16/16 | | 600*2 | 800 |
| | FX3U-48MR/DS | 48 | 24/24 | | | |
| | FX3U-64MR/DS | 64 | 32/32 | | | |
| | FX3U-80MR/DS | 80 | 40/40 | | | |
| DC power supply/24V DC input/transistor output type | | | | | | |
| A3 | FX3U-16MT/DS | 16 | 8/8 | 500 | 400*1 | 640 |
| | FX3U-16MT/DSS | 16 | 8/8 | | 600*2 | 800 |
| | FX3U-32MT/DS | 32 | 16/16 | | | |
| | FX3U-32MT/DSS | 32 | 16/16 | | | |
| | FX3U-48MT/DS | 48 | 24/24 | | | |
| | FX3U-48MT/DSS | 48 | 24/24 | | | |
| | FX3U-64MT/DS | 64 | 32/32 | | | |
| | FX3U-64MT/DSS | 64 | 32/32 | | | |
| | FX3U-80MT/DS | 80 | 40/40 | | | |
| | FX3U-80MT/DSS | 80 | 40/40 | | | |

- *1. When the supply voltage of the main unit is 16.8-19.2 V DC, the power supply for the internal 24V DC is 250mA.
- *2. When the supply voltage of the main unit is 16.8-19.2 V DC, the power supply for the internal 24V DC is 450mA.
- *3. When adding the high-speed input/output special adapters (FX3U-4HSX-ADP/FX3U-2HSY-ADP) and the analog special function blocks (only FX0N-3A/FX2N-2AD/FX2N-2DA), calculate the current supply at startup.

6.8.2 [B] Expansion boards

–: No need to calculate

| No. | Type | Number of input/ output occupied points | Current consumed (mA) | |
|-----|-------------|---|-----------------------|-----------------|
| | | | 5V DC | Internal 24V DC |
| B1 | FX3U-232-BD | – | 20 | – |
| | FX3U-422-BD | – | 20*1 | – |
| | FX3U-485-BD | – | 40 | – |
| | FX3U-USB-BD | – | 15 | – |
| | FX3U-8AV-BD | – | 20 | – |
| | FX3U-CNV-BD | – | – | – |

*1. When FX3U-422-BD is connected, add the current consumed by GOT/programming tool **F**.

GOT/programming tool

–: No need to calculate

| No. | Type | Number of input/ output occupied points | Current consumed (mA) | |
|-----|--------------------|---|-----------------------|-----------------|
| | | | 5V DC | Internal 24V DC |
| F1 | FX-30P | – | 115*2 | – |
| | FX-20P(-E) | – | 150*3 | – |
| | FX-10P(-E) | – | 120 | – |
| | FX-232AW | – | 220 | – |
| | FX-232AWC | – | 220 | – |
| | FX-232AWC-H | – | 120 | – |
| | FX-USB-AW | – | 15 | – |
| | FX-10DM(-SET0)(-E) | – | 220 | – |
| | F920GOT-BBD5-K(-E) | – | 220 | – |

*2. When the intensity of the LCD backlight is set at the initial value 4.

If the LCD backlight is set at the maximum value 8, it is handled as "155mA".

*3. When FX-20P-RWM is used, the current is 180 mA.

6.8.3 [C] Special adapters

–: No need to calculate

| No. | Type | Number of input/ output occupied points | Current consumed (mA) | | | Current supply at startup (mA)*1 |
|-----|------------------|---|-----------------------|-----------------|-----------------|--|
| | | | 5V DC | Internal 24V DC | External 24V DC | |
| C1 | FX3U-4HSX-ADP | – | 30 | 30 | 0 | 30 |
| | FX3U-2HSY-ADP | – | 30 | 60 | 0 | 120 |
| C2 | FX3U-4AD-ADP | – | 15 | 0 | 40 | – |
| | FX3U-4DA-ADP | – | 15 | 0 | 150 | – |
| | FX3U-3A-ADP | – | 20 | 0 | 90 | – |
| | FX3U-4AD-PT-ADP | – | 15 | 0 | 50 | – |
| | FX3U-4AD-PTW-ADP | – | 15 | 0 | 50 | – |
| | FX3U-4AD-PNK-ADP | – | 15 | 0 | 50 | – |
| | FX3U-4AD-TC-ADP | – | 15 | 0 | 45 | – |
| C3 | FX3U-232ADP(-MB) | – | 30 | 0 | 0 | – |
| | FX3U-485ADP(-MB) | – | 20 | 0 | 0 | – |
| | FX3U-ENET-ADP | – | 30 | 0 | 0 | – |
| C4 | FX3U-CF-ADP | – | 50 | 0 | 130 | – |

*1. When applying the DC power type main unit, calculate the current consumption at startup.

6.8.4 [D] Input/output powered extension units/blocks

1. Input/output powered extension units

D

| No. | Type | Input/output | | Output current (mA) | |
|-----------|------------------|--|-----------------------|---------------------|-----------------------------|
| | | Number of input/output points [points] | Input/output [points] | 5V DC power supply | 24V DC service power supply |
| D1 | FX2N-32ER-ES/UL | 32 | 16/16 | 690 | 250 |
| | FX2N-32ET-ESS/UL | 32 | 16/16 | | |
| | FX2N-32ER | 32 | 16/16 | | |
| | FX2N-32ES | 32 | 16/16 | | |
| | FX2N-32ET | 32 | 16/16 | | |
| | FX2N-48ER-ES/UL | 48 | 24/24 | | 460 |
| | FX2N-48ET-ESS/UL | 48 | 24/24 | | |
| | FX2N-48ER | 48 | 24/24 | | |
| | FX2N-48ET | 48 | 24/24 | | |
| | FX2N-48ER-UA1/UL | 48 | 24/24 | | |
| | FX2N-48ER-DS | 48 | 24/24 | | — |
| | FX2N-48ET-DSS | 48 | 24/24 | | |
| | FX2N-48ER-D | 48 | 24/24 | | |
| | FX2N-48ET-D | 48 | 24/24 | | |

2. Input/output extension blocks

—: No need to calculate

D

| No. | Type | Number of input/ output points | Current consumed (mA) | | |
|-----|------------------------------------|-----------------------------------|-----------------------|-----------------|-----------------|
| | | | 5V DC | Internal 24V DC | External 24V DC |
| D2 | Types for addition of input/output | | | | |
| | FX2N-8ER-ES/UL | 16 [*] | — | 62.5 | 0 |
| | FX2N-8ER | 16 [*] | — | 62.5 | 0 |
| | Types for addition of input | | | | |
| | FX2N-8EX-ES/UL | 8 | — | 50 | 0 |
| | FX2N-8EX | 8 | — | 50 | 0 |
| | FX2N-8EX-UA1/UL | 8 | — | 50 | 0 |
| | FX2N-16EX-ES/UL | 16 | — | 100 | 0 |
| | FX2N-16EX | 16 | — | 100 | 0 |
| | FX2N-16EX-C | 16 | — | 100 | 0 |
| | FX2N-16EXL-C | 16 | — | 100 | 0 |
| | Types for addition of output | | | | |
| | FX2N-8EYR-ES/UL | 8 | — | 75 | 0 |
| | FX2N-8EYR-S-ES/UL | 8 | — | 75 | 0 |
| | FX2N-8EYT-ESS/UL | 8 | — | 75 | 0 |
| | FX2N-8EYR | 8 | — | 75 | 0 |
| | FX2N-8EYT | 8 | — | 75 | 0 |
| | FX2N-8EYT-H | 8 | — | 75 | 0 |
| | FX2N-16EYR-ES/UL | 16 | — | 150 | 0 |
| | FX2N-16EYT-ESS/UL | 16 | — | 150 | 0 |
| | FX2N-16EYR | 16 | — | 150 | 0 |
| | FX2N-16EYT-C | 16 | — | 150 | 0 |
| | FX2N-16EYT | 16 | — | 150 | 0 |
| | FX2N-16EYS | 16 | — | 150 | 0 |

* Four inputs and four outputs are occupied as unused numbers.

6.8.5 [E] Special extension devices

1. Special function blocks

| E | No. | Type | Number of input/occupied output points | Current consumed (mA) | | | Current supply at startup [mA] ^{*10} |
|----|-----|---------------|--|-----------------------|---|-------------------|---|
| | | | | 5V DC | Internal 24V DC | External 24V DC | |
| E1 | | FX3U-4AD | 8 | 110 | 0 | 90 | — |
| | | FX3U-4DA | 8 | 120 | 0 | 160 | — |
| | | FX3U-4LC | 8 | 160 | 0 | 50 | — |
| | | FX3U-2HC | 8 | 245 | 0 | 0 | — |
| | | FX3U-1PG | 8 | 150 | 0 | 40 | — |
| | | FX3U-20SSC-H | 8 | 100 | 0 | 220 | — |
| | | FX3U-16CCL-M | 8 ^{*1} | 0 | 0 | 240 | — |
| | | FX3U-64CCL | 8 | 0 | 0 | 220 | — |
| | | FX3U-128ASL-M | 8 ^{*2} | 130 | 0 | 100 ^{*8} | — |
| | | FX3U-64DP-M | 8 | 0 | 155 | 0 | — |
| | | FX3U-32DP | 8 | 0 | 145 | 0 | — |
| E2 | | FX2N-2AD | 8 | 20 | 50 ^{*7} | 0 | 170 |
| | | FX2N-2DA | 8 | 30 | 85 ^{*7} | 0 | 190 |
| | | FX2N-4AD | 8 | 30 | 0 | 55 | — |
| | | FX2N-4DA | 8 | 30 | 0 | 200 | — |
| | | FX2N-4AD-TC | 8 | 30 | 0 | 50 | — |
| | | FX2N-4AD-PT | 8 | 30 | 0 | 50 | — |
| | | FX2N-8AD | 8 | 50 | 0 | 80 | — |
| | | FX2N-5A | 8 | 70 | 0 | 90 | — |
| | | FX2N-2LC | 8 | 70 | 0 | 55 | — |
| | | FX2N-1HC | 8 | 90 | 0 | 0 | — |
| | | FX2N-1PG(-E) | 8 | 55 | 0 | 40 | — |
| | | FX2N-10PG | 8 | 120 | 0 | 70 ^{*9} | — |
| | | FX2N-232IF | 8 | 40 | 0 | 80 | — |
| | | FX2N-16CCL-M | 8 ^{*3} | 0 | 0 | 150 | — |
| | | FX2N-32CCL | 8 | 130 | 0 | 50 | — |
| | | FX2N-64CL-M | 8 ^{*4} | 190 | Supplied from power supply for CC-Link/LT | | — |
| | | FX2N-16LNK-M | 0 ^{*5} | 200 | 0 | 90 | — |
| | | FX2N-32ASI-M | 8 ^{*6} | 150 | 0 | 70 | — |
| E3 | | FX0N-3A | 8 | 30 | 90 ^{*7} | 0 | 165 |

- *1. This master cannot be used together with FX2N-16CCL-M and FX2N-32ASI-M.
The following number of points is added according to the products connected to the network.
Number of remote I/O stations × 32 points
- *2. This master cannot be used together with FX2N-16CCL-M and FX2N-32ASI-M.
The number of input/output points set by the rotary switch is added.
For details, refer to FX3U-128ASL-M User's Manual.
- *3. This master cannot be used together with FX3U-16CCL-M and FX2N-32ASI-M.
The following number of points is added according to the products connected to the network.
Number of remote I/O stations × 32 points
- *4. The following number of points is added according to the products connected to the network.
Total number of input/output points of remote I/O stations
- *5. The number of points varies according to the products connected to the network.
For details, refer to FX2N-16LNK-M Manual.

- *6. This master cannot be used together with FX3U-16CCL-M and FX2N-16CCL-M. Only one unit can be added to the whole system.
The following number of points is added according to the products connected to the network.
Number of active slaves × 8 points
- *7. When analog special function blocks (FX0N-3A, FX2N-2AD and FX2N-2DA) are connected to an input/output powered extension unit (FX2N-32E□ or FX2N-48E□), the following limitation must be taken into consideration. (When the blocks are connected to the main unit, this limitation is not applied.)
The total current consumption of the analog special function blocks (FX0N-3A, FX2N-2AD and FX2N-2DA) should be less than the following current values.
 - Total current consumption of blocks connected to FX2N-32E□: 190 mA or less
 - Total current consumption of blocks connected to FX2N-48E□: 300 mA or less
- *8. The current supplied to the slave unit power supply is excluded.
For details, refer to FX3U-128ASL-M User's Manual.
- *9. When the voltage of the external DC power supply is 24V DC and 5V DC, the current is 70 mA and 100 mA, respectively.
- *10. When applying the DC power type main unit, calculate the current consumption at startup.

2. Special function units

E

| No. | Type | Number of input/ occupied output points | Current consumed (mA) | | |
|-----------|------------------|---|-----------------------|-----------------|-----------------|
| | | | 5V DC | Internal 24V DC | External 24V DC |
| E3 | FX2N-10GM | 8 | — | — | 5 |
| | FX2N-20GM | 8 | — | — | 10 |
| | FX2N-1RM(-E)-SET | 8*1 | — | — | 5 |

- *1. When two or more (up to 3) FX2N-1RM units are connected, 8 input/output points are occupied without regard to the number of connected units.

6.8.6 [G] Display module

G

| No. | Type | Number of input/ occupied output points | Current consumed (mA) | | |
|-----------|----------|---|-----------------------|-----------------|-----------------|
| | | | 5V DC | Internal 24V DC | External 24V DC |
| G1 | FX3U-7DM | — | 20 | 0 | 0 |

—: No need to calculate

6.8.7 [H] Extension power supply unit

H

| No. | Type | Number of input/ occupied output points | Current consumed (mA)*1 | |
|-----------|--------------|---|-------------------------|-----------------|
| | | | 5V DC | Internal 24V DC |
| H1 | FX3U-1PSU-5V | — | 1000 | 300 |

—: No need to calculate


- *1. The ambient temperature restricts the output current. For details, refer to the derating curve in Section 6.7.

6.9 Example of System Configuration and System Modification

The procedures for evaluating the suitability of the system configuration are explained using an example system configuration consisting of an expansion board, special adapters, input/output powered extension units/blocks and special function blocks.

6.9.1 Example system configuration

A system configuration is examined using the following example.

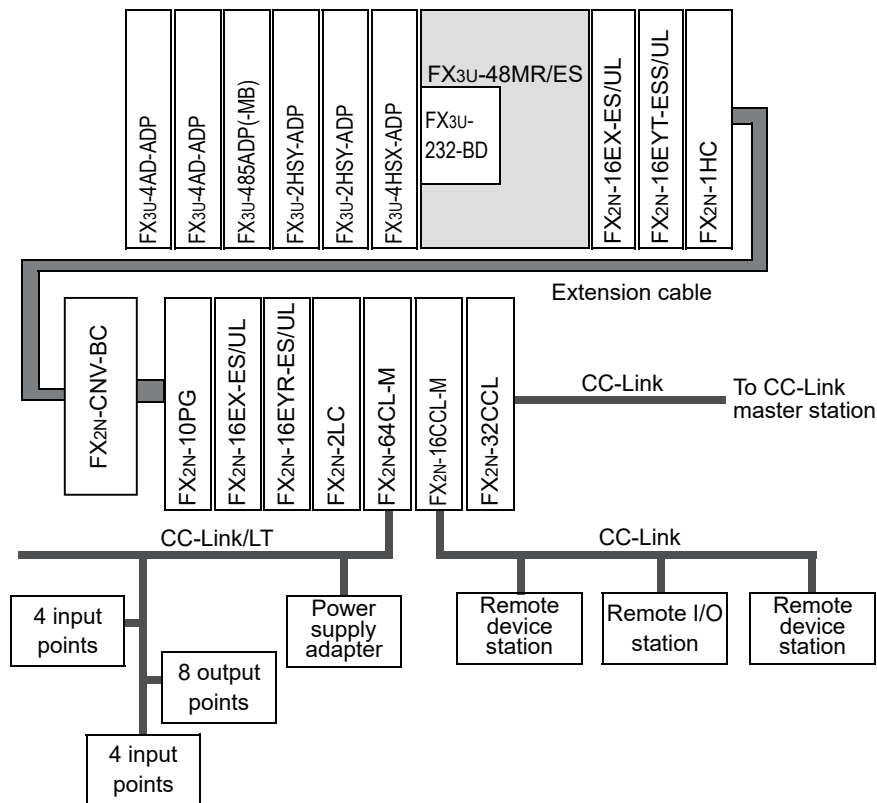

6.9.2 Expansion of main unit

The suitability of the above system configuration is evaluated as shown below.

1 Enter the specifications for the main unit.

| | Classification | Number of connected units | Type | Number of input/output points [points] | Capacity of built-in power supply | |
|----------------------------|-----------------------|---------------------------|--------------|--|-----------------------------------|----------------------------------|
| | | | | | 5V DC power supply [mA] | 24V DC service power supply [mA] |
| | | | | 1-1 | 1-2 | 1-3 |
| With built-in power supply | A Main unit | 1 | FX3U-48MR/ES | 48 | 500 | 600 |

2 Enter the specifications for the products to be connected to the main unit.

| | Classification | Number of connected units | Type | Number of input/output (occupied) points [points] | Calculation of current consumption of built-in power supply | |
|--|---|---------------------------|-------------------|---|---|--------------------------|
| | | | | | 5V DC power supply [mA] | 24V DC power supply [mA] |
| Enter the products connected to the main unit. | B Expansion board | 1 | FX3U-232-BD | — | 20 | 0 |
| | C Special adapter | 6 | FX3U-4HSX-ADP | — | 30 | 30 |
| | | | FX3U-2HSY-ADP | — | 30 | 60 |
| | | | FX3U-2HSY-ADP | — | 30 | 60 |
| | | | FX3U-485ADP(-MB) | — | 20 | 0 |
| | | | FX3U-4AD-ADP | — | 15 | 0 |
| | | | FX3U-4AD-ADP | — | 15 | 0 |
| | D2 Input/output extension block | 4 | FX2N-16EX-ES/UL | 16 | — | 100 |
| | | | FX2N-16EYT-ESS/UL | 16 | — | 150 |
| | | | FX2N-16EX-ES/UL | 16 | — | 100 |
| | | | FX2N-16EYR-ES/UL | 16 | — | 150 |
| | E Special function unit/block | 6 | FX2N-1HC | 8 | 90 | 0 |
| | | | FX2N-10PG | 8 | 120 | 0 |
| | | | FX2N-2LC | 8 | 70 | 0 |
| | | | FX2N-64CL-M | 8+16 ^{*1} | 190 | 0 |
| | | | FX2N-16CCL-M | 8 | 0 | 0 |
| | | | FX2N-32CCL | 8 | 130 | 0 |
| | | | | 2-1 | 2-2 | 2-3 |
| Calculate the totals. | | | | 128 | 760 | 650 |

*1. The number for FX2N-64CL-M is calculated by adding the number of input/output points at the connected remote I/O station to 8 points.

3 Calculate the number of input/output points.

Calculate the number of input/output points on the whole system.

1. Calculate the number of input/output points of the main unit and extension devices.

| Number of input/output points | | | | |
|-------------------------------|--|--------------------|------------------------------------|----|
| Main unit | Total input/output points of extension devices | Calculation result | Max. number of input/output points | |
| 1-1 48 points | 2-1 128 points | A 176 points | ≤ 256 points | OK |

2. Calculate the number of remote I/O points on the network.

Since this system uses CC-Link, calculate the number of the remote I/O stations.

| Input/output on network | Calculation result | Max. number of input/output points |
|--|------------------------------|------------------------------------|
| Number of CC-Link remote I/O stations 1 station | × 32 points = B 32 points | ≤ 224 points |

FX2N-16CCL-M: up to 7 stations

3. Calculate the total number of input/output occupied points (number of input/output points).

| Total number of input/output points | | Calculation result | Max. number of input/output points |
|---|---|--------------------|------------------------------------|
| Number of input/output occupied points A 176 points Total obtained in Step 1 | Input/output on network B 32 points Total obtained in Step 2 | = 208 points | ≤ 384 points |

OK

4 Determine whether the devices can be added to the main unit.

Calculate the current consumption to confirm whether the extension devices selected in the above step can be connected.

4. Calculate the current consumption of the built-in 5V DC power supply.

| Capacity of 5V DC power supply | Current consumption | Calculation result |
|--------------------------------|--|--------------------|
| Main unit | Total of current consumed by extension devices | |
| 1-2 500mA | 2-2 760mA | = -260mA NG |

5. Calculate the current consumption of the built-in 24V DC power supply (24V DC service power supply).

The value obtained by this calculation (when the value is positive) indicates the remaining capacity of the 24V DC service power supply, that can be used for external loads.

| Capacity of 24V DC power supply | Current consumption | Calculation result |
|---------------------------------|--|--------------------|
| Main unit | Total of current consumed by extension devices | |
| 1-3 600mA | 2-3 650mA | = -50mA NG |

Since the calculated values of the current consumption of the 5V DC and 24V DC power supplies are negative, it is necessary to reexamine the configuration.

The next subsection explains the procedures for evaluating a reexamined and modified configuration.

1

Introduction

2

Features and Part Names

3

Product Introduction

4

Specifications

5

Version and Peripheral Devices

6

System Configuration

7

Input/Output Nos., Unit Nos.

8

Installation

9

Preparation and Power Supply Wiring


10

Input Wiring

6.9.3 Re-examination of suitability for configuration

When the main unit is short of 5V DC or 24V DC current, use an input/output powered extension unit.
Reexamine the system configuration using an input/output powered extension unit.

Example of reexamined system configuration

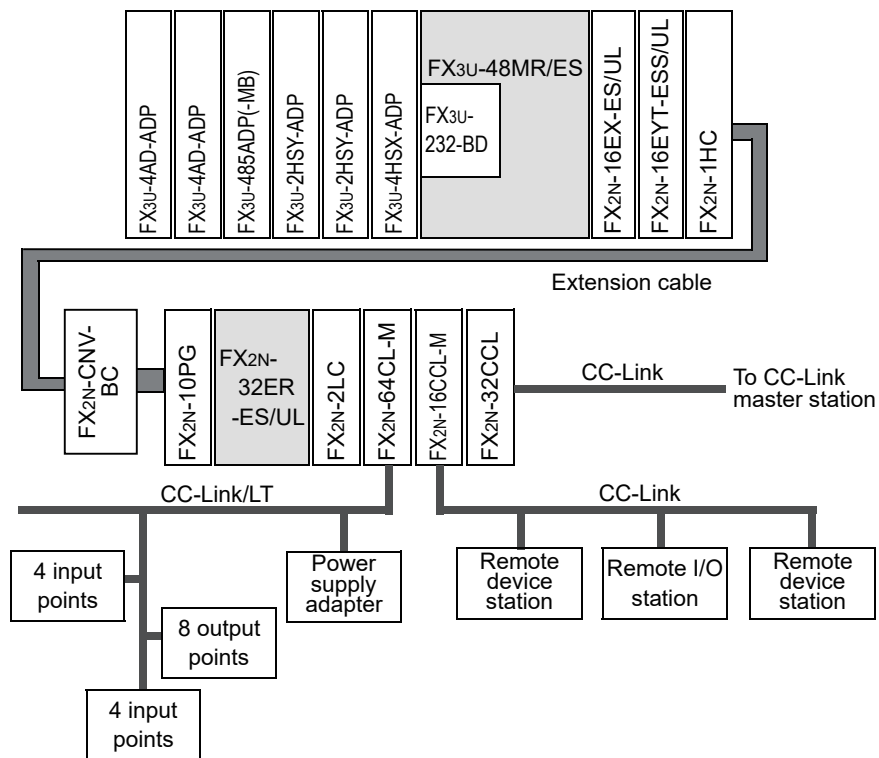

1 Enter the specifications for the main unit.

| | Classification | Number of connected units | Type | Number of input/output points [points] | Capacity of built-in power supply | |
|----------------------------|-----------------------|---------------------------|--------------|--|-----------------------------------|----------------------------------|
| | | | | | 5V DC power supply [mA] | 24V DC service power supply [mA] |
| | | | | 1-1 | 1-2 | 1-3 |
| With built-in power supply | A Main unit | 1 | FX3U-48MR/ES | 48 | 500 | 600 |

2 Enter the specifications for the products to be added to the main unit.

| | Classification | Number of connected units | Type | Number of input/output (occupied) points [points] | Calculation of current consumption of built-in power supply | |
|--|---|---------------------------|-------------------|---|---|-----------------------------------|
| | | | | | 5V DC power supply [mA] | Internal 24V DC power supply [mA] |
| Enter the products connected to the main unit. | B Expansion board | 1 | FX3U-232-BD | — | 20 | 0 |
| | C Special adapter | 6 | FX3U-4HSX-ADP | — | 30 | 30 |
| | | | FX3U-2HSY-ADP | — | 30 | 60 |
| | | | FX3U-2HSY-ADP | — | 30 | 60 |
| | | | FX3U-485ADP(-MB) | — | 20 | 0 |
| | | | FX3U-4AD-ADP | — | 15 | 0 |
| | | | FX3U-4AD-ADP | — | 15 | 0 |
| | D2 Input/output extension block | 2 | FX2N-16EX-ES/UL | 16 | — | 100 |
| | | | FX2N-16EYT-ESS/UL | 16 | — | 150 |
| | E Special function unit/block | 2 | FX2N-1HC | 8 | 90 | 0 |
| FX2N-10PG | | | 8 | 120 | 0 | |
| | | | | 2-1 | 2-2 | 2-3 |
| Calculate the totals. | | | | 48 | 370 | 400 |

3 Enter the specifications for the input/output powered extension unit.

| Power supply classification | Classification | Number of connected units | Type | Number of input/output points [points] | Capacity of built-in power supply | |
|-----------------------------|--|---------------------------|-----------------|--|-----------------------------------|----------------------------------|
| | | | | | 5V DC power supply [mA] | 24V DC service power supply [mA] |
| | | | | 3-1 | 3-2 | 3-3 |
| With built-in power supply | D1 Input/output powered extension unit | 1 | FX2N-32ER-ES/UL | 32 | 690 | 250 |

4 Enter the specifications for the products to be added to the input/output powered extension unit.


| | Classification | Number of connected units | Type | Number of input/output occupied points [points] | Calculation of current consumption of built-in power supply | |
|---|--|---------------------------|--------------|---|---|-----------------------------------|
| | | | | | 5V DC power supply [mA] | Internal 24V DC power supply [mA] |
| Enter the products connected to the Input/output powered extension unit | <div>E</div> Special function unit/block | 4 | FX2N-2LC | 8 | 70 | 0 |
| | | | FX2N-64CL-M | 8+16 ^{*1} | 190 | 0 |
| | | | FX2N-16CCL-M | 8 | 0 | 0 |
| | | | FX2N-32CCL | 8 | 130 | 0 |
| | | | | 4-1 | 4-2 | 4-3 |
| Calculate the totals | | | | 48 | 390 | 0 |

*1. The number for FX2N-64CL-M is calculated by adding the number of input/output points at the connected remote I/O station to 8 points.

5 Calculate the number of input/output points.


Calculate the number of input/output points on the whole system.

1. Calculate the number of input/output points of the main unit and extension devices.

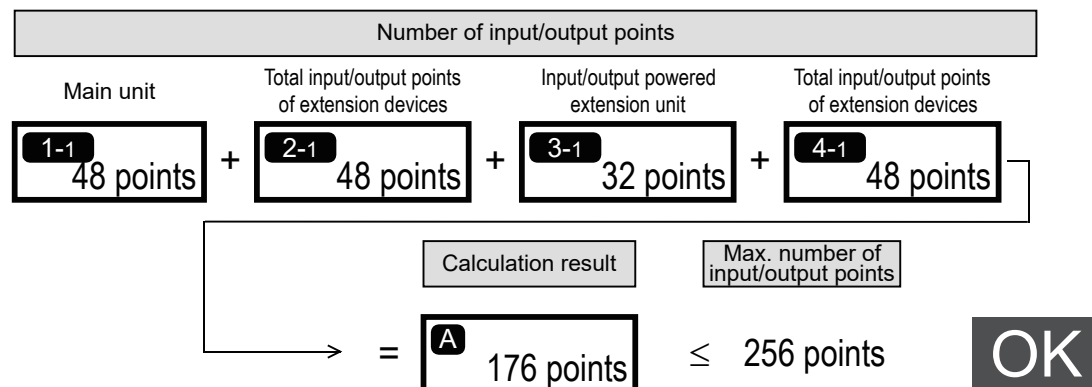

2. Calculate the number of remote I/O points on the network.

Since this system uses CC-Link, calculate the number of the remote I/O stations.

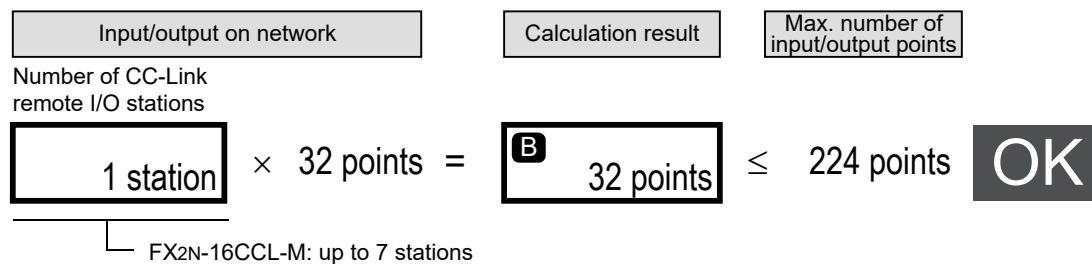

3. Calculate the total number of input/output occupied points (number of input/output points).

| Total number of input/output points | | Calculation result | Max. number of input/output points |
|---|--|--------------------|------------------------------------|
| Number of input/output occupied points | Input/output on network | | |
| A 176 points Total obtained in Step 1 | + B 32 points Total obtained in Step 2 | = 208 points | ≤ 384 points |
| | | | OK |

6 Determine whether the devices can be added to the main unit.

Calculate the current by the following formula to confirm whether the extension devices selected in Step 2 can be connected.

1. Calculate the current consumption of the built-in 5V DC power supply.

| Capacity of 5V DC power supply | Current consumption | Calculation result |
|--------------------------------|--|--------------------|
| Main unit | Total of current consumed by extension devices | |
| 1-2 500mA | - 2-2 370mA | = 130mA |
| | | ≥ 0mA |
| | | OK |

2. Calculate the current consumption of the built-in 24V DC power supply (24V DC service power supply).

The value obtained by this calculation (when the value is positive) indicates the remaining capacity of the 24V DC service power supply, that can be used for external loads.

| Capacity of 24V DC power supply | Current consumption | Calculation result |
|---------------------------------|--|--------------------|
| Main unit | Total of current consumed by extension devices | |
| 1-3 600mA | - 2-3 400mA | = 200mA |
| | | ≥ 0mA |
| | | OK |

7 Determine whether the devices can be connected to the input/output powered extension unit.

Calculate the current by the following formula to confirm whether the extension devices selected in Step 4 can be connected.

1. Calculate the current consumption of the built-in 5V DC power supply.

| Capacity of 5V DC power supply Input/output powered extension unit | Current consumption Total of current consumed by extension devices | Calculation result |
|---|---|-----------------------|
| 3-2 690mA | 4-2 390mA | 300mA ≥ 0mA OK |

2. Calculate the current consumption of the built-in 24V DC power supply (24V DC service power supply).

The value obtained by this calculation (when the value is positive) indicates the remaining capacity of 24V DC service power supply, and the capacity can be used for external loads

| Capacity of 24V DC power supply Input/output powered extension unit | Current consumption Total of current consumed by extension devices | Calculation result |
|--|---|-----------------------|
| 3-3 250mA | 4-3 0mA | 250mA ≥ 0mA OK |

8 Verify the evaluation results.

Since the capacities of the 5V DC and 24V DC power supplies and the number of input/output points are within the specified ranges, the reexamined system configuration is feasible.

7. Assignment of Input/Output Numbers (X/Y) and Unit Numbers

7.1 Assignment of Input/Output Numbers (X/Y)

If input/output powered extension units/blocks have been connected when the power is turned on, the main unit automatically assigns the input/output numbers (X/Y) (octal) to the units/blocks.

Therefore, it is unnecessary to specify the input/output numbers with parameters.

Accordingly, it is not necessary to specify input/output numbers using parameters.

It is necessary to assign input and output numbers in the following special extension unit/block:

- FX2N-64CL-M
- FX2N-16LNK-M

7.1.1 Concept of assigning

When the power is turned on, input/output numbers (X/Y) are assigned according to the following rules.

For special function blocks, such as FX2N-64CL-M and FX2N-16LNK-M, that assign input/output numbers to connected remote I/O stations, refer to the manual for each block.

1. Input/output numbers (X/Y) are octal.

Octal numbers are assigned as input/output numbers (X/Y) as shown below.

- X000 to X007, X010 to X017, X020 to X027....., X070 to X077, X100 to X107...
- Y000 to Y007, Y010 to Y017, Y020 to Y027....., Y070 to Y077, Y100 to Y107...


2. Numbers for added input/output unit/block

To an added input/output powered extension unit/block, input numbers and output numbers following the input numbers and output numbers given to the preceding device are assigned.

The last digit of the assigned numbers must begin with 0.

For example, when the last number on the preceding device is X043, the input numbers are assigned to the next device starting from X050.


(When the FX2N-8ER is used, some input/output numbers are not used.)

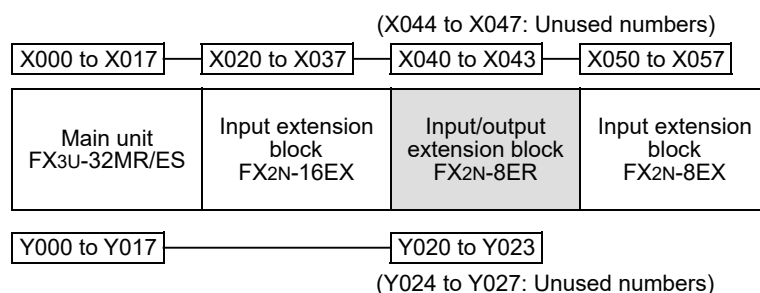

7.1.2 Example of assigning


An example of assignment of input/output numbers (X/Y) is shown below.

1. Example of configuration

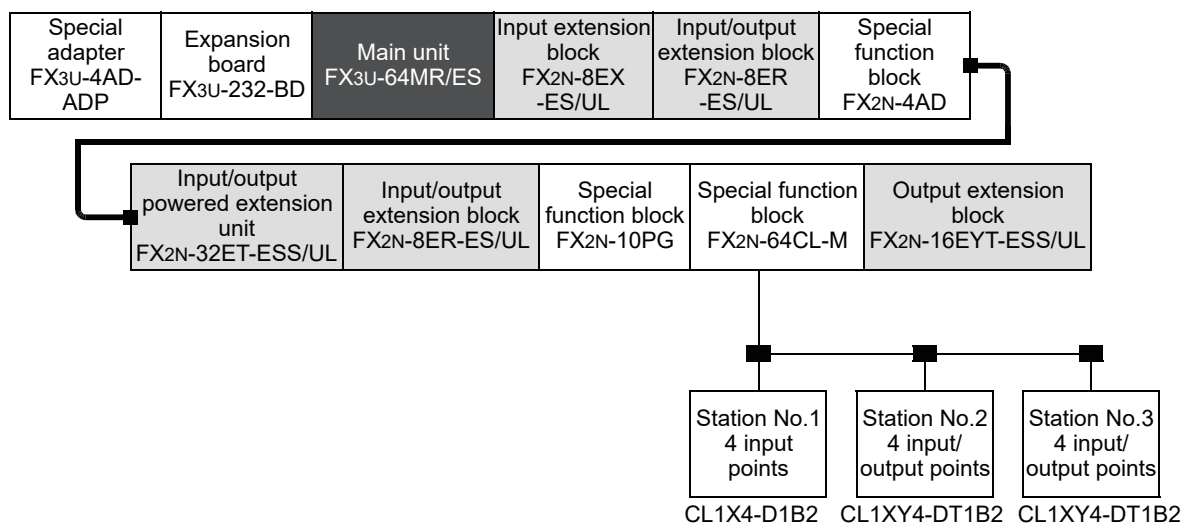


2. Assignment of input/output numbers

Input/output numbers are assigned to the above example configuration as shown below.

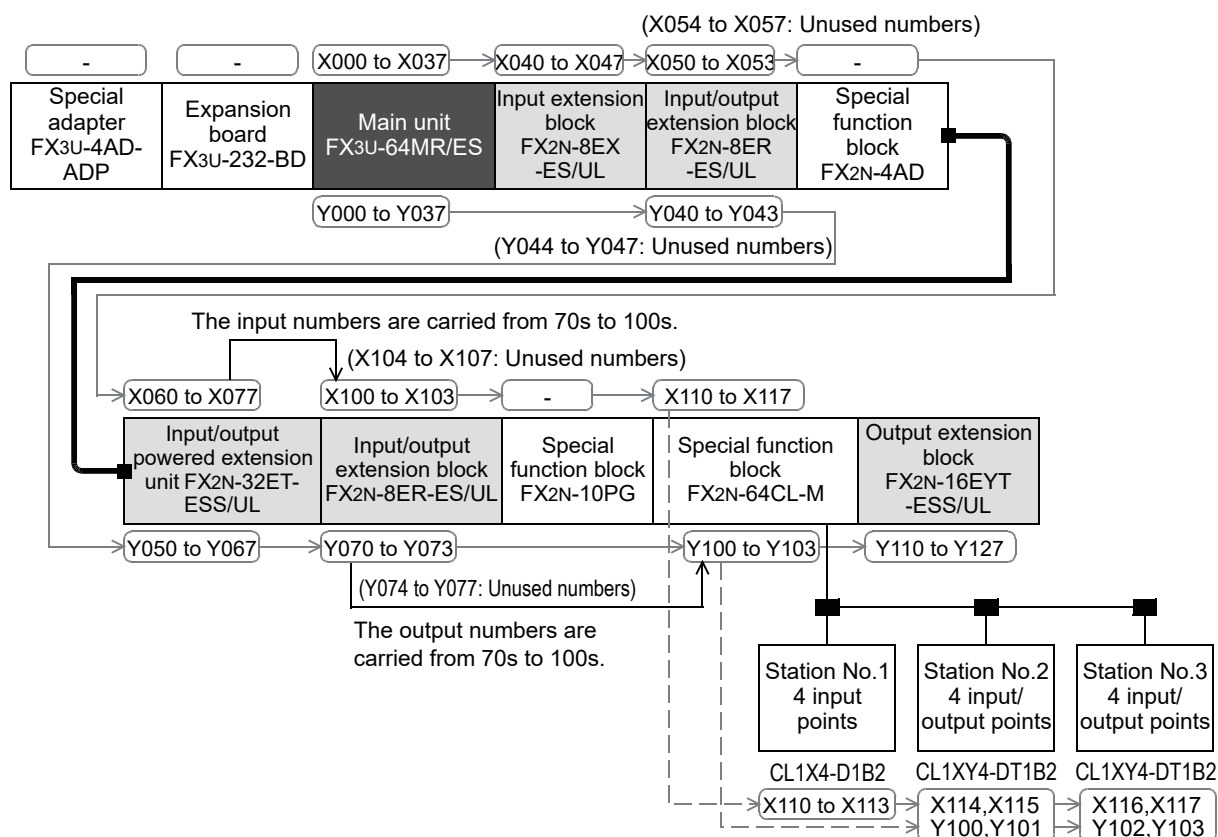

7.1.3 Application of I/O number label

The input/output powered extension units/blocks come with an I/O number label.
Apply the I/O number label to spaces on the enclosure (see the following figure) so that the input/output numbers can be identified.

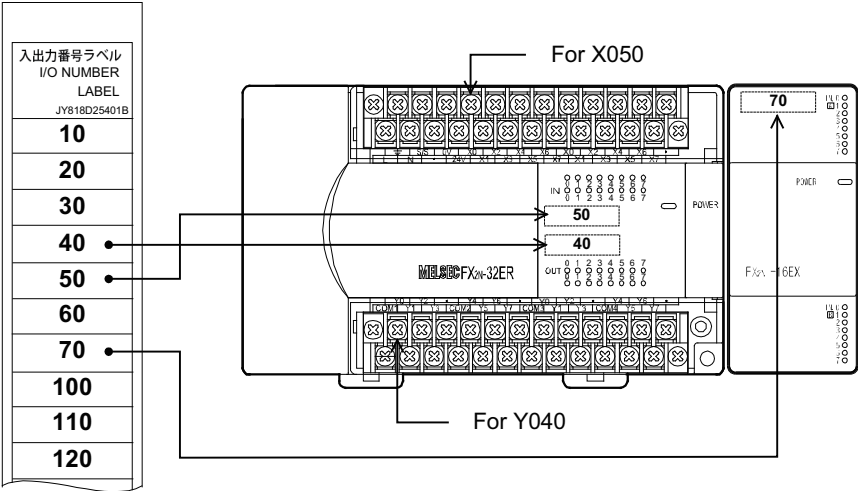

| | |
|----|-------------------------------------|
| 1 | Introduction |
| 2 | Features and Part Names |
| 3 | Product Introduction |
| 4 | Specifications |
| 5 | Version and Peripheral Devices |
| 6 | System Configuration |
| 7 | Input/Output Nos., Unit Nos. |
| 8 | Installation |
| 9 | Preparation and Power Supply Wiring |
| 10 | Input Wiring |

7.2 Unit Numbers of Special Function Units/Blocks

7.2.1 Concept of assigning

When power is turned on, the main unit (CPU) automatically assigns the numbers 0 to 7 to special function units/blocks starting from the one closest to the main unit.

Unit numbers are not given to input/output powered extension units/blocks.

1. Special function units/blocks connected to main unit

The numbers 0 to 7 are assigned to the special function units/blocks starting from the one closest to the main unit.

2. FX2N-1RM(-E)-SET

Up to three FX2N-1RM(-E)-SET can be sequentially connected to the end of one system.

All these connected units have the same number as the unit number of the first unit (FX2N-1RM(-E)-SET).

→ **For FX2N-1RM-E-SET, refer to FX2N-1RM-E-SET USER'S MANUAL.**


3. Products to which unit numbers are not assigned

- Input/output powered extension units: FX2N-32ER-ES/UL, FX2N-48ET-ESS/UL, etc.
- Input/output extension blocks: FX2N-16EX-ES/UL, FX2N-16EYR-ES/UL, etc.
- Special function block: FX2N-16LNK-M
- Connector conversion adapter: FX2N-CNV-BC
- Expansion boards: FX3U-232-BD, etc.
- Special adapters: FX3U-232ADP(-MB), etc.
- Extension power supply unit: FX3U-1PSU-5V


7.2.2 Example of assigning

Unit numbers are assigned to the special function units/blocks in the following configuration.

→ For assignment of input/output numbers, refer to Section 7.1.

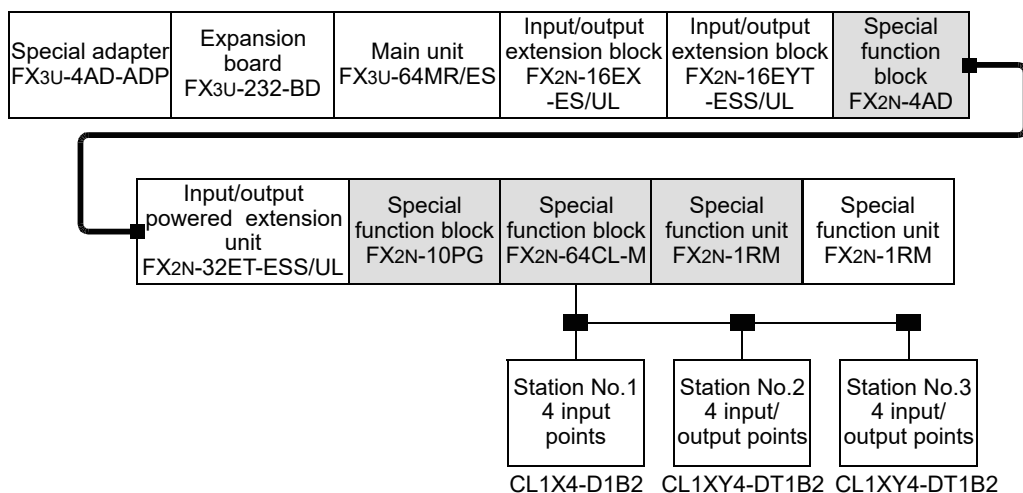


Unit numbers are assigned to the special function units/blocks in the above configuration as shown below.

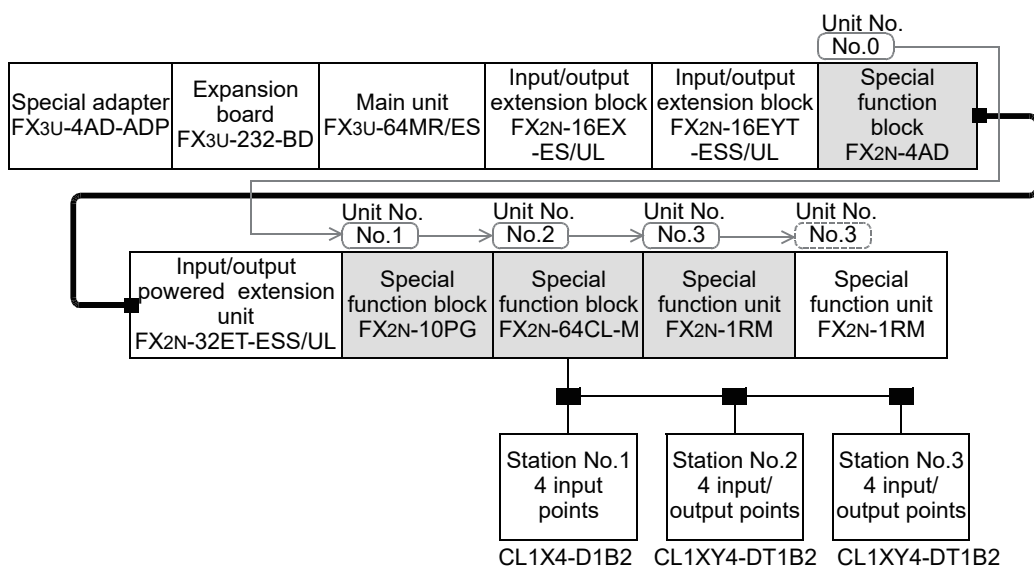

7.2.3 Application of unit number labels


The special function units/blocks come with unit number labels.

Apply the unit number labels to spaces on the enclosure (see the following figure) so that the unit numbers can be identified.

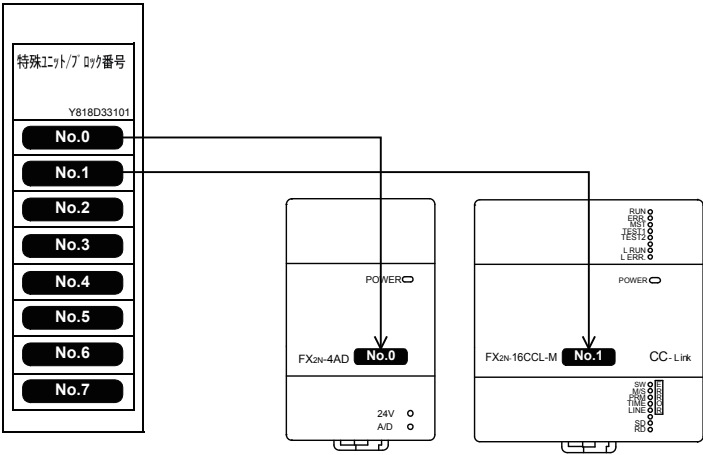

7.3 Application of the trimmer layout label

The analog volume expansion board (FX3U-8AV-BD) comes with a trimmer layout label. Apply the trimmer layout label in a position (see the following figure) so that the each trimmer can be identified.

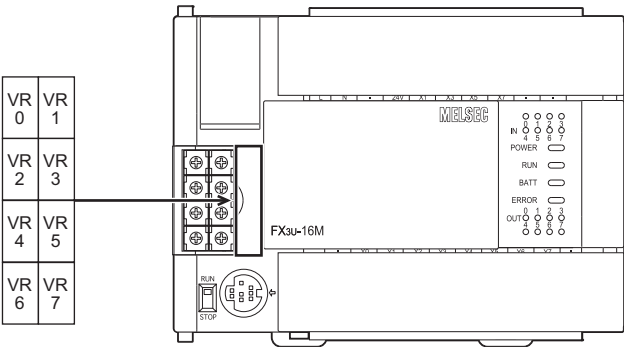

8. Installation In Enclosure

DESIGN PRECAUTIONS



WARNING

- Make sure to have the following safety circuits outside of the PLC to ensure safe system operation even during external power supply problems or PLC failure.
Otherwise, malfunctions may cause serious accidents.
 - 1) Most importantly, have the following: an emergency stop circuit, a protection circuit, an interlock circuit for opposite movements (such as normal vs. reverse rotation), and an interlock circuit (to prevent damage to the equipment at the upper and lower positioning limits).
 - 2) Note that when the PLC CPU detects an error, such as a watchdog timer error, during self-diagnosis, all outputs are turned off. Also, when an error that cannot be detected by the PLC CPU occurs in an input/output control block, output control may be disabled.
External circuits and mechanisms should be designed to ensure safe machinery operation in such a case.
 - 3) Note that the output current of the 24V DC service power supply varies depending on the model and the absence/presence of extension blocks. If an overload occurs, the voltage automatically drops, inputs in the PLC are disabled, and all outputs are turned off.
External circuits and mechanisms should be designed to ensure safe machinery operation in such a case.
 - 4) Note that when an error occurs in a relay, triac or transistor output device, the output could be held either on or off.
For output signals that may lead to serious accidents, external circuits and mechanisms should be designed to ensure safe machinery operation in such a case.

DESIGN PRECAUTIONS



CAUTION

- Do not bundle the control line together with or lay it close to the main circuit or power line. As a guideline, lay the control line at least 100mm (3.94") or more away from the main circuit or power line.
Noise may cause malfunctions.
- Install module so that excessive force will not be applied to peripheral device connectors.
Failure to do so may result in wire damage/breakage or PLC failure.

SECURITY PRECAUTIONS



WARNING

- To maintain the security (confidentiality, integrity, and availability) of the programmable controller and the system against unauthorized access, denial-of-service (DoS) attacks, computer viruses, and other cyberattacks from unreliable networks and devices via network, take appropriate measures such as firewalls, virtual private networks (VPNs), and antivirus solutions.

INSTALLATION PRECAUTIONS



WARNING

- Make sure to cut off all phases of the power supply externally before attempting installation or wiring work.
Failure to do so may cause electric shock or damage to the product.

1

Introduction

2

Features and
Part Names

3

Product
Introduction

4

Specifications

5

Version and
Peripheral
Devices

6

System
Configuration

7

Input/Output
Nos., Unit Nos.

8

Installation

9

Preparation and
Power Supply
Wiring

10

Input Wiring

INSTALLATION PRECAUTIONS



- Use the product within the generic environment specifications described in section 4.1 of this manual.
Never use the product in areas with excessive dust, oily smoke, conductive dusts, corrosive gas (salt air, Cl₂, H₂S, SO₂ or NO₂), flammable gas, vibration or impacts, or expose it to high temperature, condensation, or rain and wind.
If the product is used in such conditions, electric shock, fire, malfunctions, deterioration or damage may occur.
- Do not touch the conductive parts of the product directly.
Doing so may cause device failures or malfunctions.
- Install the product securely using a DIN rail or mounting screws.

| | |
|--|-----------------------------|
| FX2N-10GM, FX2N-20GM, and terminal block | DIN rail only |
| Main unit, FX2N Series I/O extension unit/block, and FX0N/FX2N/ FX3U Series special extension block/special adapter | DIN rail or direct mounting |

- Install the product on a flat surface.
If the mounting surface is rough, undue force will be applied to the PC board, thereby causing nonconformities.
- Make sure to affix the expansion board with tapping screws.
Tightening torque should follow the specifications in the manual.
Loose connections may cause malfunctions.
- When drilling screw holes or wiring, make sure that cutting and wiring debris do not enter the ventilation slits.
Failure to do so may cause fire, equipment failures or malfunctions.
- Be sure to remove the dust proof sheet from the PLC's ventilation port when installation work is completed.
Failure to do so may cause fire, equipment failures or malfunctions.
- Connect the extension cables, peripheral device cables, input/output cables and battery connecting cable securely to their designated connectors.
Loose connections may cause malfunctions.
- Connect the display module, memory cassette, and expansion board securely to their designated connectors.
Loose connections may cause malfunctions.
- Turn off the power to the PLC before attaching or detaching the following devices.
Failure to do so may cause device failures or malfunctions.
 - Peripheral devices, display modules, expansion boards and special adapters
 - Extension units/blocks and FX Series terminal blocks
 - Battery and memory cassette

WIRING PRECAUTIONS



- Make sure to cut off all phases of the power supply externally before attempting installation or wiring work.
Failure to do so may cause electric shock or damage to the product.
- Make sure to attach the terminal cover, offered as an accessory, before turning on the power or initiating operation after installation or wiring work.
Failure to do so may cause electric shock.
- The temperature rating of the cable should be 80°C or more.

WIRING PRECAUTIONS



- Do not supply power to the [24+] and [24V] terminals (24V DC service power supply) on the main unit or extension units.
Doing so may cause damage to the product.
- Perform class D grounding (grounding resistance: 100 Ω or less) to the grounding terminal on the main unit and extension units with a wire 2 mm² or thicker.
Do not use common grounding with heavy electrical systems (refer to Section 9.4).
- Connect the AC power supply wiring to the dedicated terminals described in this manual.
If an AC power supply is connected to a DC input/output terminal or DC power supply terminal, the PLC will burn out.
- Connect the DC power supply wiring to the dedicated terminals described in this manual.
If an AC power supply is connected to a DC input/output terminal or DC power supply terminal, the PLC will burn out.
- Do not wire vacant terminals externally.
Doing so may damage the product.
- When drilling screw holes or wiring, make sure that cutting and wiring debris do not enter the ventilation slits.
Failure to do so may cause fire, equipment failures or malfunctions.
- Make sure to properly wire the FX3U Series main unit and FX0N/FX2N/FX3U Series extension equipment in accordance with the following precautions.
Failure to do so may cause electric shock, equipment failures, a short-circuit, wire breakage, malfunctions, or damage to the product.
 - The disposal size of the cable end should follow the dimensions described in the manual.
 - Tightening torque should follow the specifications in the manual.
 - Tighten the screws using a Phillips-head screwdriver No.2 (shaft diameter 6mm (0.24") or less). Make sure that the screwdriver does not touch the partition part of the terminal block.
- Make sure to properly wire to the terminal block (European type) in accordance with the following precautions.
Failure to do so may cause electric shock, equipment failures, a short-circuit, wire breakage, malfunctions, or damage to the product.
 - The disposal size of the cable end should follow the dimensions described in the manual.
 - Tightening torque should follow the specifications in the manual.
 - Twist the end of strand wire and make sure that there are no loose wires.
 - Do not solder-plate the electric wire ends.
 - Do not connect more than the specified number of wires or electric wires of unspecified size.
 - Affix the electric wires so that neither the terminal block nor the connected parts are directly stressed.
- Make sure to properly wire to the FX Series terminal blocks in accordance with the following precautions.
Failure to do so may cause electric shock, equipment failures, a short-circuit, wire breakage, malfunctions, or damage to the product.
 - The disposal size of the cable end should follow the dimensions described in the manual.
 - Tightening torque should follow the specifications in the manual.
 - Tighten the screws using a Phillips-head screwdriver No.2 (shaft diameter 6mm (0.24") or less). Make sure that the screwdriver does not touch the partition part of the terminal block.

This chapter explains the procedures for installing the PLC in enclosure.

The procedures for wiring the input and output terminals are described in the following chapters.

- Installation location and layout in enclosure
- Procedures for connecting extension devices
- Procedures for power supply wiring

1

Introduction

2

Features and
Part Names

3

Product
Introduction

4

Specifications

5

Version and
Peripheral
Devices

6

System
Configuration

7

Input/Output
Nos., Unit Nos.

8

Installation

9

Preparation and
Power Supply
Wiring

10

Input Wiring


8.1 Generic Specifications

| Item | Specification | | | | |
|--------------------------------|--|--|----------------------------------|---------------------|--|
| Ambient temperature | 0 to 55°C (32 to 131°F) when operating and -25 to 75°C (-13 to 167°F) when stored | | | | |
| Ambient humidity | 5 to 95%RH (no condensation) when operating | | | | |
| Vibration resistance*1 | | Frequency (Hz) | Acceleration (m/s ²) | Half amplitude (mm) | Sweep Count for X, Y, Z: 10 times (80 min in each direction) |
| | When installed on DIN rail | 10 to 57 | – | 0.035 | |
| | | 57 to 150 | 4.9 | – | |
| | When installed directly | 10 to 57 | – | 0.075 | |
| | | 57 to 150 | 9.8 | – | |
| Shock resistance*1 | 147 m/s ² Acceleration, Action time: 11ms, 3 times by half-sine pulse in each direction X, Y, and Z | | | | |
| Noise resistance | By noise simulator at noise voltage of 1,000 Vp-p, noise width of 1 μs, rise time of 1 ns and period of 30 to 100 Hz | | | | |
| Dielectric withstand voltage*3 | 1.5kV AC for one minute | Between each terminals and ground terminal | | | |
| | 500V AC for one minute | | | | |
| Insulation resistance*3 | 5 MΩ or higher by 500 V DC insulation resistance tester | | | | |
| Grounding | Class D grounding (grounding resistance: 100 Ω or less) <Common grounding with a heavy electrical system is not allowed.>*2 | | | | |
| Working atmosphere | Free from corrosive or flammable gas and excessive conductive dusts | | | | |
| Working altitude | <2000m*4 | | | | |

*1. The criterion is shown in IEC61131-2.

*2. Ground the PLC independently or jointly.

→ Refer to Section 9.4.

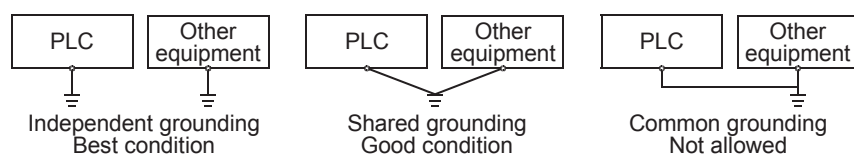

*3. For more information on the dielectric withstand voltage test and the insulation resistance test of the terminals of each product, refer to the following subsection.

→ Refer to Subsection 4.1.1.


*4. Do not use the PLC under pressure higher than the atmospheric pressure. Doing so may damage the PLC.

8.2 Installation location

Use the PLC under the environmental conditions complying with the generic specifications (Section 8.1).

| Notes | |
|-------|---|
| • | Keep a space of 50 mm (1.97") away between the unit main body and other devices and structure. Install the unit as far away as possible from high-voltage lines, high-voltage devices and power equipment. Failure to do so may cause fire, equipment failures or malfunctions. |
| | To prevent temperature rise, do not install the PLC on a floor or a ceiling or in the vertical direction. Install it horizontally on a wall as shown below. |
| | Arrange the extension cable in such a way that the left connectors of the input/output powered extension units/blocks or special function units/blocks are connected on the side closer to the main unit. |
| | |


8.2.1 Installation location in enclosure

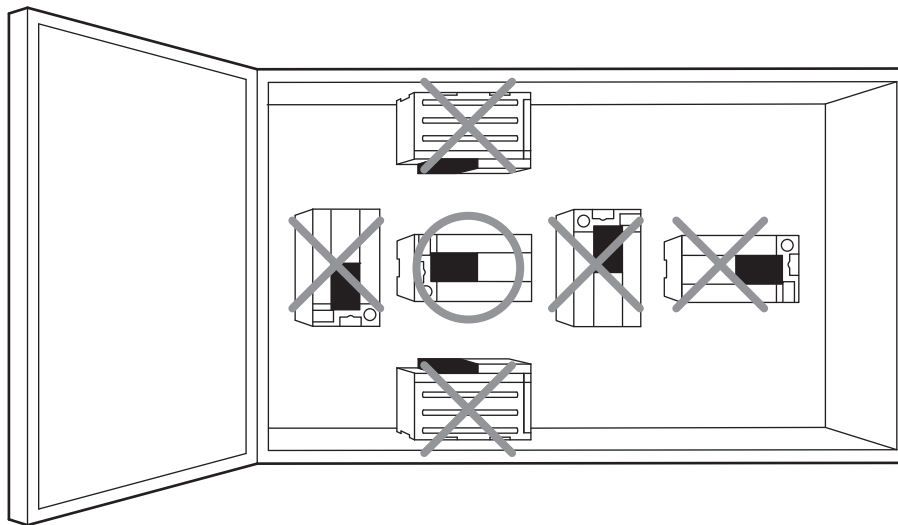


8.2.2 Spaces in enclosure

Extension devices can be connected on the left and right sides of the main unit of the PLC.
If you intend to add extension devices, keep necessary spaces on the left and right sides.

1. Configuration without extension cable

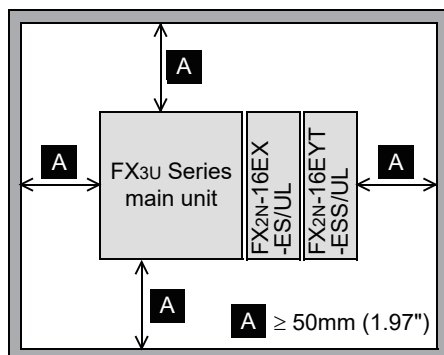


2. Configuration in 2 stages with extension cable

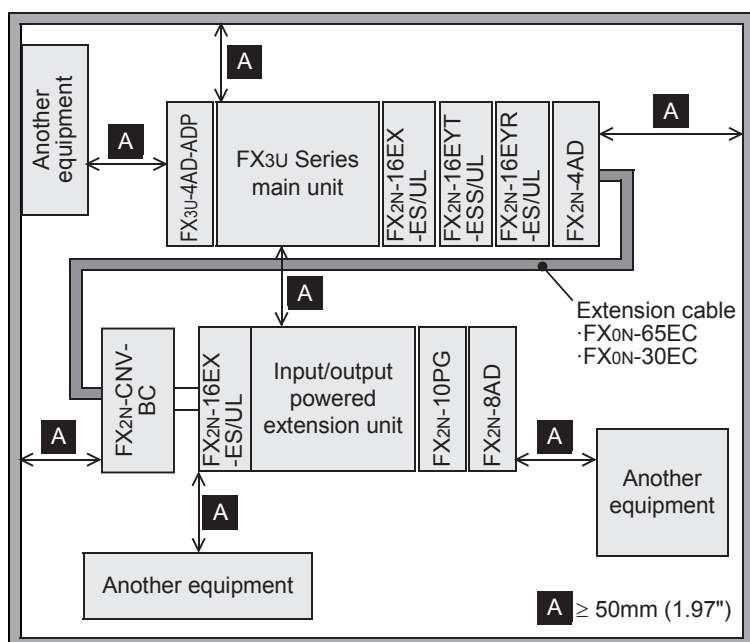

8.3 Layout in Enclosure

The PLC components can be laid out in one stage or in two stages, upper and lower. The connecting procedures in each case are explained below.


8.3.1 1-stage layout

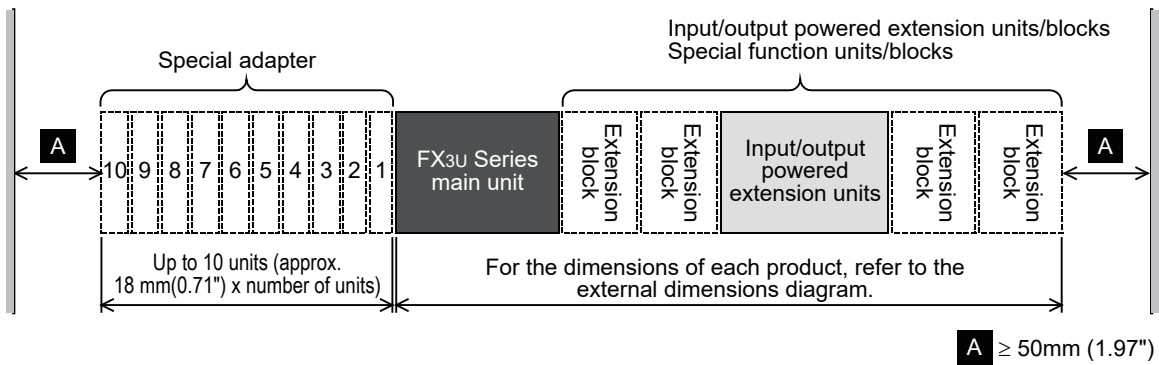

8.3.2 2-stage layout


In case of a 2-stage layout, connect the first stage and the second stage with the extension cable. When an extension block is connected at the top of the second stage, FX2N-CNV-BC (connector conversion adapter) is necessary.

1. When an input/output powered extension unit is connected at the top of the 2nd stage

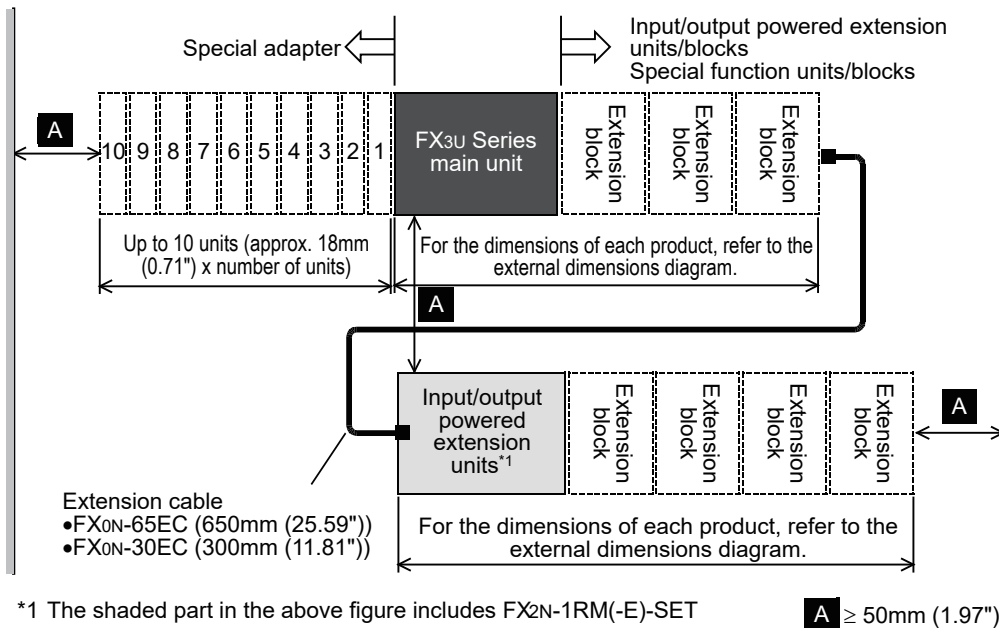


*1 The shaded part in the above figure includes FX2N-1RM(-E)-SET and FX3U-1PSU-5V, however only FX2N-1RM(-E)-SET is connectable to FX2N-1RM(-E)-SET.

2. When an input/output extension block or a special function block is connected at the top of the 2nd stage

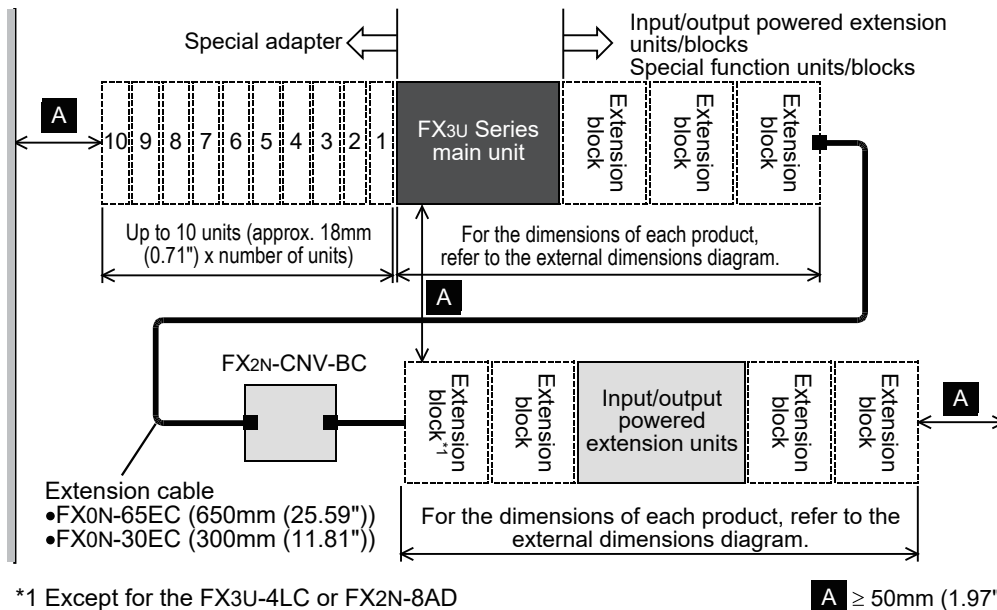

3. When a special function block (FX_{2N}-10GM/20GM) is connected at the 2nd stage

→ Refer to the previous page for FX_{2N}-1RM(-E)-SET information.

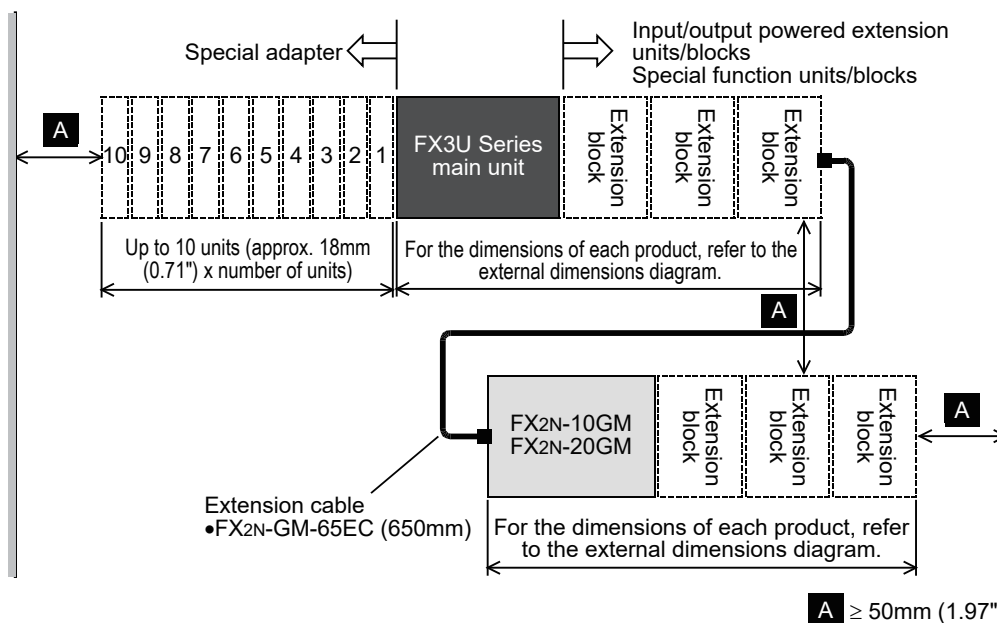

8.4 Examination for Installing Method in Enclosure

Examine the installation location of PLC in consideration of the environmental conditions (generic specifications).

8.4.1 Installing methods

The PLC can be installed by the following two methods.

1. Installing on DIN rail

- The PLC can be installed on a 35 mm (1.38") wide DIN46277 rail.
- The PLC can be easily moved and removed.
- The PLC is installed higher by the height of the DIN rail.
→ For details on the procedures on mounting and removing the DIN rail, refer to Section 8.5.

2. Direct installing (with screws)

- The PLC can be installed directly in the enclosure with M4 screws.
→ For the mounting hole pitch, refer to Section 8.6.

8.4.2 Cautions on examining installing method

→ Refer to Section 8.3.

1. Cautions when FX3U-4LC or FX2N-8AD is used

When the system is laid out in two stages, do not mount the FX3U-4LC or FX2N-8AD at the start of the second stage, or else the FX2N-CNV-BC cannot be secured properly.


2. Cautions when FX2N-10GM or FX2N-20GM is used

FX2N-10GM and FX2N-20GM can be installed only on the DIN rail.
They cannot be installed directly in the enclosure.

8.4.3 Examples of installation


As shown in the following example, when the main unit is installed on the DIN rail, the extension devices connected with the extension cable can be installed directly in the enclosure.

1. Example of installation on DIN rail

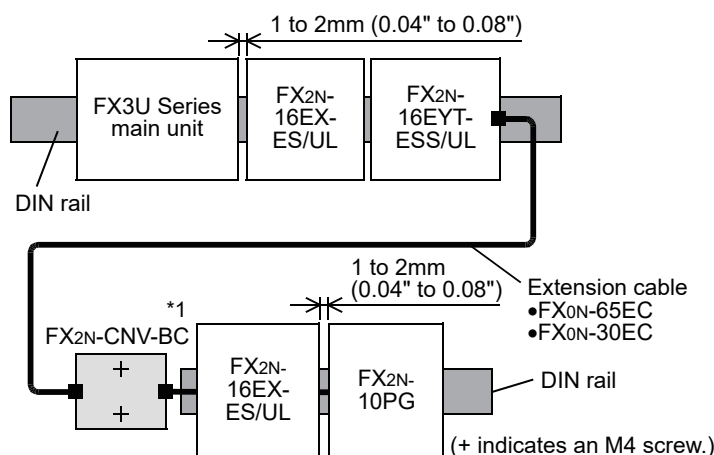


*1. FX2N-CNV-BC can be installed directly in the enclosure but cannot be installed on the DIN rail.

2. Example of direct installation

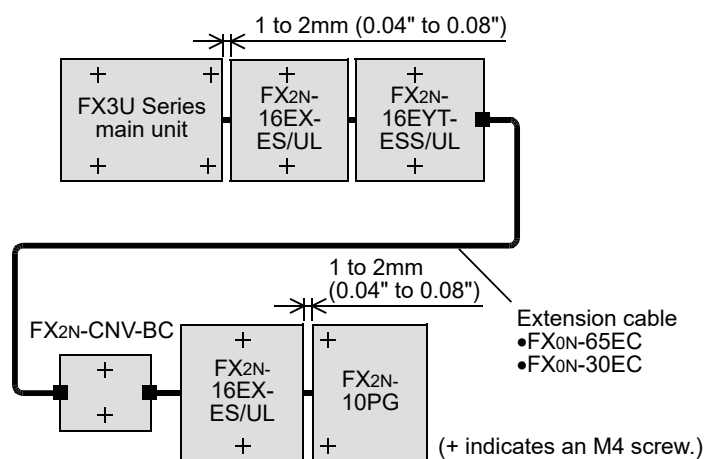

3. Example of combination of installation on DIN rail and direct installation

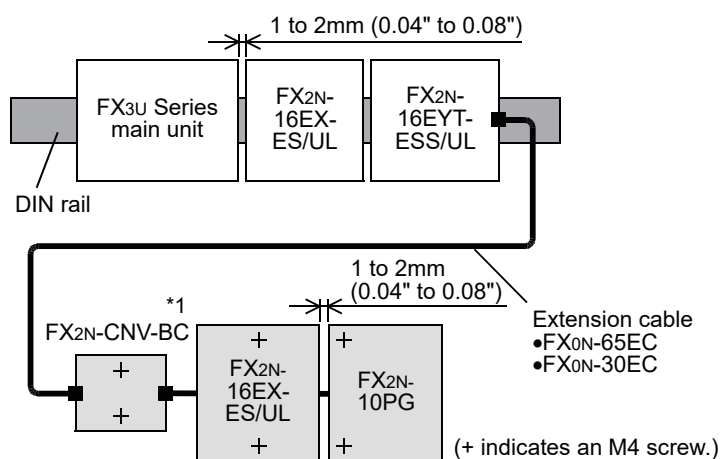

*1. FX2N-CNV-BC can be installed directly in the enclosure but cannot be installed on the DIN rail.

8.5 Procedures for Installing on and Detaching from DIN Rail

The main unit can be installed on a 35 mm (1.38") wide DIN46277 rail.

8.5.1 Preparation for installation

1. Connecting extension devices

Some extension devices must be mounted on the main unit before the unit is installed in the enclosure.

- Mount the expansion board and special adapters on the main unit before installing it in the enclosure.
- Mount the input/output powered extension units/blocks and the special function units/blocks in the enclosure after installing the main unit in the enclosure.
- The memory cassette and the display module can be fitted to the main unit after it is installed.
- The battery can be replaced with a new one in the state where the main unit is in the enclosure.

→ **For the replacement procedures, refer to Chapter 22.**

2. Affixing The Dust Proof Sheet

The dust proof sheet should be affixed to the ventilation port before beginning the installation and wiring work.

→ **For the affixing procedure, refer to the instructions on the dust proof sheet.**

Be sure to remove the dust proof sheet when the installation and wiring work is completed.

1

Introduction

2

Features and
Part Names

3

Product
Introduction

4

Specifications

5

Version and
Peripheral
Devices

6

System
Configuration

7

Input/Output
Nos., Unit Nos.

8

Installation

9

Preparation and
Power Supply
Wiring

10


Input Wiring

8.5.2 Installation of main unit


The main unit must be installed before installing a expansion board or special adapter on the enclosure.

→ For the connection procedure, refer to Subsection 8.7.2, 8.7.3, and 9.5.2.


- 1 Push out all DIN rail mounting hooks (A in the right figure).

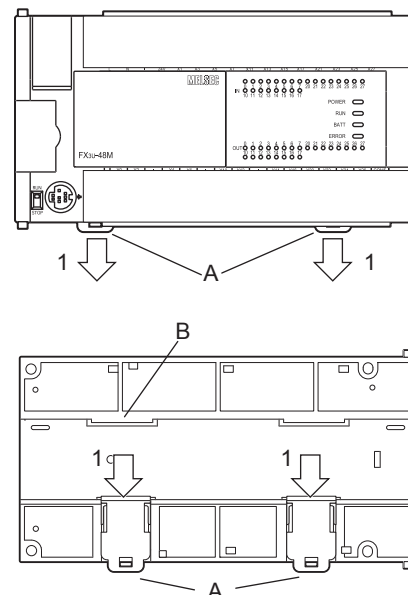

- 2 Fit the upper edge of the DIN rail mounting groove (B in the right figure) onto the DIN rail.

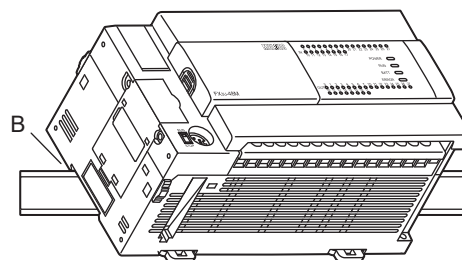


- 3 Lock the DIN rail mounting hooks (C in the following figure) while pressing the PLC against the DIN rail.

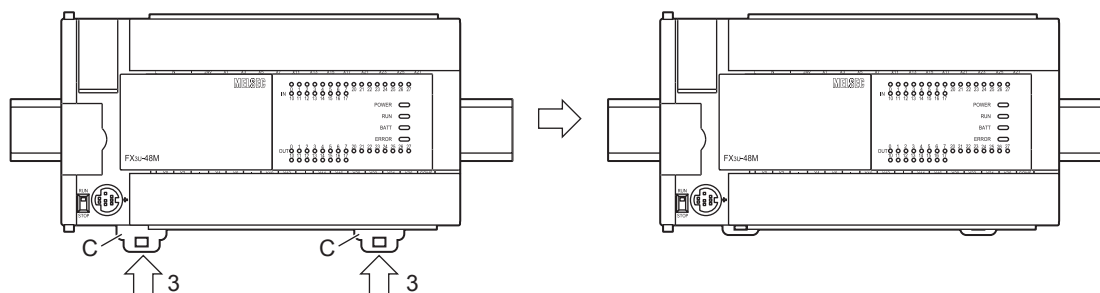

8.5.3 Installation of input/output powered extension unit/block and special function unit/block

1 Push out the DIN rail mounting hook (A in the right figure) of the input/output extension block.


- For input/output powered extension units, 8-point type input/output extension blocks (except for the FX_{2N}-8EYR-S-ES/UL) and special extension units/blocks, this operation is unnecessary.

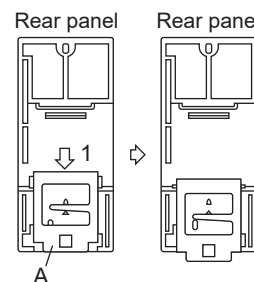

2 Fit the upper edge of the DIN rail mounting groove (B in the right figure) onto the DIN rail.

3 Push the product against the DIN rail.

- Keep a gap of 1 to 2 mm (0.04" to 0.08") between the products.

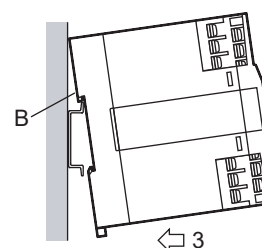

4 Connect the extension cable.

For the procedures on connecting the extension cable, refer to Subsection 8.7.4.

1

Introduction

2

Features and
Part Names

3

Product
Introduction

4

Specifications

5

Version and
Peripheral
Devices

6

System
Configuration

7

Input/Output
Nos., Unit Nos.

8

Installation

9


Preparation and
Power Supply
Wiring

10

Input Wiring



8.5.4 Removal of main unit

- 1** Open the terminal block covers, and remove the protective terminal covers (A in the right figure).
- 2** Gradually loosen the left and right terminal block mounting screws (B in the right figure), and remove the terminal blocks.
 - The terminal block cannot be removed from the FX3U-16M□ main unit.

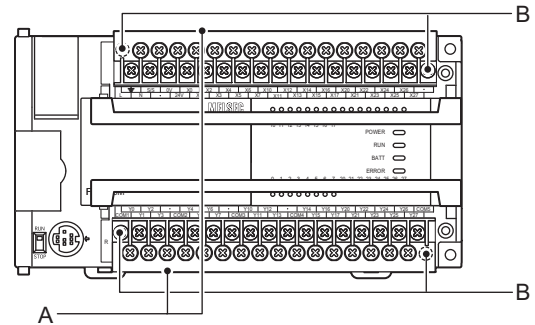

→ For anchoring of the terminal block, refer to Subsection 9.1.2.

- 3** Disconnect the extension cables and the connecting cables (including expansion board and special adapters).
- 4** Insert the tip of a flathead screwdriver into the hole of the DIN rail mounting hook (C in the right figure).
- 5** Move the flathead screwdriver as shown in the right figure to draw out the DIN rail mounting hooks of all devices.
- 6** Remove the product from the DIN rail (D in the right figure).
- 7** Push in the DIN rail mounting hooks (E in the right figure).

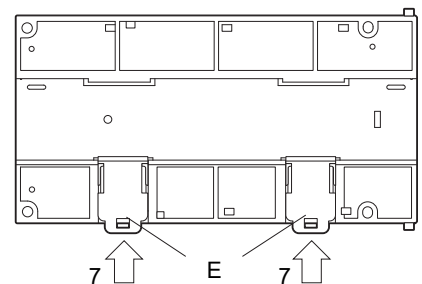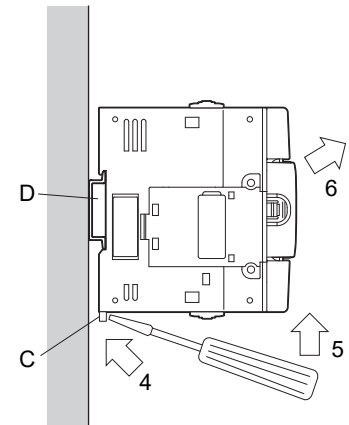

- For input/output powered extension units, 8-point type input/output extension blocks (except for the FX2N-8EYR-S-ES/UL) and special extension units/blocks, this operation is unnecessary.

8.6 Procedures for Installing Directly (with M4 Screws)

The product can be installed directly in the enclosure (with screws).

Point


Position the holes so that there is a gap of 1 to 2 mm (0.04" to 0.08") between the products.

8.6.1 Hole pitches for direct mounting

The product mounting hole pitches are shown below.


For the pitch that varies depending on the product, refer to the table.

1. Main unit (A or B)

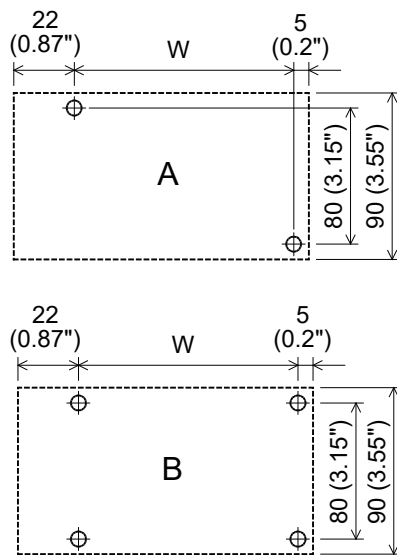


| Unit: mm (inches) | | |
|-------------------|----------------|-------------------------|
| | Model name | Mounting hole pitch (W) |
| A | FX3U-16MR/ES | 103 (4.06") |
| | FX3U-16MT/ES | |
| | FX3U-16MT/ESS | |
| | FX3U-16MR/DS | |
| | FX3U-16MT/DS | |
| | FX3U-16MT/DSS | |
| | FX3U-32MR/ES | 123 (4.85") |
| | FX3U-32MT/ES | |
| | FX3U-32MT/ESS | |
| | FX3U-32MS/ES | |
| | FX3U-32MR/DS | |
| | FX3U-32MT/DS | |
| | FX3U-32MT/DSS | |
| B | FX3U-32MR/UA1 | 155 (6.11") |
| | FX3U-48MR/ES | |
| | FX3U-48MT/ES | |
| | FX3U-48MT/ESS | |
| | FX3U-48MR/DS | |
| | FX3U-48MT/DS | |
| | FX3U-48MT/DSS | |
| | FX3U-64MR/ES | 193 (7.6") |
| | FX3U-64MT/ES | |
| | FX3U-64MT/ESS | |
| | FX3U-64MS/ES | |
| | FX3U-64MR/DS | |
| | FX3U-64MT/DS | |
| | FX3U-64MT/DSS | |
| | FX3U-64MR/UA1 | 258 (10.16") |
| | FX3U-80MR/ES | |
| | FX3U-80MT/ES | |
| | FX3U-80MT/ESS | |
| | FX3U-80MR/DS | |
| | FX3U-80MT/DS | |
| | FX3U-80MT/DSS | |
| | FX3U-128MR/ES | 323 (12.72") |
| | FX3U-128MT/ES | |
| | FX3U-128MT/ESS | |

2. Special adapter (C)

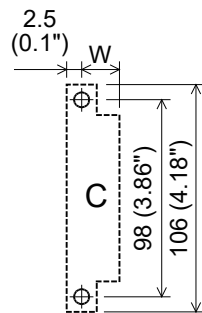


| Unit: mm (inches) | | |
|-------------------|---|-------------------------|
| | Model name | Mounting hole pitch (W) |
| C | FX3U-4AD-ADP FX3U-4DA-ADP FX3U-3A-ADP FX3U-4AD-PT-ADP FX3U-4AD-PTW-ADP FX3U-4AD-PNK-ADP FX3U-4AD-TC-ADP FX3U-232ADP(-MB) FX3U-485ADP(-MB) FX3U-4HSX-ADP FX3U-2HSY-ADP | 15.1 (0.6") |
| | FX3U-ENET-ADP | 20.5 (0.81") |
| | FX3U-CF-ADP | 42.5 (1.68") |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |

3. Input/output powered extension unit (D or E)

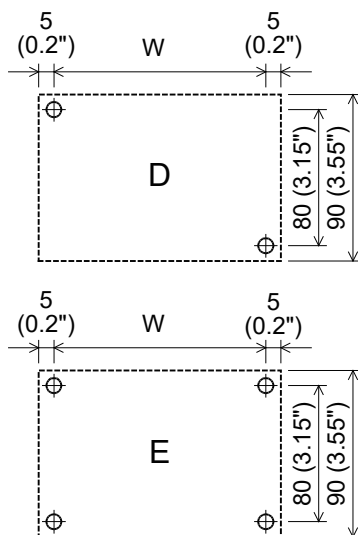


| Unit: mm (inches) | | |
|-------------------|--|-------------------------|
| | Model name | Mounting hole pitch (W) |
| D | FX2N-32ER-ES/UL FX2N-32ET-ESS/UL FX2N-32ER FX2N-32ET FX2N-32ES | 140 (5.52") |
| | | |
| | | |
| | | |
| | | |
| E | FX2N-48ER-ES/UL FX2N-48ET-ESS/UL FX2N-48ER FX2N-48ET FX2N-48ER-DS FX2N-48ET-DSS FX2N-48ER-D FX2N-48ET-D | 172 (6.78") |
| | | |
| | | |
| | | |
| | | |
| | | |
| | FX2N-48ER-UA1/UL | 210 (8.27") |

4. Input/output extension block (F or G)

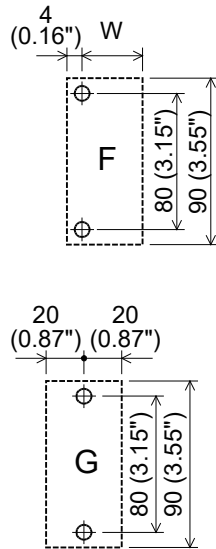


| Unit: mm (inches) | | |
|-------------------|---|---------------------------------|
| | Model name | Mounting hole pitch (W) |
| F | FX2N-8ER-ES/UL FX2N-8ER FX2N-8EX-ES/UL FX2N-8EX FX2N-8EX-UA1/UL FX2N-8EYR-ES/UL FX2N-8EYT-ESS/UL FX2N-8EYR FX2N-8EYT FX2N-8EYT-H | 39 (1.54") |
| | FX2N-8EYR-S-ES/UL FX2N-16EX-ES/UL FX2N-16EX FX2N-16EX-C FX2N-16EXL-C FX2N-16EYR-ES/UL FX2N-16EYR FX2N-16EYT-ESS/UL FX2N-16EYT FX2N-16EYT-C FX2N-16EYS | Refer to the figure shown left. |

5. Special function unit/block (H, I, J or K)

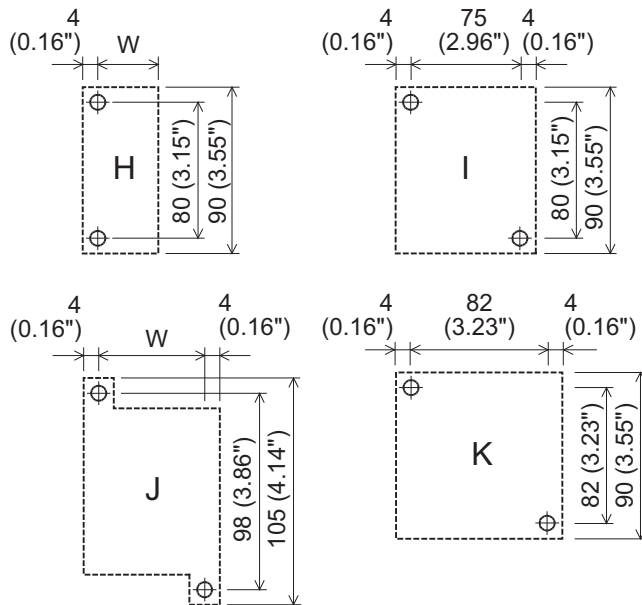

| Unit: mm (inches) | | |
|-------------------|---|---|
| | Model name | Mounting hole pitch (W) |
| H | FX3U-1PG FX3U-128ASL-M FX3U-64DP-M FX3U-32DP FX0N-3A FX2N-2AD FX2N-2DA FX2N-1PG FX2N-1PG-E FX2N-10PG FX2N-64CL-M FX2N-32CCL FX2N-16LNK-M | 39 (1.54") |
| | FX3U-4AD FX3U-4DA FX3U-2HC FX3U-20SSC-H FX3U-16CCL-M FX3U-64CCL FX3U-1PSU-5V FX2N-4AD FX2N-4DA FX2N-4AD-PT FX2N-4AD-TC FX2N-5A FX2N-2LC FX2N-1HC FX2N-1RM-SET FX2N-1RM-E-SET FX2N-232IF FX2N-32ASI-M | 51 (2.01") |
| I | FX2N-16CCL-M | Refer to the figure shown left. |
| J | FX2N-8AD | 67 (2'64") |
| | FX2N-20PSU | 52 (2'05") |
| K | FX3U-4LC | Refer to the figure shown left. |
| - | FX2N-10GM FX2N-20GM | These units cannot be installed directly. |

8.6.2 Example of mounting hole pitches

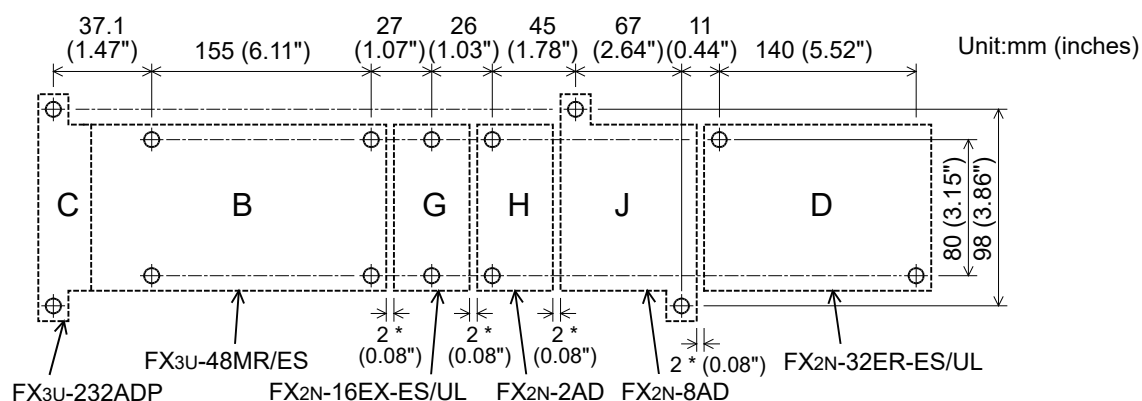


* The gap between products is 2 mm (0.08").

8.6.3 Installation of main unit

Mount the expansion board and special adapters on the main unit before installing the unit in the enclosure.
→ For the connection procedure, refer to Subsection 8.7.2, 8.7.3, and 9.5.2.

- 1 Make mounting holes in the mounting surface according to the external dimensions diagram.**
- 2 Fit the main unit (A in the right figure) based on the holes, and secure it with M4 screws (B in the right figure).**

The positions and number of screws depend on the product. Refer to the external dimensions diagram.
→ For the external dimensions, refer to Section 4.6.

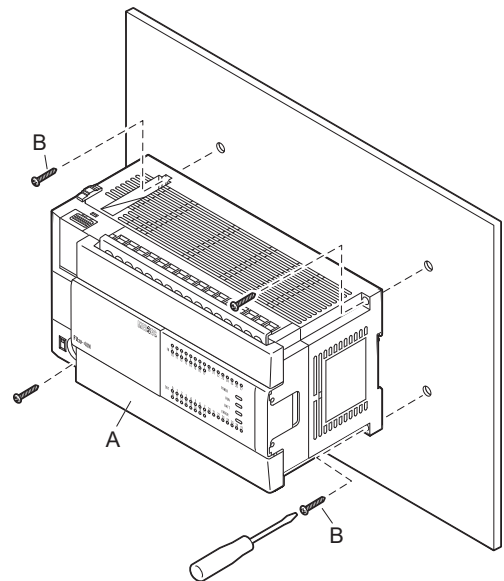

8.6.4 Installation of input/output powered extension unit/block and special function unit/block

- 1 Make mounting holes in the mounting surface according to the external dimensions diagram**
- 2 Push in the DIN rail mounting hook (A in the right figure) of the input/output extension block.**



If the DIN rail mounting hook is not pushed in, the screw hole is covered, and the block cannot be mounted.

For input/output powered extension units, 8-point type input/output extension blocks (except for the FX2N-8EYR-S-ES/UL) and special extension units/blocks, this operation is unnecessary.

- 3 Fit the input/output extension block (B in the right figure) based on the holes, and secure it with M4 screws (C in the right figure).**

The positions and number of screws depend on the product. Refer to the external dimensions diagram.

- For the external dimensions of the input/output powered extension unit, refer to Chapter 15.
- For the external dimensions of the input/output extension block, see Chapter 16.
- For the external dimensions of the special function units/blocks, see Chapter 18.

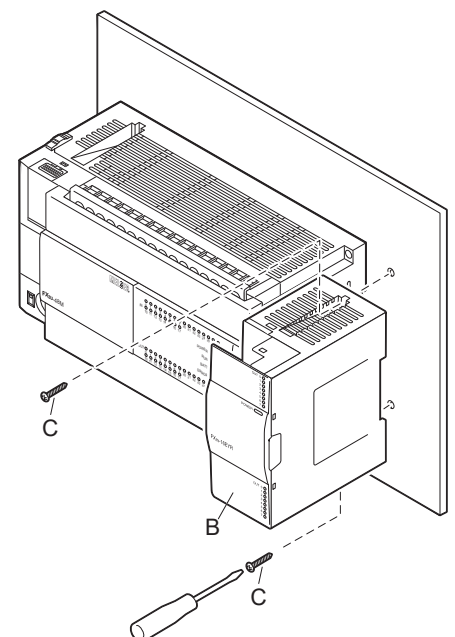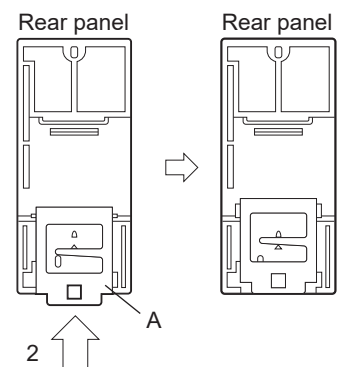


8.7 Connecting Methods for Main Unit and Extension Devices

This section explains the connecting methods for extension devices.

8.7.1 Connection of extension devices

The connecting method varies depending on the combination of the products, i.e. the main unit, expansion board, special adapters, input/output extension blocks and special function units/blocks. The connecting methods are explained with the following configuration examples.

Example of configuration

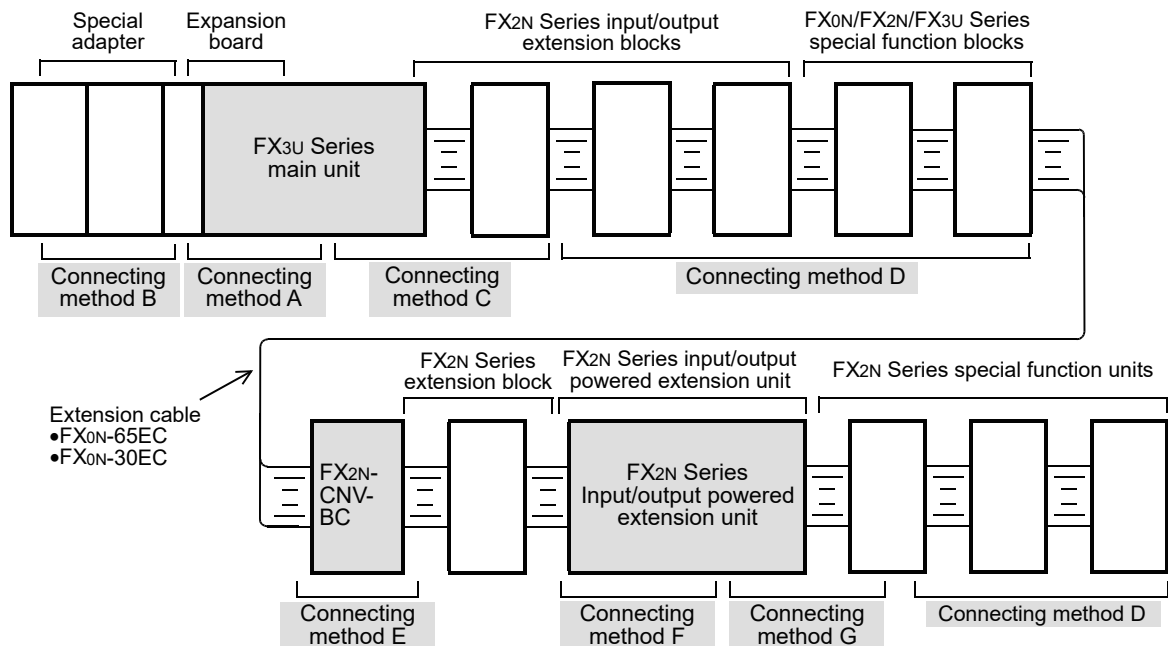

8.7.2 Connecting method A - connection of expansion board

To connect an expansion board to the main unit in the enclosure, it is necessary to remove the main unit from the enclosure.


- Refer to Subsection 8.5.4 for the "removal from DIN rail" procedure.
- Refer to Section 8.6 for the "direct mounting" removal procedure.

- 1** Insert the tip of a flathead screwdriver into the part A of the expansion board compartment dummy cover (B in the right figure) on the left side of the main unit, and slightly lift the dummy cover.


- Put the main unit on the edge of a desk or so to insert the screwdriver.

Caution

Take care not to damage the wiring board and electronic components with the screwdriver.

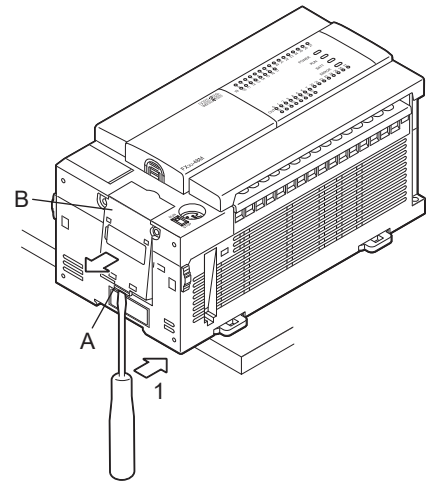


- 2** Remove the expansion board compartment dummy cover (B in the right figure).

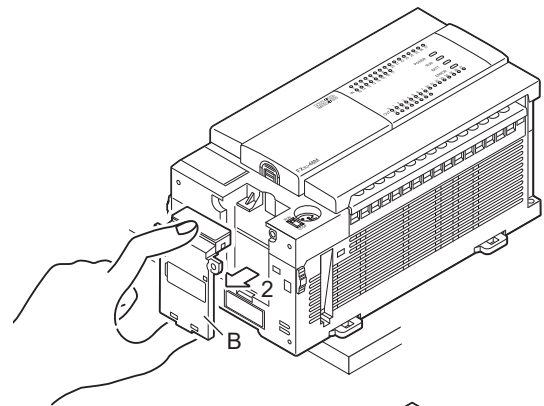

- 3** Hold the expansion board (C in the right figure) parallel to the main unit, and fit the board to the expansion board connector.

- 4** Secure the expansion board (C in the right figure) on the main unit with the supplied M3 tapping screws (D in the right figure).

- Tightening torque: 0.3 to 0.6 N·m

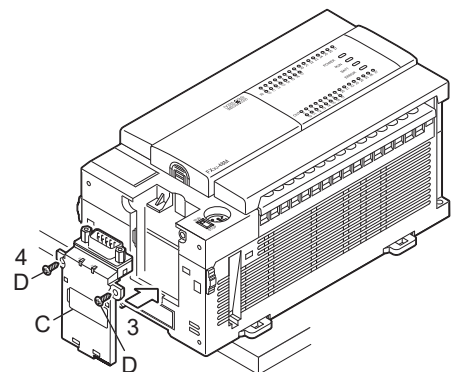


8.7.3 Connecting method B - connection of special adapter

When an expansion board is used, connect the board as stated in the previous subsection before connecting the special adapter.

1 Remove the special adapter connector cover (A in the right figure) from the expansion board.

- When fitting a high-speed input/output special adapter, also remove the high-speed input/output special adapter connector cover (C in the right figure).
- When adding a special adapter to the special adapter that has been connected to the expansion board, read "expansion board" as "special adapter."

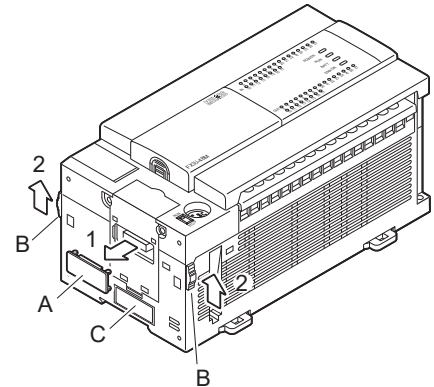


2 Slide the special adapter connecting hooks (B in the right figure) of the main unit.

- When adding a special adapter to the special adapter that has been connected to the main unit, read "main unit" as "special adapter." (This applies to the following steps.)

3 Connect the special adapter (C in the right figure) to the main unit as shown in the right figure.

4 Slide the special adapter connecting hooks (B in the right figure) of the main unit to secure the special adapter (C in the right figure).

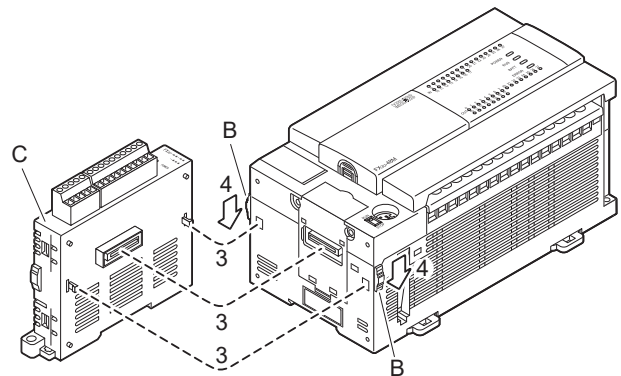

Caution

- When using the FX3U-ENET-ADP, connect it to the last adapter position (leftmost position).
- When a high-speed input/output special adapter is used, fit the adapter before connecting other special adapters.


8.7.4 Connecting method C - connection of powered extension unit/block to main unit

The procedures for connecting an powered extension unit/block to the main unit are explained below.

- 1 Remove the extension device connector cover (A in the right figure) on the right side of the main unit.**
- 2 Connect the extension cable (B in the right figure) from the extension block to be connected (right side) to the extension device connector of the main unit.**

- When connecting FX2N Series input/output powered extension unit, FX2N-10GM, FX2N-20GM, FX2N-1RM(-E)-SET or FX3U-1PSU-5V, connect the unit to be added (right side) and the existing unit (main unit) with the supplied extension cable.

- 3 Fit the extension device connector cover (A in the right figure).**

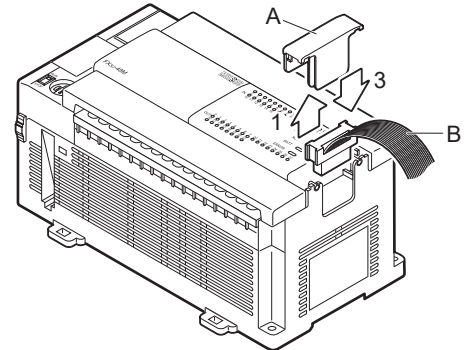


8.7.5 Connecting method D - connection of powered extension units/blocks

This subsection explains the procedures for connecting FX2N Series input/output powered extension units/blocks or FX0N/FX2N/FX3U Series special function units/blocks.

- 1 Remove the top cover (B in the right figure) of the existing unit/block (left side) (A in the right figure).**

- When connecting FX2N-10GM or FX2N-20GM, remove the PLC extension block connector cover.
- When connecting FX2N-1RM(-E)-SET or FX3U-1PSU-5V, remove the top cover of FX2N-1RM(-E)-SET or FX3U-1PSU-5V.

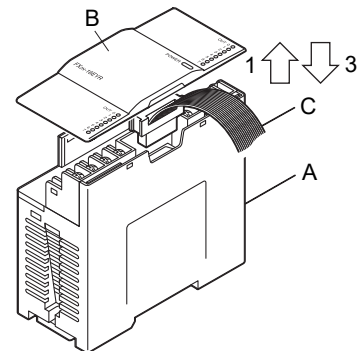

- 2 Connect the extension cable (C in the above figure) of the block to be connected (right side) to the existing unit/block (A in the above figure).**

- When FX2N Series input/output powered extension units, FX2N-10GM, FX2N-20GM, FX2N-1RM(-E)-SET or FX3U-1PSU-5V units are connected, connect the unit to be added (right side) and the existing unit (left side) with the supplied extension cable.

- 3 Fit the top cover (B in the above figure) (except when connecting FX2N-10GM or FX2N-20GM).**


8.7.6 Connecting method E - connection of extension cable and FX2N-CNV-BC

This subsection explains the procedures for connecting an extension cable and FX2N-CNV-BC to the extension cable of the powered extension unit/block.

1 Separate the case of FX2N-CNV-BC into two pairs as shown right.

To separate the case, use a precision flathead screwdriver.


Slightly insert the tip of the screwdriver into the part A shown in the right figure, and the hook (B in the right figure) will come off (4 places).

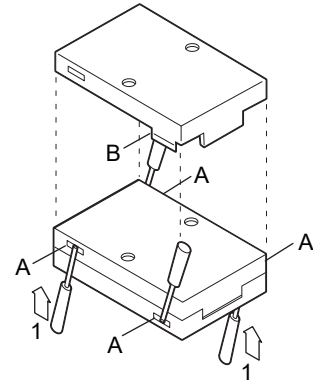

2 Connect the extension cable on the upstream side (C in the right figure).

3 Connect the extension cable on the downstream side (D in the right figure).

4 Fit the upper cover (E in the right figure) and the lower cover (F in the right figure), and press down the upper cover until it is hooked.

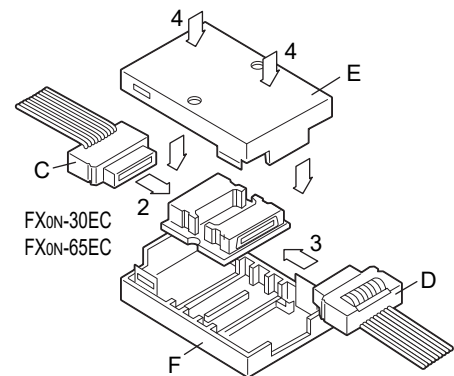

8.7.7 Connecting method F - connection of input/output powered extension unit


This subsection explains the procedures for connecting an input/output powered extension unit.

1 Remove the top cover (A in the right figure) on the left side of the input/output powered extension unit.

2 Connect the connector of the extension cable (supplied) (B in the right figure) to the extension connector.

3 Connect the connector of the extension cable (supplied) (B in the right figure) to the extension connector of the unit to be added (right side).

4 Fit the top cover (A in the right figure).

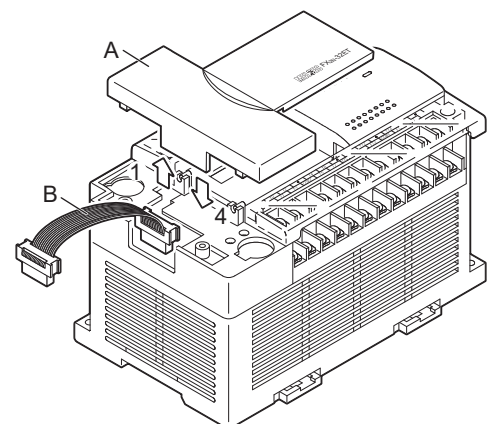


8.7.8 Connecting method G - connection of extension block to input/output powered extension unit

This subsection explains the procedures for connecting an input/output extension block to an input/output powered extension unit.

1 Remove the extension connector cover (A in the right figure) on the right side of the input/output powered extension unit.

2 Connect the extension cable (B in the right figure) from the extension block to be added (right side) to the extension connector of the input/output powered extension unit.

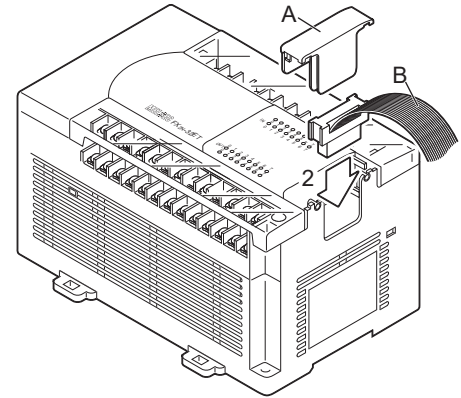

- When connecting FX2N-10GM, FX2N-20GM, FX2N-1RM(-E)-SET or FX3U-1PSU-5V, read "input/output powered extension unit" as the unit.
- When connecting FX2N Series input/output powered extension unit, FX2N-10GM, FX2N-20GM, FX2N-1RM(-E)-SET or FX3U-1PSU-5V, connect the unit to be added (right side) and the existing unit (main unit) with the supplied extension cable or the optional extension cable.
 - For FX2N Series input/output powered extension unit, FX2N-1RM(-E)-SET or FX3U-1PSU-5V, the extension cable FX0N-30EC or FX0N-65EC can be used.
 - For FX2N-10GM or FX2N-20GM, the extension cable FX2N-GM-65EC can be used.

3 Fit the extension connector cover (A in the right figure).

9. Preparation for Wiring and Power Supply Wiring Procedures

DESIGN PRECAUTIONS



WARNING

- Make sure to have the following safety circuits outside of the PLC to ensure safe system operation even during external power supply problems or PLC failure.
Otherwise, malfunctions may cause serious accidents.
 - 1) Most importantly, have the following: an emergency stop circuit, a protection circuit, an interlock circuit for opposite movements (such as normal vs. reverse rotation), and an interlock circuit (to prevent damage to the equipment at the upper and lower positioning limits).
 - 2) Note that when the PLC CPU detects an error, such as a watchdog timer error, during self-diagnosis, all outputs are turned off. Also, when an error that cannot be detected by the PLC CPU occurs in an input/output control block, output control may be disabled.
External circuits and mechanisms should be designed to ensure safe machinery operation in such a case.
 - 3) Note that the output current of the 24V DC service power supply varies depending on the model and the absence/presence of extension blocks. If an overload occurs, the voltage automatically drops, inputs in the PLC are disabled, and all outputs are turned off.
External circuits and mechanisms should be designed to ensure safe machinery operation in such a case.
 - 4) Note that when an error occurs in a relay, triac or transistor output device, the output could be held either on or off.
For output signals that may lead to serious accidents, external circuits and mechanisms should be designed to ensure safe machinery operation in such a case.

DESIGN PRECAUTIONS



CAUTION

- Do not bundle the control line together with or lay it close to the main circuit or power line. As a guideline, lay the control line at least 100mm (3.94") or more away from the main circuit or power line.
Noise may cause malfunctions.
- Install module so that excessive force will not be applied to peripheral device connectors.
Failure to do so may result in wire damage/breakage or PLC failure.

SECURITY PRECAUTIONS



WARNING

- To maintain the security (confidentiality, integrity, and availability) of the programmable controller and the system against unauthorized access, denial-of-service (DoS) attacks, computer viruses, and other cyberattacks from unreliable networks and devices via network, take appropriate measures such as firewalls, virtual private networks (VPNs), and antivirus solutions.

WIRING PRECAUTIONS



WARNING

- Make sure to cut off all phases of the power supply externally before attempting installation or wiring work.
Failure to do so may cause electric shock or damage to the product.
- Make sure to attach the terminal cover, offered as an accessory, before turning on the power or initiating operation after installation or wiring work.
Failure to do so may cause electric shock.
- The temperature rating of the cable should be 80°C or more.

WIRING PRECAUTIONS



- Do not supply power to the [24+] and [24V] terminals (24V DC service power supply) on the main unit or extension units.
Doing so may cause damage to the product.
- Perform class D grounding (grounding resistance: 100 Ω or less) to the grounding terminal on the main unit and extension units with a wire 2 mm² or thicker.
Do not use common grounding with heavy electrical systems (refer to Section 9.4).
- Connect the AC power supply wiring to the dedicated terminals described in this manual.
If an AC power supply is connected to a DC input/output terminal or DC power supply terminal, the PLC will burn out.
- Connect the DC power supply wiring to the dedicated terminals described in this manual.
If an AC power supply is connected to a DC input/output terminal or DC power supply terminal, the PLC will burn out.
- Do not wire vacant terminals externally.
Doing so may damage the product.
- When drilling screw holes or wiring, make sure that cutting and wiring debris do not enter the ventilation slits.
Failure to do so may cause fire, equipment failures or malfunctions.
- Make sure to properly wire the FX3U Series main unit and FX0N/FX2N/FX3U Series extension equipment in accordance with the following precautions.
Failure to do so may cause electric shock, equipment failures, a short-circuit, wire breakage, malfunctions, or damage to the product.
 - The disposal size of the cable end should follow the dimensions described in the manual.
 - Tightening torque should follow the specifications in the manual.
 - Tighten the screws using a Phillips-head screwdriver No.2 (shaft diameter 6mm (0.24") or less). Make sure that the screwdriver does not touch the partition part of the terminal block.
- Make sure to properly wire to the terminal block (European type) in accordance with the following precautions.
Failure to do so may cause electric shock, equipment failures, a short-circuit, wire breakage, malfunctions, or damage to the product.
 - The disposal size of the cable end should follow the dimensions described in the manual.
 - Tightening torque should follow the specifications in the manual.
 - Twist the end of strand wire and make sure that there are no loose wires.
 - Do not solder-plate the electric wire ends.
 - Do not connect more than the specified number of wires or electric wires of unspecified size.
 - Affix the electric wires so that neither the terminal block nor the connected parts are directly stressed.
- Make sure to properly wire to the FX Series terminal blocks in accordance with the following precautions.
Failure to do so may cause electric shock, equipment failures, a short-circuit, wire breakage, malfunctions, or damage to the product.
 - The disposal size of the cable end should follow the dimensions described in the manual.
 - Tightening torque should follow the specifications in the manual.
 - Tighten the screws using a Phillips-head screwdriver No.2 (shaft diameter 6mm (0.24") or less). Make sure that the screwdriver does not touch the partition part of the terminal block.

This chapter explains the procedures for wiring, cabling and wiring the power supply.
The input/output wiring procedures are stated in the following chapter.

- Wiring procedures
- Procedures for connecting cables to various shapes of power supply and input/output terminals
- Procedures for the wiring power supply

1

Introduction

2

Features and
Part Names

3

Product
Introduction

4

Specifications

5

Version and
Peripheral
Devices

6

System
Configuration

7

Input/Output
Nos., Unit Nos.

8

Installation

9

Preparation and
Power Supply
Wiring

10

Input Wiring

9.1 Preparation for Wiring

9.1.1 Wiring procedures

Before starting wiring work, make sure that the main power is off.

1 Prepare the parts for wiring.

Prepare the solderless terminals and cables necessary for wiring.

→ For details, refer to Section 9.2.

2 Wire the power supply terminals.

In the case of AC power supply type

Connect the power supply to the terminals [L] and [N].

In the case of DC power supply type

Connect the power supply to the terminals [\oplus] and [\ominus].

Provide the power supply circuit with the protection circuit shown in this subsection.

→ For details, refer to Section 9.5.

3 Wire the ground terminal [] at a grounding resistance of 100Ω or less (Class D).

Connect a class D ground wire to the terminal.

→ For details, refer to Section 9.4 and 9.5.

4 Wire the input [X] terminals.

For a type (24V DC input type) common to sink/source input, select sink or source input by the following connection.

In the case of AC power supply type

- For sink input, connect the [24V] and [S/S] terminals.
- For source input, connect the [0V] and [S/S] terminals.

In the case of DC power supply type

- For sink input, connect the [\oplus] and [S/S] terminals.
- For source input, connect the [\ominus] and [S/S] terminals.
Connect sensors and switches to the terminals.

→ For details, refer to Chapter 10.

5 Wire the output [Y] terminals.

Connect loads to the terminals.

→ For details, refer to Chapter 12.

9.1.2 Removal and installation of quick-release terminal block (Except for the FX3U-16M□)

| | |
|--------------|--|
| Removal | Unscrew the terminal block mounting screws [both right and left screws] evenly, and remove the terminal block. |
| Installation | Place the terminal block in the specified position, and tighten the terminal block mounting screws evenly [both right and left screws]. Tightening torque 0.4 to 0.5 N•m Do not tighten the terminal block mounting screws with a torque outside the above-mentioned range. Failure to do so may cause equipment failures or malfunctions. *Pay attention so that the center of the terminal block is not lifted. |

9.2 Cable Connecting Procedures

For cable connection, a terminal block or a connector is used. The cable connecting procedures are explained below.

9.2.1 Input/output terminal block (power supply and input/output wiring)

WIRING PRECAUTIONS



WARNING

- Make sure to cut off all phases of the power supply externally before attempting installation or wiring work. Failure to do so may cause electric shock or damage to the product.
- Make sure to attach the terminal cover offered as an accessory to the product before turning on the power or starting the operation after installation or wiring work. Failure to do so may cause electric shock.
- The temperature rating of the cable should be 80°C or more.

WIRING PRECAUTIONS



CAUTION

- Make sure to properly wire the FX3U Series main unit and FX0N/FX2N/FX3U Series extension equipment in accordance with the following precautions. Failure to do so may cause electric shock, equipment failures, a short-circuit, wire breakage, malfunctions, or damage to the product.
 - The disposal size of the cable end should follow the dimensions described in the manual.
 - Tightening torque should follow the specifications in the manual.
 - Tighten the screws using a Phillips-head screwdriver No.2 (shaft diameter 6mm (0.24") or less). Make sure that the screwdriver does not touch the partition part of the terminal block.
- Make sure to properly wire to the FX Series terminal blocks in accordance with the following precautions. Failure to do so may cause electric shock, equipment failures, a short-circuit, wire breakage, malfunctions, or damage to the product.
 - The disposal size of the cable end should follow the dimensions described in the manual.
 - Tightening torque should follow the specifications in the manual.
 - Tighten the screws using a Phillips-head screwdriver No.2 (shaft diameter 6mm (0.24") or less). Make sure that the screwdriver does not touch the partition part of the terminal block.

For the main unit, FX2N Series input/output powered extension units/blocks and FX0N/FX2N/FX3U Series special function units/blocks, an M3 or M3.5 screw terminal block is used.

1. Applicable products

| Product type | Model name |
|-------------------------------------|---|
| Main unit | All models of FX3U Series main units |
| Input/output powered extension unit | All models of FX2N Series input/output powered extension units |
| Input/output extension block | All models of FX2N Series input/output extension blocks (except for the FX2N-16EX-C, FX2N-16EXL-C and FX2N-16EYT-C) |
| Extension power supply unit | FX3U-1PSU-5V |
| Special function unit/block | Refer to the manual for each product. |
| FX Series terminal block | All models |
| Power supply unit | FX2N-20PSU |

2. Terminal block screw size and tightening torque

The size of the terminal screws for each product is shown below. For the solderless terminals, refer to the following page.

| Product | Terminal screw | Tightening torque |
|--|---------------------------------------|-------------------|
| Main unit | M3 | 0.5 to 0.8N•m |
| FX2N Series input/output powered extension units | | |
| FX2N Series input/output extension blocks | | |
| FX Series terminal block | M3.5 | |
| FX2N-20PSU | | |
| Special function unit/block | Refer to the manual for each product. | |


3. Wire end treatment

The solderless terminal size depends on the terminal screw size and wiring method.

- Use solderless terminals of the following size.
- Tighten the terminals to a torque of 0.5 to 0.8 N•m.
Do not tighten terminal screws with a torque outside the above-mentioned range.
Failure to do so may cause equipment failures or malfunctions.

In case of M3 terminal screw


- When one wire is connected to one terminal

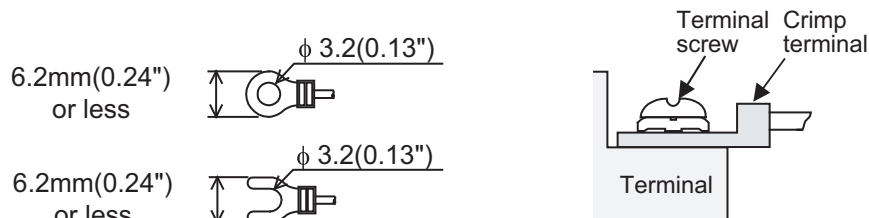

<Reference>

| Terminal manufacturer | Type No. | Applicable cable | Certification | Pressure bonding tool |
|-----------------------|------------|------------------|---------------|---------------------------------|
| J.S.T. Mfg. Co., Ltd. | FV1.25-B3A | AWG22 to 16 | UL Listed | YA-1 (J.S.T. Mfg. Co., Ltd.) |
| | FV2-MS3 | AWG16 to 14 | | |

- When two wires are connected to one terminal^{*1}

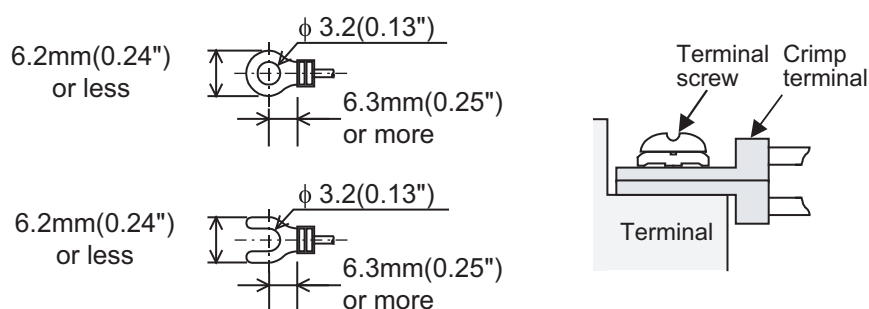



<Reference>

| Terminal manufacturer | Type No. | Applicable cable | Certification | Pressure bonding tool |
|-----------------------|------------|------------------|---------------|---------------------------------|
| J.S.T. Mfg. Co., Ltd. | FV1.25-B3A | AWG22 to 16 | UL Listed | YA-1 (J.S.T. Mfg. Co., Ltd.) |



- *1. To adapt the LVD directive (EN61010-2-201:2013) of the EC directive, avoid the wiring with two wires to the built-in terminal, and take an appropriate action such as adding an external terminal.
For the time of compliance with the LVD directive (EN61010-2-201:2013), refer to Requirement for Compliance with LVD directive.

In case of M3.5 terminal screw

- When one wire is connected to one terminal

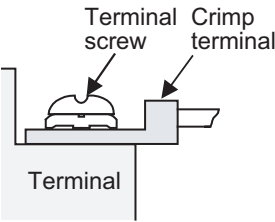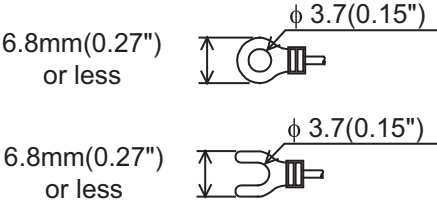

- When two wires are connected to one terminal

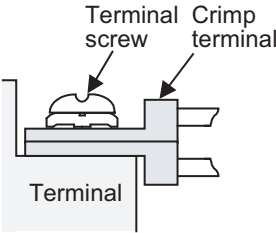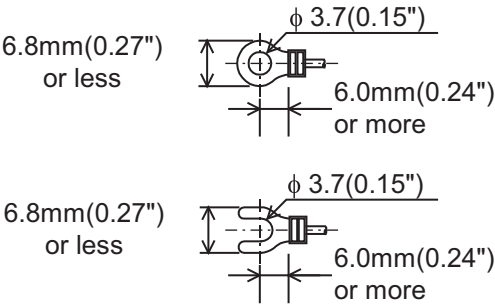

| | |
|----|-------------------------------------|
| 1 | Introduction |
| 2 | Features and Part Names |
| 3 | Product Introduction |
| 4 | Specifications |
| 5 | Version and Peripheral Devices |
| 6 | System Configuration |
| 7 | Input/Output Nos., Unit Nos. |
| 8 | Installation |
| 9 | Preparation and Power Supply Wiring |
| 10 | Input Wiring |

9.2.2 Input/output connectors

The input/output connectors of FX2N Series input/output extension blocks (connector type) and special function units/blocks (connector type) conform to MIL-C-83503.

Prepare the input/output cables, referring to the following tables.

1. Applicable products

| Classification | Model names |
|-------------------------------|---|
| Input/output extension blocks | FX2N-16EX-C, FX2N-16EXL-C, FX2N-16EYT-C |
| Special function units/blocks | FX3U-20SSC-H, FX3U-2HC, FX2N-10PG, FX2N-10GM, FX2N-20GM |

2. Preparation of input/output connectors

- Compliant connectors (commercially available connectors)
Use 20-pin (1-key) or 40-pin (1-key) sockets conforming to MIL-C-83503.
In advance, make sure that no interference is caused with peripheral parts, such as the connector cover.
- Input/output cables (our options)
Input/output cables with attached connectors are available.
The following input/output cables are intended to be used only for general purpose input and output operations.

| Model names | Length | Description | Shape |
|-----------------|-------------|--|---|
| FX-16E-500CAB-S | 5m(10'4") | General-purpose input/output cable | <ul style="list-style-type: none"> Single wire (Wire color : red) PLC side : A 20-pin connector |
| FX-16E-150CAB | 1.5m(4'11") | Cables for connecting FX Series terminal block and input/output connector For the connection with FX Series terminal block, refer to the following chapter. → Chapter 20 "FX-16/32E*-* TB (Terminal Block)" | <ul style="list-style-type: none"> Flat cables (with tube) A 20-pin connector at both ends |
| FX-16E-300CAB | 3m(9'10") | | |
| FX-16E-500CAB | 5m(10'4") | | |
| FX-16E-150CAB-R | 1.5m(4'11") | | <ul style="list-style-type: none"> Round multicore cables A 20-pin connector at both ends |
| FX-16E-300CAB-R | 3m(9'10") | | |
| FX-16E-500CAB-R | 5m(10'4") | | |
| FX-A32E-150CAB | 1.5m(4'11") | Cables for connecting A Series Model A6TBXY36 connector/terminal block conversion unit and input/output connector type | <ul style="list-style-type: none"> Flat cables (with tube) PLC side : Two 20-pin connectors in 16-point units Terminal block side : A dedicated connector One common terminal covers 32 input/output terminals. |
| FX-A32E-300CAB | 3m(9'10") | | |
| FX-A32E-500CAB | 5m(10'4") | | |

- Connectors for making input/output cables by users (our options)
The users should prepare the electric wires and pressure bonding tool.

| Model name and composition of input/output connector | | | Applicable electric wire (UL-1061 are recommended) and tool | |
|--|--------------|---|---|---|
| Our model name | | Details of part (made by DDK Ltd.) | Electric wire size | Pressure bonding tool (made by DDK Ltd.) |
| FX2c-I/O-CON for flat cable | 10-piece set | Solderless connector FRC2-A020-30S | AWG28 (0.1mm ²), 1.27 pitch, 20-core | 357J-4674D: Main body 357J-4664N: Attachment |
| FX2c-I/O-CON-S for bulk wire | 5-piece set | Housing HU-200S2-001 Solderless contact HU-411S | AWG22 (0.3mm ²) | 357J-5538 |
| FX2c-I/O-CON-SA for bulk wire | 5-piece set | Housing HU-200S2-001 Solderless contact HU-411SA | AWG20 (0.5mm ²) | 357J-13963 |
| FX-I/O-CON2-S for bulk wire (40 Pin) | 2-piece set | Housing HU-400S2-001 Solderless contact HU-411S | AWG22 (0.3mm ²) | 357J-5538 |
| FX-I/O-CON2-SA for bulk wire (40 Pin) | 2-piece set | Housing HU-400S2-001 Solderless contact HU-411SA | AWG20 (0.5mm ²) | 357J-13963 |

- Certified connectors (commercially available connectors)
Connectors made by DDK Ltd. shown in item 3).

9.2.3 Terminal block for Europe [expansion board and special adapters]

WIRING PRECAUTIONS



WARNING

- Make sure to cut off all phases of the power supply externally before attempting installation or wiring work. Failure to do so may cause electric shock or damage to the product.
- The temperature rating of the cable should be 80°C or more.

WIRING PRECAUTIONS



CAUTION

- Make sure to properly wire to the terminal block (European type) in accordance with the following precautions. Failure to do so may cause electric shock, equipment failures, a short-circuit, wire breakage, malfunctions, or damage to the product.
 - The disposal size of the cable end should follow the dimensions described in the manual.
 - Tightening torque should follow the specifications in the manual.
 - Twist the end of strand wire and make sure that there are no loose wires.
 - Do not solder-plate the electric wire ends.
 - Do not connect more than the specified number of wires or electric wires of unspecified size.
 - Affix the electric wires so that neither the terminal block nor the connected parts are directly stressed.

The expansion board and special adapters of a terminal block type have terminal blocks for Europe.

1. Applicable products

| Classification | Model names |
|------------------|---|
| Expansion Board | FX3U-485-BD |
| Special Adapters | FX3U-485ADP(-MB), FX3U-4AD-ADP, FX3U-4DA-ADP, FX3U-3A-ADP, FX3U-4AD-PT-ADP, FX3U-4AD-PTW-ADP, FX3U-4AD-PNK-ADP, FX3U-4AD-TC-ADP, FX3U-4HSX-ADP, FX3U-2HSY-ADP |

2. Compliant electric wires and tightening torque

| | Electric wire size (stranded wire/solid wire) | Tightening torque | End treatment |
|-------------------------------------|--|----------------------|---|
| One electric wire | 0.3mm ² to 0.5mm ² (AWG22 to 20) | 0.22 to 0.25N•m | <ul style="list-style-type: none"> • Remove the coating of the stranded wire, twist the core wires, and connect the wires directly. • Remove the coating from the solid wire, and connect the wire directly. |
| Two electric wires | 0.3mm ² (AWG22) × 2 | | |
| Bar terminal with insulating sleeve | 0.3 mm ² to 0.5 mm ² (AWG22 to 20) (Refer to the following outline drawing of bar terminal.) | | <ul style="list-style-type: none"> • Bar terminal with insulating sleeve (recommended product) AI 0.5-8WH (Phoenix Contact Co., Ltd) • Caulking tool CRIMPFOX 6^{*1} : Phoenix Contact Co., Ltd (CRIMPFOX 6T-F^{*2} : Phoenix Contact Co., Ltd) |

*1. Old model name : CRIMPFOX ZA 3

*2. Old model name : CRIMPFOX UD 6

3. Treatment of electric wire ends

Treat the ends of stranded wires and solid wires without coating or using bar terminals with insulating sleeve.
Tighten the terminals to a torque of 0.22 to 0.25 N•m.
Do not tighten terminal screws with a torque outside the above-mentioned range.
Failure to do so may cause equipment failures or malfunctions.

- Treatment of stranded wires and solid wires without coating
 - Twist the ends of stranded wires tightly so that loose wires will not stick out.
 - Do not solder-plate the electric wire ends.

- Treatment using bar terminal with insulating sleeve
It may be difficult to insert the electric wire into the insulating sleeve depending on the thickness of the electric wire sheath. Select the electric wire referring to the outline drawing.


<Reference>

| Manufacturer | Model names | Caulking tool |
|--------------------------|-------------|---|
| Phoenix Contact Co., Ltd | AI 0.5-8WH | CRIMPFOX 6 ^{*1} (or CRIMPFOX 6T-F ^{*2}) |


*1. Old model name : CRIMPFOX ZA 3

*2. Old model name : CRIMPFOX UD 6

- Stranded wire/solid wire

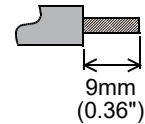

- Bar terminal with insulating sleeve

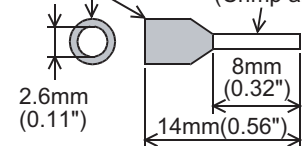

4. Tool


- For tightening the terminal, use a commercially available small screwdriver having a straight form that is not widened toward the end as shown right.

Note :

If the diameter of screwdriver grip is too small, tightening torque will not be able to be achieved. To achieve the appropriate tightening torque shown in the table on the previous page, use the following screwdriver or an appropriate replacement (grip diameter: approximately 25mm (0.98 inch)).

<Reference>

| Manufacturer | Model names |
|--------------------------|---------------|
| Phoenix Contact Co., Ltd | SZS 0.4 x 2.5 |

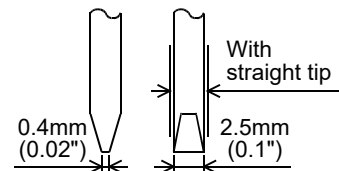

9.2.4 Grounding terminal of the FX3U-ENET-ADP


The grounding terminal of the FX3U-ENET-ADP is a M2.5 screw.

1. Applicable cables

| Electric wire size |
|---|
| 0.5 to 1.5 mm ² (AWG 20 to 16) |

2. Treatment of electric wire ends

- When using a stranded cable or solid cable as it is
 - Twist the end of the stranded cable so that loose wires will not stick out.
 - Do not solder-plate the end of the cable.

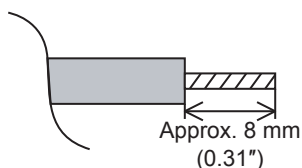

3. Tightening torque

Tighten the terminals to a torque of 0.4 to 0.5 N·m.

Do not tighten terminal screws with a torque outside the above-mentioned range.

Failure to do so may cause equipment failures or malfunctions.

Caution

When tightening a grounding terminal, use a screwdriver suitable for the terminal screw. The screwdriver which does not suit the thread groove is used, tightening torque will not be able to be achieved. To achieve the appropriate tightening torque shown in the above, use the following screwdriver or an appropriate replacement.

<Reference>

| Manufacturer | Model name | Model number |
|------------------------------------|----------------|--------------|
| Weidmuller Interface GmbH & Co. KG | SDIK PH0 | 9008560000 |
| Weidmuller Interface GmbH & Co. KG | SD 0.6×3.5×100 | 9008330000 |

1

Introduction

2

Features and
Part Names

3

Product
Introduction

4

Specifications

5

Version and
Peripheral
Devices

6

System
Configuration

7

Input/Output
Nos., Unit Nos.

8

Installation

9

Preparation and
Power Supply
Wiring

10

Input Wiring

9.3 Power Supply Specifications

The specifications for power supply input to the main unit are explained below.
For the power consumption by the special function units/blocks, refer to this manual or the manual of each product.

9.3.1 AC Power Supply Type

| Item | Specifications | | | | | |
|--|---|-------------------------------|----------------|-------------------------------|--------------|------------|
| | FX3U-16M□/E□ | FX3U-32M□/E□ FX3U-32MR/UA1 | FX3U-48M□/E□ | FX3U-64M□/E□ FX3U-64MR/UA1 | FX3U-80M□/E□ | FX3U-128M□ |
| Supply voltage | 100 to 240V AC | | | | | |
| Voltage fluctuation range | -15%, +10% | | | | | |
| Rated frequency | 50/60Hz | | | | | |
| Allowable instantaneous power failure time | Operation can be continued upon occurrence of instantaneous power failure for 10 ms or less. When the supply voltage is 200V AC, the time can be changed to 10 to 100 ms by editing the user program. | | | | | |
| Power fuse | 250V, 3.15A*5 | | 250V, 5A | | | |
| Rush current | 30 A max. 5 ms or less/100V AC 65 A max. 5 ms or less/200V AC | | | | | |
| Power consumption*1 | 30W | 35W | 40W | 45W | 50W | 65W |
| 24V DC service power supply*2*3 | 400 mA or less | | 600 mA or less | | | |
| 5V DC built-in power supply*4 | 500 mA or less | | | | | |

- *1. These power consumption values are maximum values which apply to the main unit's 24V DC service power supply when there are input/output extension blocks and special function units/blocks.
→ **For input/output powered extension units/blocks power consumption information, refer to Section 15.2.**
- *2. When input/output extension blocks are connected, 24V DC service power is consumed by the blocks, and the power to be consumed by the main unit is reduced.
→ **For details on the 24V DC service power supply, refer to Section 6.5.**
- *3. 24V DC service power is not provided to FX3U-32MR/UA1 and FX3U-64MR/UA1.
- *4. The power supply is not for external use.
The current capacity specified above is for the input/output extension blocks, special function blocks, special adapters and expansion boards.
- *5. 250V 5A is specified for the power fuse of FX3U-32MR/UA1.

9.3.2 DC Power Supply Type

| Item | Specifications | | | | |
|--|---|--------------|--------------|--------------|--------------|
| | FX3U-16M□/D□ | FX3U-32M□/D□ | FX3U-48M□/D□ | FX3U-64M□/D□ | FX3U-80M□/D□ |
| Supply voltage | 24V DC | | | | |
| Voltage fluctuation range | -30%, +20%*3 | | | | |
| Allowable instantaneous power failure time | Operation can be continued upon occurrence of instantaneous power failure for 5 ms or less. | | | | |
| Power fuse | 250V, 3.15A | | 250V, 5A | | |
| Power consumption*1 | 25W | 30W | 35W | 40W | 45W |
| Rush current | 35 A max. 0.5 ms or less/24V DC | | | | |
| 24V DC service power supply | — | | | | |
| 5V DC built-in power supply*2 | 500 mA or less | | | | |

- *1. This power consumption is the value maximized by input/output extension blocks and special function units/blocks connected to the main unit.
→ **For input/output powered extension units/blocks power consumption information, refer to Section 15.2.**
- *2. The power supply is not for external use.
The current capacity specified above is for the input/output extension blocks, special function blocks, special adapters and expansion boards.
- *3. When supply voltage is 16.8-19.2 V DC, the connectable extension equipment decreases.
For details, refer to Subsection 6.5.3 or 6.5.4.

1

Introduction

2

Features and
Part Names

3

Product
Introduction

4

Specifications

5

Version and
Peripheral
Devices

6

System
Configuration

7

Input/Output
Nos., Unit Nos.

8

Installation

9

Preparation and
Power Supply
Wiring


10

Input Wiring


9.4 Grounding

Ground the PLC as stated below.

- Perform class D grounding. (Grounding resistance: 100Ω or less)
- Ground the PLC independently if possible.
If it cannot be grounded independently, ground it jointly as shown below.

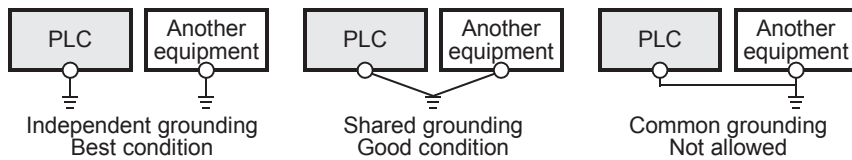

Extension devices of PLC (except expansion board and special communication/high-speed input/output adapter)

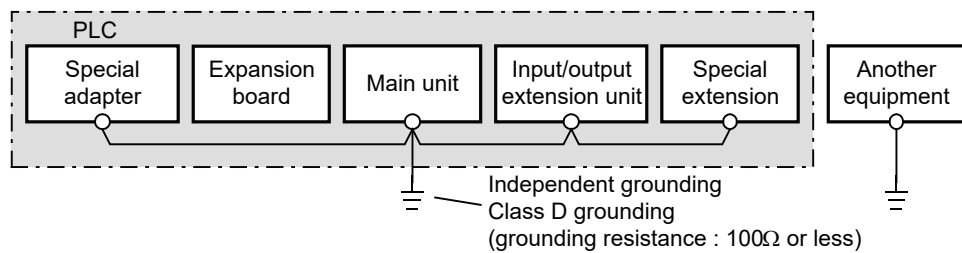


- Use ground wires thicker than AWG14 (2 mm²).
- Position the grounding point as close to the PLC as possible to decrease the length of the ground wire.

9.5 Examples of External Wiring [AC Power Supply/DC Input Type]

9.5.1 Example of input/output wiring with 24V DC service power supply

24V DC service power supply of the main unit can be used as a power supply for loads. However, the power consumed by extension devices should be subtracted from the 24V DC service power, and the remainder can be used as power for loads.

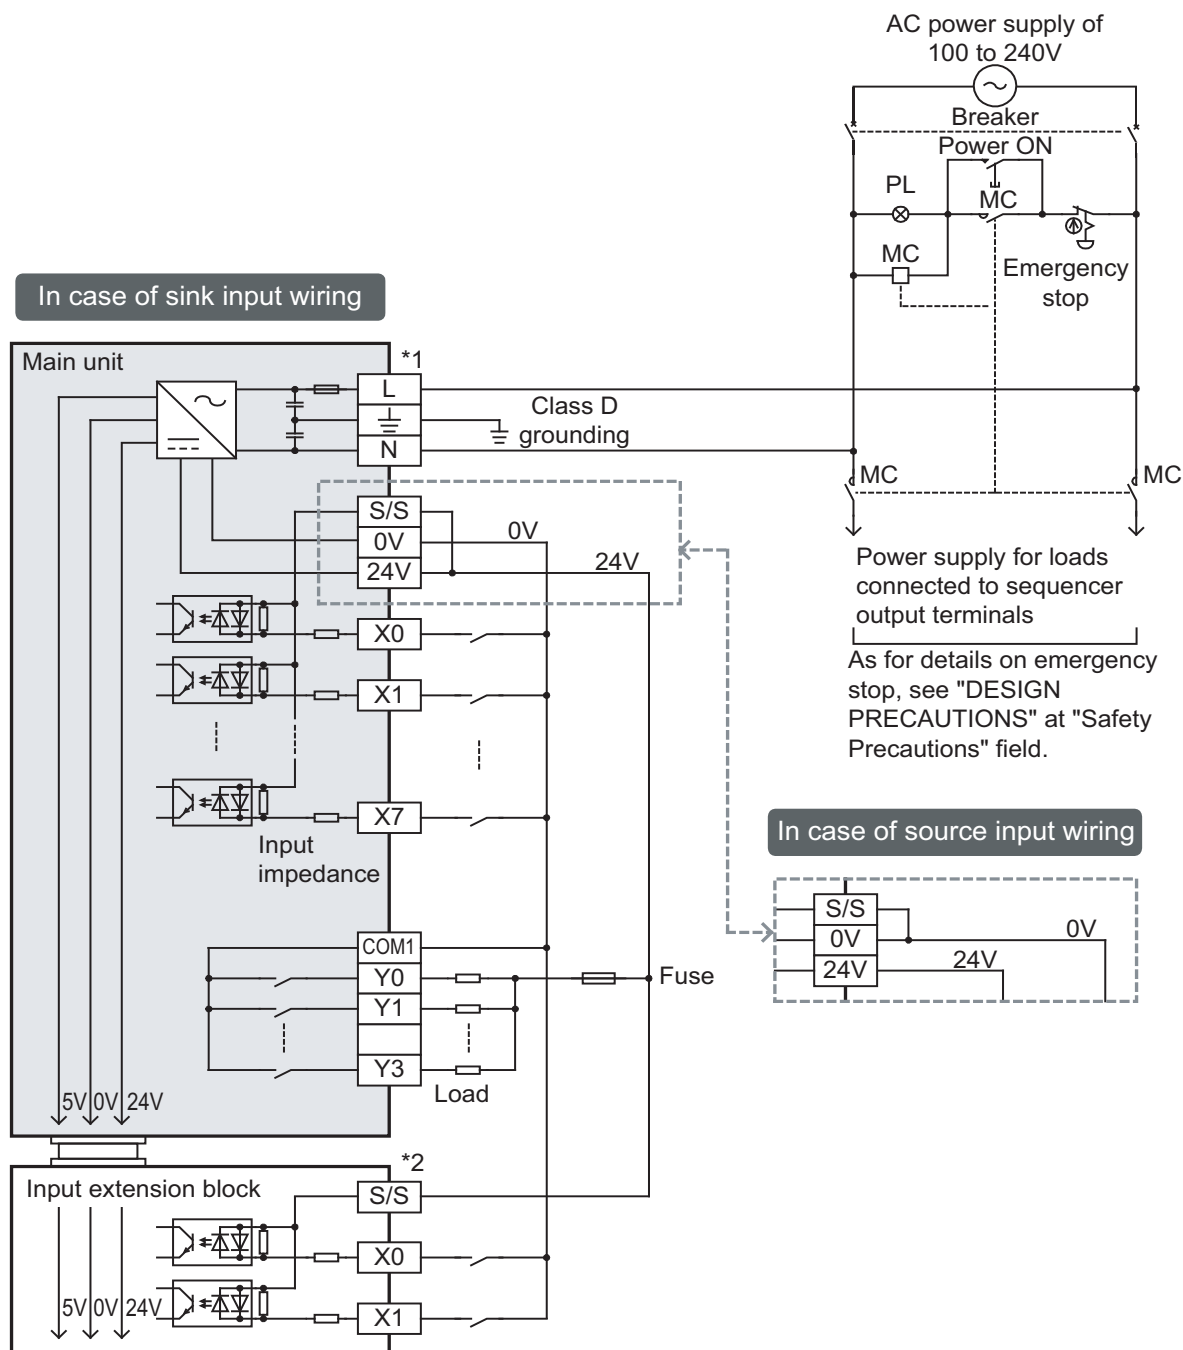


*1 Connect the AC power supply to the L and N terminals (in any case of 100V AC system and 200V AC system). As for details, see "WIRING PRECAUTIONS" at "Safety Precautions" field.

*2 Connect the 24V terminal (in case of sink input) or the 0V terminal (in case of source input) to the S/S terminal on the input extension block.

9.5.2 Example of sink input [-common] wiring

An example of sink input [-common] wiring is given below. When connecting input/output powered extension units/blocks, carefully check the signal names on the terminal block because the sink and source input type units/blocks and the sink input type units/blocks vary in signal names on the terminal block.

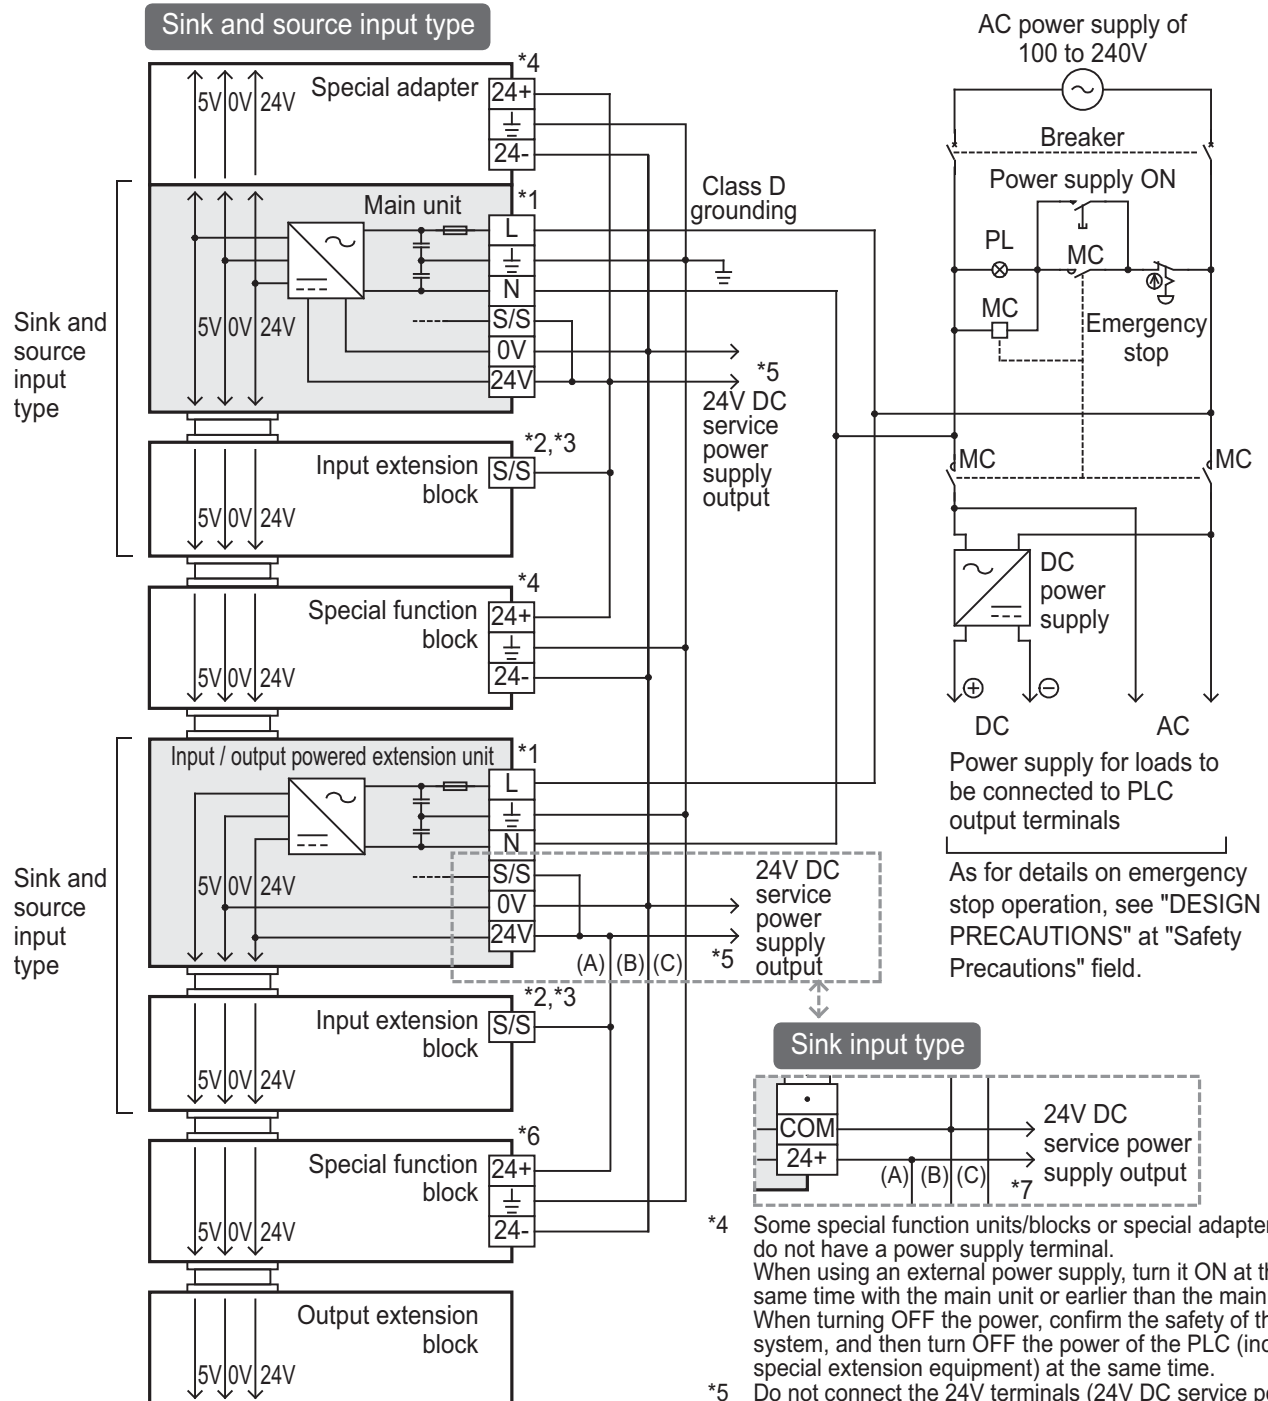


- *1 Connect the AC power supply to the L and N terminals (in any case of 100V AC system and 200V AC system). Make sure that the power is turned ON at the same time in the main unit and extension units or earlier in extension units than the main unit. For details, refer to "WIRING PRECAUTIONS" in "Safety Precautions". As for details, see "WIRING PRECAUTIONS" at "Safety Precautions" field.
- *2 Connect the 24V terminal of the main unit or the input/output extension unit to the S/S terminal of the input extension block.
- *3 In case of the sink input type, the S/S terminal is used as the 24+ terminal.

- *4 Some special function units/blocks or special adapters do not have a power supply terminal. When using an external power supply, turn it ON at the same time with the main unit or earlier than the main unit. When turning OFF the power, confirm the safety of the system, and then turn OFF the power of the PLC (including special extension equipment) at the same time.
- *5 Do not connect the 24V terminals (24V DC service power supply) of the main unit and the input/output extension unit with each other. Connect the 0V terminal.
- *6 Some special extension units/blocks do not have power terminals. When using an external power supply, turn it ON at the same time with the extension unit or earlier than the extension unit. When turning OFF the power, confirm the safety of the system, and then turn OFF the power of the PLC (including special extension equipment) at the same time.
- *7 Do not connect the 24V terminal of the main unit to the 24+ terminal (24V DC service power supply) of an input/output extension unit. Connect the 0V terminal to the COM terminal.

9.5.3 Example of source input [+common] wiring

An example of source input [+common] wiring is shown below.

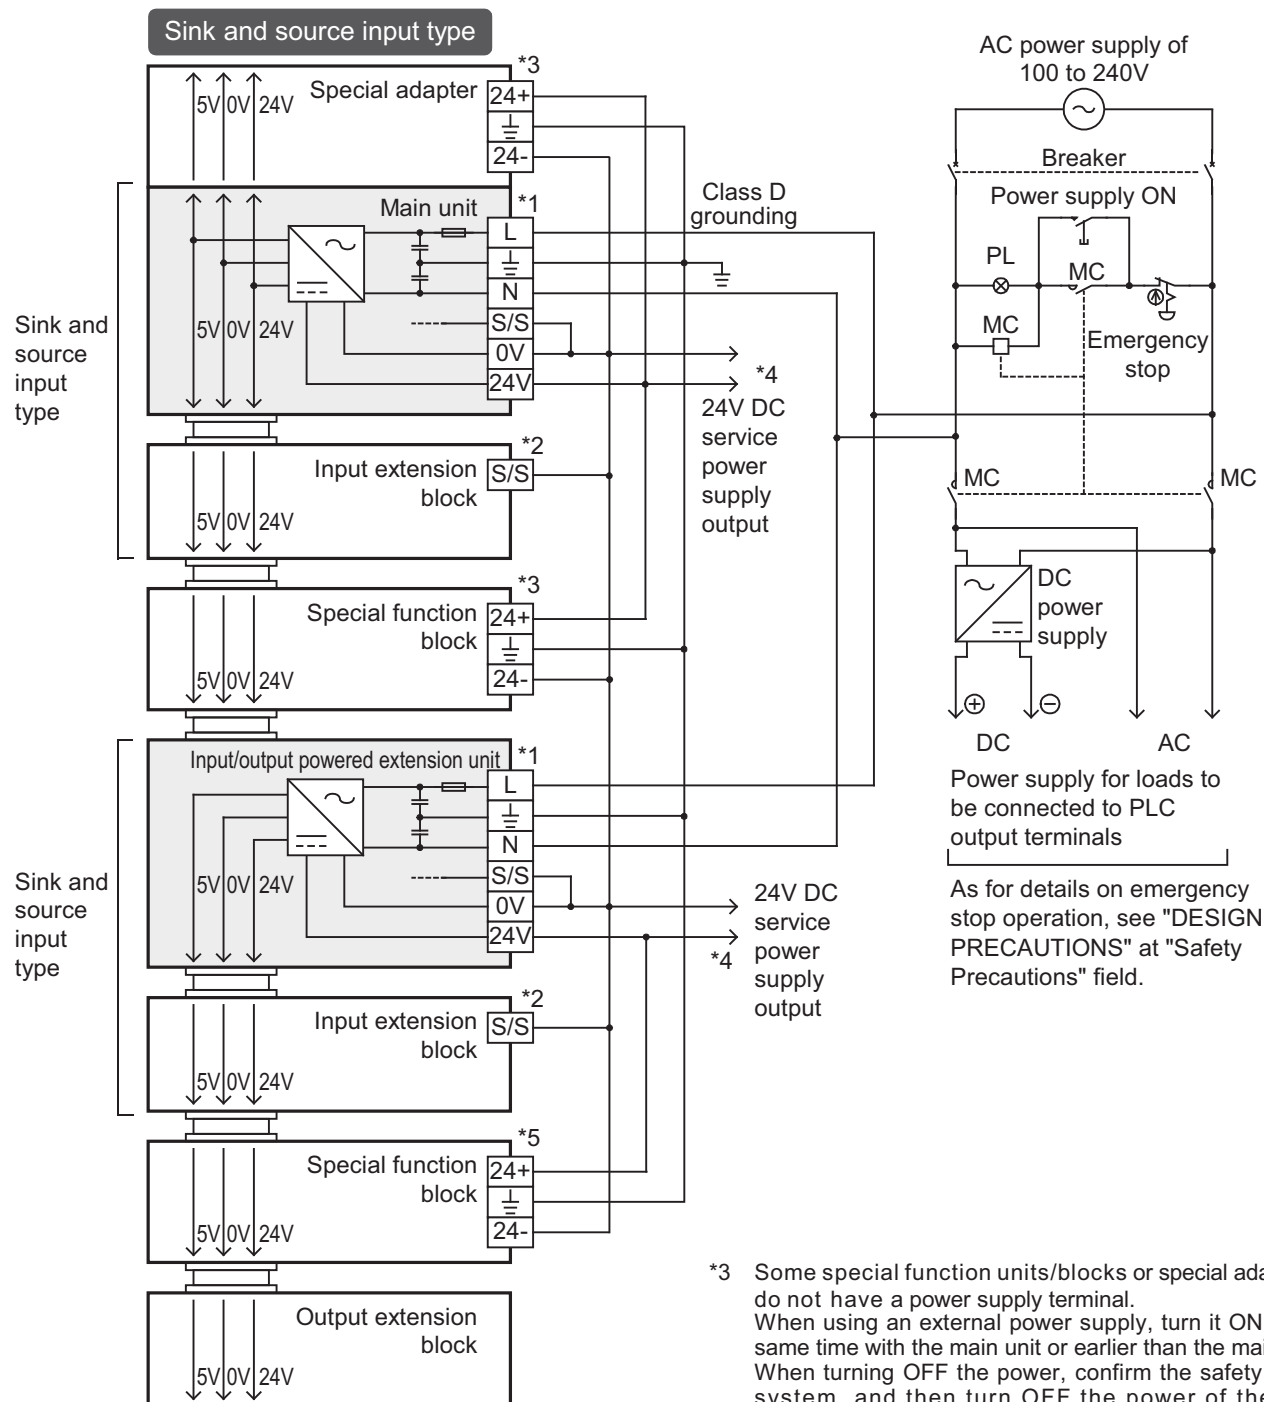


- *1 Connect the AC power supply to the L and N terminals (in any case of 100V AC system and 200V AC system). Make sure that the power is turned ON at the same time in the main unit and extension units or earlier in extension units than the main unit. For details, refer to "WIRING PRECAUTIONS" in "Safety Precautions" As for details, see "WIRING PRECAUTIONS" at "Safety Precautions" field.
- *2 Connect the 0V terminal of the main unit or extension unit to the S/S terminal of the input extension block.

- *3 Some special function units/blocks or special adapters do not have a power supply terminal. When using an external power supply, turn it ON at the same time with the main unit or earlier than the main unit. When turning OFF the power, confirm the safety of the system, and then turn OFF the power of the PLC (including special extension equipment) at the same time.
- *4 Do not connect the 24V terminals (24V DC service power supply) of the main unit and the input/output extension unit with each other. Connect the 0V terminal.
- *5 Some special extension units/blocks do not have power terminals. When using an external power supply, turn it ON at the same time with the extension unit or earlier than the extension unit. When turning OFF the power, confirm the safety of the system, and then turn OFF the power of the PLC (including special extension equipment) at the same time.

9.5.4 An external wiring example for the extension power supply unit (sink input [-common])

This example shows a sink input wiring (-common), including the extension power supply unit. When adding an input extension block, check the signal name on the terminal block since the sink/source type and sink type differ from each other.

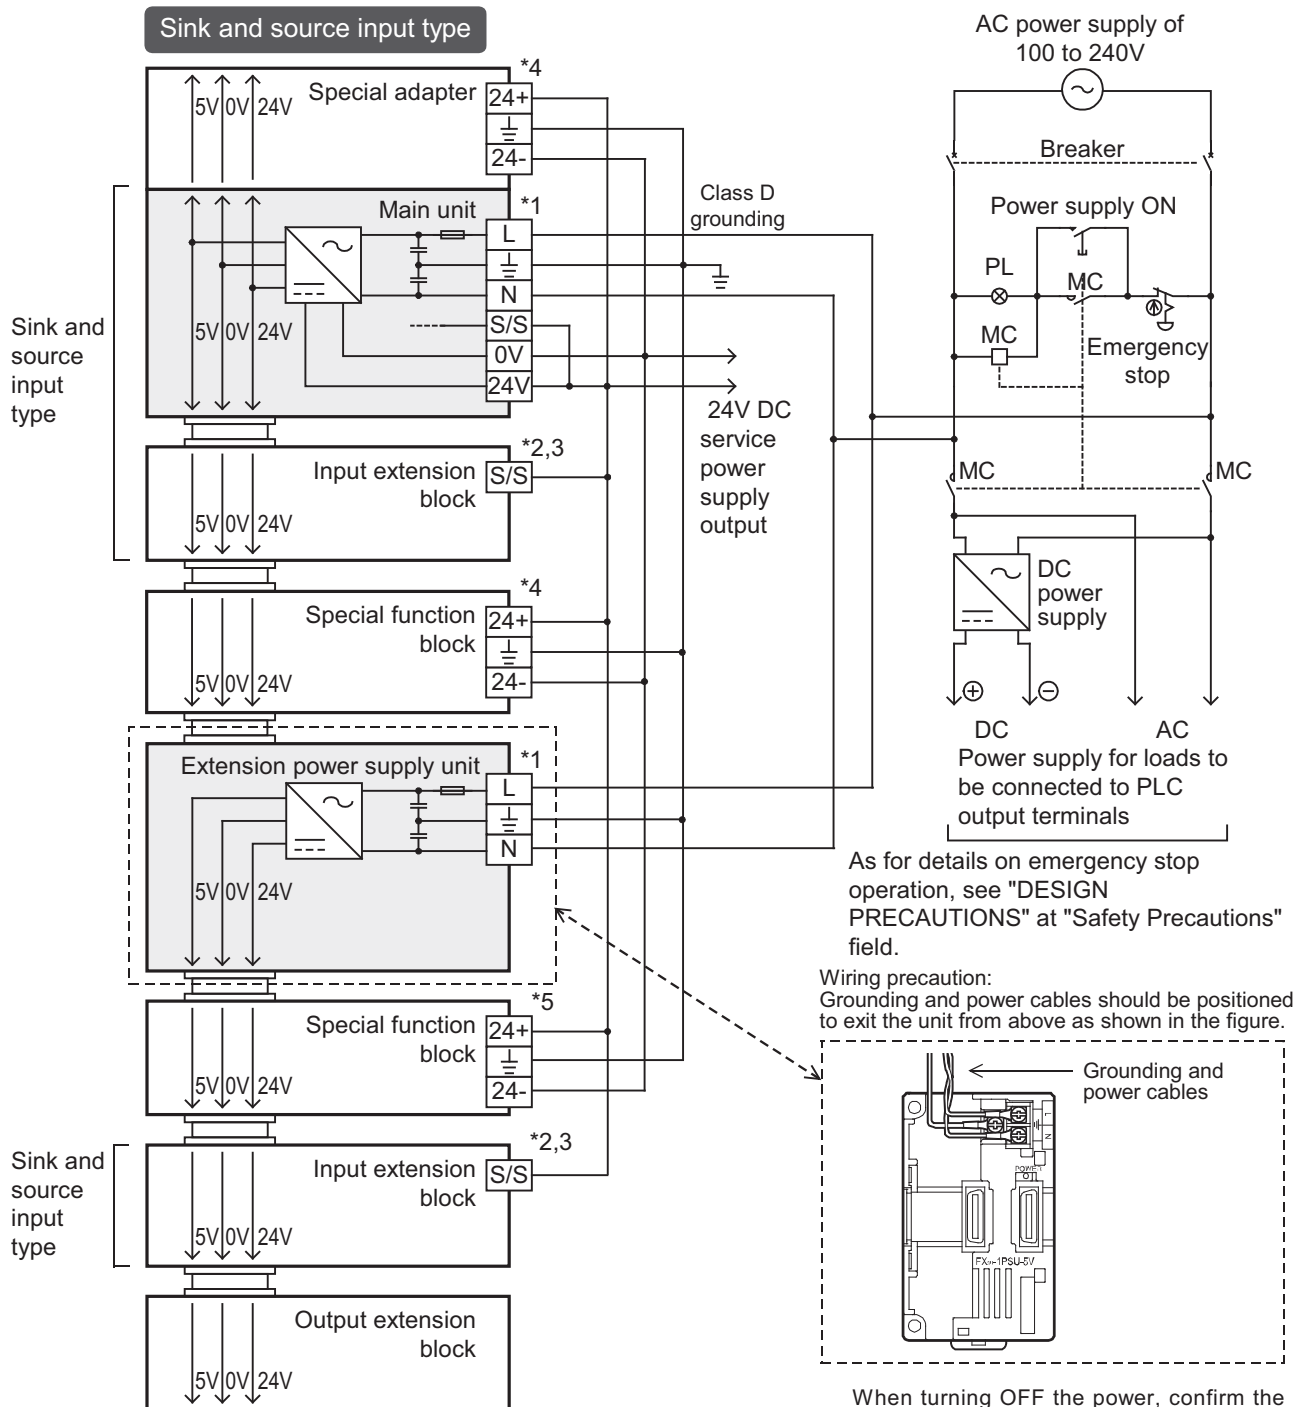


- *1 Connect the AC power supply to the L and N terminals (in any case of 100V AC system and 200V AC system). Make sure that the power is turned ON at the same time in the main unit and extension power supply units or earlier in extension power supply units than the main unit.
As for details, see "WIRING PRECAUTIONS" at "Safety Precautions" field.
- *2 Connect the 24V terminal of the main unit to the S/S terminal of the input extension block.
- *3 In case of the sink input type, the S/S terminal is used as the 24+ terminal.
- *4 Some special function units/blocks or special adapters do not have a power supply terminal. When using an external power supply, turn it ON at the same time with the main unit or earlier than the main unit.

- *5 Some special function units/blocks do not have a power supply terminals.
When using an external power supply, turn it ON at the same time with the extension power supply unit or earlier than the extension power supply unit.
When turning OFF the power, confirm the safety of the system, and then turn OFF the power of the PLC (including special extension equipment) at the same time.

9.5.5 An external wiring example for the extension power supply unit (source input [+common])

This example shows a source input wiring (+common), including the extension power supply unit.

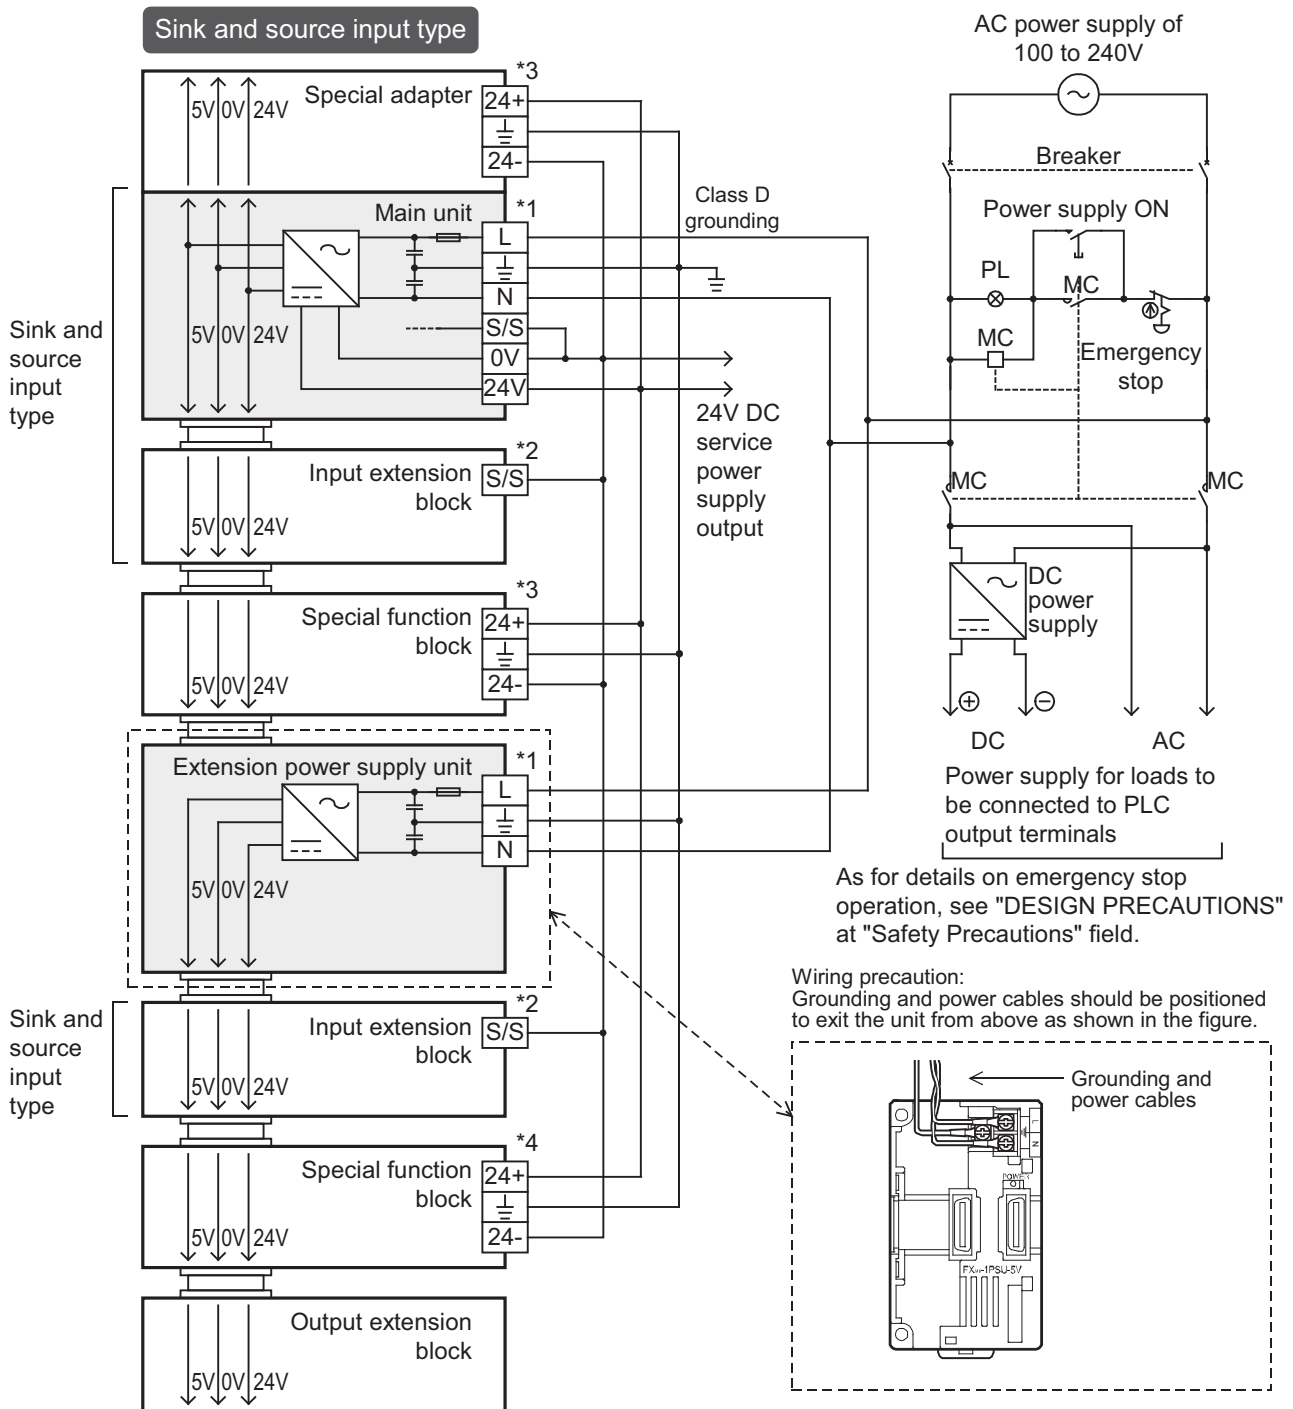


- *1 Connect the AC power supply to the L and N terminals (in any case of 100V AC system and 200V AC system).
Make sure that the power is turned ON at the same time in the main unit and extension power supply units or earlier in extension power supply units than the main unit.
As for details, see "WIRING PRECAUTIONS" at "Safety Precautions" field.
- *2 Connect the 0V terminal of the main unit to the S/S terminal of the input extension block.
- *3 Some special function units/blocks or special adapters do not have a power supply terminal.
When using an external power supply, turn it ON at the same time with the main unit or earlier than the main unit.

- *4 Some special function units/blocks do not have a power supply terminals.
- When using an external power supply, turn it ON at the same time with the extension power supply unit or earlier than the extension power supply unit.
- When turning OFF the power, confirm the safety of the system, and then turn OFF the power of the PLC (including special extension equipment) at the same time.

9.6 Examples of External Wiring [DC Power Supply/DC Input Type]

9.6.1 Example of sink input [-common] wiring

An example of sink input [-common] wiring is given below. When connecting input/output powered extension units/blocks, carefully check the signal names on the terminal block because the sink and source input type units/blocks and the sink input type units/blocks vary in signal names on the terminal block.

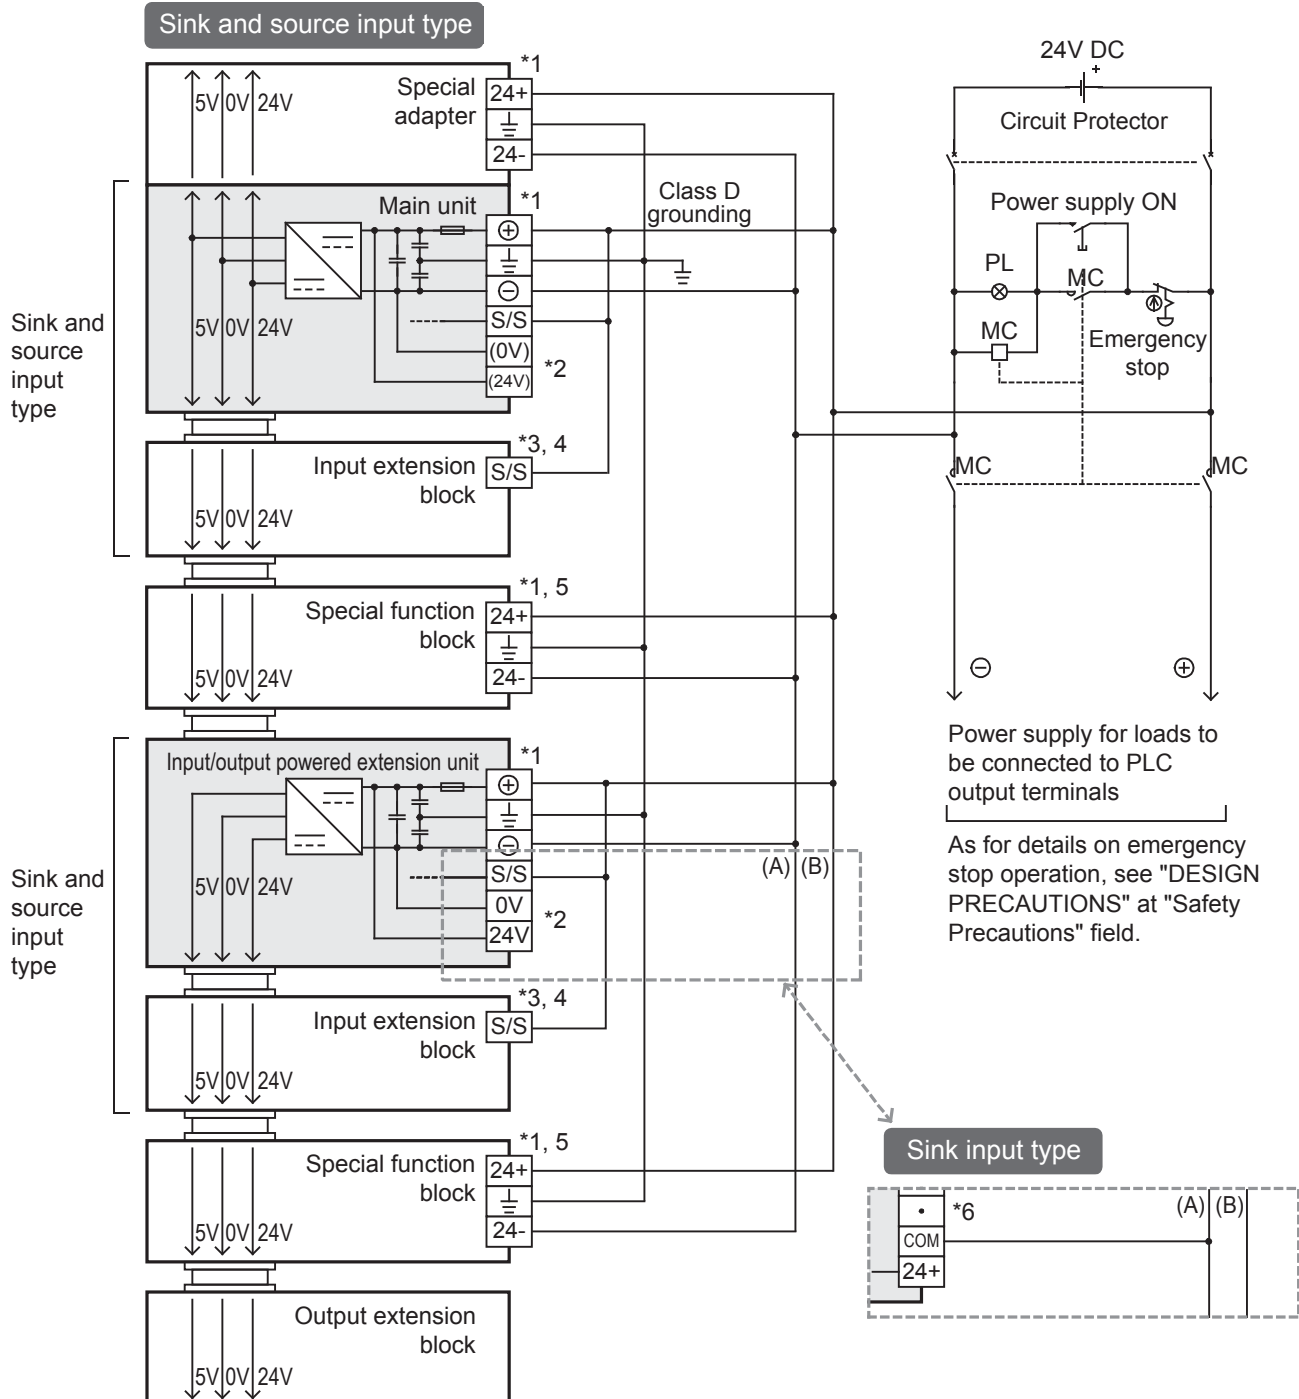


- *1 Connect DC power to [+] and [-] terminals. The same power source for the main unit, extension units, special function unit/blocks and special adapters is preferable. When using the different power source from the main unit, turn ON the peripheral devices' power simultaneously, or earlier than the main unit's. When turning OFF the power, confirm the safety of the system and then turn OFF the power of the PLC (including special extension equipment) at the same time.
- *2 Do not connect with [0V] and [24V] terminals.

- *3 24V DC [+] supplies power to the [S/S] terminal at the input extension block.
- *4 In case of the sink input type, the [S/S] terminal is used as the [24+] terminal.
- *5 Some special function units/blocks do not have a power supply terminal.
- *6 Do not connect with [24+] and [-] terminals.

9.6.2 Example of source input [+common] wiring


An example of source input [+common] wiring is shown below.

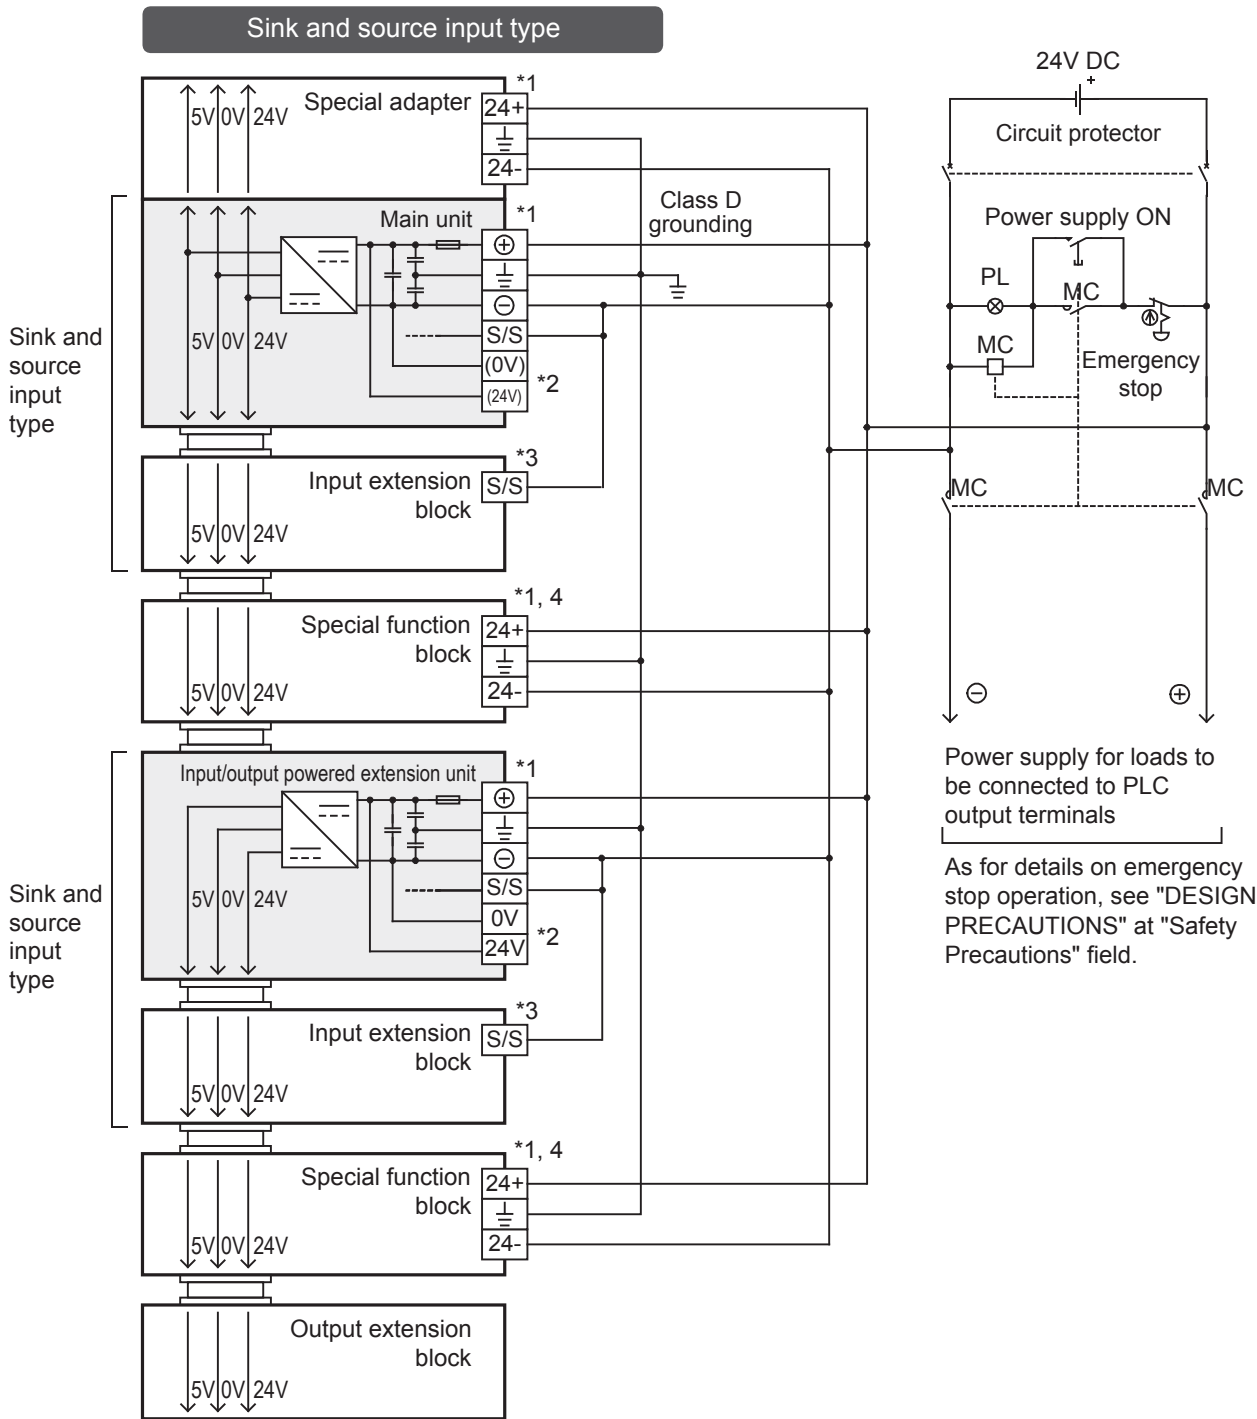

- *2 Do not connect with [0V] and [24V] terminals.
- *3 24V DC [-] supplies power to the [S/S] terminal at the input extension block.
- *4 Some special function units/blocks do not have a power supply terminal.

9.7 Examples of External Wiring [AC Power Supply/AC Input Type]

9.7.1 Example of AC input wiring

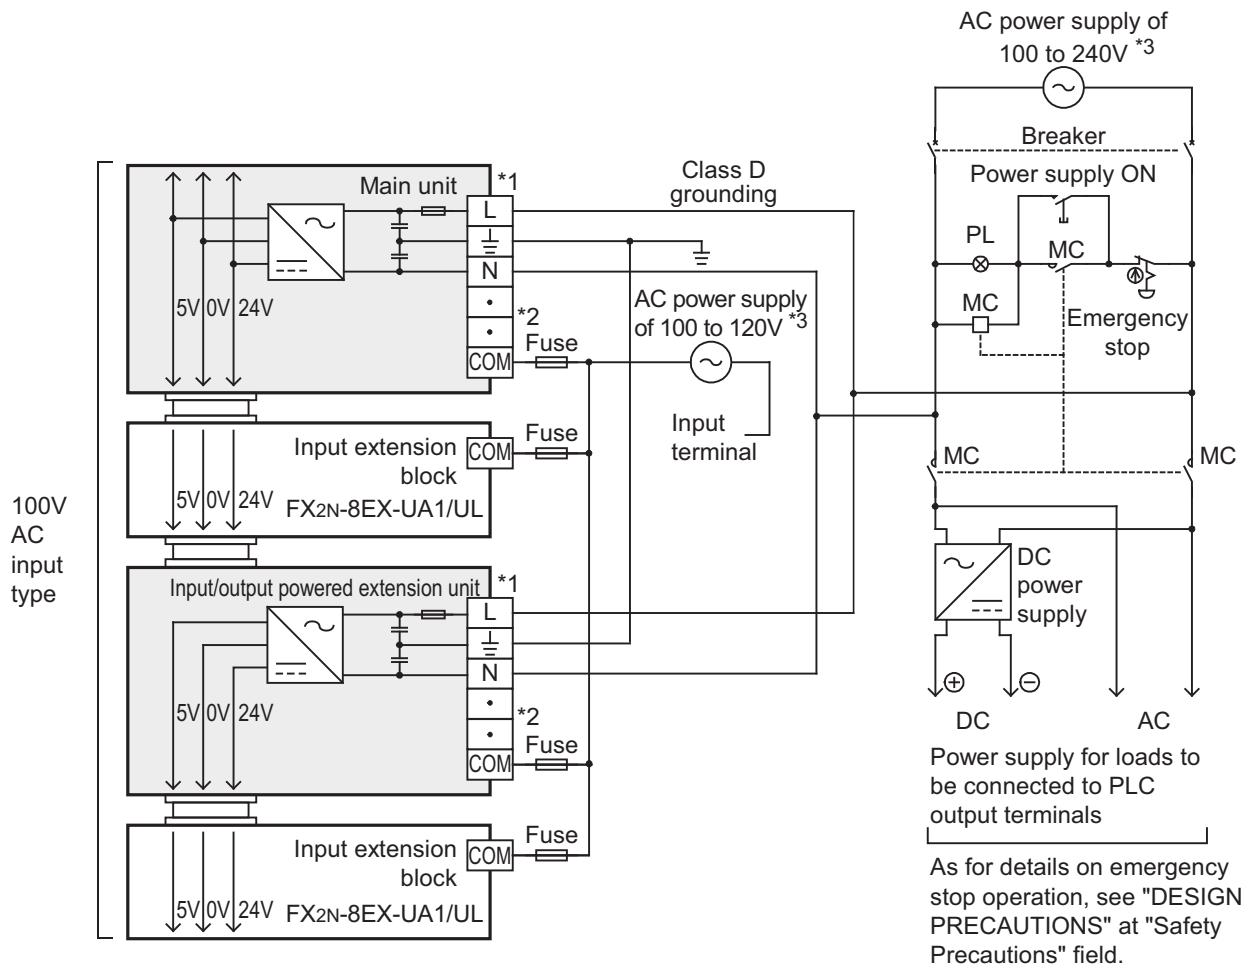

*1 Connect the AC power supply to the L and N terminals (in any case of 100V AC system and 200V AC system). Make sure that the power is turned ON at the same time in the main unit and extension units or earlier in extension units than the main unit.
As for details, see "WIRING PRECAUTIONS" at "Safety Precautions" field.

*2 Do not connect with [·] terminal.

*3 The input specification is 100V to 120V AC even though the power supply voltage specification of main unit and input/output extension unit is 100V to 240V AC.

10. Input Wiring Procedures (Input Interruption and Pulse Catch)

DESIGN PRECAUTIONS



WARNING

- Make sure to have the following safety circuits outside of the PLC to ensure safe system operation even during external power supply problems or PLC failure.
Otherwise, malfunctions may cause serious accidents.
 - 1) Most importantly, have the following: an emergency stop circuit, a protection circuit, an interlock circuit for opposite movements (such as normal vs. reverse rotation), and an interlock circuit (to prevent damage to the equipment at the upper and lower positioning limits).
 - 2) Note that when the PLC CPU detects an error, such as a watchdog timer error, during self-diagnosis, all outputs are turned off. Also, when an error that cannot be detected by the PLC CPU occurs in an input/output control block, output control may be disabled.
External circuits and mechanisms should be designed to ensure safe machinery operation in such a case.
 - 3) Note that the output current of the 24V DC service power supply varies depending on the model and the absence/presence of extension blocks. If an overload occurs, the voltage automatically drops, inputs in the PLC are disabled, and all outputs are turned off.
External circuits and mechanisms should be designed to ensure safe machinery operation in such a case.
 - 4) Note that when an error occurs in a relay, triac or transistor output device, the output could be held either on or off.
For output signals that may lead to serious accidents, external circuits and mechanisms should be designed to ensure safe machinery operation in such a case.

DESIGN PRECAUTIONS



CAUTION

- Do not bundle the control line together with or lay it close to the main circuit or power line. As a guideline, lay the control line at least 100mm (3.94") or more away from the main circuit or power line.
Noise may cause malfunctions.
- Install module so that excessive force will not be applied to peripheral device connectors.
Failure to do so may result in wire damage/breakage or PLC failure.

SECURITY PRECAUTIONS



WARNING

- To maintain the security (confidentiality, integrity, and availability) of the programmable controller and the system against unauthorized access, denial-of-service (DoS) attacks, computer viruses, and other cyberattacks from unreliable networks and devices via network, take appropriate measures such as firewalls, virtual private networks (VPNs), and antivirus solutions.

WIRING PRECAUTIONS



WARNING

- Make sure to cut off all phases of the power supply externally before attempting installation or wiring work.
Failure to do so may cause electric shock or damage to the product.
- Make sure to attach the terminal cover, offered as an accessory, before turning on the power or initiating operation after installation or wiring work.
Failure to do so may cause electric shock.
- The temperature rating of the cable should be 80°C or more.

1

Introduction

2

Features and
Part Names

3

Product
Introduction

4

Specifications

5

Version and
Peripheral
Devices

6

System
Configuration

7

Input/Output
Nos., Unit Nos.

8

Installation

9

Preparation and
Power Supply
Wiring

10

Input Wiring

WIRING PRECAUTIONS



- Do not supply power to the [24+] and [24V] terminals (24V DC service power supply) on the main unit or extension units.
Doing so may cause damage to the product.
- Perform class D grounding (grounding resistance: 100 Ω or less) to the grounding terminal on the main unit and extension units with a wire 2 mm² or thicker.
Do not use common grounding with heavy electrical systems (refer to Section 9.4).
- Connect the AC power supply wiring to the dedicated terminals described in this manual.
If an AC power supply is connected to a DC input/output terminal or DC power supply terminal, the PLC will burn out.
- Connect the DC power supply wiring to the dedicated terminals described in this manual.
If an AC power supply is connected to a DC input/output terminal or DC power supply terminal, the PLC will burn out.
- Do not wire vacant terminals externally.
Doing so may damage the product.
- When drilling screw holes or wiring, make sure that cutting and wiring debris do not enter the ventilation slits.
Failure to do so may cause fire, equipment failures or malfunctions.
- Make sure to properly wire the FX3U Series main unit and FX0N/FX2N/FX3U Series extension equipment in accordance with the following precautions.
Failure to do so may cause electric shock, equipment failures, a short-circuit, wire breakage, malfunctions, or damage to the product.
 - The disposal size of the cable end should follow the dimensions described in the manual.
 - Tightening torque should follow the specifications in the manual.
 - Tighten the screws using a Phillips-head screwdriver No.2 (shaft diameter 6mm (0.24") or less). Make sure that the screwdriver does not touch the partition part of the terminal block.
- Make sure to properly wire to the terminal block (European type) in accordance with the following precautions.
Failure to do so may cause electric shock, equipment failures, a short-circuit, wire breakage, malfunctions, or damage to the product.
 - The disposal size of the cable end should follow the dimensions described in the manual.
 - Tightening torque should follow the specifications in the manual.
 - Twist the end of strand wire and make sure that there are no loose wires.
 - Do not solder-plate the electric wire ends.
 - Do not connect more than the specified number of wires or electric wires of unspecified size.
 - Affix the electric wires so that neither the terminal block nor the connected parts are directly stressed.
- Make sure to properly wire to the FX Series terminal blocks in accordance with the following precautions.
Failure to do so may cause electric shock, equipment failures, a short-circuit, wire breakage, malfunctions, or damage to the product.
 - The disposal size of the cable end should follow the dimensions described in the manual.
 - Tightening torque should follow the specifications in the manual.
 - Tighten the screws using a Phillips-head screwdriver No.2 (shaft diameter 6mm (0.24") or less). Make sure that the screwdriver does not touch the partition part of the terminal block.

This chapter explains the followings.

- Sink/source input (24V DC input)
- Input specifications (main unit), instructions for wiring and examples of external wiring
- Input interruption function
- Pulse catch function


10.1 Before Starting Input Wiring

10.1.1 Sink and source input (24V DC input type)

The input terminals (X) of the main unit are common to sink/source input of 24V DC internal power. FX2N Series input/output powered extension units/blocks have input terminals common to sink/source input or only for sink input.

1. Difference between circuits

- Sink input [-common]
Sink input means a DC input signal with current-flow from the input (X) terminal.
When a sensor with a transistor output is connected, NPN open collector transistor output can be used.
- Source input [+common]
Source input means a DC input signal with current-flow into the input (X) terminal.
When a sensor with a transistor output is connected, PNP open collector transistor output can be used.

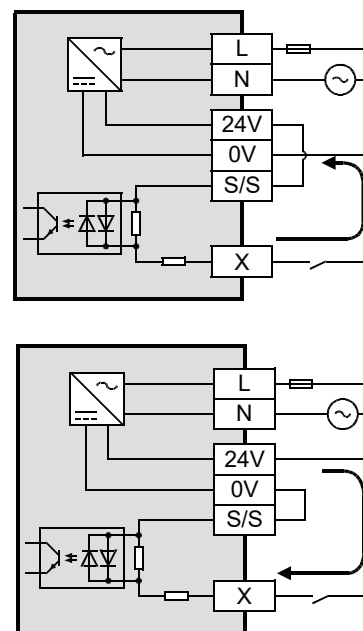

2. Method of switching between sink/source input

To switch the input type to sink or source input, wire the S/S terminal to the 0V or 24V (+ or -) terminal.

- 1) In case of AC power supply type
 - Sink input: [24V] terminal and [S/S] terminal are connected.
 - Source input: [0V] terminal and [S/S] terminal are connected.

→ Refer to Subsection 10.2.4 and 10.2.5 for wiring examples.
- 2) In case of DC power supply type
 - Sink input: [\oplus] terminal and [S/S] terminal are connected.
 - Source input: [\ominus] terminal and [S/S] terminal are connected.

→ Refer to Subsection 10.2.6 and 10.2.7 for wiring examples.

3. Instructions for using

- Concurrent use of sink/source input
It is possible to set all input terminals (X) of the main unit to the sink input mode or the source input mode. However, sink and source input terminals cannot be used concurrently.
 - The main unit and input/output powered extension units are individually set to the sink or source input mode.
 - The input mode of an input/output extension block is determined according to the selection of the sink or source input mode on the powered extension unit (power source).
- Caution in selecting model
A type common to sink/source input and a type only for sink input are both available. Select a proper type.

Differences from FX2N PLCs in input specifications (reference)

FX2N PLCs only for sink input (manuals in Japanese are supplied) and those common to sink/source input (manuals in English are supplied) have different model names.

- In FX2N PLCs only for sink input, the S/S terminal and the 24V terminal are connected unlike in FX3U PLCs. When replacing a sink input type only FX2N PLC with a FX3U PLC, short-circuit the [S/S] and [24V] terminals, and use the [0V] terminal of the FX3U as the [COM] terminal of the FX2N for wiring.
- FX2N PLCs common to sink/source input are switched to the sink or source input mode by external wiring like FX3U PLCs.





10.2 24V DC Input Type (Common to Sink/Source Input)

The input specifications for the main unit, cautions on wiring the unit and examples of wiring are given below.

10.2.1 Input specifications (main unit)

The input numbers in the table indicate the main unit terminal numbers. "X010 or more" means the numbers from X010 to the largest number that the main unit has.
(The input numbers of FX3U-16M□ are X000 to X007.)

→ For details on sink/source input, refer to Subsection 10.1.1.
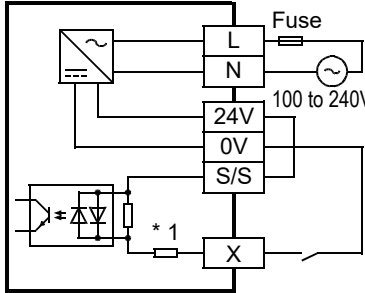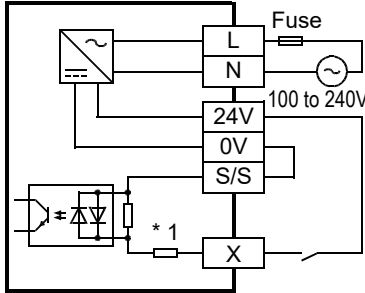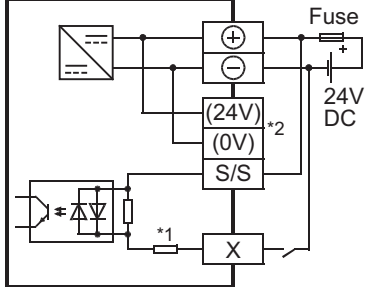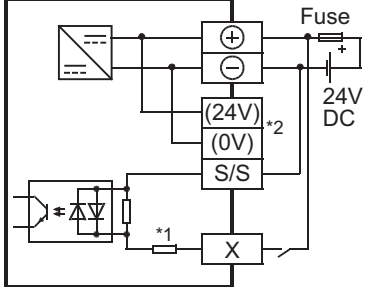
| Item | | Specifications | | | | | |
|---|--------------|--|-------------------------------------|-----------|--|-----------|------------|
| | | FX3U-16M□ | FX3U-32M□ /□S(S) | FX3U-48M□ | FX3U-64M□ /□S(S) | FX3U-80M□ | FX3U-128M□ |
| Number of input points | | 8 points | 16 points | 24 points | 32 points | 40 points | 64 points |
| Input connecting type | | Fixed terminal block (M3 screw) | Removable terminal block (M3 screw) | | | | |
| Input form | | sink/source | | | | | |
| Input signal voltage | | AC power type: 24V DC ±10% DC power type: 24 V DC -30%, +20% | | | | | |
| Input impedance | X000 to X005 | 3.9 kΩ | | | | | |
| | X006, X007 | 3.3 kΩ | | | | | |
| | X010 or more | — | 4.3 kΩ | | | | |
| Input signal current | X000 to X005 | 6 mA/24V DC | | | | | |
| | X006, X007 | 7 mA/24V DC | | | | | |
| | X010 or more | — | 5 mA/24V DC | | | | |
| ON input sensitivity current | X000 to X005 | 3.5 mA or more | | | | | |
| | X006, X007 | 4.5 mA or more | | | | | |
| | X010 or more | — | 3.5 mA or more | | | | |
| OFF input sensitivity current | | 1.5 mA or less | | | | | |
| Input response time | | Approx. 10 ms | | | | | |
| Input signal form (Input sensor form) | | No-voltage contact input Sink input: NPN open collector transistor Source input: PNP open collector transistor | | | | | |
| Input circuit insulation | | Photocoupler insulation | | | | | |
| Input operation display | | LED on panel lights when photocoupler is driven. | | | | | |
| Input circuit configuration *1 Input impedance | | • AC power supply type | | | | | |
| | | Sink input wiring | | | Source input wiring | | |
| | |  | | |  | | |
| | | • DC power supply type | | | | | |
| | | Sink input wiring | | | Source input wiring | | |
| | |  | | |  | | |

*2. Do not connect with (0V) and (24V) terminals.

10.2.2 Handling of 24V DC input

1. Input terminals

Sink input

When a no-voltage contact or NPN open collector transistor output is connected between an input (X) terminal and the 0V terminal and the circuit is closed, the input (X) turns on. Then, the input display LED is lit.

Source input

When a no-voltage contact or PNP open collector transistor output is connected between an input (X) terminal and the 24V terminal and the circuit is closed, the input (X) turns on. Then, the input display LED is lit.

Display module (option)

When the display module is mounted, the ON/OFF status can be checked on the LCD display.

RUN terminal setting

X000 to X017 (up to the largest input number in the main unit*1) of the main unit can be used as RUN input terminals by setting parameters.

*1. The FX3U-16M□ main unit input range is X000 to X007.

→ For the functions of the RUN terminals, refer to Subsection 14.2.1.

2. Input circuit

Function of input circuit

The primary and secondary circuits for input are insulated with a photocoupler, and the second circuit is provided with a C-R filter.

The C-R filter is designed to prevent malfunctions caused by chattering of the input contact and noise from the input line.

There is a delay of approx. 10ms in response to input-switching from ON to OFF and from OFF to ON.



Change of filter time

X000 to X017 (up to the largest number in the main unit) have digital filters, and the filter time can be changed in increments of 1ms in the range from 0 to 60ms through REFF (FNC 51) instruction or special data register (D8020). When 0 is specified for the time, the input filter values are set as shown in the following table.

| Input number | Input filter value when 0 is specified | Remarks |
|----------------|--|--------------------------|
| X000 to X005 | 5 μ s*1 | — |
| X006, X007 | 50 μ s | — |
| X010 to X017*2 | 200 μ s | Except for the FX3U-16M□ |

*1. When the circuit is used at an input filter value of 5 μ s, be careful when wiring.
(The details are stated later.)

*2. The FX3U-16M□ main unit input range is X000 to X007.
The filter time for input numbers X010 to X017 is kept 10 ms because the input filters of the input/output powered extension units/blocks are used for them.

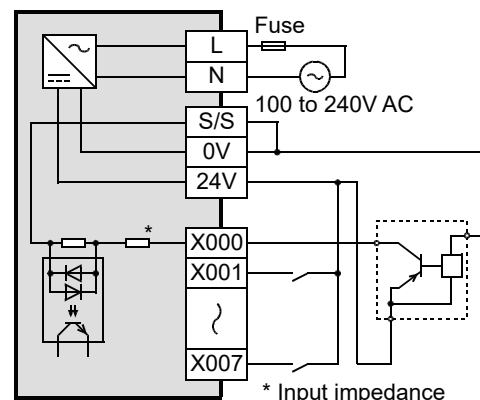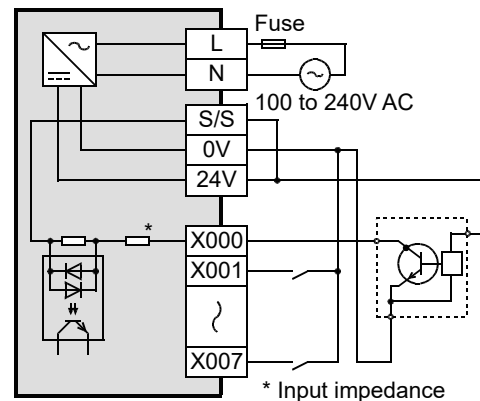

Cautions on wiring when changing filter time

When setting the input filter to 5 μ s or capturing pulses of a response frequency of 50 to 100kHz with a high-speed counter, wire the terminals as stated below.

- 1) The wiring length should be 5m or less.
- 2) Connect a bleeder resistance of 1.5k Ω (1 W or more) to the input terminal, so that the sum of the load current of the open collector transistor output on the mating device and the input current of the main body is 20 mA or more.

3. Input sensitivity

The PLC input current and input sensitivity are shown in the following table.

When there is a series diode or resistance at the input contact or there is a parallel resistance or leakage current at the input contact, wire the terminals according to the following table.

→ For the instructions for connecting input devices, refer to Subsection 10.2.3.

| Item | | X000 to X005 | X006 to X007 | X010 to max input number of the main unit |
|---------------------------|-----|---|----------------|---|
| Input voltage | | AC power type: 24V DC \pm 10% DC power type: 24 V DC -30%, +20% | | |
| Input current | | 6 mA | 7 mA | 5 mA |
| Input sensitivity current | ON | 3.5 mA or more | 4.5 mA or more | 3.5 mA or more |
| | OFF | 1.5 mA or less | 1.5 mA or less | 1.5 mA or less |

4. Examples of input wiring

For the wiring of input interruption, pulse catch and rotary encoder, refer to the following sections.

→ Example of wiring of input interruption: Refer to Section 10.4.

→ Example of wiring of pulse catch: Refer to Section 10.5.

→ Example of wiring of rotary encoder: Refer to Section 11.10.

10.2.3 Instructions for connecting input devices

1. In case of no-voltage contact

The input current of this PLC is 5 to 7 mA/24V DC.

Use input devices applicable to this minute current.

If no-voltage contacts (switches) for large current are used, contact failure may occur.

| Input number | Input current |
|--------------|---------------|
| X000 to X005 | 6 mA/24V DC |
| X006, X007 | 7 mA/24V DC |
| X010 or more | 5 mA/24V DC |

<Example> Products of OMRON

| Type | Model name |
|------------------|----------------------|
| Microswitch | Models Z, V and D2RV |
| Proximity switch | Model TL |


| Type | Model name |
|----------------------|------------|
| Operation switch | Model A3P |
| Photoelectric switch | Model E3S |

2. In case of input device with built-in series diode


The voltage drop of the series diode should be approx. 4V or less.

For example, when lead switches with a series LED are used, up to two switches can be connected in series.

Also make sure that the input current is over the input-sensing level while the switches are ON.

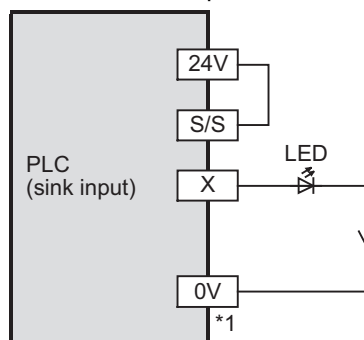

*1 In case of a type only for sink input, connect the device to the COM terminal.


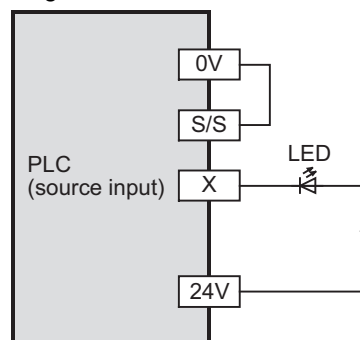


3. In case of input device with built-in parallel resistance

Use a device with a parallel resistance, $R_p(k\Omega)$, of $15k\Omega$ or more.

If the resistance is less than $15k\Omega$, connect a bleeder resistance, $R_b(k\Omega)$, obtained by the following formula as shown in the following figure.

$$R_b(k\Omega) \leq \frac{4R_p}{15 - R_p}$$

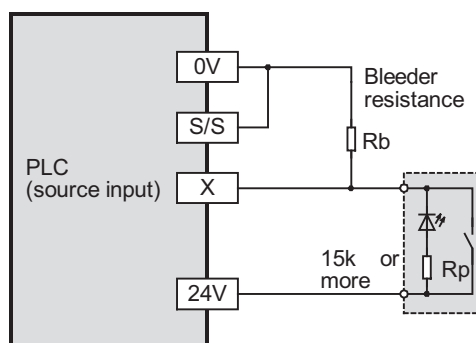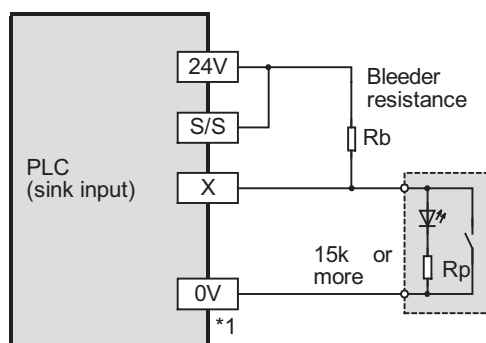



*1 In case of a type only for sink input, connect the device to the COM terminal.

4. In case of 2-wire proximity switch

Use a two-wire proximity switch whose leakage current, I_l , is 1.5 mA or less when the switch is off.

When the current is larger than 1.5 mA , connect a bleeder resistance, $R_b(k\Omega)$, determined by the following formula as shown in the following figure.


$$R_b(k\Omega) \leq \frac{6}{I_l - 1.5}$$

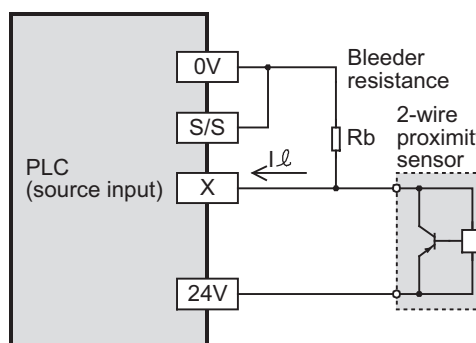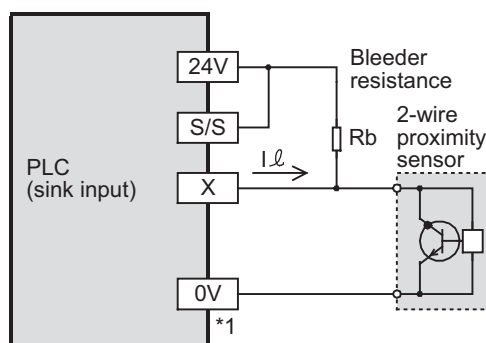

*1 In case of a type only for sink input, connect the device to the COM terminal.

10.2.4 Examples of external wiring (sink input) [AC Power Supply Type]

Sink and source input type

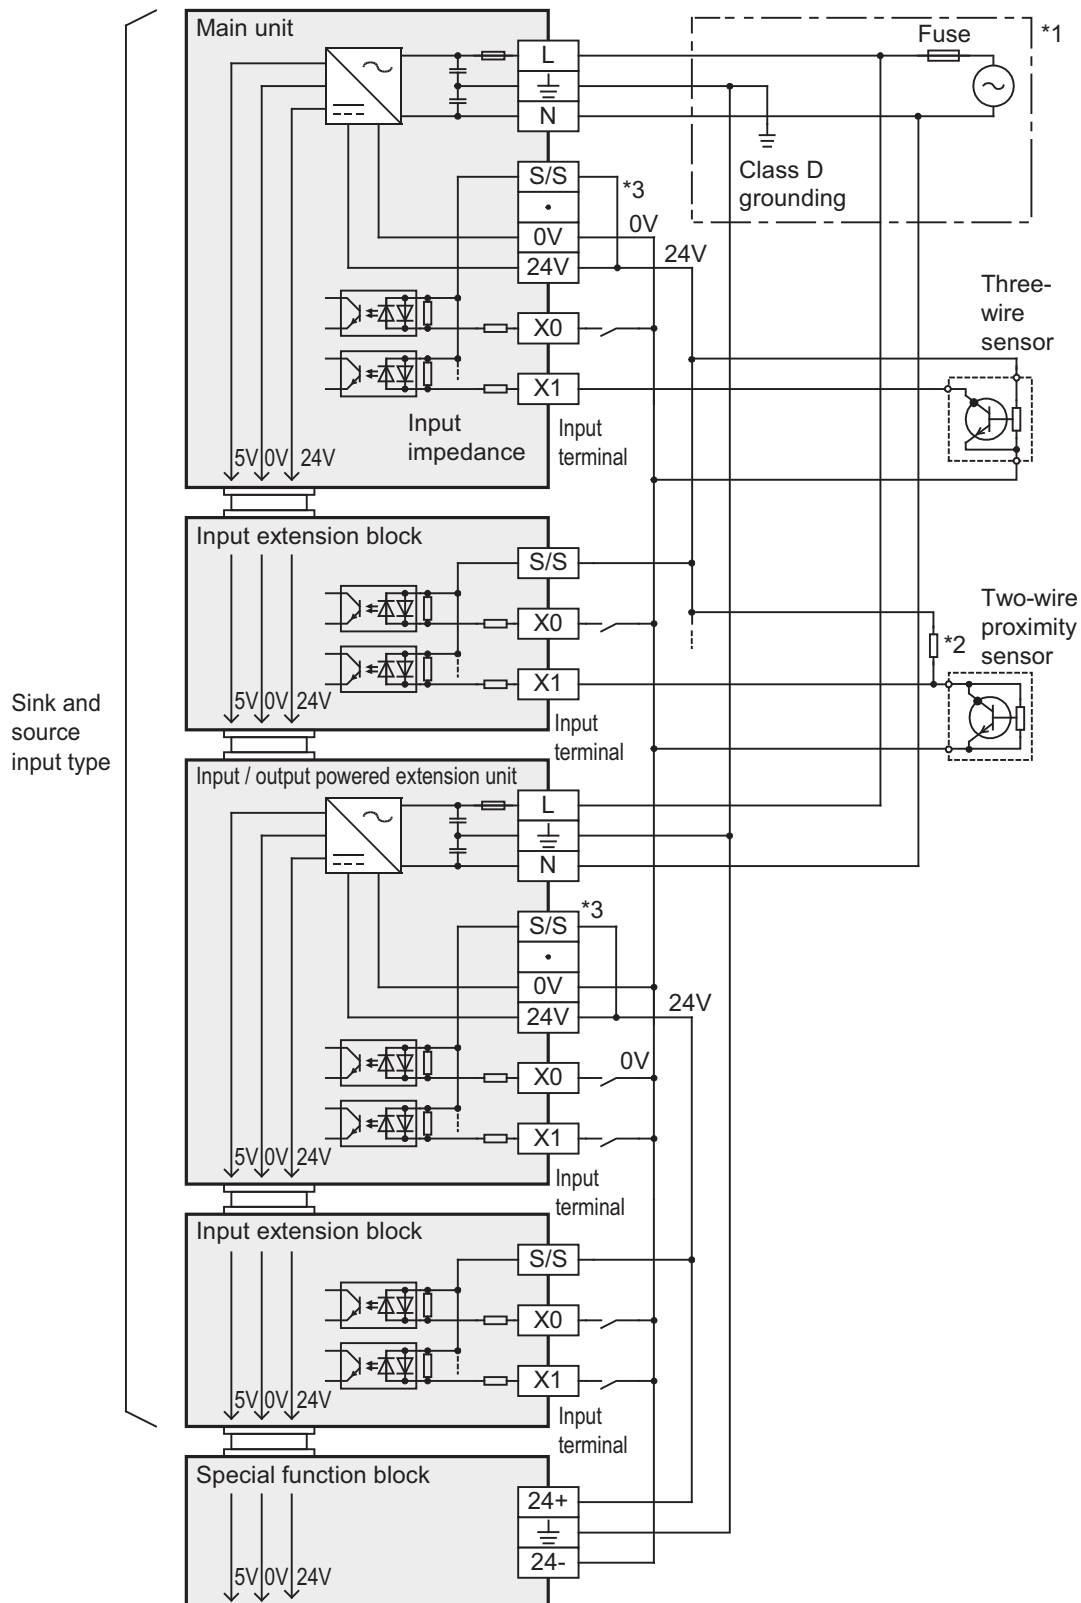


*1 Handle the power supply circuit correctly according to Chapter 9 "Preparation for Wiring and Power Supply Wiring Procedures."

*2 For an input device with a parallel resistance or a two-wire proximity switch, a bleeder resistance may be required.

*3 In case of sink input wiring, short-circuit the terminals of the extension units as well as the S/S terminal and the 24V terminal of the main unit.

Use of input/output extension units/blocks of sink input type

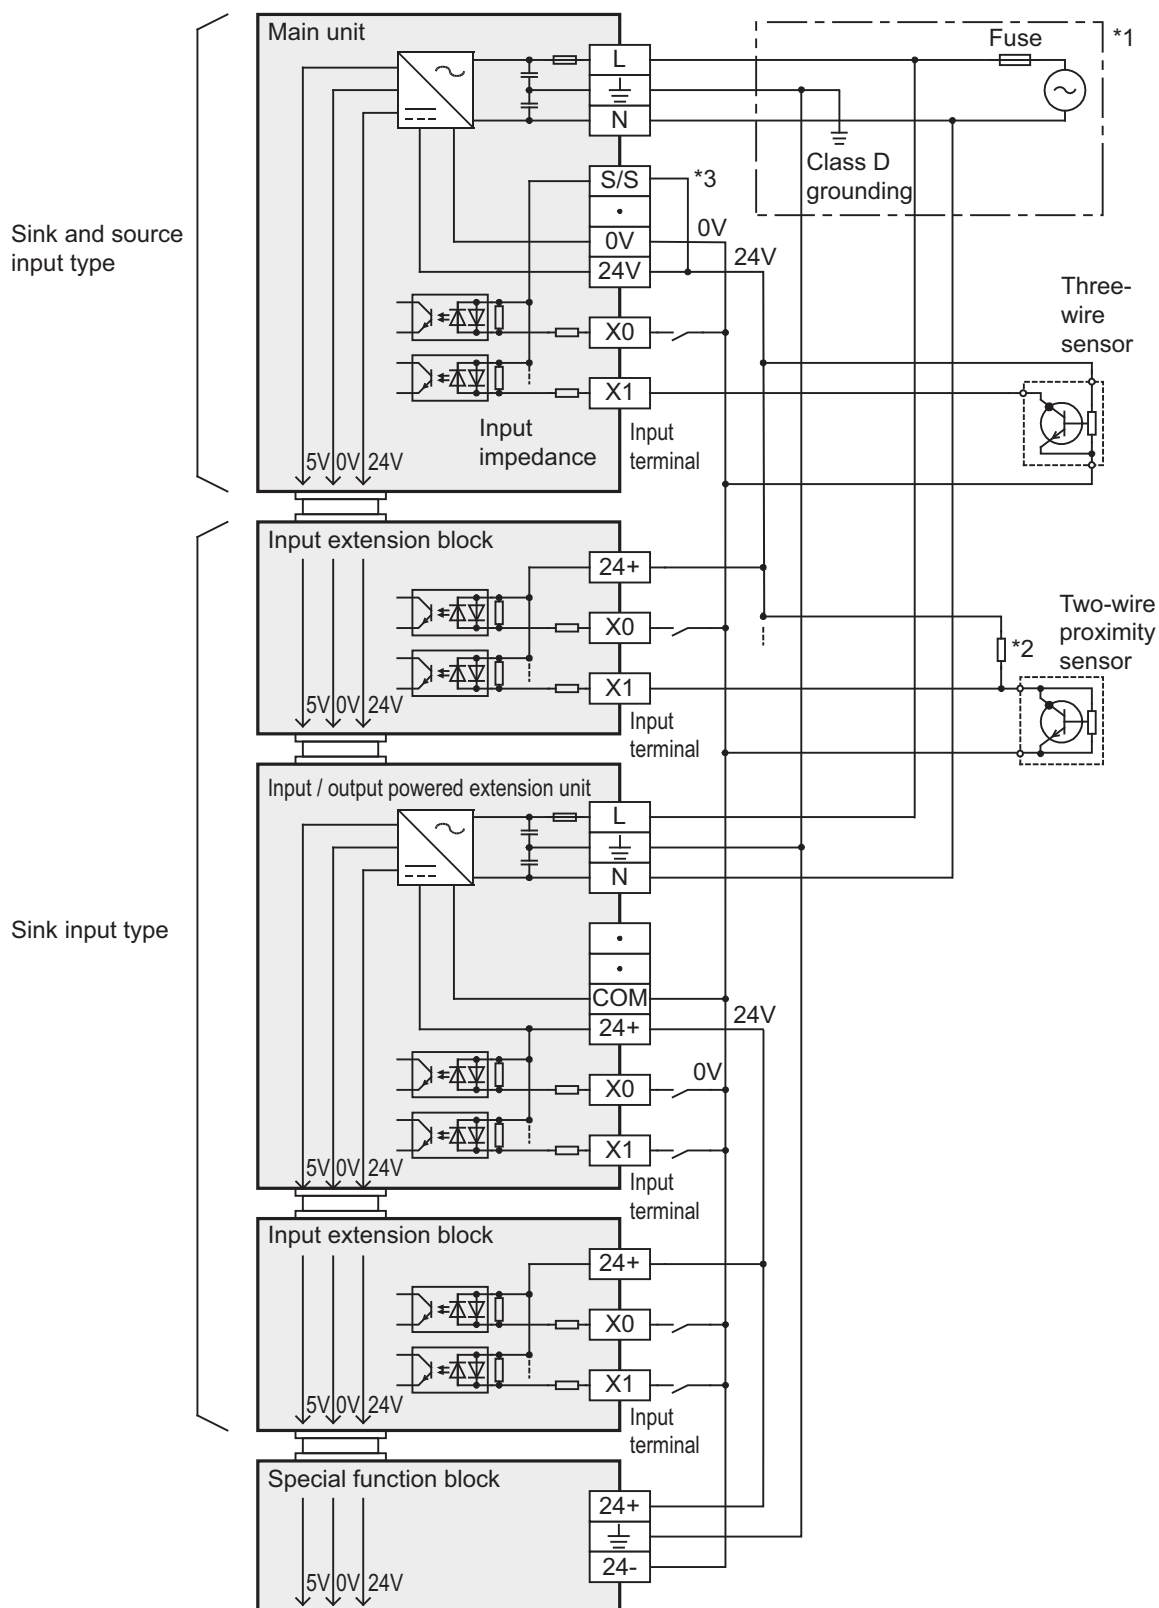


*1 Handle the power supply circuit correctly according to Chapter 9 "Preparation for Wiring and Power Supply Wiring Procedures."

*2 For an input device with a parallel resistance or a two-wire proximity switch, a bleeder resistance may be required.

*3 In case of sink input wiring, short-circuit the S/S terminal and the 24V terminal of the main unit.

10.2.5 Example of external wiring (source input) [AC Power Supply Type]

Sink and source input type

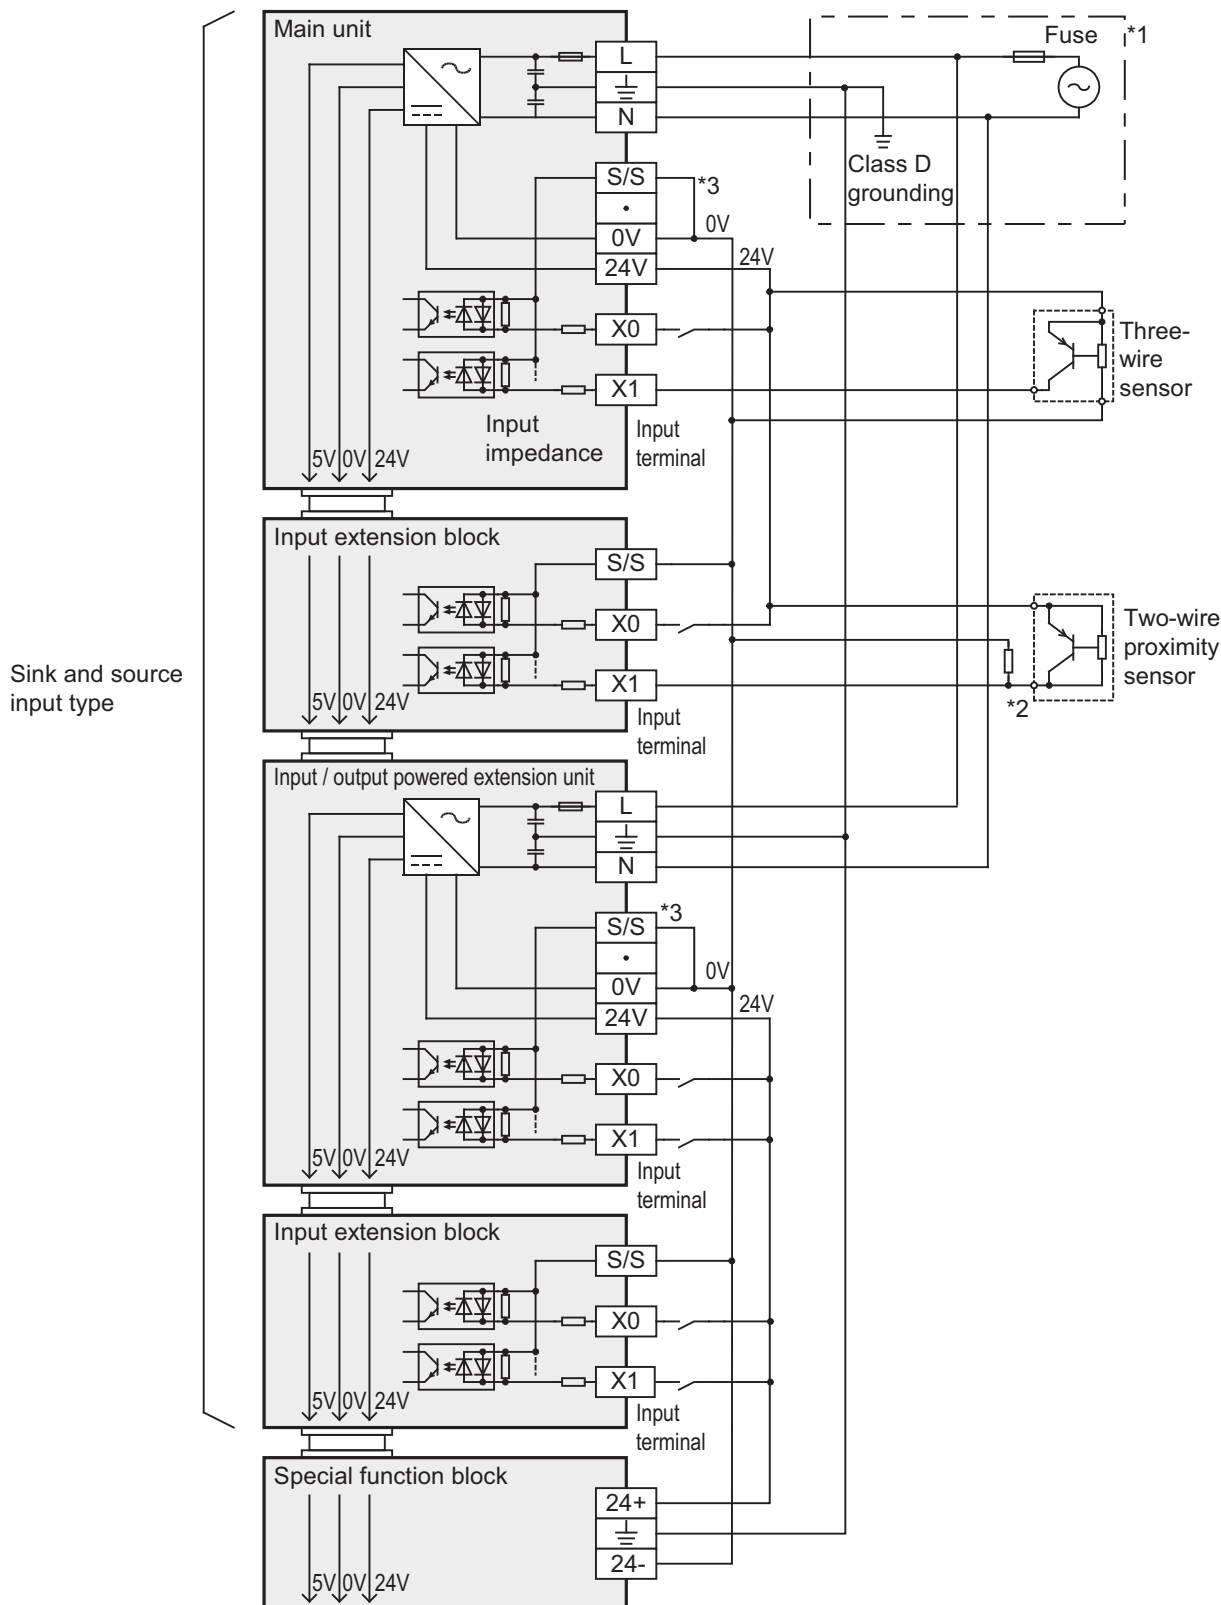


*1 Handle the power supply circuit correctly according to Chapter 9 "Preparation for Wiring and Power Supply Wiring Procedures."

*2 For an input device with a parallel resistance or a two-wire proximity switch, a bleeder resistance may be required.

*3 In case of source input wiring, short-circuit the terminals of the extension units as well as the S/S terminal and the 0V terminal of the main unit.

10.2.6 Examples of external wiring (sink input) [DC power supply type]

Sink and source input type

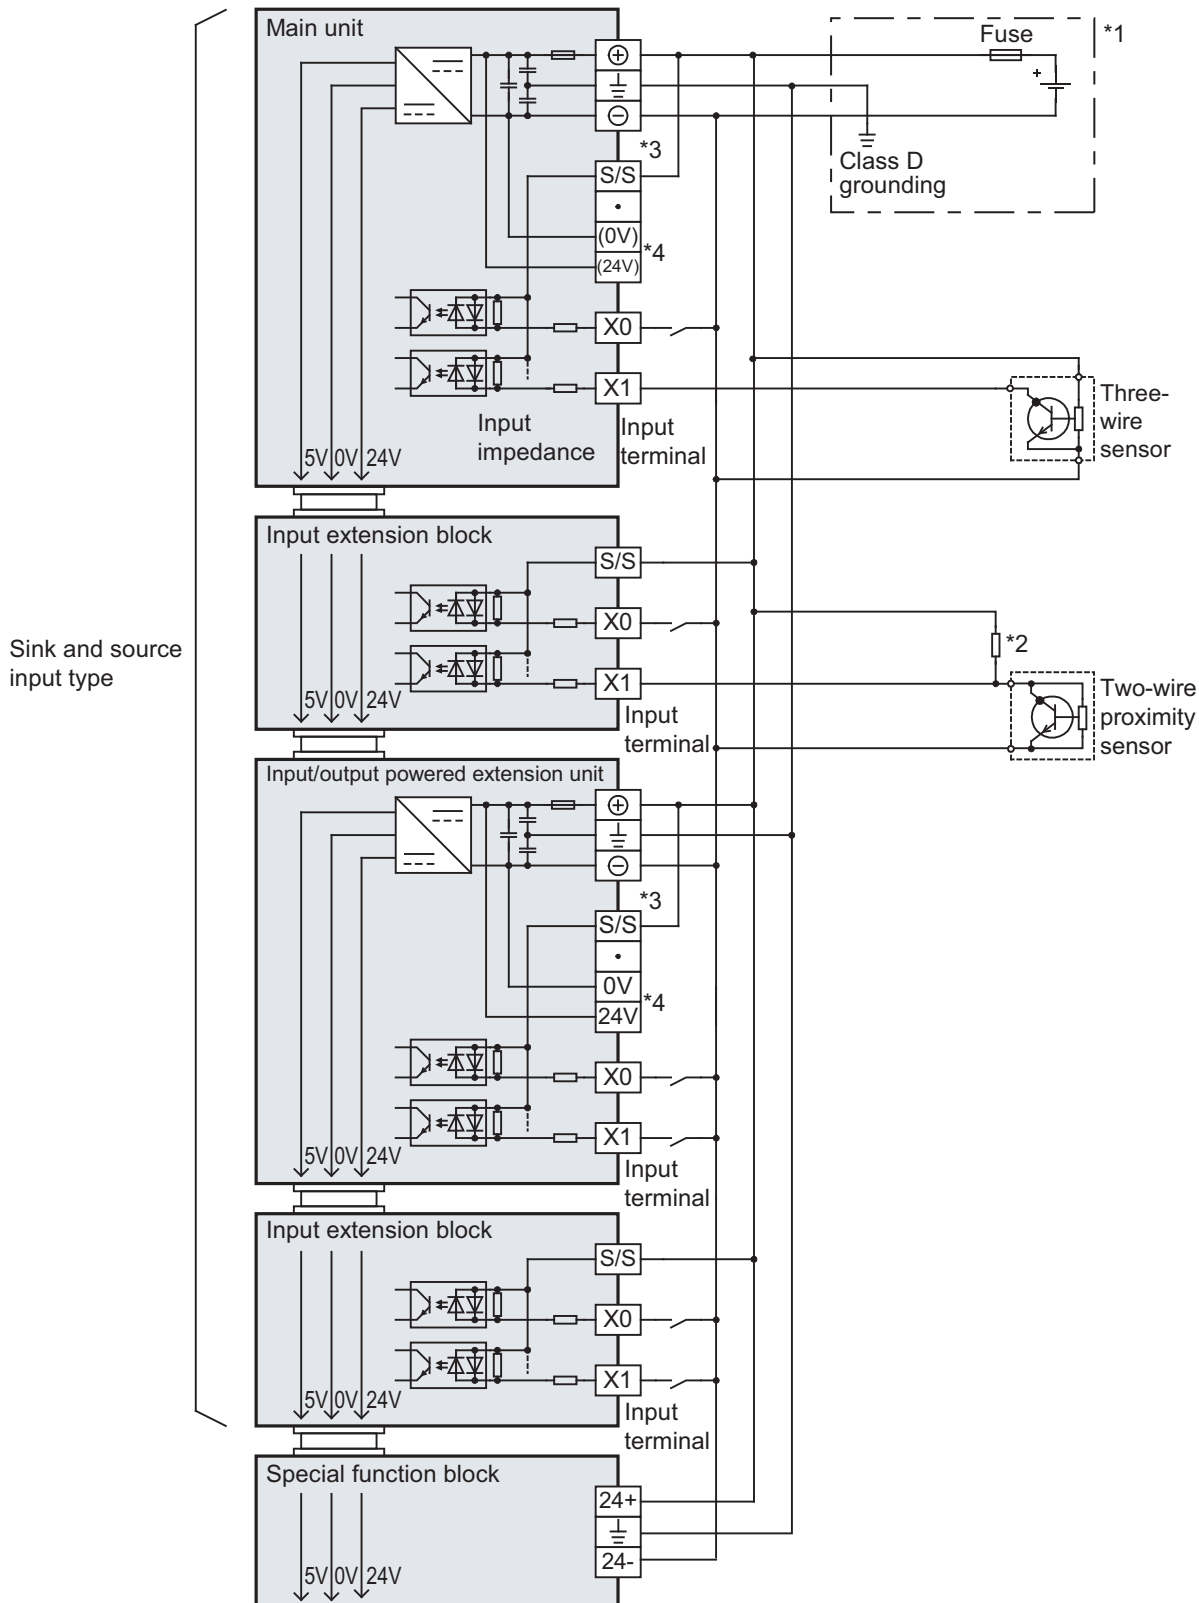


*1 Handle the power supply circuit correctly according to Chapter 9 "Preparation for Wiring and Power Supply Wiring Procedures."

*2 For an input device with a parallel resistance or a two-wire proximity switch, a bleeder resistance may be required.

*3 In case of sink input wiring, short-circuit the terminals of the extension units as well as the S/S terminal and the \oplus terminal of the main unit.

*4 Do not connect with (0V) and (24V) terminals.

Use of input/output extension units/blocks of sink input type

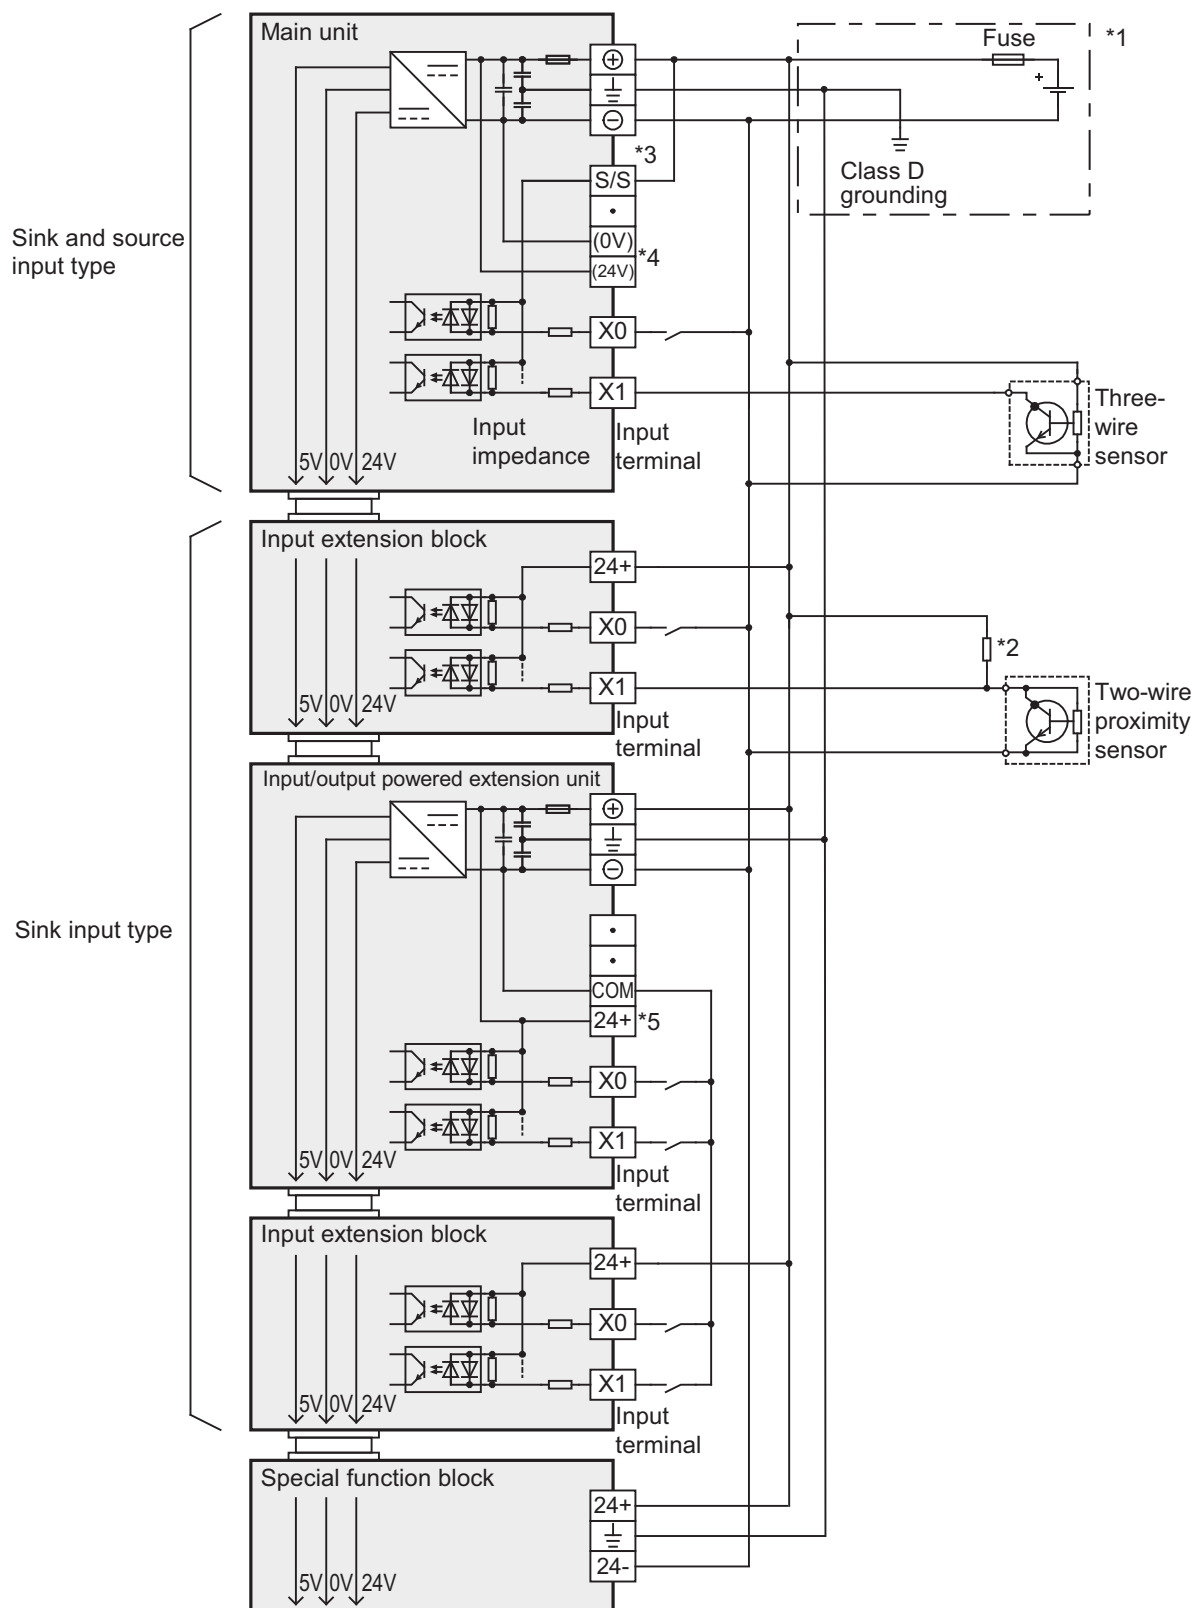

*1 Handle the power supply circuit correctly according to Chapter 9 "Preparation for Wiring and Power Supply Wiring Procedures."

*2 For an input device with a parallel resistance or a two-wire proximity switch, a bleeder resistance may be required.


*3 In case of sink input wiring, short-circuit the S/S terminal and the ⊕ terminal of the main unit.

*4 Do not connect with (0V) and (24V) terminals.

*5 Do not connect 24+ terminal.

10.2.7 Example of external wiring (source input) [DC Power Supply Type]

Sink and source input type

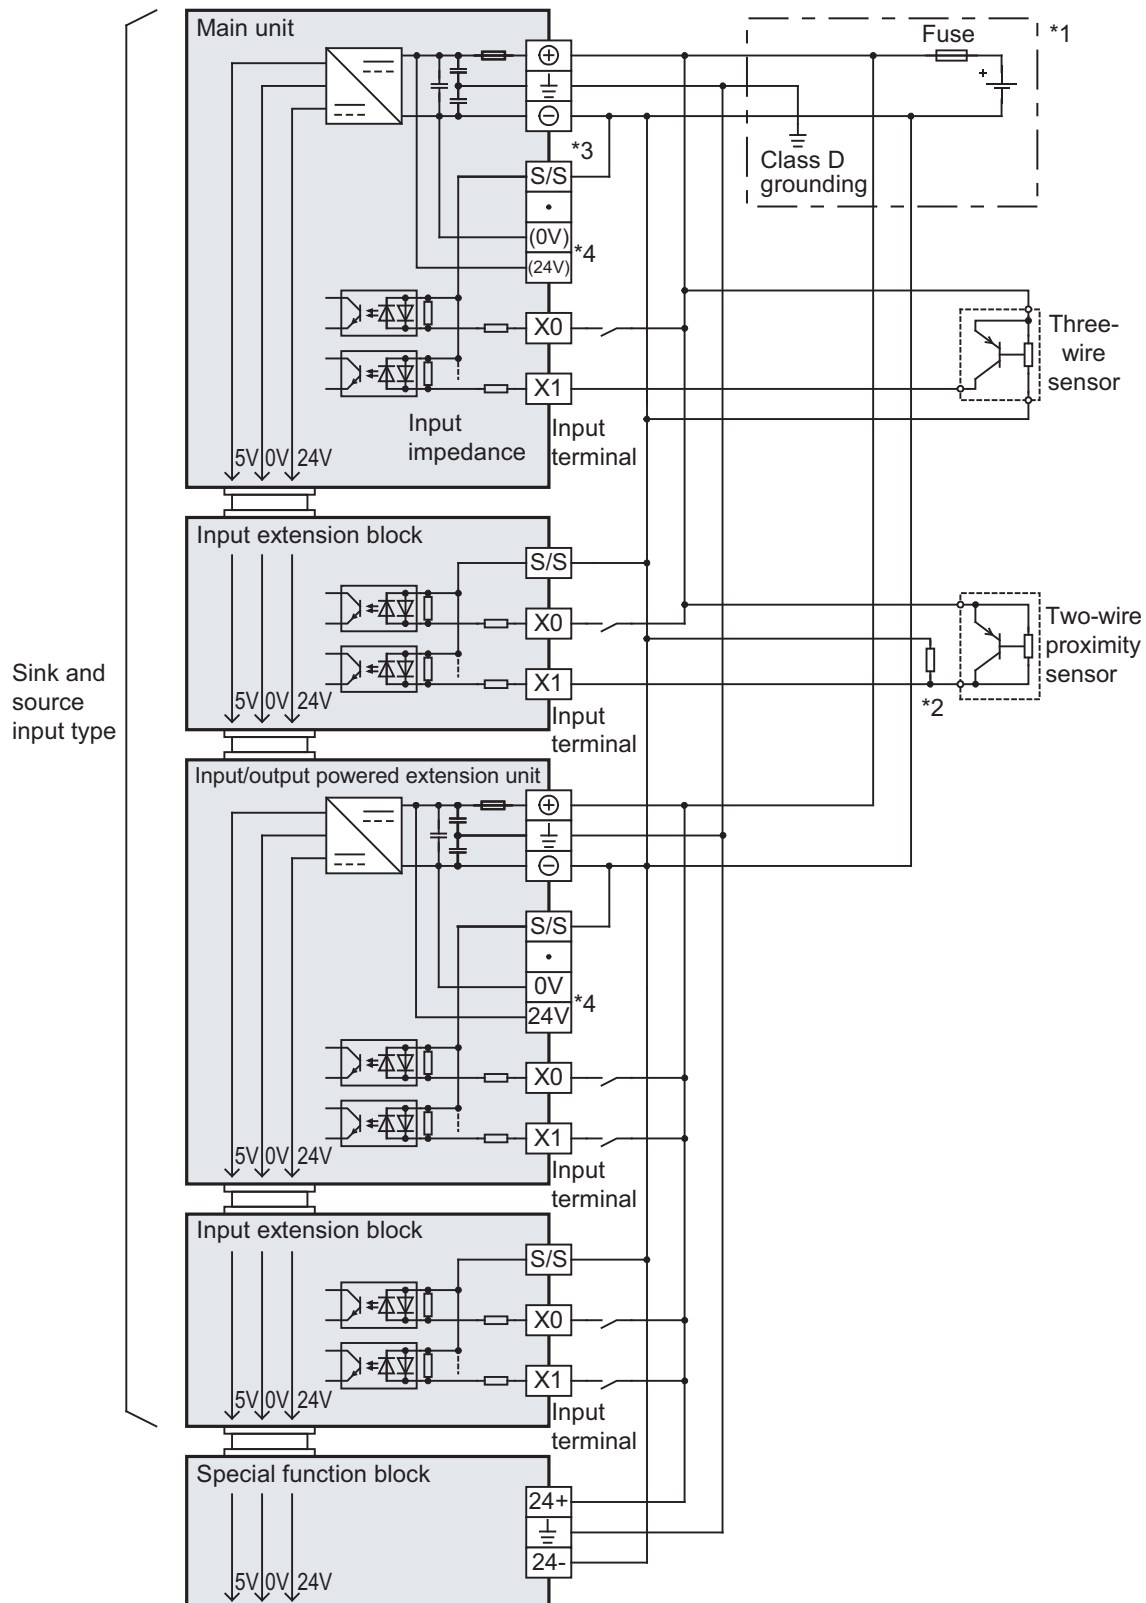

*1 Handle the power supply circuit correctly according to Chapter 9 "Preparation for Wiring and Power Supply Wiring Procedures."

*2 For an input device with a parallel resistance or a two-wire proximity switch, a bleeder resistance may be required.


*3 In case of source input wiring, short-circuit the terminals of the extension units as well as the S/S terminal and the \ominus terminal of the main unit.

*4 Do not connect with (0V) and (24V) terminals.

10.3 100V AC Input Type

The input specifications for the main unit, cautions on wiring the unit and examples of wiring are given below.

10.3.1 Input specifications (main unit)
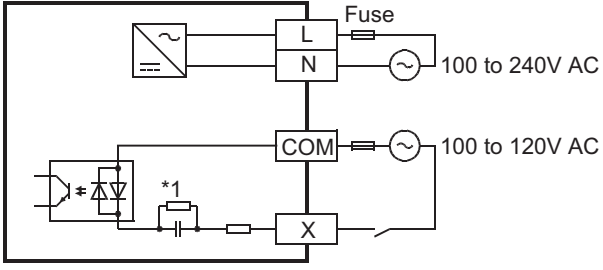
| Item | Specifications | |
|---|--|---------------|
| | FX3U-32MR/UA1 | FX3U-64MR/UA1 |
| Input points | 16 points | 32 points |
| Connection type | Removable terminal block (M3 screw) | |
| Input form | AC input | |
| Input signal voltage | 100 to 120V AC +10%, -15% 50/60Hz | |
| Input impedance | Approx. 21 k Ω /50Hz Approx. 18 k Ω /60Hz | |
| Input signal current | 4.7 mA/100V AC 50Hz (70% or less when turned on simultaneously) 6.2 mA/110V AC 60Hz (70% or less when turned on simultaneously) | |
| ON input sensitivity current | 3.8 mA or more | |
| OFF input sensitivity current | 1.7 mA or less | |
| Input response time | 30 ms or less (A high-speed receiving is improper) | |
| Input signal form | Contact input | |
| Input circuit insulation | Photocoupler insulation | |
| Indication of input operation | LED on panel lights when photocoupler is driven | |
| Input circuit diagram *1 Input impedance |  | |

10.3.2 Handling of 100V AC Input

1. Input terminal


When voltage of 100 to 120V AC is applied between the input terminal and COM terminal, the input terminal is turned on. The input display LED is lit.

Do not connect the COM terminal of an AC input type main unit and input/output powered extension unit/block with the COM terminal of a DC system.

2. Input circuit

The primary input circuit and the secondary input circuit are insulated with a photocoupler.

There is a delay of 30 ms or less in response to input switching from ON to OFF and from OFF to ON.

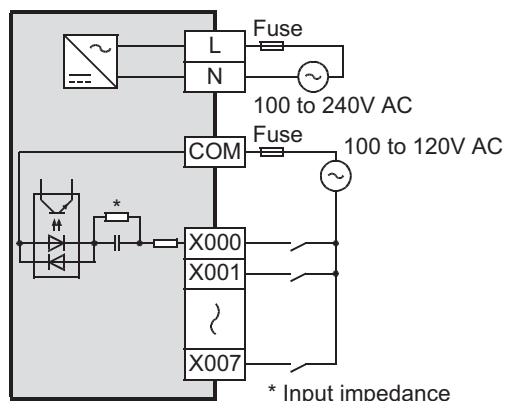

3. Input sensitivity

The input current and input sensitivity of these PLCs are shown in the following table.

| Input | | Specifications | |
|-------------------|-----|--------------------------------------|---|
| Input voltage | | 100 to 120V AC +10%, -15% 50/60Hz | |
| Input current | | 6.2 mA/110V 60Hz 4.7 mA/100V 50Hz | Percentage of simultaneous power-on: 70% or less |
| Input sensitivity | ON | 3.8 mA or more | |
| | OFF | 1.7 mA or less | |

4. Cautions on use

The response time of the AC input type is slower than that of the DC input type.

The applications shown below are not supported.

| | Unsupported Applications |
|-----------------------|--|
| High-speed processing | High-speed counter, input interruption, pulse catch, speed detection (SPD) instruction |
| Time division input | Input matrix (MTR) instruction, hexadecimal input (HKY) instruction, digital switch (DSW) instruction, arrow switch (ARWS) instruction |
| Other | Refresh and filter adjust (REFF) instruction, ten key input (TKY) instruction, absolute current value read (ABS) instruction |

1

Introduction

2

Features and
Part Names

3

Product
Introduction

4

Specifications

5

Version and
Peripheral
Devices

6

System
Configuration

7

Input/Output
Nos., Unit Nos.

8

Installation


9

Preparation and
Power Supply
Wiring

10

Input Wiring

10.3.3 Example of external wiring

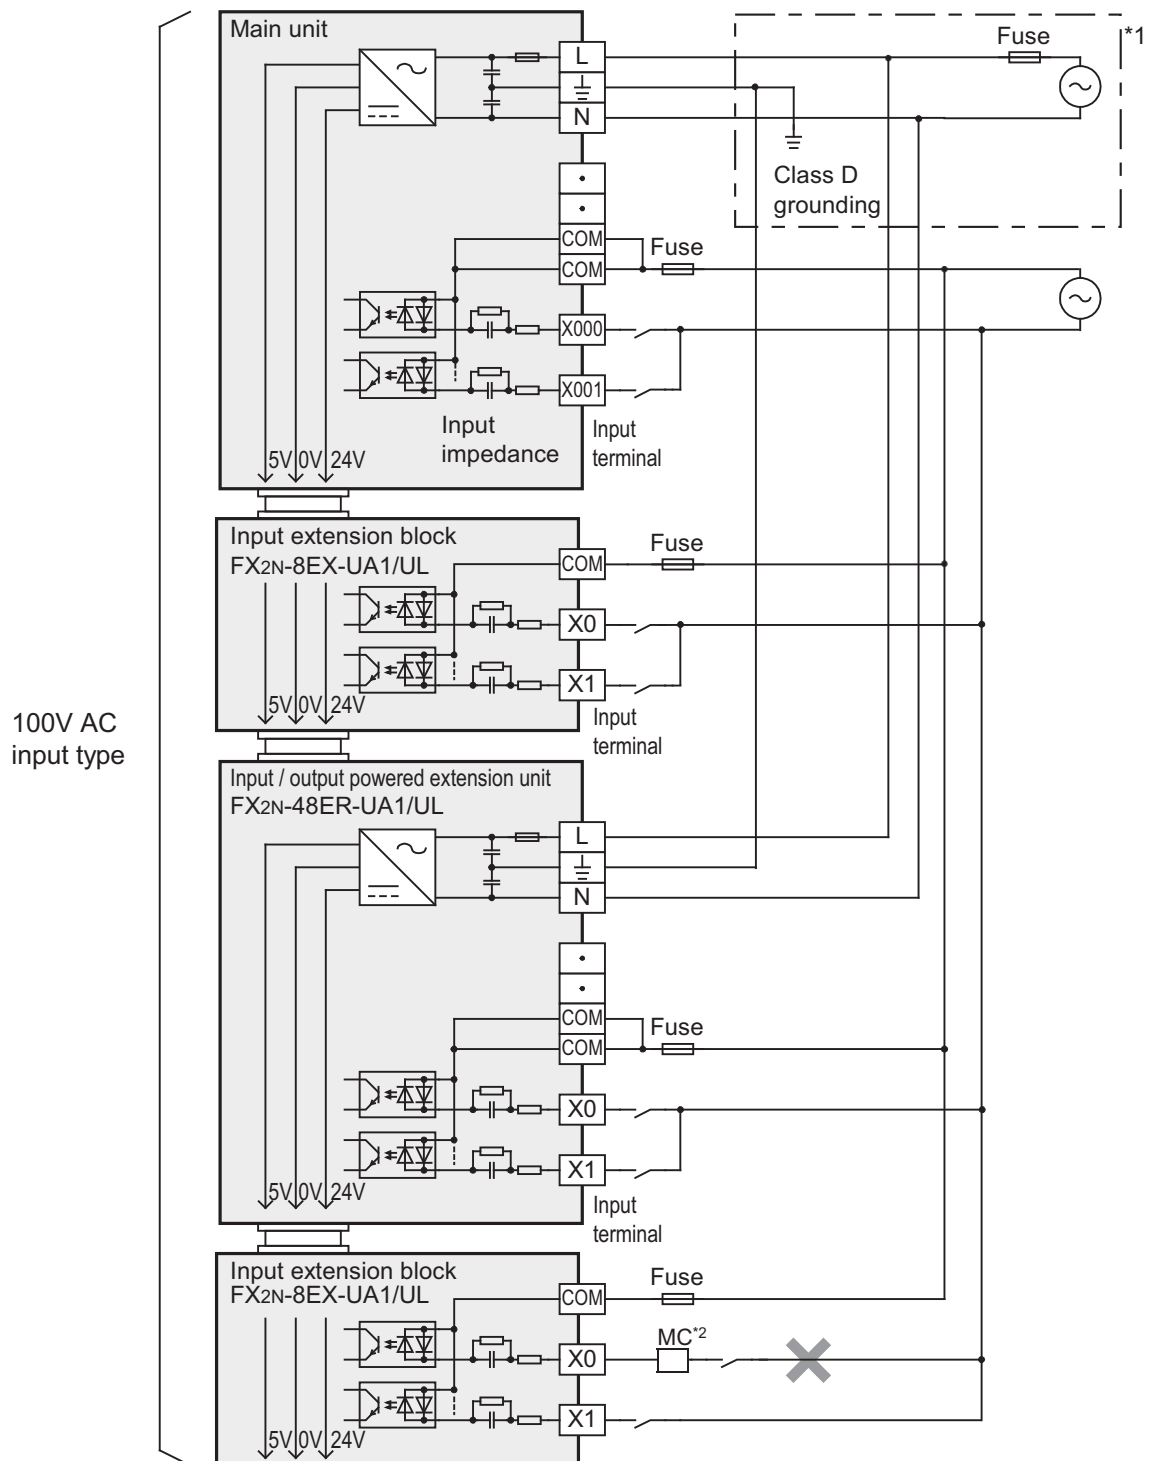

*1 Handle the power supply circuit correctly according to Chapter 9 "Preparation for Wiring and Power Supply Wiring Procedures."

*2 Do not take input signals from loads generating surge.

10.4 Input Interruption (I00□ to I50□) - With Delay Function

The PLC (main unit/DC input type) is provided with an input interruption function (input delay interruption function) and has six interruption input points.

The ON or OFF duration of interruption input signals should be 5μs or more.

→ For details on programming, refer to the programming manual.

10.4.1 Allocation of pointers to input numbers (input signal ON/OFF duration)

| Input No. | Interrupt pointer | | Interrupt disable control | ON or OFF duration of input signal |
|-----------|------------------------------|-------------------------------|---------------------------|------------------------------------|
| | Interruption on leading edge | Interruption on trailing edge | | |
| X000 | I001 | I000 | M8050 | 5μs or more |
| X001 | I101 | I100 | M8051 | |
| X002 | I201 | I200 | M8052 | |
| X003 | I301 | I300 | M8053 | |
| X004 | I401 | I400 | M8054 | |
| X005 | I501 | I500 | M8055 | |

10.4.2 Input interruption delay function

This input interruption has a function to delay execution of interruption routine in 1ms units.

With this delay function, the position of the sensor used for input interruption can be adjusted in the sequence program. It is unnecessary to adjust the actual position of the sensor.

→ For the programming, refer to the programming manual.

10.4.3 Cautions for input interruption



1. Non-overlap of input numbers

The input terminals X000 to X007 can be used for high-speed counter, input interruption, pulse catch, SPD, ZRN, DSZR and DVIT instructions and general-purpose inputs.

Take care not to overlap the input numbers.

2. Cautions on wiring

- The wiring length should be 5m or less.
- Connect a bleeder resistance of 1.5kΩ (1 W or more) to the input terminal, so that the sum of the load current of the open collector transistor output on the other side device and the input current of the main body is 20 mA or more.
 - Source input: PNP open collector transistor
 - Sink input: NPN open collector transistor

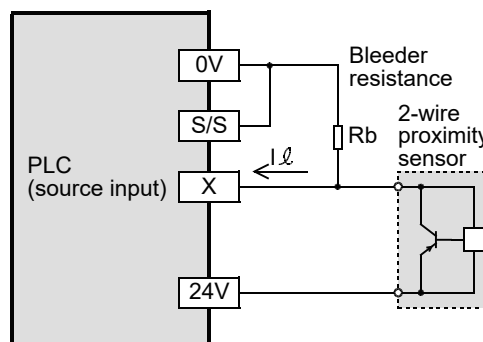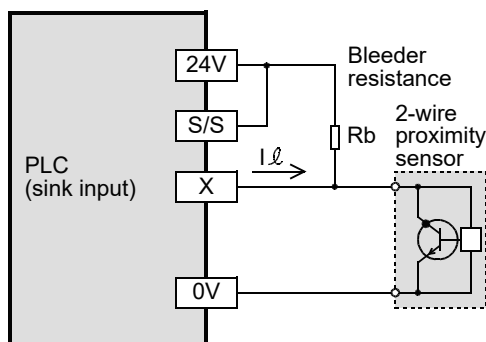


10.4.4 Examples of external wiring

Use shielded twisted-pair cables for connecting cables.
Ground the shield of each shielded cable only on the PLC side.

1. Examples of input interruption (I000 or I001) wiring using X000


When another input terminal is used, wire it according to the following diagrams.

1) When 24V DC service power supply is used

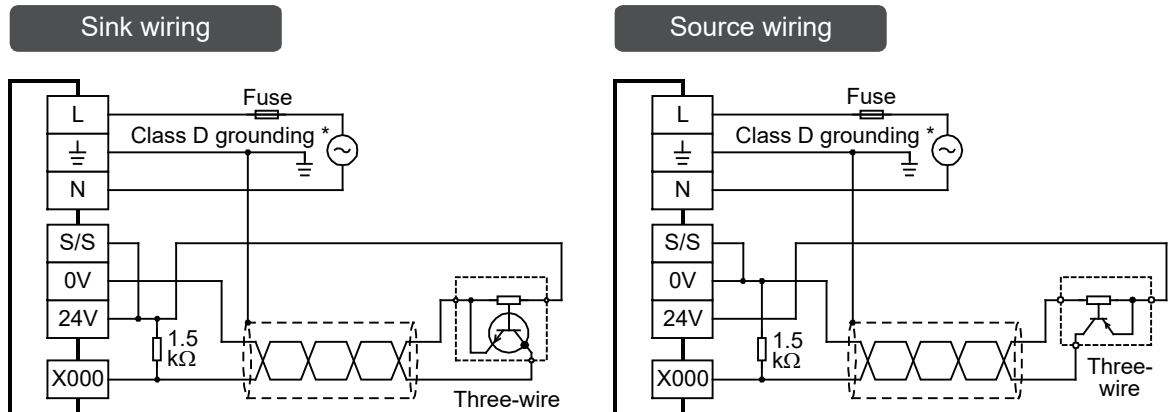

* The grounding resistance should be 100Ω or less.

2) When 24V DC external power supply is used

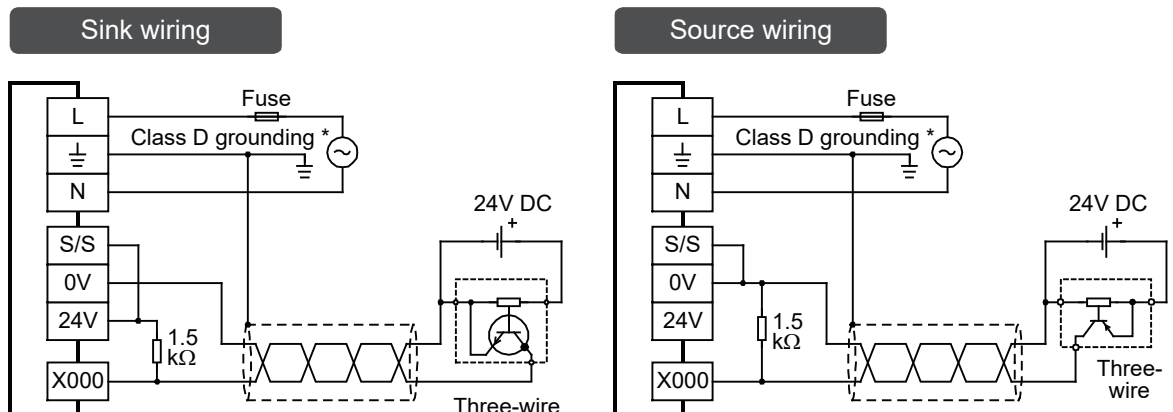

* The grounding resistance should be 100Ω or less.

10.5 Pulse Catch (M8170 to M8177)

The PLC (main unit/DC input type) is provided with a pulse catch function and has 8 pulse catch input points.
→ For details on programming, refer to the programming manual.

10.5.1 Allocation of special memories to input numbers (ON duration of input signals)

| Input No. | Contact on sequence program | ON duration of input signal |
|-----------|-----------------------------|-----------------------------|
| X000 | M8170 | 5μs or more |
| X001 | M8171 | |
| X002 | M8172 | |
| X003 | M8173 | |
| X004 | M8174 | |
| X005 | M8175 | 50μs or more |
| X006 | M8176 | |
| X007 | M8177 | |

10.5.2 Cautions for pulse catch

1. Non-overlap of input numbers

The input terminals X000 to X007 can be used for high-speed counter, input interruption, pulse catch, speed detection (SPD) instructions and general-purpose input.
Take care not to overlap the input numbers.

2. Cautions on wiring

- The wiring length should be 5 m (16'4") or less.
- Connect a bleeder resistance of 1.5kΩ (1 W or more) to the input terminal, so that the sum of the load current of the open collector transistor output on the other side device and the input current of the main body is 20 mA or more.


10.5.3 Examples of external wiring

Use shielded twisted-pair cables for connecting cables.
Ground the shield of each shielded cable only on the PLC side.

1. Examples of pulse catch (M8170) wiring using X000


When another input terminal is used, wire it according to the following diagrams.

- 1) When 24V DC service power supply is used

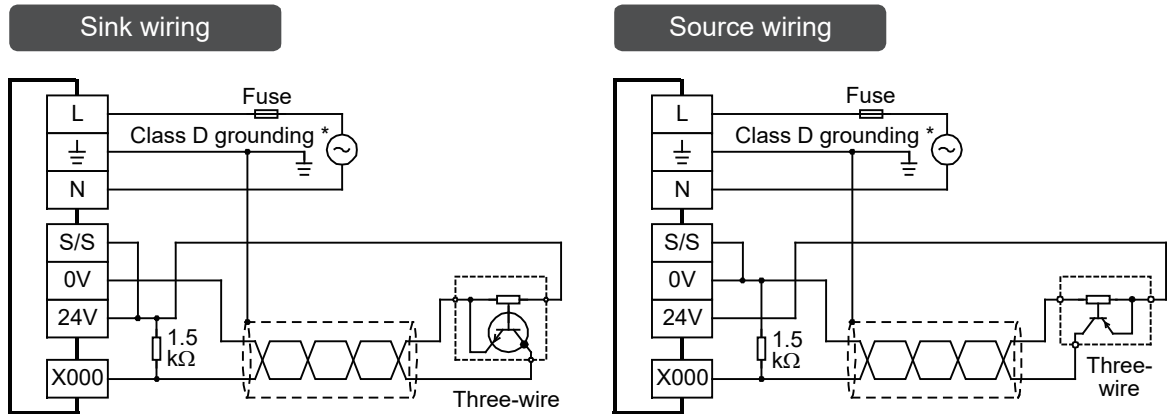

* The grounding resistance should be 100Ω or less.

- 2) When 24V DC external power supply is used

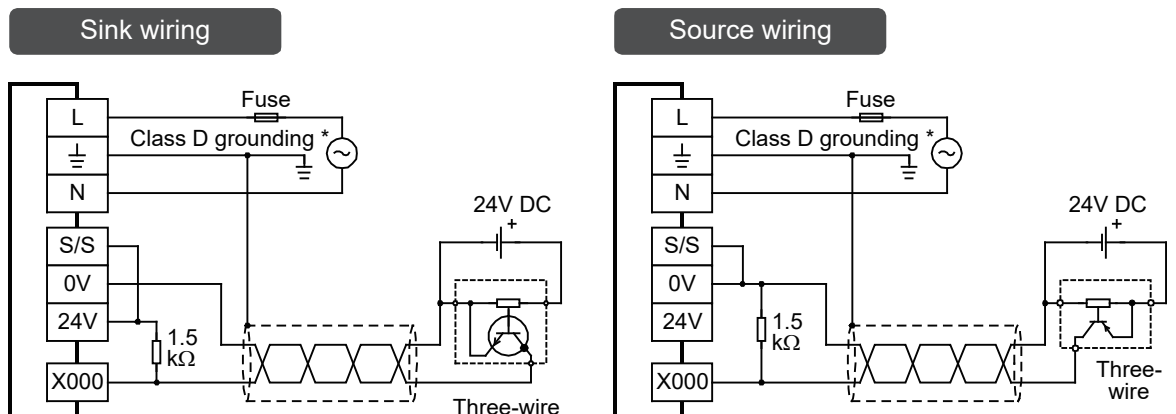

* The grounding resistance should be 100Ω or less.

11. Use of High-speed Counters (C235 to C255)


High-speed counters corresponds only to the DC input type main unit.

11.1 Outline

The high-speed counters can count the signals to the general-purpose input terminals to the main unit or to the high-speed input special adapters (options). These two types of counters differ in the maximum response frequency and type of input signals to be counted.

→ For details, refer to Section 11.2.

- General-purpose input terminals of main unit
Signals from an open collector transistor output can be input to the counters. The counters can count signals of up to 100kHz (1-phase).
- High-speed input special adapters
Signals from a differential line driver output can be input to the counters. The counters can count signals of up to 200kHz (1-phase).

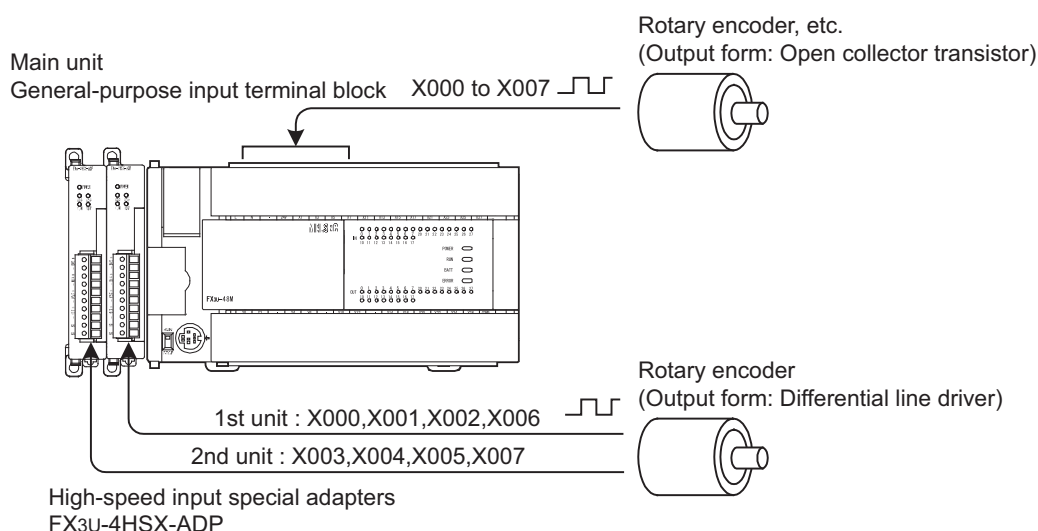

Cautions for high-speed input special adapters

Do not use the same input number for both the high-speed input special adapter terminal and the main unit terminal.

- When wiring the input numbers assigned to a high-speed input special adapter, do not wire the same input number in main unit.
- When not wiring the input numbers assigned to a high-speed input special adapter, the main unit's input terminals can be used as general inputs.

11.2 Input Specifications

For input to the high-speed counters, the input terminals X000 to X007 of the main unit or high-speed input special adapter are used.

→ For the input specifications for X000 to X007 of the main unit, refer to Section 10.2.

11.2.1 High-speed input special adapter (FX3U-4HSX-ADP)

1. Performance specifications

| Item | Specification | | |
|------------------------|--|--------|--|
| Number of input points | 4 points (These points are not included in the total number of PLC input/output points.) | | |
| Input form | Differential line receiver (equivalent to AM26C32) | | |
| Max. input frequency | 1-phase 1-input | 200kHz | High-speed counter operating with hardware counter ^{*1} |
| | 1-phase 2-input | | |
| | 2-phase 2-input | 100kHz | |
| Min. pulse width | 1 μs or more | | |
| Insulation | The external wiring of the input block and the PLC are insulated with a photocoupler or a transformer. | | |
| Wiring length | Up to 10m | | |


*1. The maximum input frequency to the software counters^{*2} is the same as that of signals to be captured to the input terminals of the main unit.

→ For details on the response frequency, refer to Subsection 11.9.2.

*2. The software counters include hardware counters that operate as software counters.

→ For the conditions under which the hardware counters operate as software counters, refer to Subsection 11.8.1.

2. Internal circuit of input interface

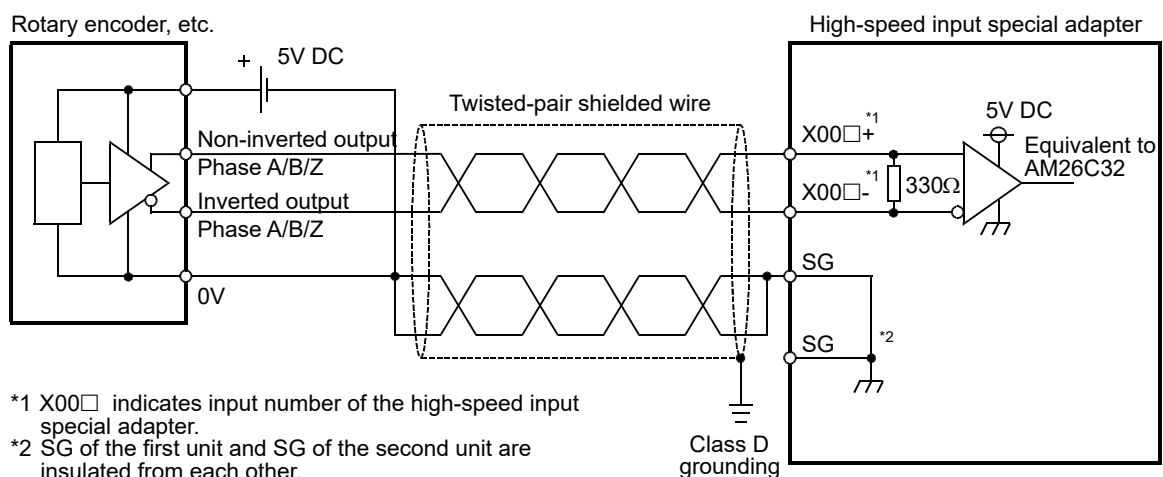

11.2.2 Cautions on connecting mating device

Encoders with the output forms in the following table can be connected to the input terminals. (The encoders may not function correctly depending on electrical compatibility. Check the specifications in advance.)

Voltage output type encoders and absolute encoders cannot be connected to the high-speed counter input terminals.

| Terminals for connecting | Output form that can be directly connected |
|----------------------------------|--|
| Input terminals of main unit | Open collector transistor output form (applicable to 24V DC) |
| Input terminals of FX3U-4HSX-ADP | Differential line driver output form Set the input voltage of FX3U-4HSX-ADP to 5V DC or less. |

11.3 Types of Counting and Operations

The main unit has built-in 32-bit high-speed bi-directional counters (1-phase 1-count input, 1-phase 2-count input and 2-phase 2-count input). The high-speed counters are classified into hardware counters and software counters according to the counting method.

For some high-speed counters, external reset input terminals or external start input terminals (start of counting) can be selected.

11.3.1 Classification according to counting method

| Classification | Details |
|-------------------|---|
| Hardware counters | Counting by hardware They are switched to software counters under some working conditions. |
| Software counters | Counting through interrupt handling by CPU Each counter must be used within limitations on maximum response frequency and overall frequency. |

11.3.2 Types and input signal forms

The types and input signals (waveforms) of high-speed counters (1-phase 1-count input, 1-phase 2-count input and 2-phase 2-count input) are shown below.

| Type of counter | Input signal form | Counting direction |
|-----------------------|---|--|
| 1-phase 1-count input | UP/DOWN | Down-counting or up-counting is specified by turning on or off M8235 to M8245. ON: Down-counting OFF: Up-counting |
| 1-phase 2-count input | UP DOWN | Up-counting or down-counting The counting direction can be checked with M8246 to M8250. ON: Down-counting OFF: Up-counting |
| 2-phase 2-count input | 1 edge count Phase A Phase B Up-counting Down-counting | Automatic up-counting or down-counting according to change in input status of phase A/B The counting direction can be checked with M8251 to M8255. ON: Down-counting OFF: Up-counting |
| | 4 edge count Phase A Phase B Up-counting Down-counting | |

11.3.3 High-speed counter device notations

The input terminal assignments for FX3U PLC high-speed counters can be switched when used in combination with a special auxiliary relay.

This section classifies these high-speed counter devices under the following notations. Note that an "(OP)" input cannot be programmed.

| Standard Device Numbers | Switched Device Numbers | Standard Device Numbers | Switched Device Numbers |
|-------------------------|-------------------------|-------------------------|-------------------------|
| C244 | C244(OP) | C248 | C248(OP) |
| C245 | C245(OP) | C253 | C253(OP) |

11.4 List of Device Numbers and Functions

→ For details on the counter number (OP), refer to Subsection 11.3.3.

| Counter type | Device No. (counter) | Classification | 1 edge count/ 4 edge count | Data length | External reset input terminal | External start input terminal |
|-----------------------------|--|-----------------------------------|-------------------------------|-------------------------------------|----------------------------------|----------------------------------|
| 1-phase 1-count input | C235 ^{*2} C236 ^{*2} C237 ^{*2} C238 ^{*2} C239 ^{*2} C240 ^{*2} | Hardware counter ^{*1} | — | 32-bit bi-directional counter | None | None |
| | C244(OP) ^{*3} C245(OP) ^{*3} | | — | | | |
| | C241 C242 C243 | Software counter | — | | Provided ^{*5} | None |
| | C244 ^{*3} C245 ^{*3} | | — | | Provided ^{*5} | Provided |
| 1-phase 2-count input | C246 ^{*2} C248(OP) ^{*2*3} | Hardware counter ^{*1} | — | 32-bit bi-directional counter | None | None |
| | C247 C248 ^{*3} | Software counter | — | | Provided ^{*5} | None |
| | C249 C250 | | — | | Provided ^{*5} | Provided |
| 2-phase 2-count input | C251 ^{*2} | Hardware counter ^{*1} | 1 edge count ^{*4} | 32-bit bi-directional counter | None | None |
| | | | 4 edge count ^{*4} | | | |
| | C253 ^{*2} | | 1 edge count ^{*4} | | Provided ^{*5} | |
| | | | 4 edge count ^{*4} | | | |
| | C252 | Software counter | 1 edge count ^{*4} | | Provided ^{*5} | None |
| | | | 4 edge count ^{*4} | | | |
| | C253(OP) ^{*6} | | 1 edge count ^{*4} | | None | |
| | | | 4 edge count ^{*4} | | | |
| | C254 C255 | | 1 edge count ^{*4} | | Provided ^{*5} | Provided |
| 4 edge count ^{*4} | | | | | | |

- *1. These counters are handled as software counters depending on working conditions. When they are handled as software counters, they have limitations on maximum response frequency and overall frequency.
→ For the conditions under which they are handled as software counter, refer to Section 11.8.
→ For the overall frequency, refer to Section 11.9.
- *2. When the input terminals of the main unit receive pulses with a response frequency of 50 kHz to 100 kHz, wire the terminals as stated below.
- The wiring length should be 5m (16'4") or less.
- Connect a bleeder resistance of 1.5kΩ (1W or more) to the input terminal, so that the load current of the open collector transistor output on the mating device side is 20mA or more.
→ For the wiring, refer to Section 11.10.
- *3. C244, C245 and C248 are usually used as software counters. When they are used in combination with special auxiliary relays (M8388 and M8390 to M8392), they can be used as hardware counters C244(OP), C245(OP) and C248(OP).
→ For the procedures on switching the counter function, refer to Subsection 11.11.3.
- *4. The 2-phase 2-input counters are 1 edge count counters. When they are used in combination with special auxiliary relays (M8388, M8198 and M8199), they can be used as 4 edge count counters.
→ For the procedures on using them as 4 edge count counters, refer to Subsection 11.11.4.

- *5. The external reset input terminals are reset when they are turned on. When they are used in combination with special auxiliary relays (M8388 and M8389), they can be reset when turned off.
→ **For the procedures on changing the external reset input logic, refer to Subsection 11.11.3.**
- *6. C253 is usually used as a hardware counter. When it is used in combination with the special auxiliary relay (M8388 and M8392), it can be used as a counter C253(OP) without reset input.
In this case, C253(OP) is handled as a software counter.

11

High-Speed
Counters

12

Output Wiring

13

Wiring for
Various Uses

14

Test Run,
Maintenance,
Troubleshooting

15

Input/Output
Powered
Extension Units

16

Input/Output
Extension
Blocks

17

Extension
Power Supply
Unit

18

Other Extension
Units and
Options

19

Display Module

20

Terminal Block

11.5 Allocation of Device Numbers to Input Numbers

The high-speed counter numbers are allocated to the input terminals X000 to X007 as shown in the following table.

The input terminals not allocated for high-speed counters can be used as general input terminals.

11.5.1 Allocation table

The allocation of the first unit of FX3U-4HSX-ADP is shown in the heavy-line frames.

H/W: Hardware counter S/W: Software counter U: Up-count input D: Down-count input

A: A-phase input B: B-phase input R: External reset input S: External start input

| Terminals to be connected | | Input allocation | | | | | | | |
|--|----------|------------------|------|------|------|------|------|------|------|
| | | X000 | X001 | X002 | X003 | X004 | X005 | X006 | X007 |
| • Input terminals of main unit | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| • FX3U-4HSX-ADP High-speed input special adapters | 1st unit | ✓ | ✓ | ✓ | – | – | – | ✓ | – |
| | 2nd unit | – | – | – | ✓ | ✓ | ✓ | – | ✓ |

| Type of counter | Counter No. | Classification | Input allocation | | | | | | | |
|-------------------------------------|--------------------------|-------------------|------------------|------|------|------|------|------|------|------|
| | | | X000 | X001 | X002 | X003 | X004 | X005 | X006 | X007 |
| 1-phase 1-count input | C235 ^{*1} | H/W ^{*2} | U/D | | | | | | | |
| | C236 ^{*1} | H/W ^{*2} | | U/D | | | | | | |
| | C237 ^{*1} | H/W ^{*2} | | | U/D | | | | | |
| | C238 ^{*1} | H/W ^{*2} | | | | U/D | | | | |
| | C239 ^{*1} | H/W ^{*2} | | | | | U/D | | | |
| | C240 ^{*1} | H/W ^{*2} | | | | | | U/D | | |
| | C241 | S/W | U/D | R | | | | | | |
| | C242 | S/W | | | U/D | R | | | | |
| | C243 | S/W | | | | | U/D | R | | |
| | C244 | S/W | U/D | R | | | | | S | |
| | C244(OP) ^{*3} | H/W ^{*2} | | | | | | | U/D | |
| | C245 | S/W | | | U/D | R | | | | S |
| 1-phase 2-count input | C246 ^{*1} | H/W ^{*2} | U | D | | | | | | |
| | C247 | S/W | U | D | R | | | | | |
| | C248 | S/W | | | | U | D | R | | |
| | C248(OP) ^{*1*3} | H/W ^{*2} | | | | U | D | | | |
| | C249 | S/W | U | D | R | | | | S | |
| 2-phase 2-count input ^{*4} | C250 | S/W | | | | U | D | R | | S |
| | C251 ^{*1} | H/W ^{*2} | A | B | | | | | | |
| | C252 | S/W | A | B | R | | | | | |
| | C253 ^{*1} | H/W ^{*2} | | | | A | B | R | | |
| | C253(OP) ^{*3} | S/W | | | | A | B | | | |
| | C254 | S/W | A | B | R | | | | S | |
| | C255 | S/W | | | | A | B | R | | S |

*1. When the input terminals of the main unit receive pulses with a response frequency of 50 kHz to 100 kHz, wire the terminals as stated below.

- The wiring length should be 5m (16'4") or less.
- Connect a bleeder resistance of 1.5kΩ (1 W or more) to the input terminal, so that the load current of the open collector transistor output on the mating device side to 20mA or more.

→ For the wiring, refer to Section 11.10.

- *2. When the comparison set/reset instructions (DHSCS, DHSCR, DHSZ and DHSCT) for high-speed counters are used, the hardware (H/W) counters are switched to software (S/W) counters. When the input signal logic is inverted by the reset input signal logic switching function (M8388 and M8389), C253 is switched from a hardware counter to a software counter.
→ **For the conditions under which it is handled as a software counter, refer to Section 11.8.**
- *3. The input terminals to be used and the functions are switched by driving the special auxiliary relays in the program.
→ **For the procedures on switching to hardware counters, refer to Subsection 11.11.3.**
- *4. The 2-phase 2-count input counters are 1 edge count counters. The use of special auxiliary relays changes them to 4 edge count counters.
→ **For the procedures on operating them as 4 edge count counters, refer to Subsection 11.11.4.**

11.5.2 Inhibition of redundant use of input numbers

- The input terminals X000 to X007 can be used for high-speed counters, input interruption, pulse catch, SPD, ZRN, DSZR and DVIT instructions and general-purpose inputs. Take care not to overlap the input numbers.
- The same input numbers are allocated to the input terminals on FX3U-4HSX-ADP and the input terminals of the main unit of FX3U PLC. Use one of the terminals with the same number. If both input terminals are being used, intended operation cannot be realized because the input terminals on FX3U-4HSX-ADP and the main unit operate in the OR relation.

11

High-Speed
Counters

12

Output Wiring

13

Wiring for
Various Uses

14

Test Run,
Maintenance,
Troubleshooting

15

Input/Output
Powered
Extension Units

16

Input/Output
Extension
Blocks

17

Extension
Power Supply
Unit

18

Other Extension
Units and
Options

19

Display Module

20


Terminal Block

11.6 Handling of High-speed Counters

11.6.1 1-phase 1-count input


Examples of program

1) For C235

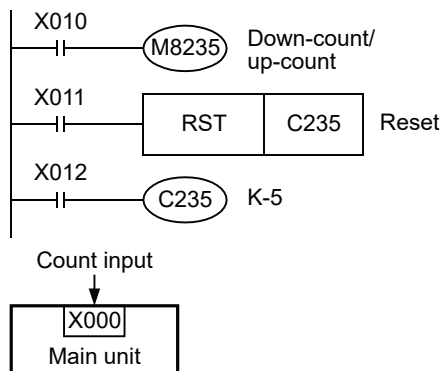

- C235 counts the number of times the input terminal X000 switches from OFF to ON while X012 is on.
- While X011 is on, the counter resets when RST instruction is executed.
- The counters C235 to C245 switch to the down-count or up-count mode by turning on or off M8235 to M8245.


2) For C244

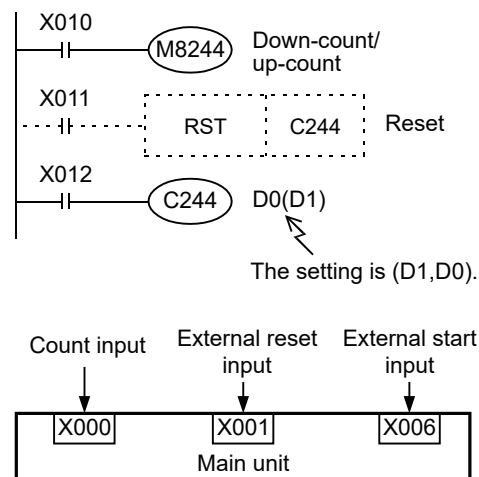

- C244 starts counting immediately when the input terminal X006 turns on while X012 is on. The count input terminal is X000. The setting for this example is the data of the indirectly designated data register (D1,D0).
- C244 can be reset by X011 on the sequence. For C244, X001 is allocated as the external reset input. The counter resets immediately when X001 turns on.
- The counters C235 to C245 switch to the down-count or up-count mode by turning on or off M8235 to M8245.

Example of operation

The above counter C235 operates as shown below.

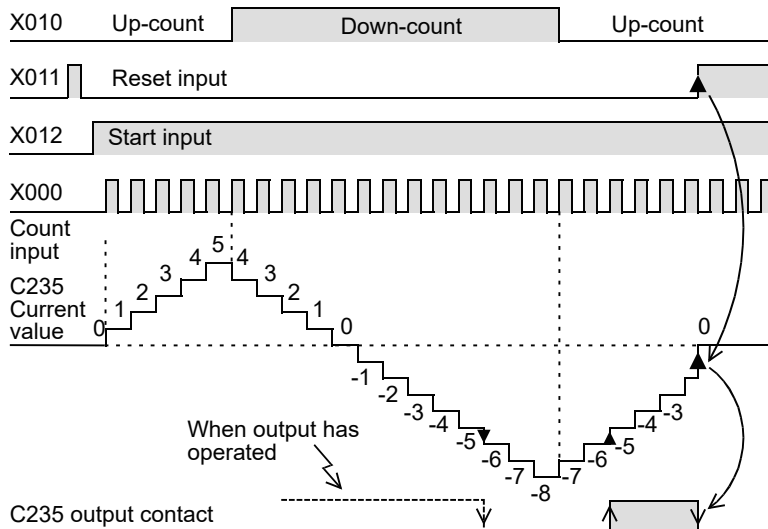

C235 is set to the up-count or down-count mode through interruption by the count input X000.

- When the current value increases from -6 to -5, the output contact is set, and when the value decreases from -5 to -6, it is reset.
- The current value increases and decreases regardless of the operation of the output contact. However, when the counter's value increments from 2,147,483,647, it changes to -2,147,483,648. In the same manner, when it decrements from -2,147,483,648, it changes to 2,147,483,647. (This type of counter is called a ring counter.)
- When RST instruction is executed after the reset input X011 turns on, the current counter's value resets to 0, and the output contact is restored.
- The current values, output contact operations and reset status of the high-speed counters for retention upon power failure are kept even if power is turned off.


11.6.2 1-phase 2-count input

These counters are 32-bit up-count/down-count binary counters.

The operations of the output contact according to the current value are the same as those of the above-mentioned 1-phase 1-count input high-speed counters.


Examples of program

1) For C246

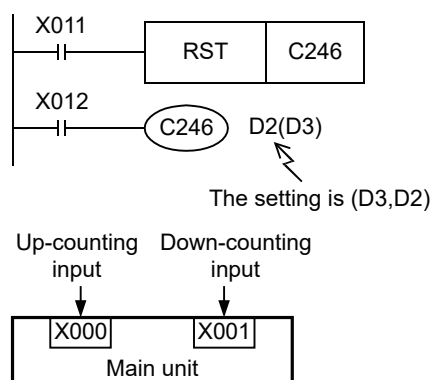

- While X012 is on, C246 increments the value when the input terminal X000 switches from OFF to ON and decrements the value when the input terminal X001 switches from OFF to ON.
- The down-count/up-count operations of C246 to C250 can be monitored through the ON/OFF operations of M8246 to M8250.
ON: Down-counting
OFF: Up-counting

2) For C249

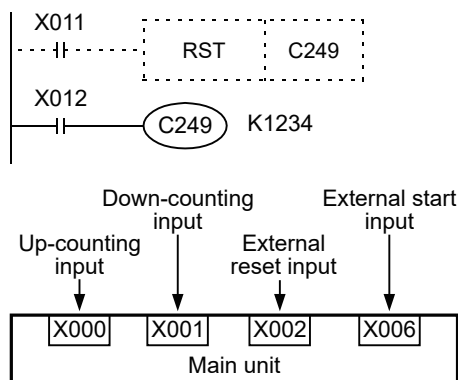

- While X012 is on, C249 starts counting immediately when the input terminal X006 turns on. The up-counting input terminal is X000, and the down-counting input terminal is X001.
- C249 can be reset on the sequence by X011. For C249, X002 is allocated as reset input. When X002 turns on, C249 is immediately reset.
- The down-count/up-count operations of C246 to C250 can be monitored through the ON/OFF operations of M8246 to M8250.
ON: Down-counting
OFF: Up-counting


11.6.3 2-phase 2-count input

These counters are 32-bit up-count/down-count binary counters.

The operations of the output contact according to the current value are the same as those of the above-mentioned 1-phase 1-count input high-speed counters.


Examples of program

1) For C251

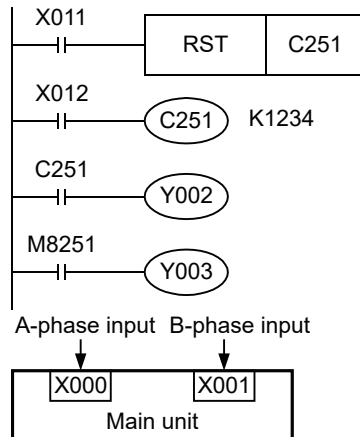

- While X012 is on, C251 counts the operation of the input terminals X000 (A-phase) and X001 (B-phase) through interruption. While X011 is turned on, the counter is reset when RST instruction is executed.
- When the current value exceeds the setting, Y002 turns on, and when the current value becomes lower than the setting, Y002 turns off.
- Y003 turns on (down-count) or off (up-count) according to the counting direction.


2) For C254

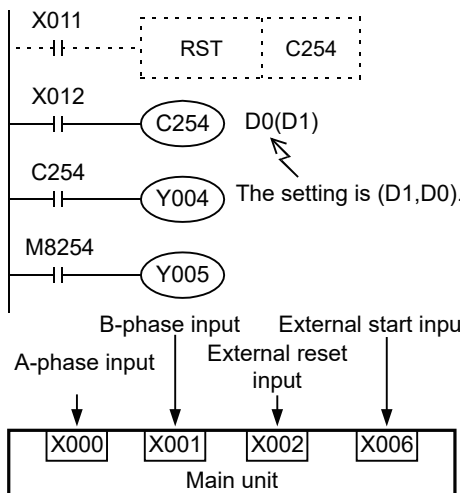


- C254 starts counting immediately when the input terminal X006 is turned on while X012 is on. The count input terminals are X000 (A-phase) and X001 (B-phase).
- C254 is reset by X011 on the sequence, and it is reset immediately when X002 is turned on.
- When the current value exceeds the setting (D1,D0), Y004 operates, and when the current value becomes lower than the setting, Y004 turns off.
- Y005 turns on (down-count) or off (up-count) according to the counting direction.

- A 2-phase encoder generates A-phase output and B-phase output between which there is a 90° phase difference. The high-speed counter automatically counts up or down according to the output as shown below.

- Operation by 1 edge count

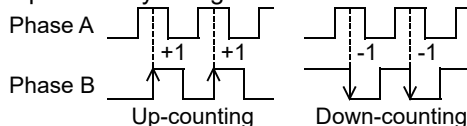

- Operation by 4 edge count

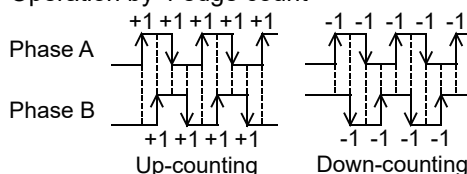

- The down-count/up-count operations of C251 to C255 can be monitored through the ON/OFF operations of M8251 to M8255.
ON: Down-counting
OFF: Up-counting

11.7 Timing of Updating of Current Value and Comparison of Current Value

11.7.1 Timing of updating of current value

When a pulse is input to a high-speed counter input terminal, the counter increments or decrements. The current value of the device is updated at the timing shown in the following table.

Therefore, when the hardware counter directly handles the current value of the high-speed counter for MOV instruction or CMP instruction or an applied instruction (such as a contact comparison instruction), it uses the current value updated at the timing shown in the following table. As a result, the counter operation is affected by the scan time.

| Classification | Timing of updating of current value |
|------------------|---|
| Hardware counter | OUT instruction of counter HCMOV instruction |
| Software counter | When count is input |

11.7.2 Comparison of current value

To compare and output the current value of a high-speed counter, the following two methods are available.

1. Use of comparison instruction (CMP), band comparison instruction (ZCP) or contact comparison instruction

When the comparison results are necessary for counting operation, the value can be compared with time^{*1} in the main program by using HCMOV instruction just before a comparison command (CMP command/ZCP command) or a contact comparison instruction.

- *1. To compare the value with the high-speed counter's changing value and to change the output contact (Y), use Comparison instruction for high-speed counters (HSCS/HSCR/HSZ/HSCT instruction).

2. Use of Comparison instruction for high-speed counters (HSCS/HSCR/HSZ/HSCT instruction)

Comparison instructions for high-speed counters (HSCS, HSCR, HSZ and HSCT instructions) perform comparison and output the comparison results when the relevant high-speed counting operation. These instructions have limitations on the number of simultaneously driven instructions as shown in the following table. The HSCT instruction can only be used once in any program.

When the output relay (Y) has been designated for comparison results, the ON/OFF status of the output is affected directly until END instruction output is refreshed.

When the PLC is a relay output type, a mechanical delay in operation (approx. 10ms) is caused. Therefore, use a transistor output type PLC.

| Applied instruction | Limitation in number of instructions driven at same time |
|---------------------|--|
| HSCS | 32 instructions including HSCT instruction |
| HSCR | |
| HSZ ^{*1} | |
| HSCT ^{*1} | Only 1 (This instruction can only be used once.) |

- *1. When HSZ or HSCT instruction is used, the maximum response frequencies and overall frequency of all software counters becomes limited.

→ For the maximum response frequencies and overall frequency of software counters, refer to Section 11.9.

11.8 Conditions for Hardware Counter to be Handled as Software Counter


The high-speed counters are classified into hardware counters and software counters. Some hardware counters are handled as software counters depending on the operating conditions. In this case, use hardware counters within the range of maximum response frequency and total frequency determined for software counters.

11.8.1 Conditions under which counters are handled as software counters

The hardware counters can perform counting with the hardware of FX3U regardless of the overall frequency. However, under the following conditions, they are handled as software counters. When using them in the condition below, the maximum response frequencies and overall frequency of the counters are considered to be the same as those of other software counters.


| Hardware counter No. | Conditions under which counters are handled as software counters |
|----------------------|---|
| C235 | When DHSCS (FNC 53), DHSCR (FNC 54), DHSZ (FNC 55) or DHSCT (FNC280) instruction is used for a hardware counter number, the hardware counter is handled as a software counter. Ex.: C235 |
| C236 | |
| C237 | |
| C238 | |
| C239 | |
| C240 | |
| C244(OP) | |
| C245(OP) | |
| C246 | |
| C248(OP) | |
| C251 | |
| C253 | |

When DHSCS (FNC 53), DHSCR (FNC 54), DHSZ (FNC 55) or DHSCT (FNC280) instruction is used for a hardware counter number, the hardware counter is handled as a software counter.
Ex.: C235

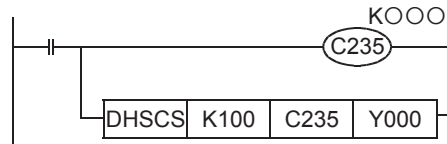


In this case, C235 works as a software counter.

 When the index register is used for the counter number designated by DHSCS (FNC 53), DHSCR (FNC 54), DHSZ (FNC 55) or DHSCT (FNC280) instruction, all hardware counters are handled as software counters.
Ex.: C235Z0



When the logic is reversed by the external reset input signal logic change function, C253 (hardware counter) is switched to a software counter.
Ex.: The logic of the external reset input signal of C253 is inverted.

→ For the inversion of the logic of external reset input signal, refer to Subsection 11.11.2.

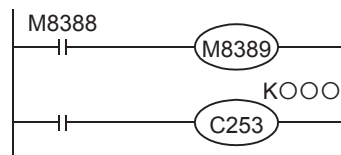

11.8.2 Method of confirming operation status of counters

The high-speed counter mode, hardware or software, can be confirmed by checking whether the operation status (M8380 to M8387) is on or off.

→ For the list of operation status of high-speed counters, refer to Subsection 11.11.1.

11.9 Calculation of Response Frequency and Overall Frequency

11.9.1 Response frequencies of hardware counters

The maximum response frequencies of the hardware counters are shown in the following table.
Depending on the working conditions, the maximum response frequencies of hardware counters are the same as those of the software counters, and limitations on overall frequency are set up.

→ For the conditions under which the hardware counters are handled as software counters, refer to the previous page.

| Counter type | | Counter Nos. | Max. response frequency | |
|-----------------------|--------------|-------------------------------|-------------------------|---------------|
| | | | Main unit | FX3U-4HSX-ADP |
| 1-phase 1-count input | | C235,C236,C237,C238,C239,C240 | 100kHz | 200kHz |
| | | C244(OP),C245(OP) | 10kHz | |
| 1-phase 2-count input | | C246,C248(OP) | 100kHz | |
| 2-phase 2-count input | 1 edge count | C251,C253 | 50kHz | 100kHz |
| | 4 edge count | | 50kHz | 100kHz |

11.9.2 Response frequencies and overall frequency of software counters

The maximum response frequencies and overall frequency of software counters are shown below.
When HSZ or HSCT instruction is used in the program, limitations are put on the maximum response frequencies and overall frequency of all software counters regardless of the instruction operand.
When examining the system or creating the program, use the counters within the maximum response frequency and overall frequency ranges suitable to the conditions in consideration of the limitations.

1. When FX3U Series special function units/blocks and analog special adapters are not used

Examples of calculation are given in the heavy-line frame.

| Counter type | Counter Nos. | Software counters with HSCS, HSCR, HSZ or HSCT instruction*1 | Magnification for calculation of overall frequency | Response frequency and overall frequency depending on conditions of instruction to be used | | | | | | | |
|-----------------------|------------------------------|--|--|--|-------------------------|-------------------------------|-------------------------|----------------------------------|------------------------------------|----------------------------------|------------------------------------|
| | | | | Neither HSZ nor HSCT instruction | | Only HSCT instruction | | Only HSZ instruction | | Both HSZ and HSCT instructions | |
| | | | | Max. response frequency (kHz) | Overall frequency (kHz) | Max. response frequency (kHz) | Overall frequency (kHz) | Max. response frequency (kHz) | Overall frequency (kHz) | Max. response frequency (kHz) | Overall frequency (kHz) |
| 1-phase 1-count input | C241, C242, C243, C244, C245 | C235, C236, C237, C238, C239, C240 | ×1 | 40 | 80 | 30 | 60 | 40 - (number of instruction) *2 | 80 - 1.5 × (number of instruction) | 30 - (number of instruction) *2 | 60 - 1.5 × (number of instruction) |
| | — | C244(OP), C245(OP) | ×1 | 10 | | 10 | | | | | |
| 1-phase 2-count input | C247, C248, C249, C250 | C246, C248(OP) | ×1 | 40 | | 30 | | | | | |
| 2-phase 2-count input | 1 edge count | C252, C253 (OP), C254, C255 | ×1 | 40 | 7.5 | 30 | | (40 - number of instruction) / 4 | | (30 - number of instruction) / 4 | |
| | 4 edge count | C251, C253 | ×4 | 10 | | 7.5 | | | | | |

*1. When an index register is added to a counter number specified by HSCS, HSCR, HSZ or HSCT instruction, all hardware counters are switched to software counters.

*2. The high-speed counters C244(OP) and C245(OP) cannot count signals of 10kHz or more.

1) Calculation of overall frequency

The overall frequency is calculated by the high-speed comparison instruction used in the program based on the above table.

Overall frequency \geq Sum of "response frequency of high-speed counter \times Magnification for calculation of overall frequency"

2) Example of calculation

When only HSZ instruction is used 6 times in a program, the frequency is calculated by the formulas shown in the "Only HSZ instruction" column in the above table.

| High-speed counter No. to be used | | Input frequency | Calculation of max. response frequency | Magnification for calculation of overall frequency | Instruction to be used |
|-----------------------------------|-------------------------------|-----------------|--|--|----------------------------------|
| C237 | Operation as software counter | 30kHz | $40 - 6(\text{times}) = 34\text{kHz}$ | $\times 1$ | HSZ instruction is used 6 times. |
| C241 | Software counter | 20kHz | $40 - 6(\text{times}) = 34\text{kHz}$ | $\times 1$ | |
| C253(OP) [4 edge count] | | 4kHz | $\{40 - 6(\text{times})\} / 4 = 8.5\text{kHz}$ | $\times 4$ | |

1) Since only HSZ instruction is used for 6 times, the total frequency is as follows:

$$\text{Total frequency} = 80 - 1.5 \times 6 = 71\text{kHz}$$

2) The sum of the response frequencies of the high-speed counters used is calculated as shown below.

$$"30\text{kHz} \times 1[\text{C237}]" + "20\text{kHz} \times 1[\text{C241}]" + "4\text{kHz} \times 4[\text{C253(OP)}]" = 66\text{kHz} \leq 71\text{kHz}$$

2. When FX3U Series special function units/blocks and analog special adapters are used

| Counter type | | Counter Nos. | Software counters with HSCS, HSCR, HSZ or HSCT instruction *1 | Magnification for calculation of overall frequency | Response frequency and overall frequency depending on conditions of instruction to be used | | | | | | | |
|--------------------------|--------------|------------------------------|---|--|--|-------------------------|-------------------------------|-------------------------|-----------------------------------|--|-----------------------------------|--|
| | | | | | Neither HSZ nor HSCT instruction | | Only HSCT instruction | | Only HSZ instruction | | Both HSZ and HSCT instructions | |
| | | | | | Max. response frequency (kHz) | Overall frequency (kHz) | Max. response frequency (kHz) | Overall frequency (kHz) | Max. response frequency (kHz) | Overall frequency (kHz) | Max. response frequency (kHz) | Overall frequency (kHz) |
| 1-phase 1-count input | | C241, C242, C243, C244, C245 | C235, C236, C237, C238, C239, C240 | $\times 1$ | 30 | 60 | 25 | 50 | 30 - (number of instructions) *2 | 50 - 1.5 \times (number of instructions) | 25 - (number of instructions) *2 | 50 - 1.5 \times (number of instructions) |
| | | — | C244(OP), C245(OP) | $\times 1$ | 10 | | 10 | | | | | |
| 1-phase 2-count input | | C247, C248, C249, C250 | C246, C248(OP) | $\times 1$ | 30 | | 25 | | | | | |
| 2-phase 2-count input | 1 edge count | C252, C253 (OP), C254, C255 | C251, C253 | $\times 1$ | 30 | | 25 | | | | | |
| | 4 edge count | | | $\times 4$ | 7.5 | | 6.2 | | (30 - number of instructions) / 4 | | (25 - number of instructions) / 4 | |

*1. When an index register is added to a counter number specified by HSCS, HSCR, HSZ or HSCT instruction, all hardware counters are switched to software counters.

*2. The high-speed counters C244(OP) and C245(OP) cannot count signals of 10 kHz or more.

1) Calculation of overall frequency

The overall frequency is calculated by the high-speed comparison instruction used in the program based on the above table.

Overall frequency \geq Sum of "response frequency of high-speed counter \times Magnification for calculation of overall frequency"

2) Example of calculation

When only HSZ instruction is used 6 times in a program, the frequency is calculated by the formulas shown in the "Only HSZ instruction" column in the above table.

| High-speed counter No. to be used | | Input frequency | Calculation of max. response frequency | Magnification for calculation of overall frequency | Instruction to be used |
|-----------------------------------|-------------------------------|-----------------|--|--|----------------------------------|
| C237 | Operation as software counter | 20kHz | $30 - 6(\text{times}) = 24\text{kHz}$ | $\times 1$ | HSZ instruction is used 6 times. |
| C241 | Software counter | 10kHz | $30 - 6(\text{times}) = 24\text{kHz}$ | $\times 1$ | |
| C253(OP) [4 edge count] | | 2kHz | $\{30 - 6(\text{times})\} / 4 = 6\text{kHz}$ | $\times 4$ | |

1) Since only HSZ instruction is used for 6 times, the total frequency is as follows:

Total frequency = $50 - 1.5 \times 6 = 41\text{kHz}$

2) The sum of the response frequencies of the high-speed counters used is calculated as shown below.

" $20\text{kHz} \times 1[\text{C237}]$ " + " $10\text{kHz} \times 1[\text{C241}]$ " + " $2\text{kHz} \times 4[\text{C253(OP)}]$ " = $38\text{kHz} \leq 41\text{kHz}$

11.10 Examples of External Wiring (Rotary Encoder)

11.10.1 1-phase 1-input [C235 to C245]


The following examples of wiring apply to the cases where C235 is used. When another high-speed counter number is used, wire the counter referring to the following diagrams.

1. When the input terminals of the main unit are used

When pulses with a response frequency of 50 kHz to 100 kHz are captured to the high-speed counter using the input terminals X000 to X005, wire the counter as stated below.


- The wiring length should be 5m (16'4") or less.
- As connecting cables, use shielded twisted-pair cables. Ground the shield of each shielded cable only on the PLC side.
- Connect a bleeder resistance of 1.5k Ω (1W or more) to the input terminal, so that the sum of the load current of the open collector transistor output on the mating device side and the input current of the main unit is 20 mA or more.

1) NPN open collector transistor output rotary encoder

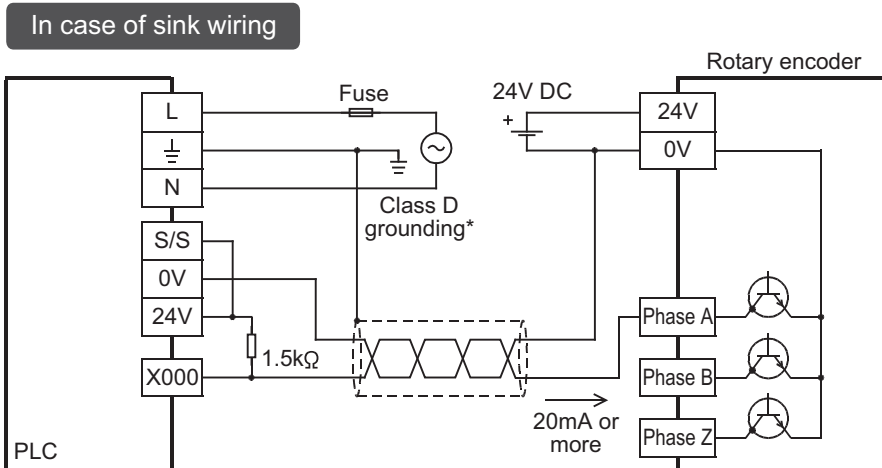

* The grounding resistance should be 100 Ω or less.

2) PNP open collector transistor output rotary encoder

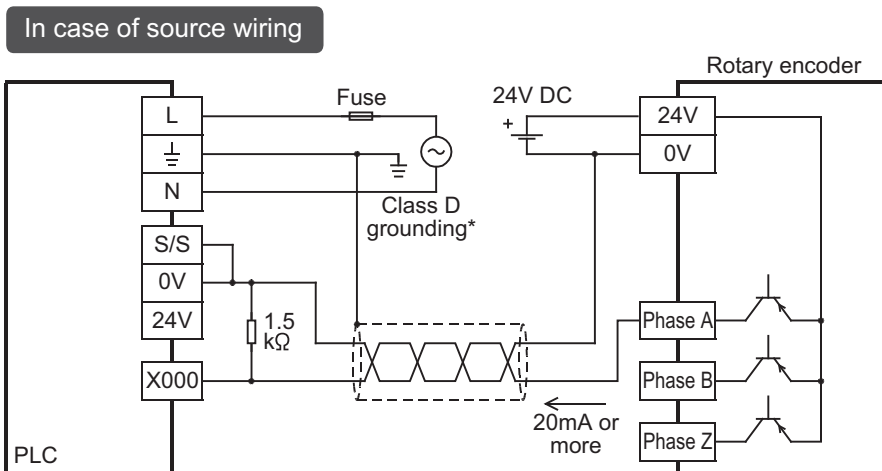


* The grounding resistance should be 100 Ω or less.

2. When high-speed input special adapter (FX_{3U}-4HSX-ADP) is used

1) Differential line driver output rotary encoder

In case of differential line driver wiring

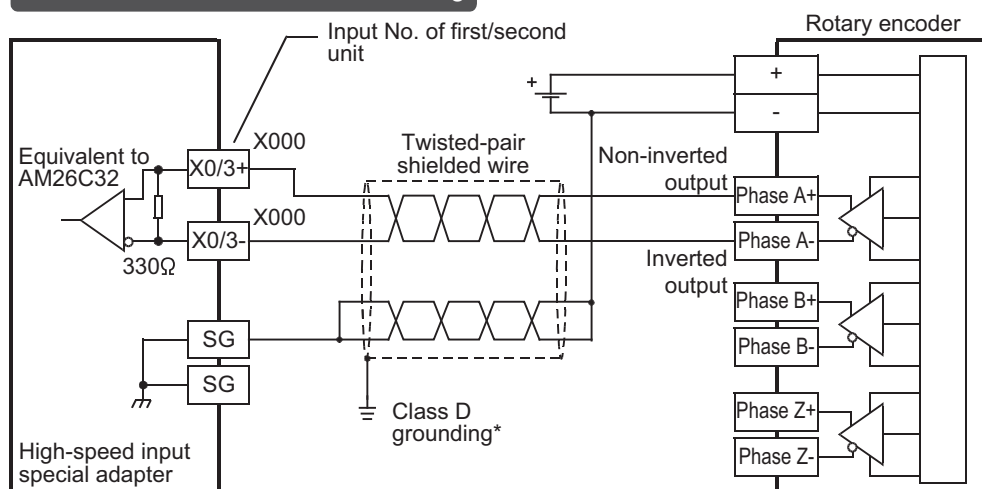

* The grounding resistance should be 100Ω or less.

11.10.2 2-phase 2-input [C251 to C255]

The following examples of wiring apply to the cases where C251 is used. When another high-speed counter number is used, wire the counter referring to the following diagrams.


1. When the input terminals of the main unit are used

When pulses with a response frequency of 50 kHz to 100 kHz are captured to the high-speed counter using the input terminals X000 to X005, wire the counter as stated below.

- The wiring length should be 5m (16'4") or less.
- For connecting cables, use shielded twisted-pair cables. Ground the shield of each shielded cable only on the PLC side.
- Connect a bleeder resistance of 1.5kΩ (1W or more) to the input terminal, so that the sum of the load current of the open collector transistor output on the mating device side and the input current of the main unit is 20mA or more.

1) NPN open collector transistor output rotary encoder


In case of sink wiring

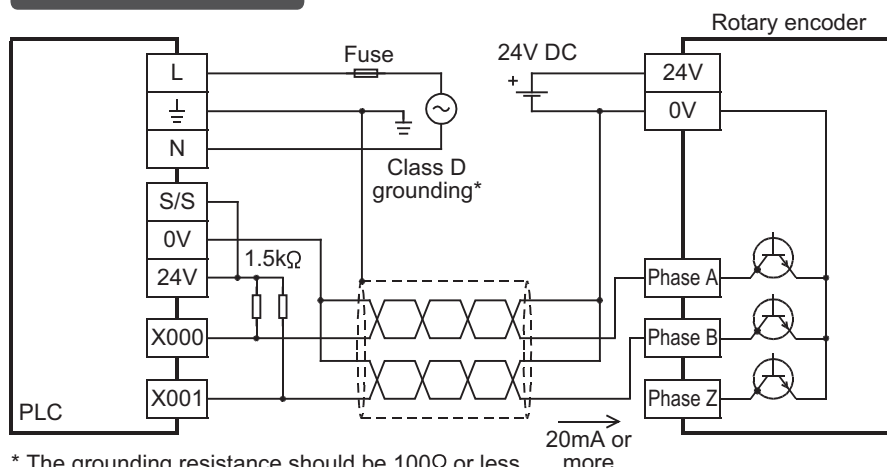

* The grounding resistance should be 100Ω or less.

2) PNP open collector transistor output rotary encoder


In case of source wiring

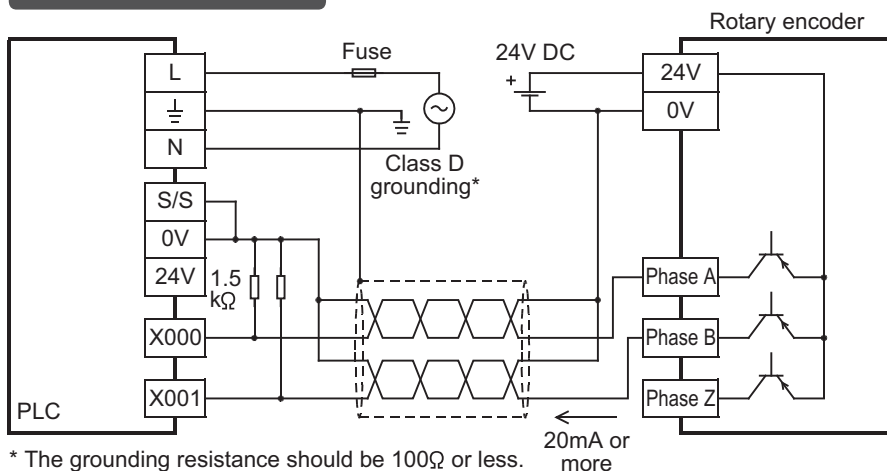

2. When high-speed input special adapter (FX3U-4HSX-ADP) is used

1) Differential line driver output rotary encoder

In case of differential line driver wiring

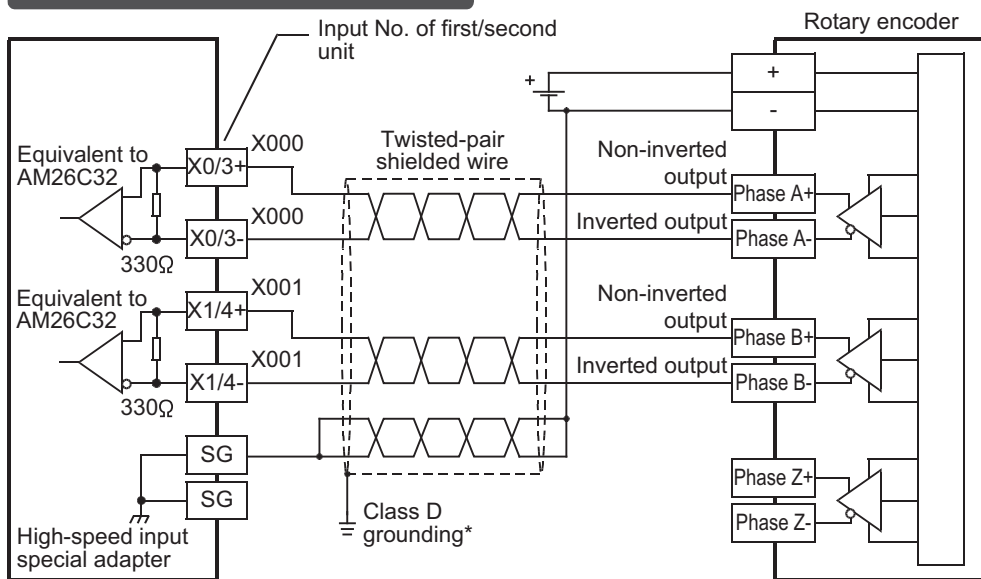

11.10.3 Cautions for the other side device

Encoders having the output forms shown in the following table can be connected to the terminals. (The encoders may not function correctly depending on electrical compatibility. Check the specifications in advance.)

Voltage output type encoders and absolute encoders cannot be connected to the high-speed counter input terminals.

| Terminal for connecting | Output form that can be directly connected |
|----------------------------------|--|
| Input terminals of main unit | Open collector transistor output form (applicable to 24V DC) |
| Input terminals of FX3U-4HSX-ADP | Differential line driver output form Set the input voltage of FX3U-4HSX-ADP to 5V DC or less. |

11.11 Related Devices and Function Switching Procedures

11.11.1 Related devices

1. For switching 1-phase 1-count input counter mode to up-count or down-count

| Counter type | Counter No. | Specifying device | Up-counting | Down-counting |
|-----------------------|-------------|-------------------|-------------|---------------|
| 1-phase 1-count input | C235 | M8235 | OFF | ON |
| | C236 | M8236 | | |
| | C237 | M8237 | | |
| | C238 | M8238 | | |
| | C239 | M8239 | | |
| | C240 | M8240 | | |
| | C241 | M8241 | | |
| | C242 | M8242 | | |
| | C243 | M8243 | | |
| | C244 | M8244 | | |
| | C245 | M8245 | | |

2. For monitoring of up-count/down-count counting direction of 1-phase 2-count input and 2-phase 2-count input counters

| Counter type | Counter No. | Monitoring device | OFF | ON |
|-----------------------|-------------|-------------------|-------------|---------------|
| 1-phase 2-count input | C246 | M8246 | Up-counting | Down-counting |
| | C247 | M8247 | | |
| | C248 | M8248 | | |
| | C249 | M8249 | | |
| | C250 | M8250 | | |

| Counter type | Counter No. | Monitoring device | OFF | ON |
|-----------------------|-------------|-------------------|-------------|---------------|
| 2-phase 2-count input | C251 | M8251 | Up-counting | Down-counting |
| | C252 | M8252 | | |
| | C253 | M8253 | | |
| | C254 | M8254 | | |
| | C255 | M8255 | | |

3. For switching high-speed counter function

| Device No. | Name | Description | Reference |
|------------|--|---|--------------------|
| M8388 | Contact for changing high-speed counter function | Contact for changing the high-speed counter function | — |
| M8389 | Function switching devices | Switching of logic of external reset input | Subsection 11.11.2 |
| M8390 | | Function switching device for C244 | Subsection 11.11.3 |
| M8391 | | Function switching device for C245 | Subsection 11.11.3 |
| M8392 | | Function switching device for C248 and 253 | Subsection 11.11.3 |
| M8198 | | Device for switching C251, C252 and C254 to single or 4 edge count | Subsection 11.11.4 |
| M8199 | | Device for switching C253, C255 and C253 (OP) to single or 4 edge count | Subsection 11.11.4 |

4. Operation status of hardware counter/software counter

| Device No. | Name | Description | ON | OFF |
|------------|------------------|---|------------------|------------------|
| M8380*1 | Operation status | Operation status of C235, C241, C244, C246, C247, C249, C251, C252 and C254 | Software counter | Hardware counter |
| M8381*1 | | Operation status of C236 | | |
| M8382*1 | | Operation status of C237, C242 and C245 | | |
| M8383*1 | | Operation status of C238, C248, C248(OP), C250, C253 and C255 | | |
| M8384*1 | | Operation status of C239 and C243 | | |
| M8385*1 | | Operation status of C240 | | |
| M8386*1 | | Operation status of C244(OP) | | |
| M8387*1 | | Operation status of C245(OP) | | |

*1. To be cleared when the device turns RUN from STOP.

11.11.2 [Function switching] switching of logic of external reset input signal

The external reset input for the counters C241 to C245, C247 to C250 and C252 to C255 resets the counters when it is turned ON. If the logic is inverted by the following program, the counters can be reset by turning OFF the input.

| Counter No. | Inversion of logic of external reset input signal | Details of change |
|--|---|---|
| C241 to C245 C247 to C250 C252 to C255 | | The logic of external reset input is inverted to reset the counters when the input is turned OFF. (The logic for all applicable counter numbers is inverted.) |

Cautions on inverting the logic of the external reset input signal

Although C253 is a hardware counter, it is switched to a software counter by inverting the logic of the external reset input signal.

11.11.3 [Function switching] switching of allocation and functions of input terminals

When the software counters C244, C245, C248 and C253 are combined with the following special auxiliary relays, the allocation of the input terminals and functions are changed. Program the special auxiliary relays just before the counters.

| Counter No. | Function switching method | Details of change |
|-------------|---------------------------|--|
| C244(OP) | | <ul style="list-style-type: none"> The count input terminal is changed from X000 to X006. Reset input is not given. Start input is not given. The counter functions as a hardware counter. |
| C245(OP) | | <ul style="list-style-type: none"> The count input terminal is changed from X002 to X007. Reset input is not given. Start input is not given. The counter functions as a hardware counter. |
| C248(OP) | | <ul style="list-style-type: none"> Reset input is not given. The counter functions as a hardware counter. |
| C253(OP) | | <ul style="list-style-type: none"> Reset input is not given. The counter functions as a software counter. |

11.11.4 [Function switching] procedures for using 2-phase 2-count input counters C251 to C255 in 4 edge count mode

The 2-phase 2-count input counters C251 to C255 are in the 1 edge count mode. The counters can be operated in the 4 edge count mode by programming as shown below.

| Counter No. | To use 4 edge count 2-phase 2-input counter | Details of change |
|-------------|---|---|
| C251 | | 1 edge count (before change) |
| C252 | | |
| C253 | | |
| C253(OP) | | <p>↓</p> <p>4 edge count (after change)</p> |
| C254 | | |
| C255 | | |

11.12 Cautions on Use

→ For programming details, refer to the Programming Manual.

- If the operation of a high-speed counter is triggered by a device such as a switch, the counter may malfunction due to extra noise from switch chattering or contact bounce.
- The input filter of an input terminal for a high-speed counter in the main unit is automatically set to 5 μ s (X000 to X005) or 50 μ s (X006 and X007).
Accordingly, it is not necessary to use the REFF instruction or special data register D8020 (input filter adjustment).
The input filter for input relays not being used for high-speed counters remains at 10 ms (initial value).
- The inputs X000 to X007 are used for high-speed counters, input interrupt, pulse catch, SPD/DSZR/DVIT/ZRN instructions and general-purpose inputs. There should be no overlap between each input number.
- Make sure that the signal speed for high-speed counters does not exceed the response frequency described above. If an input signal exceeds the response frequency, a WDT error may occur, or the communication functions such as a parallel link may malfunction.
- The response frequency changes depending on number of used counters, but the input filter value is fixed to 5 μ s (X000 to X005) or 50 μ s (X006 and X007).
Note that noise above the response frequency may be counted depending on the filter value of the used input.

11

High-Speed
Counters

12

Output Wiring

13

Wiring for
Various Uses

14

Test Run,
Maintenance,
Troubleshooting

15

Input/Output
Powered
Extension Units

16

Input/Output
Extension
Blocks

17

Extension
Power Supply
Unit

18

Other Extension
Units and
Options

19

Display Module

20

Terminal Block

12. Output Wiring Procedures

DESIGN PRECAUTIONS



- Make sure to have the following safety circuits outside of the PLC to ensure safe system operation even during external power supply problems or PLC failure.
Otherwise, malfunctions may cause serious accidents.
 - 1) Most importantly, have the following: an emergency stop circuit, a protection circuit, an interlock circuit for opposite movements (such as normal vs. reverse rotation), and an interlock circuit (to prevent damage to the equipment at the upper and lower positioning limits).
 - 2) Note that when the PLC CPU detects an error, such as a watchdog timer error, during self-diagnosis, all outputs are turned off. Also, when an error that cannot be detected by the PLC CPU occurs in an input/output control block, output control may be disabled.
External circuits and mechanisms should be designed to ensure safe machinery operation in such a case.
 - 3) Note that the output current of the 24V DC service power supply varies depending on the model and the absence/presence of extension blocks. If an overload occurs, the voltage automatically drops, inputs in the PLC are disabled, and all outputs are turned off.
External circuits and mechanisms should be designed to ensure safe machinery operation in such a case.
 - 4) Note that when an error occurs in a relay, triac or transistor output device, the output could be held either on or off.
For output signals that may lead to serious accidents, external circuits and mechanisms should be designed to ensure safe machinery operation in such a case.

DESIGN PRECAUTIONS



- Do not bundle the control line together with or lay it close to the main circuit or power line. As a guideline, lay the control line at least 100mm (3.94") or more away from the main circuit or power line.
Noise may cause malfunctions.
- Install module so that excessive force will not be applied to peripheral device connectors.
Failure to do so may result in wire damage/breakage or PLC failure.

SECURITY PRECAUTIONS



- To maintain the security (confidentiality, integrity, and availability) of the programmable controller and the system against unauthorized access, denial-of-service (DoS) attacks, computer viruses, and other cyberattacks from unreliable networks and devices via network, take appropriate measures such as firewalls, virtual private networks (VPNs), and antivirus solutions.

WIRING PRECAUTIONS



- Make sure to cut off all phases of the power supply externally before attempting installation or wiring work.
Failure to do so may cause electric shock or damage to the product.
- Make sure to attach the terminal cover, offered as an accessory, before turning on the power or initiating operation after installation or wiring work.
Failure to do so may cause electric shock.
- The temperature rating of the cable should be 80°C or more.

WIRING PRECAUTIONS



- Do not supply power to the [24+] and [24V] terminals (24V DC service power supply) on the main unit or extension units.
Doing so may cause damage to the product.
- Perform class D grounding (grounding resistance: 100 Ω or less) to the grounding terminal on the main unit and extension units with a wire 2 mm² or thicker.
Do not use common grounding with heavy electrical systems (refer to Section 9.4).
- Connect the AC power supply wiring to the dedicated terminals described in this manual.
If an AC power supply is connected to a DC input/output terminal or DC power supply terminal, the PLC will burn out.
- Connect the DC power supply wiring to the dedicated terminals described in this manual.
If an AC power supply is connected to a DC input/output terminal or DC power supply terminal, the PLC will burn out.
- Do not wire vacant terminals externally.
Doing so may damage the product.
- When drilling screw holes or wiring, make sure that cutting and wiring debris do not enter the ventilation slits.
Failure to do so may cause fire, equipment failures or malfunctions.
- Make sure to properly wire the FX3U Series main unit and FX0N/FX2N/FX3U Series extension equipment in accordance with the following precautions.
Failure to do so may cause electric shock, equipment failures, a short-circuit, wire breakage, malfunctions, or damage to the product.
 - The disposal size of the cable end should follow the dimensions described in the manual.
 - Tightening torque should follow the specifications in the manual.
 - Tighten the screws using a Phillips-head screwdriver No.2 (shaft diameter 6mm (0.24") or less). Make sure that the screwdriver does not touch the partition part of the terminal block.
- Make sure to properly wire to the terminal block (European type) in accordance with the following precautions.
Failure to do so may cause electric shock, equipment failures, a short-circuit, wire breakage, malfunctions, or damage to the product.
 - The disposal size of the cable end should follow the dimensions described in the manual.
 - Tightening torque should follow the specifications in the manual.
 - Twist the end of strand wire and make sure that there are no loose wires.
 - Do not solder-plate the electric wire ends.
 - Do not connect more than the specified number of wires or electric wires of unspecified size.
 - Affix the electric wires so that neither the terminal block nor the connected parts are directly stressed.
- Make sure to properly wire to the FX Series terminal blocks in accordance with the following precautions.
Failure to do so may cause electric shock, equipment failures, a short-circuit, wire breakage, malfunctions, or damage to the product.
 - The disposal size of the cable end should follow the dimensions described in the manual.
 - Tightening torque should follow the specifications in the manual.
 - Tighten the screws using a Phillips-head screwdriver No.2 (shaft diameter 6mm (0.24") or less). Make sure that the screwdriver does not touch the partition part of the terminal block.

This chapter explains the procedures for wiring the output terminals.

- Wiring procedures
- Procedures for cabling according to shape of output terminal
- Output wiring procedures

11

High-Speed
Counters

12

Output Wiring

13

Wiring for
Various Uses

14

Test Run,
Maintenance,
Troubleshooting

15

Input/Output
Powered
Extension Units

16

Input/Output
Extension
Blocks

17

Extension
Power Supply
Unit

18

Other Extension
Units and
Options

19

Display Module

20


Terminal Block

12.1 Sink and Source Output (Transistor)


FX3U Series main units and FX2N Series input/output extension units/blocks of transistor sink output type and of transistor source output type are available.

1. Differences in circuit

- Sink output [-common]
Output to make load current flow into the output (Y) terminal is called sink output.

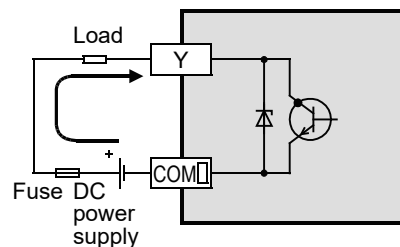

- Source output [+common]
Output to make load current flow out of the output (Y) terminal is called source output.

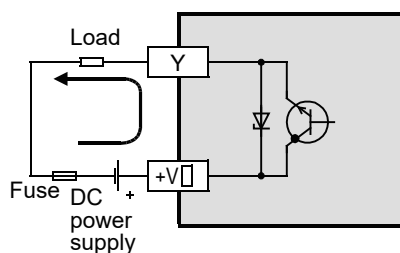


12.2 External Wiring for Relay Output

This section explains the relay output specifications (main unit) and external wiring.

- For the main unit, refer to Subsection 12.2.1 "Output specifications (main unit) relay output", Subsection 12.2.3 "Handling of relay output", Subsection 12.2.4 "External wiring precautions" and Subsection 12.2.5 "Example of external wiring" in this section.
- For the input/output powered extension units/blocks, refer to Subsection 12.2.3 "Handling of relay output" and Subsection 12.2.4 "External wiring precautions" in this section. For their specifications and examples of wiring, refer to the specification for each model.
 - For the specifications on the input/output powered extension unit, refer to Chapter 15.
 - For the specifications on the input/output extension block, refer to Chapter 16.

12.2.1 Output specifications (main unit) relay output
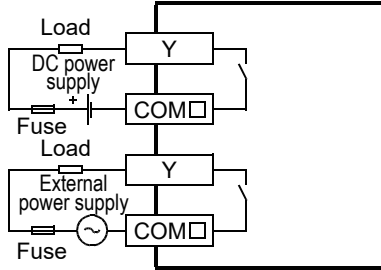
| Item | | Relay output specifications | | | | | |
|------------------------------|-----------------|--|---------------------------------------|------------------|---------------------------------------|------------------|-------------------|
| | | FX3U-16MR/ □S | FX3U-32MR/ □S FX3U-32MR/ UA1 | FX3U-48MR/ □S | FX3U-64MR/ □S FX3U-64MR/ UA1 | FX3U-80MR/ □S | FX3U-128MR/ ES |
| Number of output points | | 8 points | 16 points | 24 points | 32 points | 40 points | 64 points |
| Output connecting type | | Fixed terminal block (M3 screw) | Removable terminal block (M3 screw) | | | | |
| Output form | | Relay | | | | | |
| External power supply | | 30V DC or less or 240V AC or less (250V AC or less when the unit does not comply with CE, UL or cUL standards) | | | | | |
| Max. load | Resistance load | 2 A/point The total load current of resistance loads per common terminal should be the following value. → For details on the common terminal for each model, refer to the terminal block layout. <ul style="list-style-type: none">1 output point/common terminal: 2 A or less4 output points/common terminal: 8 A or less8 output points/common terminal: 8 A or less | | | | | |
| | Inductive load | 80 VA → For the product life, refer to Subsection 12.2.2. → For cautions on external wiring, refer to Subsection 12.2.4. | | | | | |
| Min. load | | 5V DC, 2mA (reference value) | | | | | |
| Open circuit leakage current | | — | | | | | |
| Response time | OFF→ON | Approx. 10ms | | | | | |
| | ON→OFF | Approx. 10ms | | | | | |
| Circuit insulation | | Mechanical insulation | | | | | |
| Display of output operation | | LED on panel lights when power is applied to relay coil. | | | | | |
| Output circuit configuration | | <div></div> <p>A common number applies to the □ of [COM □].</p> | | | | | |

Number of output points per common terminal

- On FX3U-16MR/□S, one common terminal is used for one output point.
- On models other than FX3U-16MR/□S, one common terminal is used for four or eight output points.


12.2.2 Product life of relay contacts

→ For product life of relay contacts, refer to Subsection 4.4.2.

12.2.3 Handling of relay output

1. Output terminal

One common terminal is used for 1, 4 or 8 relay output points. The common terminal blocks can drive loads of different circuit voltage systems (for example, 200V AC, 100V AC and 24V DC).

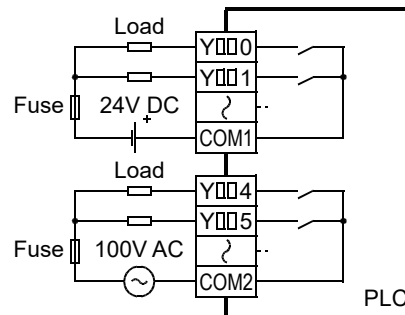

2. External power supply

Use an external power supply of 30V DC or less or 240V AC or less (250V AC or less when the unit does not comply with CE, UL or cUL standards) for loads.

3. Circuit insulation

The PLC internal circuit and external load circuits are electrically insulated between the output relay coil and contact. The common terminal blocks are separated from one another.

4. Display of operation

When power is applied to the output relay coil, the LED is lit, and the output contact is turned on.

5. Response time

The response time of the output relay from when the power is applied to the coil until the output contact is turned on and from when the coil is shut off until the output contact is turned off is approx. 10ms.

6. Output current

At a circuit voltage of 240V AC or less (250V AC or less when the unit does not comply with CE, UL or cUL standards), a resistance load of 2A per point or an inductive load of 80VA or less (100V AC or 200V AC) can be driven.

→ For the life of the contact for switching an inductive load, refer to Subsection 12.2.2.

When an inductive load is switched, connect a diode (for commutation) or a surge absorber in parallel with this load.

| | |
|------------|-------------------------|
| DC circuit | Diode (for commutation) |
| AC circuit | Surge absorber |


7. Open circuit leakage current

When the output contact is turned off, no current leaks.

12.2.4 External wiring precautions

1. Protection circuit for load short-circuiting

A short-circuit at a load connected to an output terminal could cause burnout at the PCB. To prevent this, a protection fuse should be inserted at the output.

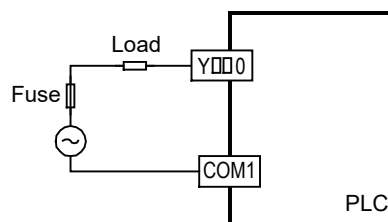

2. Contact protection circuit for inductive loads


An internal protection circuit for the relays is not provided for the relay output circuit in this product. It is recommended to use inductive loads with built-in protection circuits. When using loads without built-in protection circuits, insert an external contact protection circuit, etc. to reduce noise and extend the product life.

1) DC circuit

Connect a diode in parallel with the load.

The diode (for commutation) must comply with the following specifications.

| Item | Guide |
|-----------------|--------------------------------|
| Reverse voltage | 5 to 10 times the load voltage |
| Forward current | Load current or more |

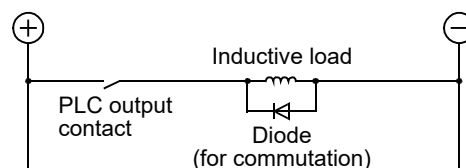


2) AC circuit

Connect the surge absorber (combined CR components such as a surge killer and spark killer, etc.) parallel to the load.

Select the rated voltage of a surge absorber that is suitable for the load being used. Refer to the table below for other specifications.

| Item | Guide |
|------------------------|---------------------|
| Electrostatic capacity | Approx. 0.1μF |
| Resistance value | Approx. 100 to 200Ω |

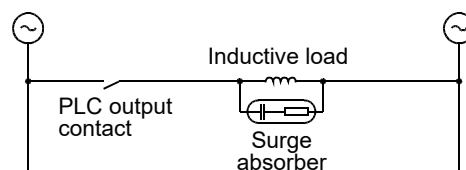


Reference

| Manufacturer | Model name |
|-------------------------------------|------------|
| Okaya Electric Industries Co., Ltd. | CR-10201 |

| Manufacturer | Model name |
|---------------------|----------------------|
| Rubycon Corporation | 250MCRA104100M B0325 |


3. Interlock

For loads such as forward/reverse contactors, etc., where a hazardous condition could result if switched ON simultaneously, an external interlock should be provided for interlocking the PLC's internal programs as shown to the right.

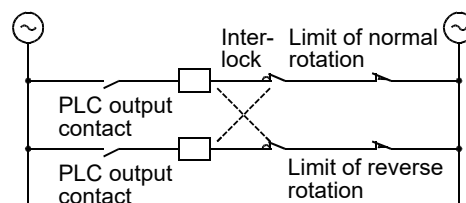


4. In-phase

PLC output contacts (*) should be used in an "in-phase" manner.

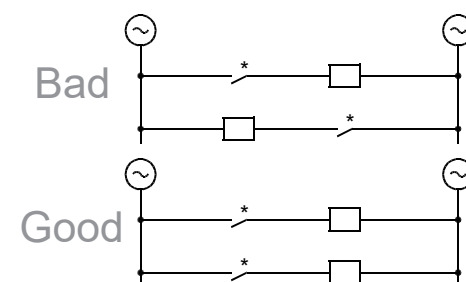

12.2.5 Example of external wiring

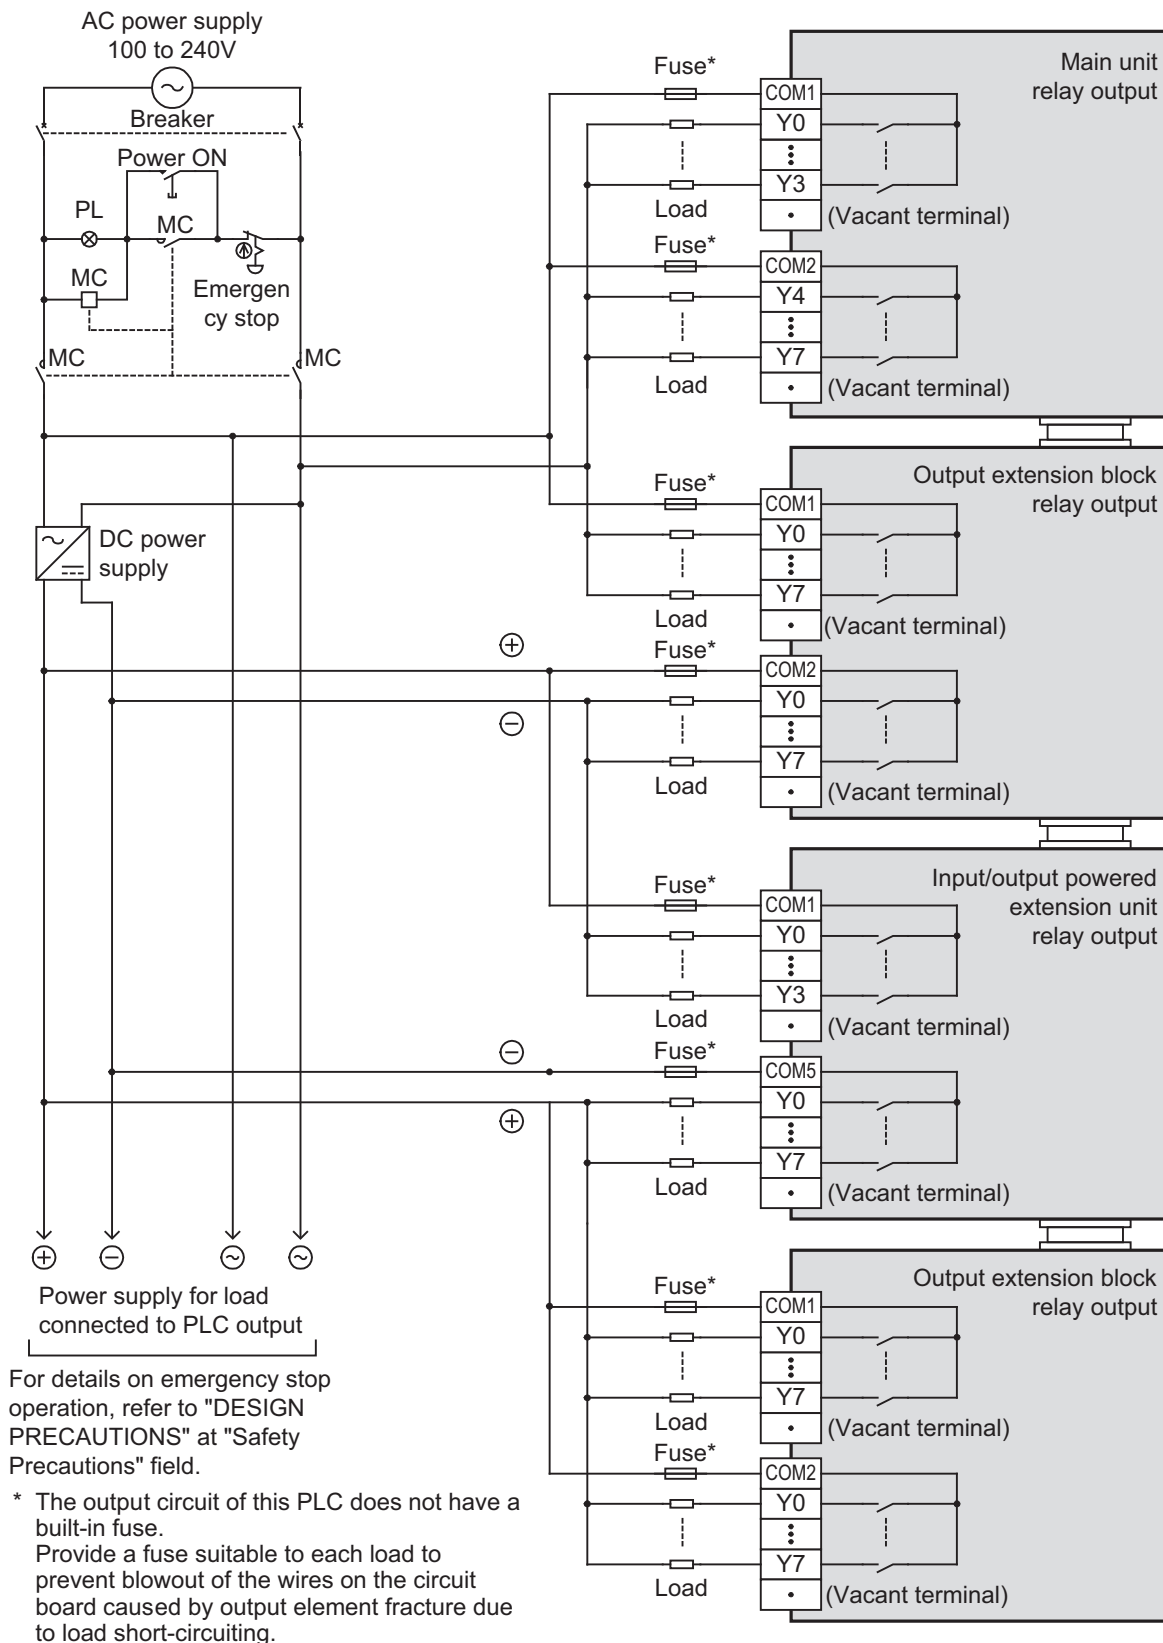

WIRING PRECAUTIONS



- Do not wire vacant terminals externally.
Doing so may damage the product.

12.3 External Wiring of Transistor Output (Sink/Source) Type

This section explains the transistor output specifications (main unit) and external wiring.

- For the main unit, refer to Subsection 12.3.1 "Output specifications (main unit) transistor output (sink) type", Subsection 12.3.2 "Output specifications (main unit) transistor output (source) type", Subsection 12.3.3 "Handling of transistor output", Subsection 12.3.4 "External wiring precautions" and Subsection 12.3.5 "Example of external wiring".
- For the input/output powered extension units/blocks, refer to Subsection 12.3.3 "Handling of transistor output" and Subsection 12.3.4 "External wiring precautions" in this section. For the specifications and examples of wiring, refer to the specifications for each model.
 - **For the specifications on the input/output powered extension units, refer to Chapter 15.**
 - **For the specifications on the input/output extension blocks, refer to Chapter 16.**

11

High-Speed
Counters

12

Output Wiring

13

Wiring for
Various Uses

14

Test Run,
Maintenance,
Troubleshooting

15

Input/Output
Powered
Extension Units

16

Input/Output
Extension
Blocks

17

Extension
Power Supply
Unit

18

Other Extension
Units and
Options

19

Display Module

20

Terminal Block


12.3.1 Output specifications (main unit) transistor output (sink) type

| Item | | Transistor output (sink) specifications | | | | | |
|------------------------------|-----------------|---|-------------------------------------|------------------|------------------|------------------|-------------------|
| | | FX3U-16MT/ □S | FX3U-32MT/ □S | FX3U-48MT/ □S | FX3U-64MT/ □S | FX3U-80MT/ □S | FX3U-128MT/ ES |
| Number of output points | | 8 points | 16 points | 24 points | 32 points | 40 points | 64 points |
| Connecting type | | Fixed terminal block (M3 screw) | Removable terminal block (M3 screw) | | | | |
| Output type/form | | Transistor/sink output | | | | | |
| External power supply | | 5-30 V DC | | | | | |
| Max. load | Resistance load | 0.5 A / point The total load current of resistance loads per common terminal should be the following value. → For details on the common terminal for each model, refer to the terminal block layout. <ul style="list-style-type: none">1 output point/common terminal: 0.5 A or less4 output points/common terminal: 0.8 A or less8 output points/common terminal: 1.6 A or less | | | | | |
| | Inductive load | 12W/24V DC The total of inductive loads per common terminal should be the following value. → For details on the common terminal for each model, refer to the terminal block layout. <ul style="list-style-type: none">1 output point/common terminal: 12W or less/24V DC4 output points/common terminal: 19.2W or less/24V DC8 output points/common terminal: 38.4W or less/24V DC | | | | | |
| Open circuit leakage current | | 0.1 mA or less/30V DC | | | | | |
| ON voltage | | 1.5 V or less | | | | | |
| Min. load | | — | | | | | |
| Response time | OFF→ON | Y000 to Y002:5 μs or less/10 mA or more (5-24 V DC) Y003 or more:0.2 ms or less/200 mA or more (at 24V DC) | | | | | |
| | ON→OFF | Y000 to Y002:5 μs or less/10 mA or more (5-24 V DC) Y003 or more:0.2 ms or less/200 mA or more (at 24V DC) | | | | | |
| Circuit insulation | | Photocoupler insulation | | | | | |
| Display of output operation | | LED on panel lights when photocoupler is driven. | | | | | |
| Output circuit configuration | | <div></div> <p>A common number applies to the □ of [COM □].</p> | | | | | |

Number of output points per common terminal

- On FX3U-16MT/□S, one common terminal is used for 1 output point.
- On models other than FX3U-16MT/□S, 1 common terminal is used for 4 or 8 output points.

12.3.2 Output specifications (main unit) transistor output (source) type
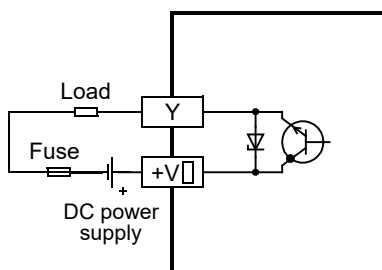
| Item | | Transistor output (source) specifications | | | | | |
|------------------------------|-----------------|---|-------------------------------------|-------------------|-------------------|-------------------|--------------------|
| | | FX3U-16MT/ □SS | FX3U-32MT/ □SS | FX3U-48MT/ □SS | FX3U-64MT/ □SS | FX3U-80MT/ □SS | FX3U-128MT/ ESS |
| Number of output points | | 8 points | 16 points | 24 points | 32 points | 40 points | 64 points |
| Connecting type | | Fixed terminal block (M3 screw) | Removable terminal block (M3 screw) | | | | |
| Output type/form | | Transistor/source output | | | | | |
| External power supply | | 5-30 V DC | | | | | |
| Max. load | Resistance load | 0.5 A / point The total load current of resistance loads per common terminal should be the following value. → For details on the common terminal for each model, refer to the terminal block layout. <ul style="list-style-type: none">1 output point/common terminal: 0.5 A or less4 output points/common terminal: 0.8 A or less8 output points/common terminal: 1.6 A or less | | | | | |
| | Inductive load | 12W/24V DC The total of inductive loads per common terminal should be the following value. → For details on the common terminal for each model, refer to the terminal block layout. <ul style="list-style-type: none">1 output point/common terminal: 12W or less/24V DC4 output points/common terminal: 19.2W or less/24V DC8 output points/common terminal: 38.4W or less/24V DC | | | | | |
| Open circuit leakage current | | 0.1 mA or less/30V DC | | | | | |
| ON voltage | | 1.5 V or less | | | | | |
| Min. load | | — | | | | | |
| Response time | OFF→ON | Y000 to Y002:5 μs or less/10 mA or more (5-24 V DC) Y003 or more:0.2 ms or less/200 mA or more (at 24V DC) | | | | | |
| | ON→OFF | Y000 to Y002:5 μs or less/10 mA or more (5-24 V DC) Y003 or more:0.2 ms or less/200 mA or more (at 24V DC) | | | | | |
| Circuit insulation | | Photocoupler insulation | | | | | |
| Display of output operation | | LED on panel lights when photocoupler is driven. | | | | | |
| Output circuit configuration | | <div></div> <p>A common number applies to the □ of [+V □].</p> | | | | | |

Number of output points per common terminal

- On FX3U-16M/□SS, one common terminal is used for 1 output point.
- On models other than FX3U-16MT/□SS, 1 common terminal is used for 4 or 8 output points.

12.3.3 Handling of transistor output


1. Output terminals

One, 4 or 8 transistor output points are covered by one common terminal.

Sink output

Connect each COM□ (number) terminal to the minus side of the load power supply.


The COM□ terminals are not connected internally.

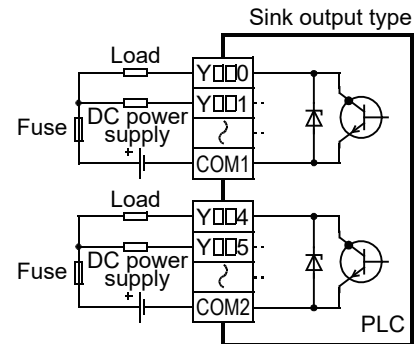

Source output

Connect each +V□ (number) terminal to the plus side of the load power supply.

The +V□ terminals are not connected internally.

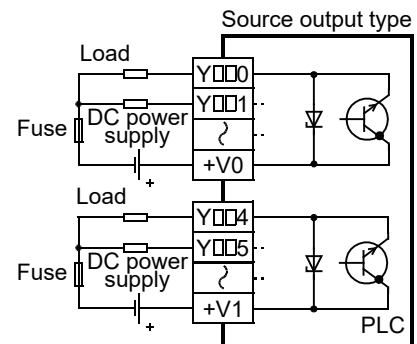

2. External power supply

For driving the load, use a smoothing power supply of 5-30 V DC that can output current two or more times the rated current of the fuse connected to the load circuit.

3. Insulation of circuit

The internal circuit of the PLC and the output transistor are insulated with a photocoupler. The common blocks are separated from one another.

4. Display of operation

When any photocoupler operates, the corresponding LED is lit and corresponding output transistor turns ON.


5. Response time

The time from when the PLC drives (or shuts down) the photocoupler until the transistor is turned on (or off) is shown in the following table.


| Classification | | Response time | Load current | |
|---|--------------|----------------|---------------------------|--|
| Main unit | Y000 to Y002 | 5 μs or less | 5-24 V DC 10mA or more | When using an instruction related to pulse train output or positioning, make sure to set the load current to 10 to 100 mA (5-24 V DC). |
| | Y003 or more | 0.2 ms or less | 24V DC 200 mA or more *1 | |
| Input/output powered extension unit Output extension block | | 0.2ms or less | 24V DC 200 mA *1 | |

- *1. The transistor OFF time is longer under lighter loads.
For example, under a load of 24V DC 40mA, the response time is approx. 0.3ms. When response performance is required under light loads, provide a dummy resistance as shown to the right to increase the load current.

- Sink output type

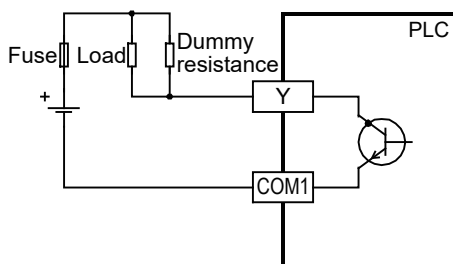

- Source output type

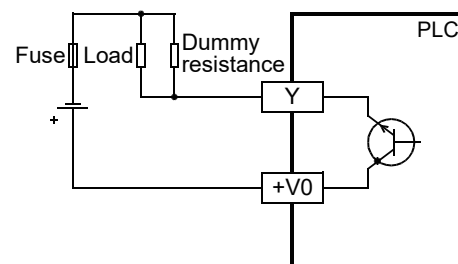

6. Output current

The maximum resistance loads for the input/output powered extension units and output extension blocks are shown in the following table.

The ON voltage of the output transistor is approx. 1.5V.

When driving a semiconductor element, carefully check the input voltage characteristics of the applied element.

| Model | | Output current | Limitation |
|--------------------------------------|-------------------|----------------|---|
| Main unit | FX3U-16MT-ES(S) | 0.5A/point | The total load current of resistance loads per common terminal should be the following value. 1 point/common: 0.5A or less 4 points/common: 0.8A or less 8 points/common: 1.6A or less |
| | FX3U-32MT-ES(S) | | |
| | FX3U-48MT-ES(S) | | |
| | FX3U-64MT-ES(S) | | |
| | FX3U-80MT-ES(S) | | |
| | FX3U-128MT-ES(S) | | |
| Input/output powered extension units | FX2N-32ET-ESS/UL | | |
| | FX2N-48ET-ESS/UL | | |
| | FX2N-48ET-DSS | | |
| | FX2N-32ET | | For FX2N-16EYT-C: 16 points/common: 1.6A or less |
| | FX2N-48ET | | |
| | FX2N-48ET-D | | For FX2N-8EYT-H: 4 points/common: 2A or less |
| Extension block | FX2N-16EYT-ESS/UL | | |
| | FX2N-8EYT-ESS/UL | | |
| | FX2N-16EYT | | |
| | FX2N-8EYT | | |
| | FX2N-8EYT-H | 1A/point | |
| | FX2N-16EYT-C | 0.3A/point | |

7. Open circuit leakage current

0.1mA or less


12.3.4 External wiring precautions

1. Protection circuit for load short-circuits


A short-circuit at a load connected to an output terminal could cause burnout at the output element or the PCB. To prevent this, a protection fuse should be inserted at the output.

Use a load power supply capacity that is at least 2 times larger than the total rated fuse capacity.

- External Wiring of Sink Output Type

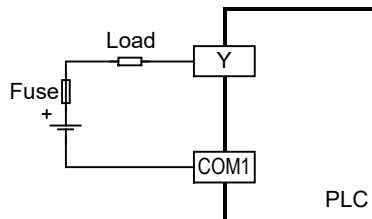


- External Wiring of Source Output Type

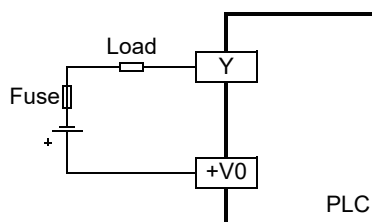


2. Interlock

For loads such as forward/reverse contactors, etc., where a hazardous condition could result if switched ON simultaneously, an external interlock should be provided for interlocking the PLC's internal programs, as shown below.

- External Wiring of Sink Output Type

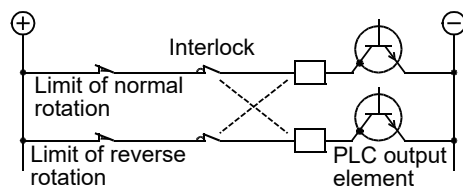

- External Wiring of Source Output Type

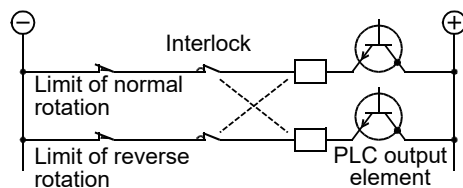


3. Contact protection circuit for inductive loads


When an inductive load is connected, connect a diode (for commutation) in parallel with the load as necessary.
The diode (for commutation) must comply with the following specifications.

| Item | Guide |
|-----------------|-----------------------------------|
| Reverse voltage | 5 to 10 times of the load voltage |
| Forward current | Load current or more |

- External Wiring of Sink Output Type

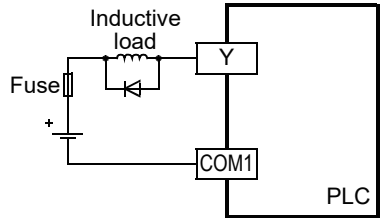


- External Wiring of Source Output Type

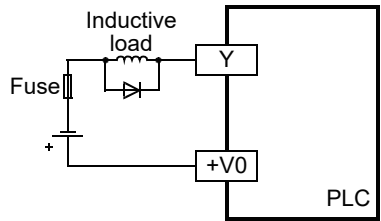

12.3.5 Example of external wiring

1. Transistor output (sink)

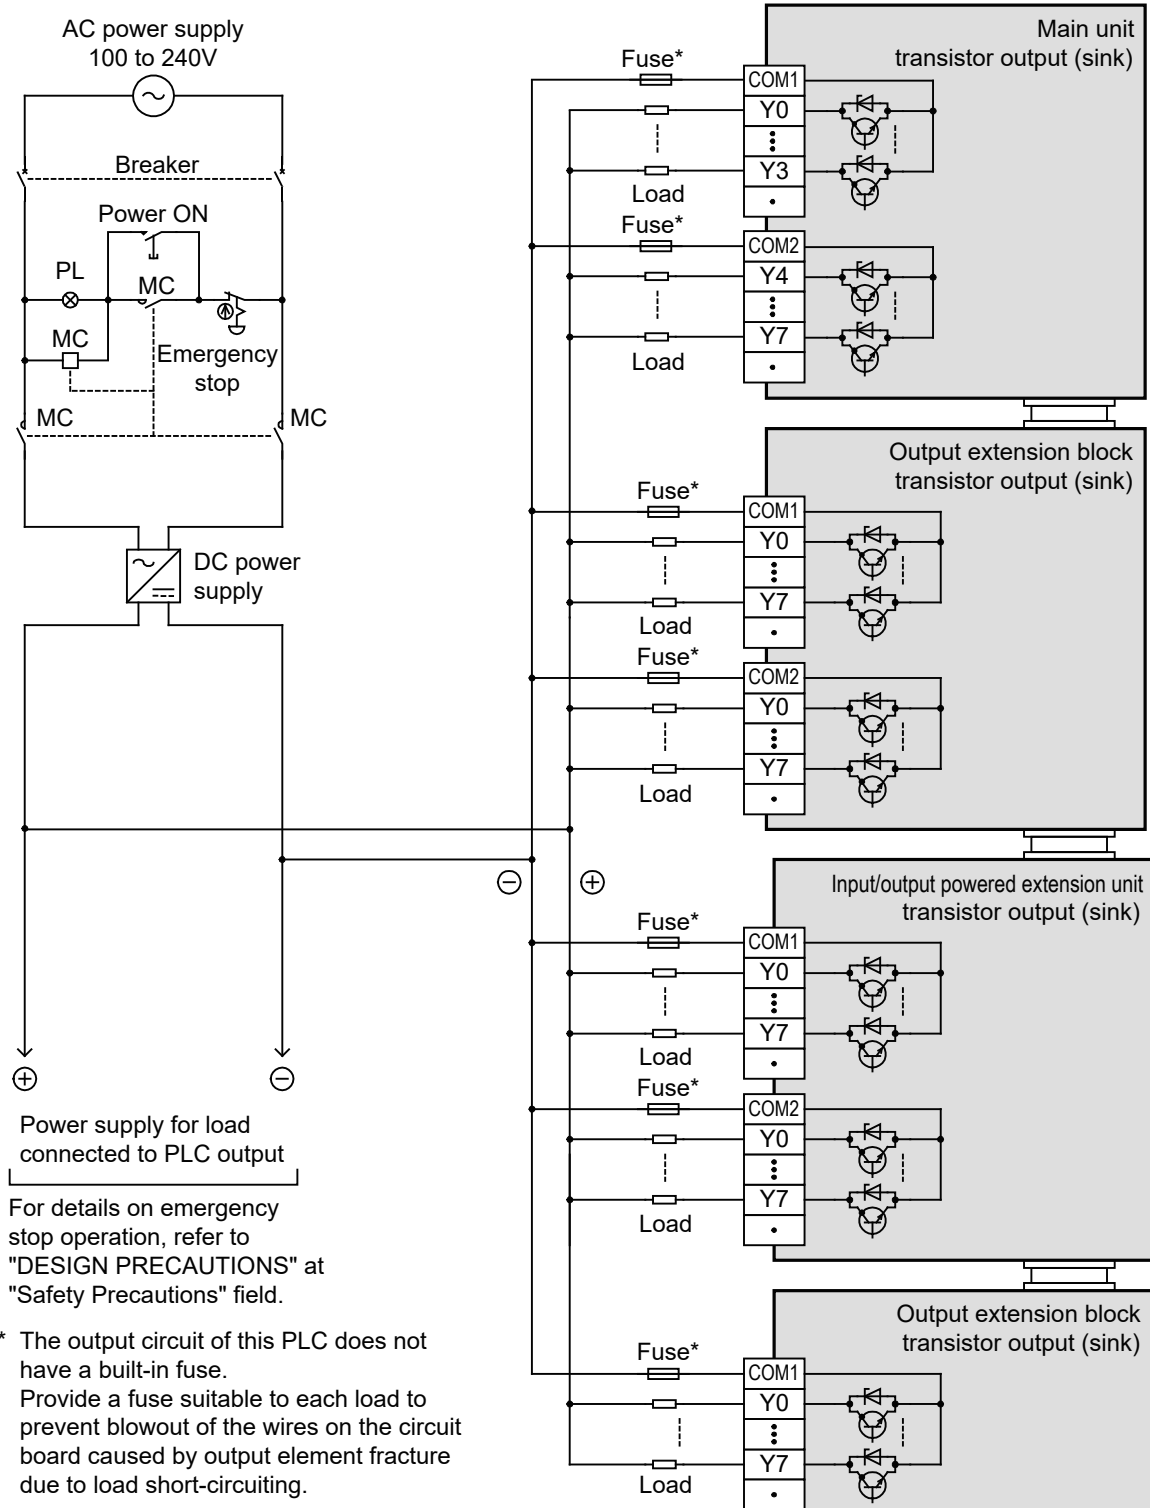


WIRING PRECAUTIONS



- Do not wire vacant terminals externally. Doing so may damage the product.

2. Transistor output (source)

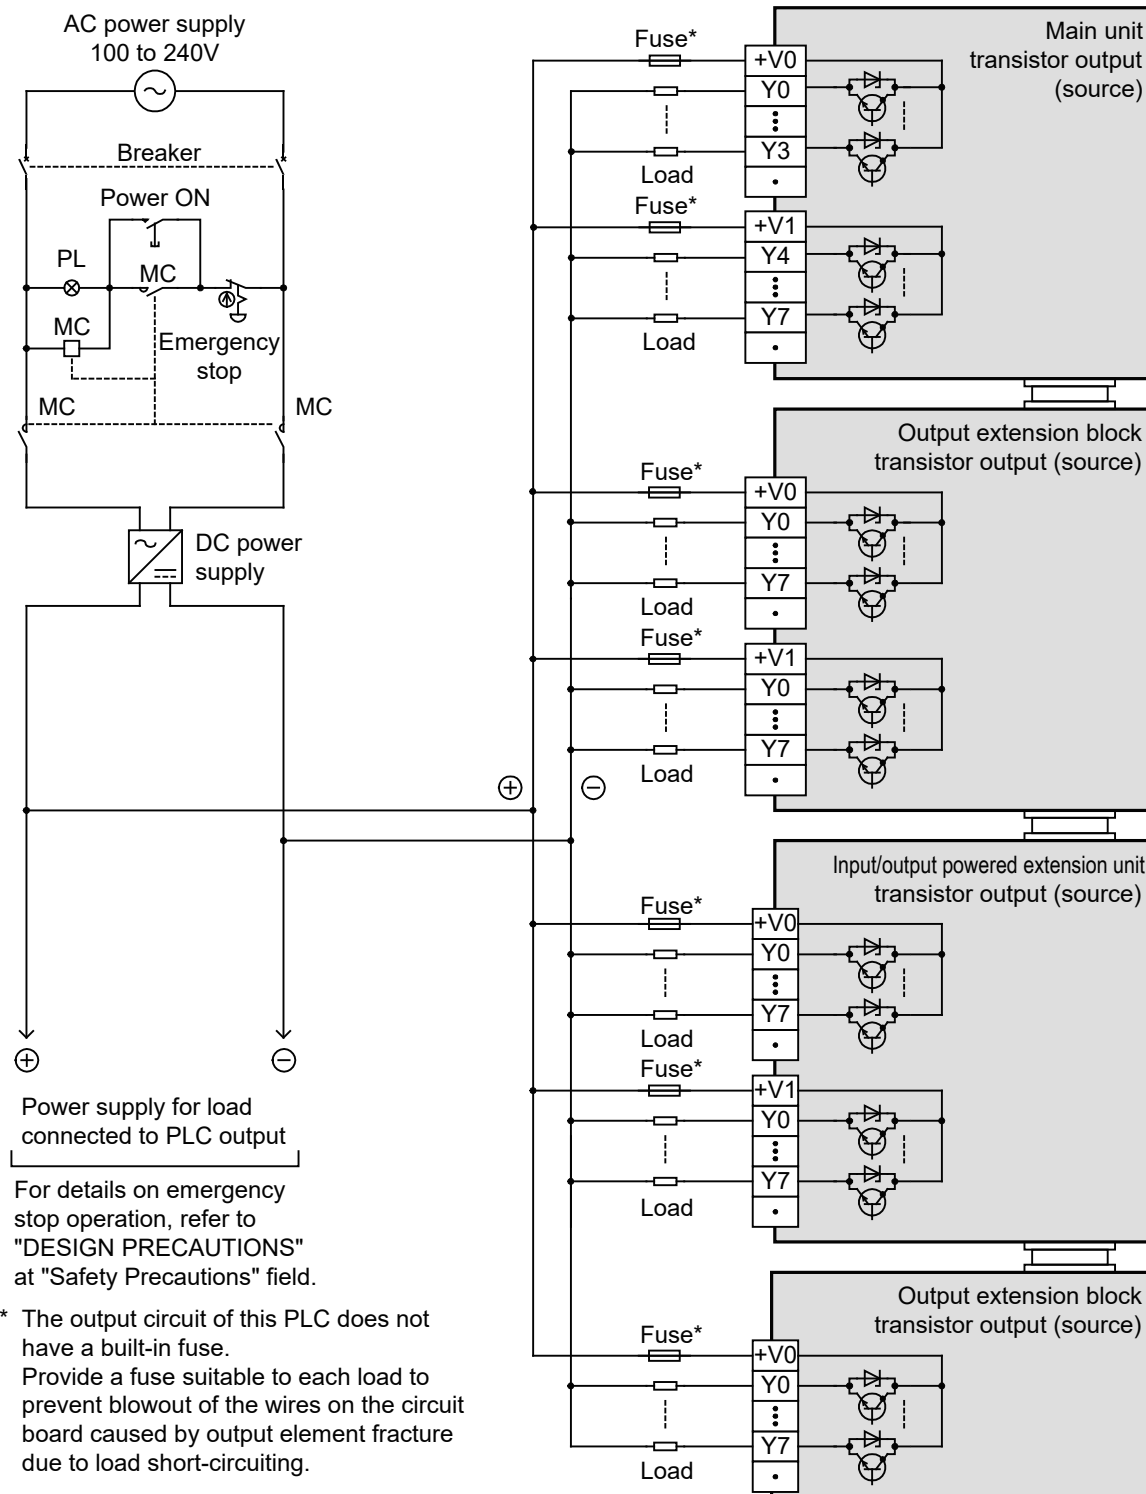

WIRING PRECAUTIONS



CAUTION


- Do not wire vacant terminals externally. Doing so may damage the product.

12.4 External Wiring for Triac (SSR) Output Type

This section explains the triac output specifications (main unit) and external wiring.

- For the main unit, refer to Subsection 12.4.1 "Output specification (main unit) triac output type" and Subsection 12.4.2 "Handling of triac output" and Subsection 12.4.3 "External wiring precautions" and Subsection 12.4.4 "Example of external wiring".
- For the input/output powered extension units/blocks, refer to Subsection 12.4.2 "Handling of triac output" and Subsection 12.4.3 "External wiring precautions". For the specifications and wiring examples, refer to the specifications for each model.
 - For specifications on the input/output powered extension units, refer to Chapter 15.
 - For specifications on the input/output extension blocks, refer to Chapter 16.

12.4.1 Output specification (main unit) triac output type

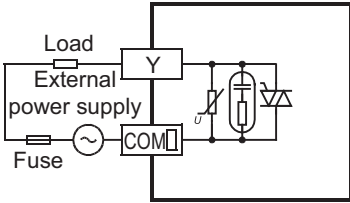
| Item | | Triac output specifications | |
|------------------------------|-----------------|--|---------------------------|
| | | FX _{3U} -32MS/ES | FX _{3U} -64MS/ES |
| Number of output points | | 16 points | 32 points |
| Connecting type | | Removable terminal block (M3 screw) | |
| Output type | | Triac output (SSR) | |
| External power supply | | 85 to 242V AC | |
| Max. load | Resistance load | 0.3A / point The total load current of resistance loads per common terminal should be the following value. → For details on the common terminal for each model, refer to the terminal block layout. <ul style="list-style-type: none"> 4 output points/common terminal: 0.8 A or less 8 output points/common terminal: 0.8 A or less | |
| | Inductive load | 15 VA/100V AC, 30 VA/200V AC | |
| Open circuit leakage current | | 1 mA/100V AC, 2 mA/200V AC | |
| Min. load | | 0.4 VA/100V AC, 1.6 VA/200V AC | |
| Response time | OFF→ON | 1 ms or less | |
| | ON→OFF | 10 ms or less | |
| Circuit insulation | | Photo-thyristor insulation | |
| Display of output operation | | LED on panel lights when photo-thyristor is driven. | |
| Output circuit configuration | |  <p>A common number applies to the □ of [COM□].</p> | |

12.4.2 Handling of triac output

1. Output terminals

On the triac output type units/blocks, one common terminal is used for 4 or 8 points.

Therefore, the common terminal blocks can drive loads of different circuit voltage systems (for example, 100V AC and 200V AC).

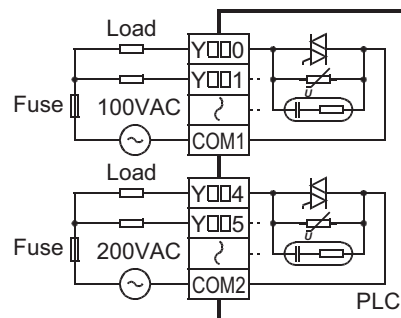

2. Circuit insulation

The PLC internal circuit and the output element (triac) are insulated with a photo-thyristor. The common terminal blocks are separate from one another.

3. Display of operation

When the photo-thyristor is driven, the LED is lit, and the output triac is turned on.

4. Response time

The time from when the photo-thyristor is driven or shut down until the output triac is turned on and until it is turned off is 1ms or less and 10ms or less, respectively.


5. Output current

The max current per output point is 0.3A. However, to restrict temperature rise, the max current per one output from four points should be 0.8A (average per point is 0.2A).

When a load with high rush current is turned on and off frequently, the root-mean-square current should be 0.2A or less.

<Example>

$$\sqrt{\frac{4^2 \times 0.02 + 0.4^2 \times 0.7}{0.02 + 0.7 + 10}} = 0.2A$$

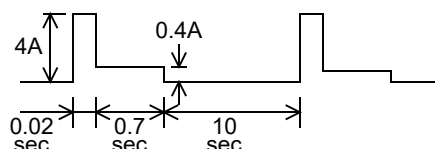

6. Open circuit leakage current

A C-R absorber is connected for turn-off in parallel with the triac output terminal of this type of PLC. Therefore, when the circuit opens, a leakage current will be 1mA at 100V AC and 2mA at 200V AC.


Since the triac output type devices leak current when the circuits are open, small-size relays and micro current loads having low rated operating current may keep operating even when the triac output is turned off. Therefore, use a load of 0.4VA or more at 100V AC or 1.6VA or more at 200V AC. If the load is less than this value, connect a surge absorber as stated below in parallel with the load.

→ **For the connection of the surge absorber, refer to Subsection 12.4.3 "External wiring precautions".**

12.4.3 External wiring precautions


1. Protection circuit for load short-circuits

A short-circuit at a load connected to an output terminal could cause burnout at the output element or the PCB. To prevent this, a protection fuse should be inserted at the output.

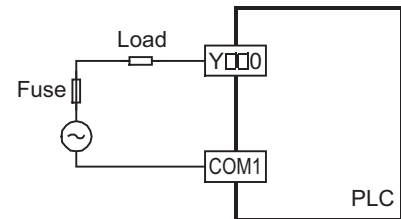

2. Micro current load

The PLC's internal Triac output circuit is equipped with a turn-off C-R absorber. When connecting a very low current load of "0.4VA/100V AC or less, or 1.6VA/200V AC or less", please connect a surge absorber parallel to the load. Select the rated voltage of a surge absorber that is suitable for the load being used. Refer to the table below for other specifications.

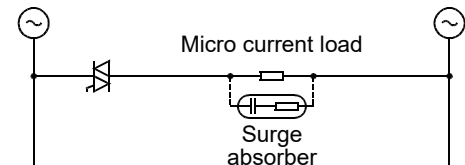

| Item | Standard |
|-----------------------------|---------------------|
| Static electricity capacity | Approx. 0.1μF |
| Resistance value | Approx. 100 to 200Ω |


Reference

| Manufacturer | Model name |
|-------------------------------------|------------|
| Okaya Electric Industries Co., Ltd. | CR-10201 |

| Manufacturer | Model name |
|---------------------|----------------------|
| Rubycon Corporation | 250MCRA104100M B0325 |


3. Interlock

For loads such as forward/reverse contactors, etc., where a hazardous condition could result if switched ON simultaneously, an external interlock should be provided for interlocking the PLC's internal programs as shown to the right.

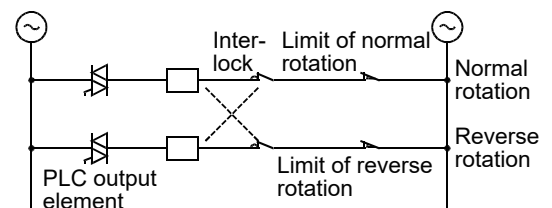


4. In-phase

PLC output contacts (*) should be used in an "in-phase" manner.

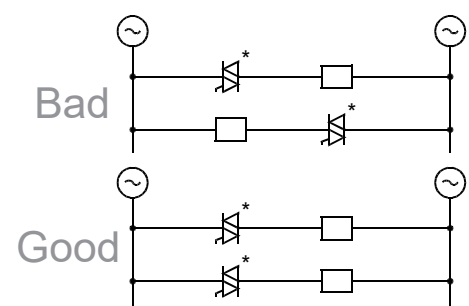

12.4.4 Example of external wiring

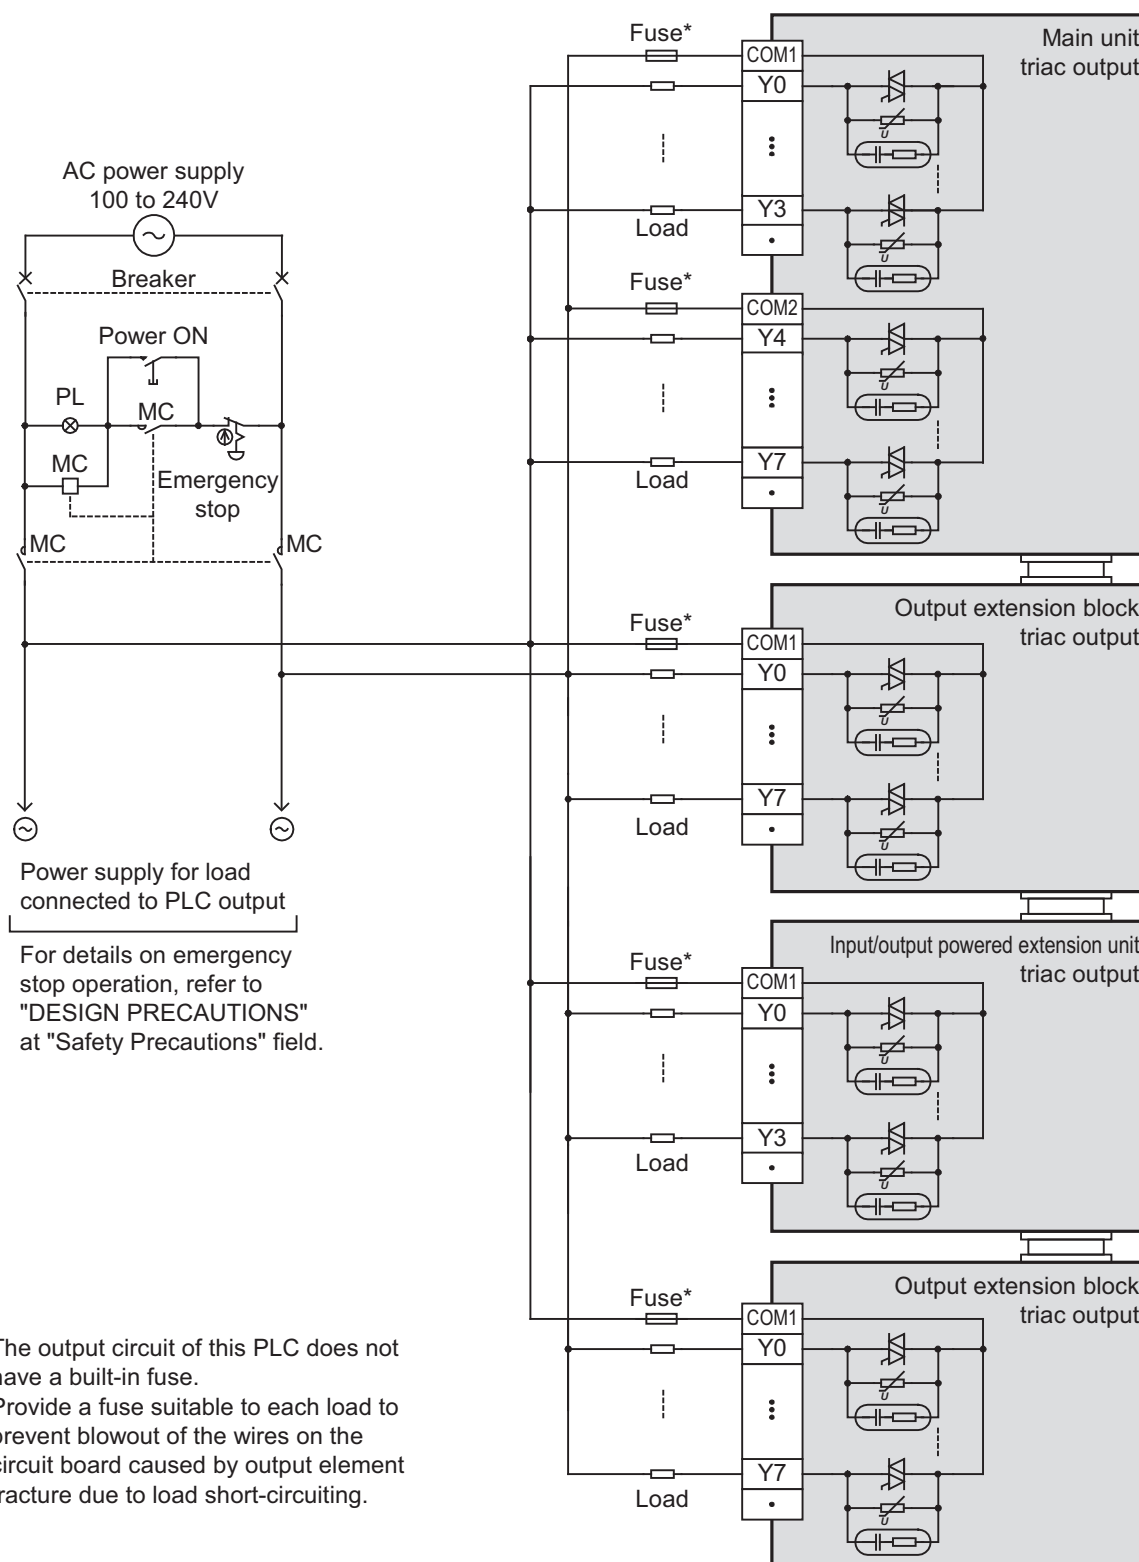

* The output circuit of this PLC does not have a built-in fuse. Provide a fuse suitable to each load to prevent blowout of the wires on the circuit board caused by output element fracture due to load short-circuiting.

WIRING PRECAUTIONS



- Do not wire vacant terminals externally. Doing so may damage the product.

13. Examples of Wiring for Various Uses

DESIGN PRECAUTIONS



WARNING

- Make sure to have the following safety circuits outside of the PLC to ensure safe system operation even during external power supply problems or PLC failure.
Otherwise, malfunctions may cause serious accidents.
 - 1) Most importantly, have the following: an emergency stop circuit, a protection circuit, an interlock circuit for opposite movements (such as normal vs. reverse rotation), and an interlock circuit (to prevent damage to the equipment at the upper and lower positioning limits).
 - 2) Note that when the PLC CPU detects an error, such as a watchdog timer error, during self-diagnosis, all outputs are turned off. Also, when an error that cannot be detected by the PLC CPU occurs in an input/output control block, output control may be disabled.
External circuits and mechanisms should be designed to ensure safe machinery operation in such a case.
 - 3) Note that the output current of the 24V DC service power supply varies depending on the model and the absence/presence of extension blocks. If an overload occurs, the voltage automatically drops, inputs in the PLC are disabled, and all outputs are turned off.
External circuits and mechanisms should be designed to ensure safe machinery operation in such a case.
 - 4) Note that when an error occurs in a relay, triac or transistor output device, the output could be held either on or off.
For output signals that may lead to serious accidents, external circuits and mechanisms should be designed to ensure safe machinery operation in such a case.

DESIGN PRECAUTIONS



CAUTION

- Do not bundle the control line together with or lay it close to the main circuit or power line. As a guideline, lay the control line at least 100mm (3.94") or more away from the main circuit or power line.
Noise may cause malfunctions.
- Install module so that excessive force will not be applied to peripheral device connectors.
Failure to do so may result in wire damage/breakage or PLC failure.

SECURITY PRECAUTIONS



WARNING

- To maintain the security (confidentiality, integrity, and availability) of the programmable controller and the system against unauthorized access, denial-of-service (DoS) attacks, computer viruses, and other cyberattacks from unreliable networks and devices via network, take appropriate measures such as firewalls, virtual private networks (VPNs), and antivirus solutions.

WIRING PRECAUTIONS



WARNING

- Make sure to cut off all phases of the power supply externally before attempting installation or wiring work.
Failure to do so may cause electric shock or damage to the product.
- Make sure to attach the terminal cover, offered as an accessory, before turning on the power or initiating operation after installation or wiring work.
Failure to do so may cause electric shock.
- The temperature rating of the cable should be 80°C or more.

WIRING PRECAUTIONS



- Do not supply power to the [24+] and [24V] terminals (24V DC service power supply) on the main unit or extension units.
Doing so may cause damage to the product.
- Perform class D grounding (grounding resistance: 100 Ω or less) to the grounding terminal on the main unit and extension units with a wire 2 mm² or thicker.
Do not use common grounding with heavy electrical systems (refer to Section 9.4).
- Connect the AC power supply wiring to the dedicated terminals described in this manual.
If an AC power supply is connected to a DC input/output terminal or DC power supply terminal, the PLC will burn out.
- Connect the DC power supply wiring to the dedicated terminals described in this manual.
If an AC power supply is connected to a DC input/output terminal or DC power supply terminal, the PLC will burn out.
- Do not wire vacant terminals externally.
Doing so may damage the product.
- When drilling screw holes or wiring, make sure that cutting and wiring debris do not enter the ventilation slits.
Failure to do so may cause fire, equipment failures or malfunctions.
- Make sure to properly wire the FX3U Series main unit and FX0N/FX2N/FX3U Series extension equipment in accordance with the following precautions.
Failure to do so may cause electric shock, equipment failures, a short-circuit, wire breakage, malfunctions, or damage to the product.
 - The disposal size of the cable end should follow the dimensions described in the manual.
 - Tightening torque should follow the specifications in the manual.
 - Tighten the screws using a Phillips-head screwdriver No.2 (shaft diameter 6mm (0.24") or less). Make sure that the screwdriver does not touch the partition part of the terminal block.
- Make sure to properly wire to the terminal block (European type) in accordance with the following precautions.
Failure to do so may cause electric shock, equipment failures, a short-circuit, wire breakage, malfunctions, or damage to the product.
 - The disposal size of the cable end should follow the dimensions described in the manual.
 - Tightening torque should follow the specifications in the manual.
 - Twist the end of strand wire and make sure that there are no loose wires.
 - Do not solder-plate the electric wire ends.
 - Do not connect more than the specified number of wires or electric wires of unspecified size.
 - Affix the electric wires so that neither the terminal block nor the connected parts are directly stressed.
- Make sure to properly wire to the FX Series terminal blocks in accordance with the following precautions.
Failure to do so may cause electric shock, equipment failures, a short-circuit, wire breakage, malfunctions, or damage to the product.
 - The disposal size of the cable end should follow the dimensions described in the manual.
 - Tightening torque should follow the specifications in the manual.
 - Tighten the screws using a Phillips-head screwdriver No.2 (shaft diameter 6mm (0.24") or less). Make sure that the screwdriver does not touch the partition part of the terminal block.

13.1 Notes about Examples of Wiring

The examples of wiring are given under the following conditions.

- The input/output numbers are the actual numbers on the program. (They may differ from the numbers shown on the product terminals.)
- Product input/output specifications
Check the product input/output specifications when using any example of wiring.
 - Products only for sink input and products both for sink input and for source input are available.
 - Products for sink output and products for source output are available.
- The examples of programming (applied instructions) are given based on the allocation of the input/output numbers for wiring.

→ For the applied instructions, refer to the Programming Manual.

 
13.2 Digital Switch [DSW Instruction (FNC 72)/BIN Instruction (FNC 19)]

13.2.1 When DSW instructions are used

Examples of wiring for capturing values from a 4-digit digital switch to the data register D100 are given below.

1. Main unit


Example of program



Example of wiring


In case of sink wiring

When inputs are used for both sink and source and outputs are the transistor sink type in the used main unit

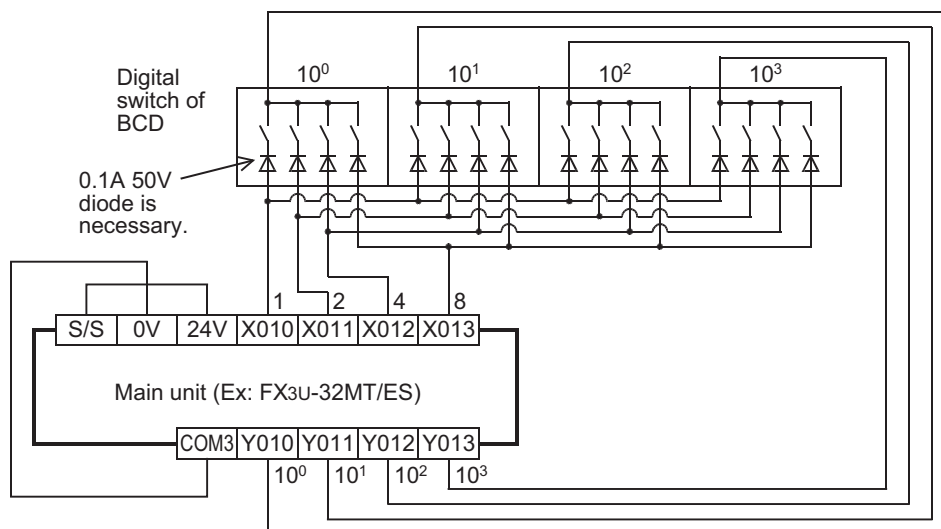


In case of source wiring

When inputs are used for both sink and source and outputs are the transistor source type in the used main unit

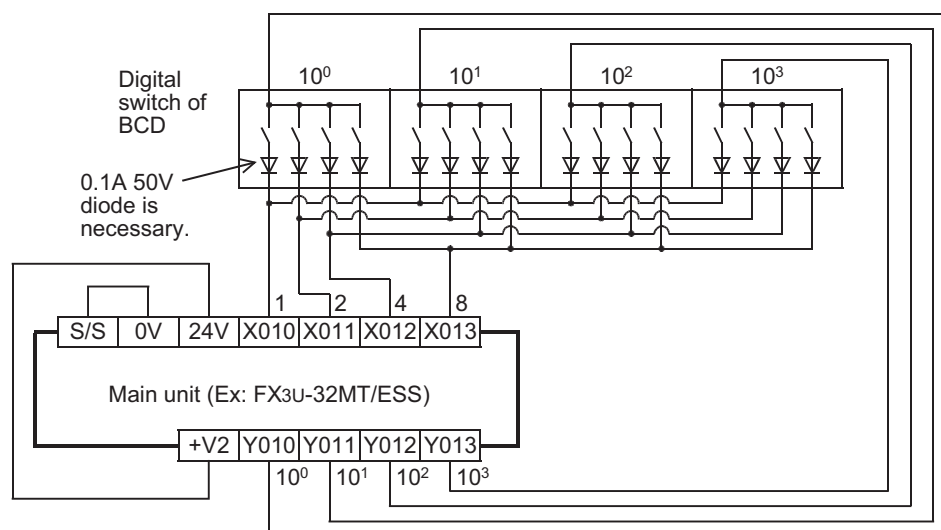

2. Main unit + input/output powered extension unit/block

 
Example of program



Examples of wiring

In case of sink wiring

When the main unit and a transistor output (sink) type input/output powered extension unit/block are used

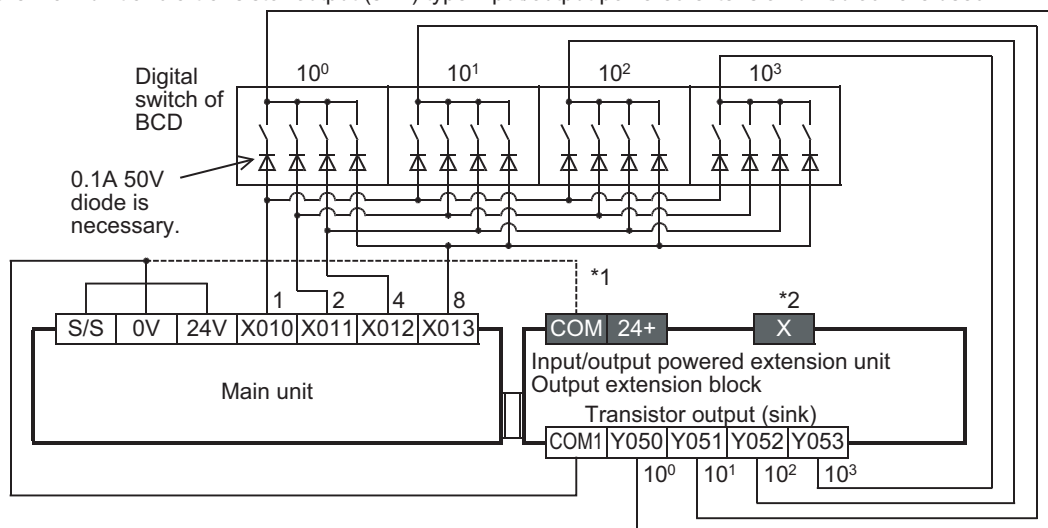


*1 To use the input terminal (X) of the input/output powered extension unit, wire the terminal as shown by the dotted line

*2 The terminals in the shaded areas are provided on input/output powered extension units (ex.: FX2N-32ET).
Output extension blocks do not have the terminals.

In case of source wiring

When the main unit and a transistor output (source) type input/output powered extension unit/block are used

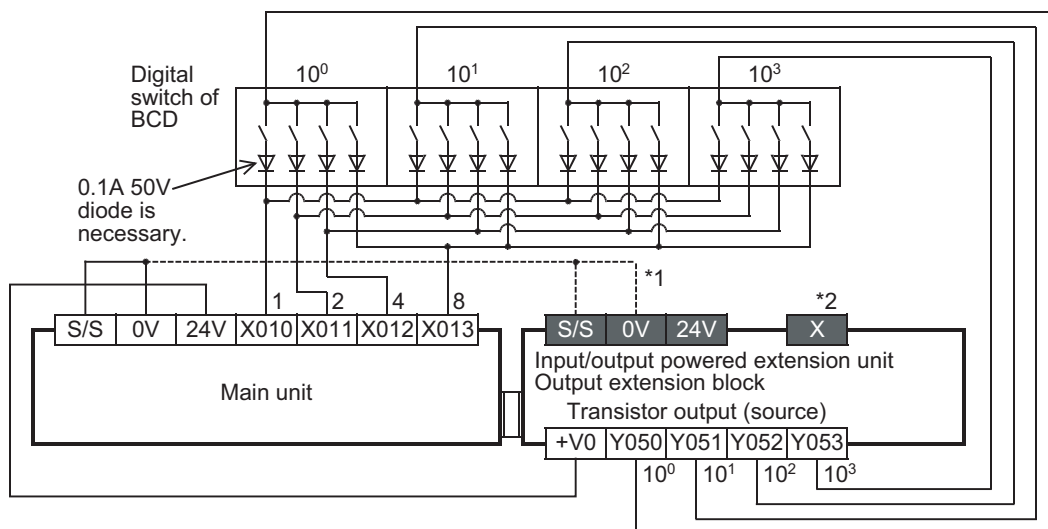


*1 To use the input terminal (X) of the input/output powered extension unit, wire the terminal as shown by the dotted line

*2 The terminals in the shaded areas are provided on input/output powered extension units (ex.: FX2N-32ET-ESS/UL).
Output extension blocks do not have the terminals.

3. Input/output powered extension unit

 
Example of program



Examples of wiring


In case of sink wiring

When inputs are used for sink only and outputs are the transistor sink type in the used input/output powered extension unit

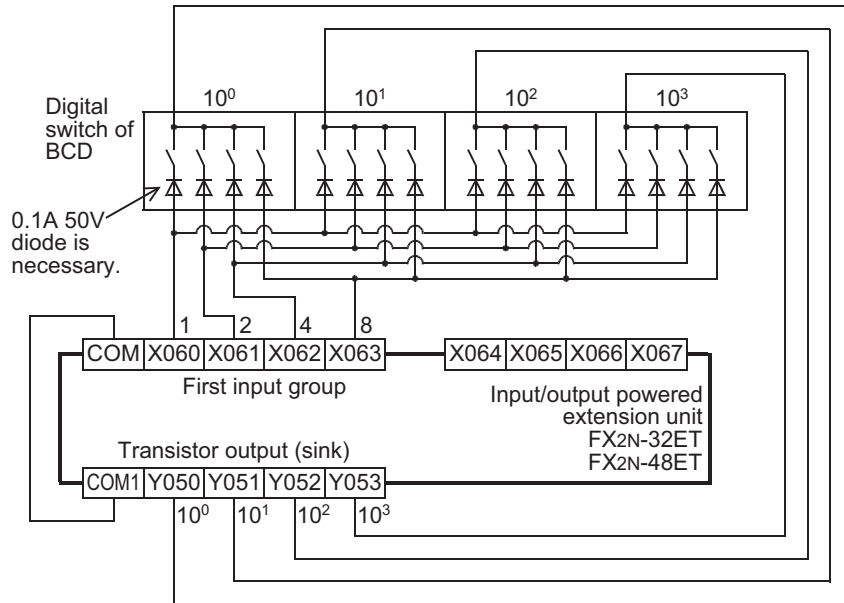

In case of source wiring


When inputs are used for both sink and source and outputs are the transistor source type in the used input/output powered extension unit

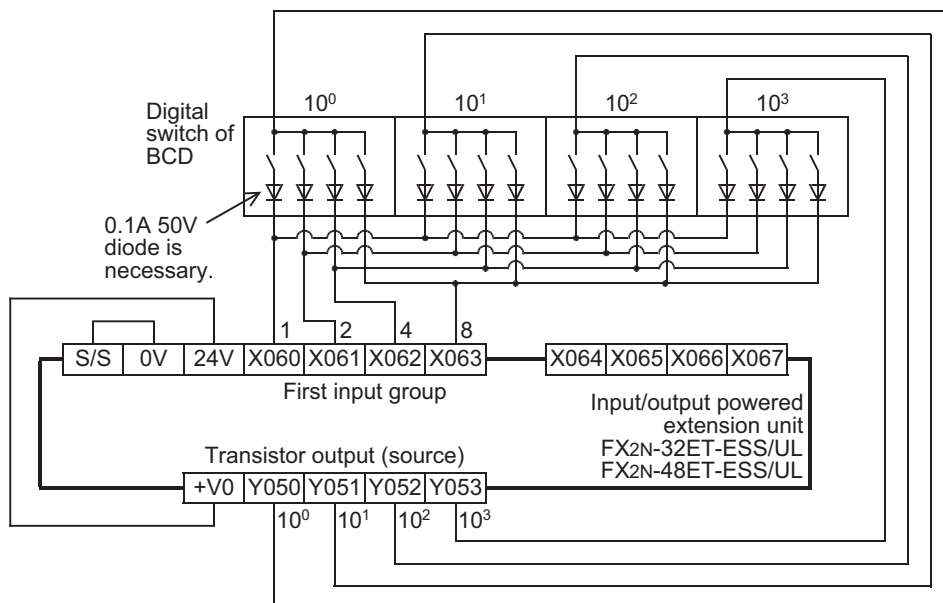

13.2.2 When BIN instructions are used



Examples of wiring for capturing values from a 2-digit digital switch to the data register D102 are given below.

 Example of program




Examples of wiring

In case of sink wiring

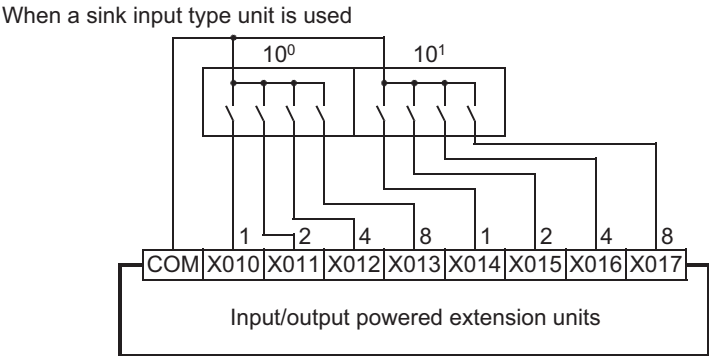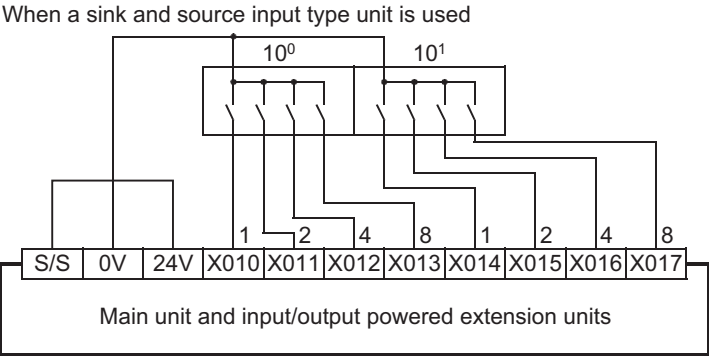

In case of source wiring

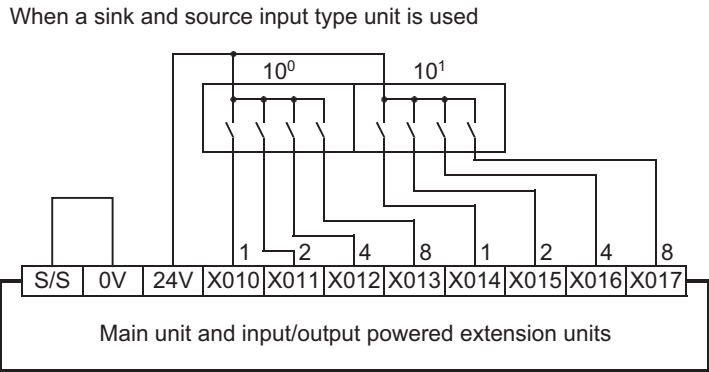


| | |
|----|--|
| 11 | High-Speed Counters |
| 12 | Output Wiring |
| 13 | Wiring for Various Uses |
| 14 | Test Run, Maintenance, Troubleshooting |
| 15 | Input/Output Powered Extension Units |
| 16 | Input/Output Extension Blocks |
| 17 | Extension Power Supply Unit |
| 18 | Other Extension Units and Options |
| 19 | Display Module |
| 20 | Terminal Block |

13.3 Ten Key Input [TKY Instruction (FNC 70)]

This section gives examples of wiring for capturing values from ten-key pad to D100 using TKY instructions.

 
Example of program




Examples of wiring

In case of sink wiring

When a sink and source input type unit is used

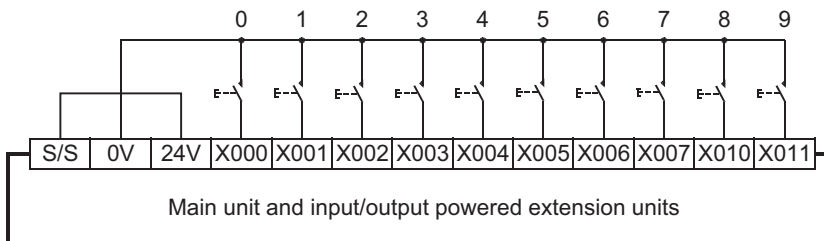


When a sink input type unit is used

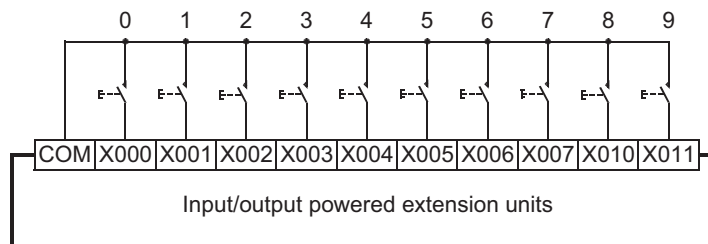

In case of source wiring

When a sink and source input type unit is used

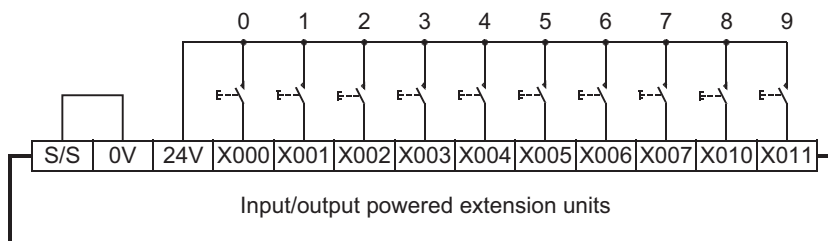


13.4 Hexadecimal Input [HKY Instruction (FNC 71)]

This section gives examples of wiring for capturing values (0 to 9) and function keys (A to F) from 16 switches (16 keys) to D100 and M0 to M5 using HKY instructions. (Hexadecimal values can be captured.)

1. Main Unit

 
Example of program



Example of wiring


In case of sink wiring

When inputs are used for both sink and source and outputs are the transistor output (sink) type in the used main unit

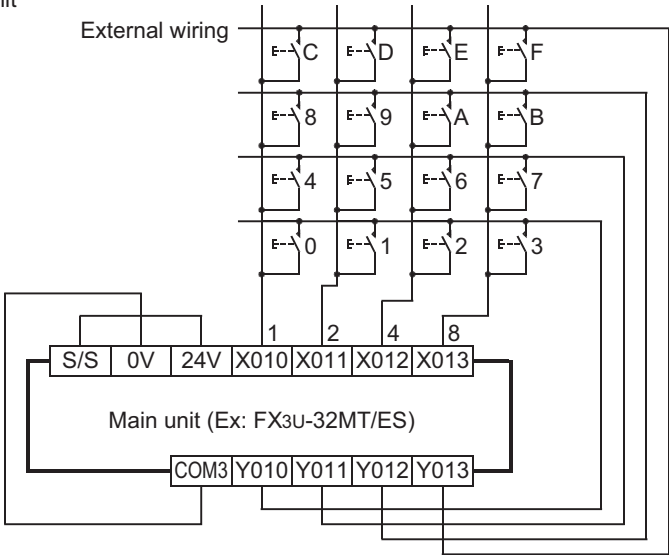

In case of source wiring


When inputs are used for both sink and source and outputs are the transistor output (source) type in the used main unit

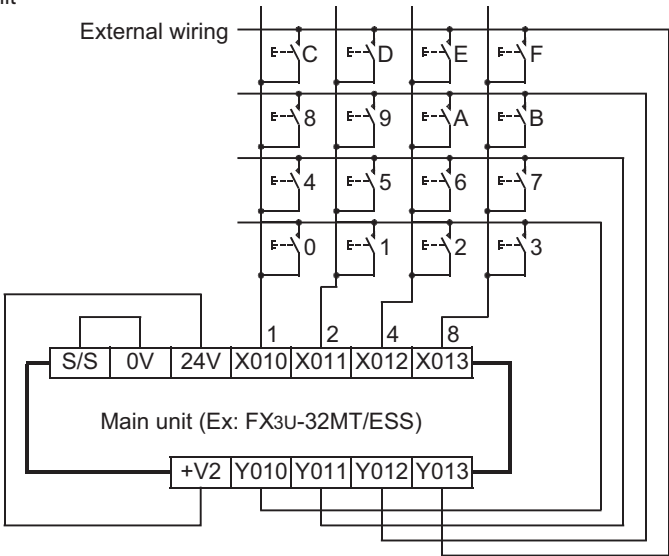

| | |
|----|--|
| 11 | High-Speed Counters |
| 12 | Output Wiring |
| 13 | Wiring for Various Uses |
| 14 | Test Run, Maintenance, Troubleshooting |
| 15 | Input/Output Powered Extension Units |
| 16 | Input/Output Extension Blocks |
| 17 | Extension Power Supply Unit |
| 18 | Other Extension Units and Options |
| 19 | Display Module |
| 20 | Terminal Block |

2. Main unit + input/output powered extension unit/block

 
Example of program



Examples of wiring

In case of sink wiring

When the main unit and a transistor output (sink) type input/output powered extension unit/block are used

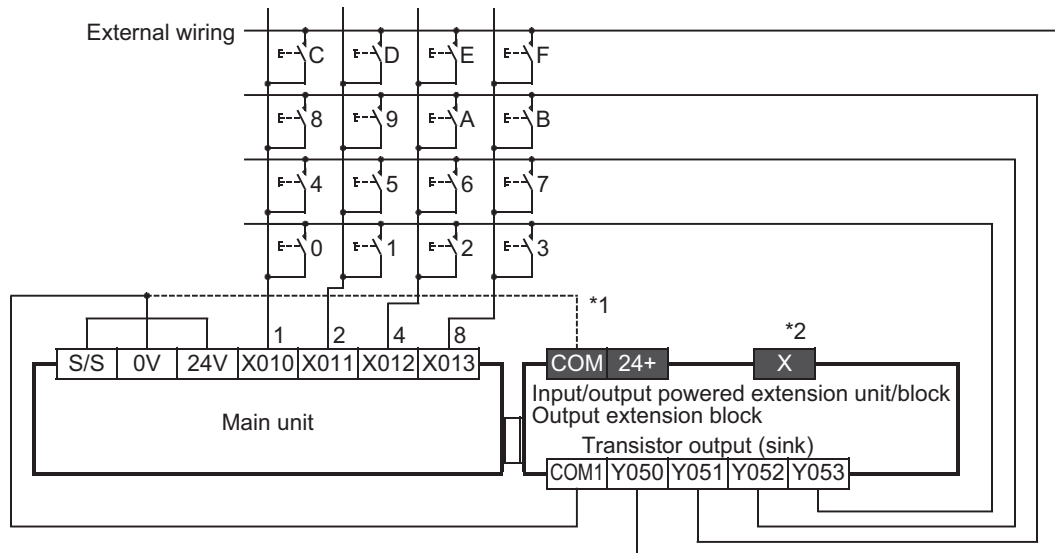


*1 To use the input terminal (X) of the input/output powered extension unit, wire the terminal as shown by the dotted line

*2 The terminals in the shaded areas are provided on input/output powered extension units (ex.: FX_{2N}-32ET).
Output extension blocks do not have the terminals.

In case of source wiring

When the main unit and a transistor output (source) type input/output powered extension unit/block are used

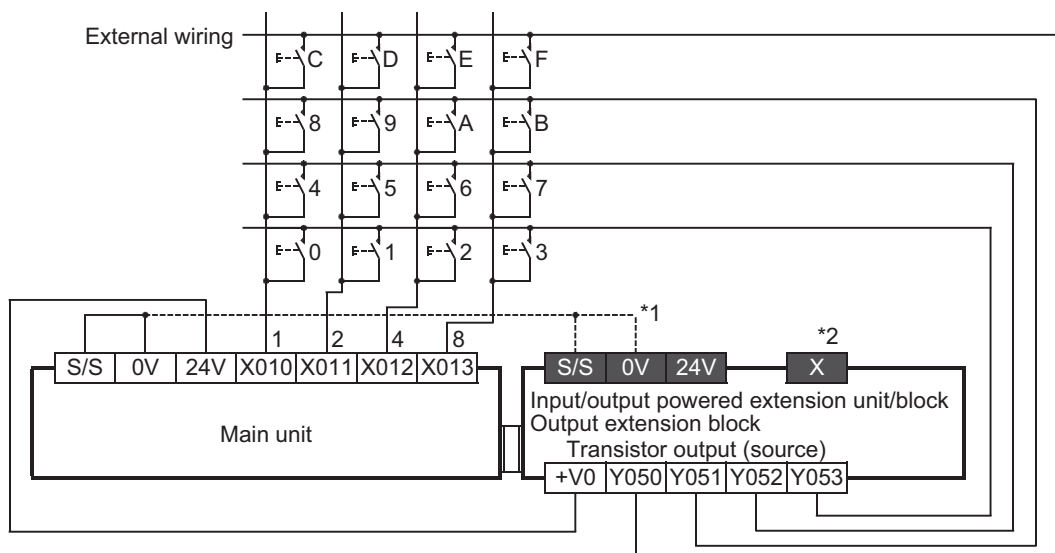


*1 To use the input terminal (X) of the input/output powered extension unit, wire the terminal as shown by the dotted line

*2 The terminals in the shaded areas are provided on input/output powered extension units (ex.: FX_{2N}-32ET-ESS/UL).
Output extension blocks do not have the terminals.

3. Input/output powered extension unit

 
Example of program



Examples of wiring


In case of sink wiring

When inputs are used for sink only and outputs are the transistor sink type in the used input/output powered extension unit

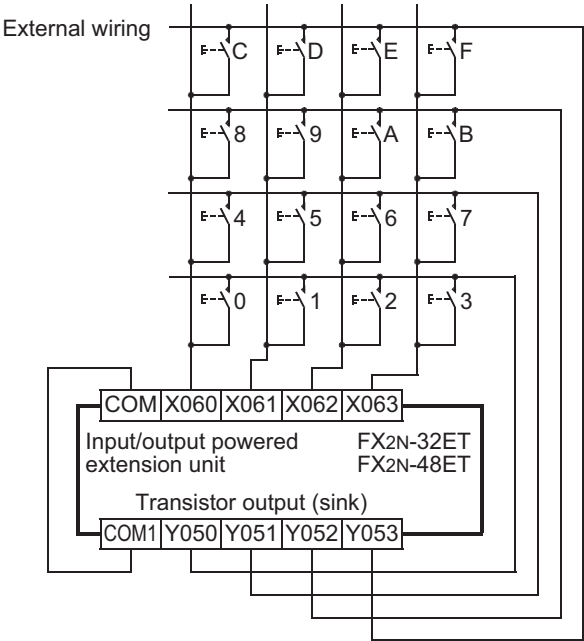

In case of source wiring

When inputs are used for both sink and source and outputs are the transistor source type in the used input/output powered extension unit

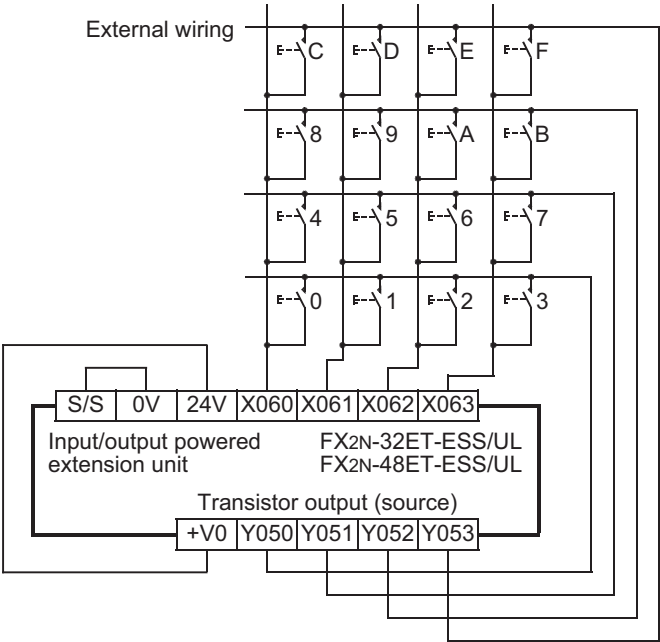


| | |
|----|--|
| 11 | High-Speed Counters |
| 12 | Output Wiring |
| 13 | Wiring for Various Uses |
| 14 | Test Run, Maintenance, Troubleshooting |
| 15 | Input/Output Powered Extension Units |
| 16 | Input/Output Extension Blocks |
| 17 | Extension Power Supply Unit |
| 18 | Other Extension Units and Options |
| 19 | Display Module |
| 20 | Terminal Block |

13.5 Input Matrix [MTR Instruction (FNC 52)]

This section gives examples of wiring for capturing the ON/OFF status of 24 switches to M30 to M37, M40 to M47 and M50 to M57 using MTR instructions.

1. Main Unit

 
Example of program



Example of wiring


In case of sink wiring

When inputs are used for both sink and source and outputs are the transistor sink type in the used main unit

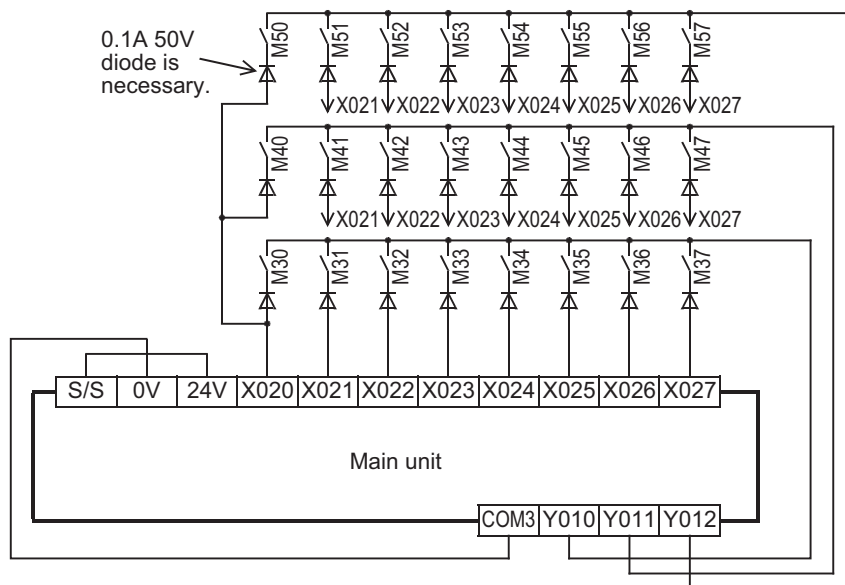


In case of source wiring

When inputs are used for both sink and source and outputs are the transistor source type in the used main unit

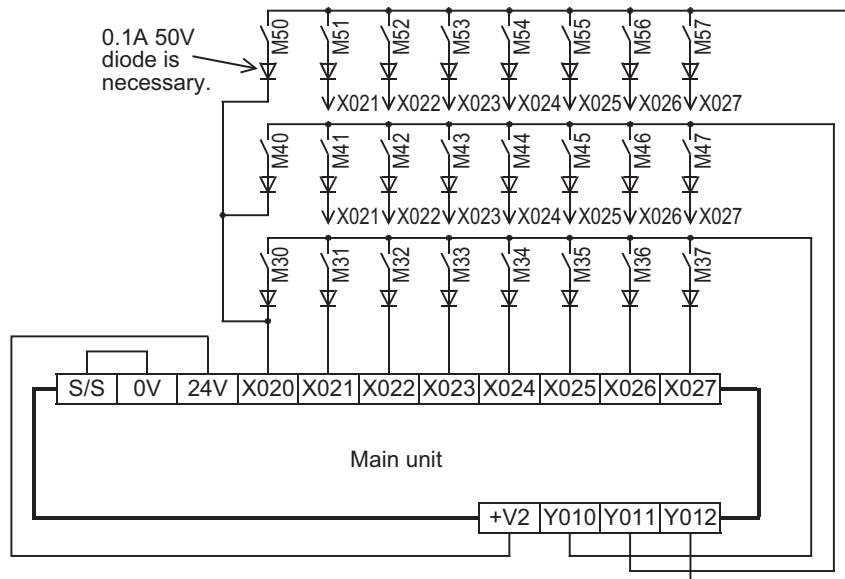

3. Input/output powered extension unit

 
Example of program



Examples of wiring


In case of sink wiring

When inputs are used for sink only and outputs are the transistor sink type in the used input/output powered extension unit

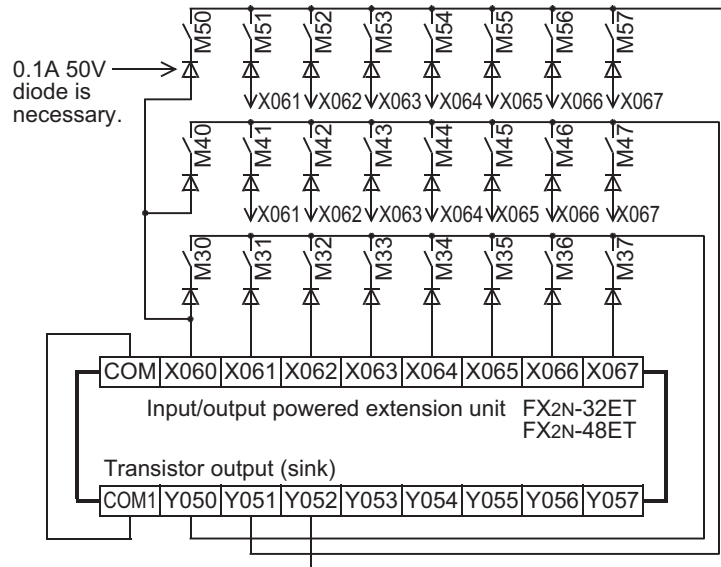

In case of source wiring

When inputs are used for both sink and source and outputs are the transistor source type in the used input/output powered extension unit

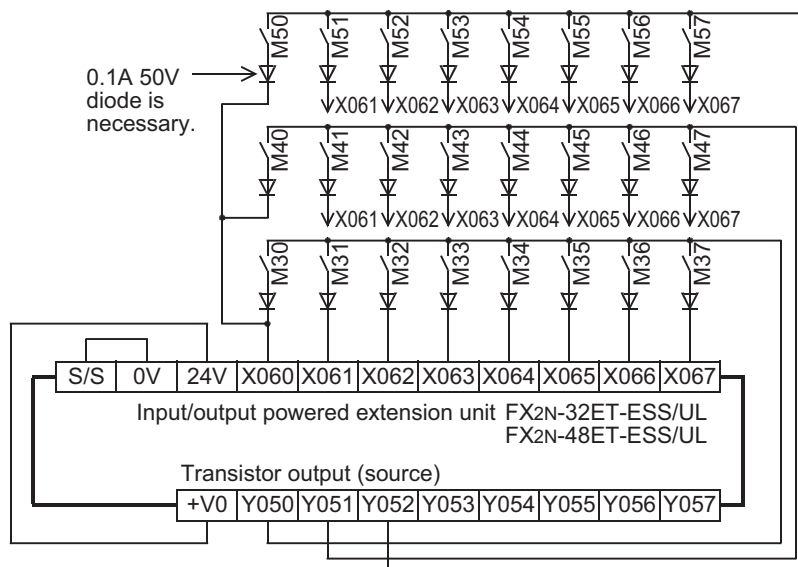


13.6 Seven Segment with Latch [SEGL Instruction (FNC 74)/BCD Instruction (FNC 18)]

13.6.1 When SEGL instructions are used

This subsection gives examples of wiring for displaying the current value of D100 on the 4-digit 7-segment display.


1. Main Unit

 Example of program




Example of wiring

In case of sink wiring

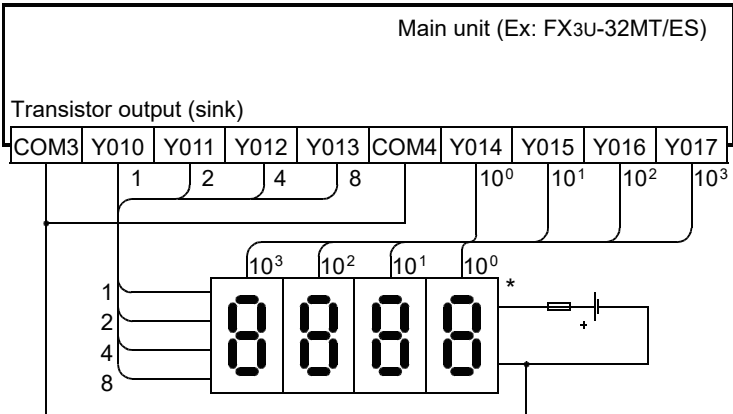


* Use a 7-segment display with a latch and a built-in BCD decoder.

7-segment display to be used for sink wiring
(in case of transistor output)

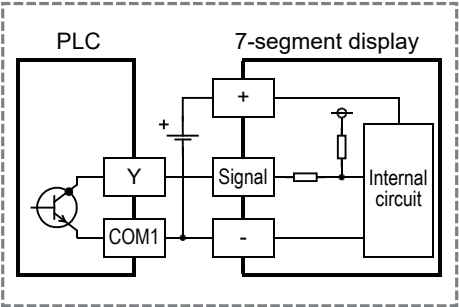


In case of source wiring

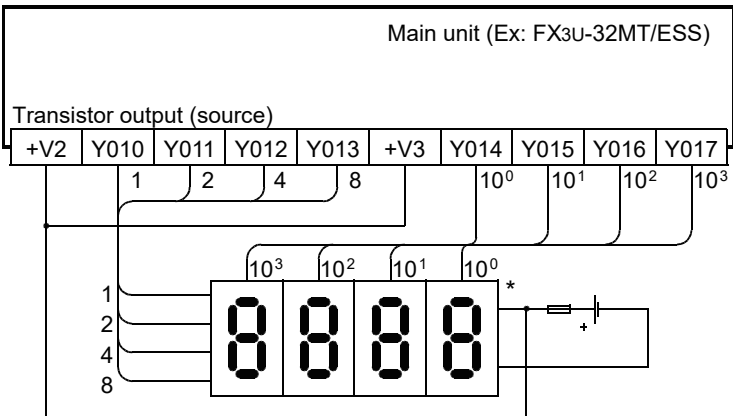


* Use a 7-segment display with a latch and a built-in BCD decoder.

7-segment display to be used for source wiring
(in case of transistor output)

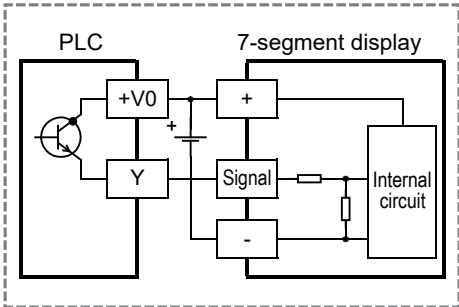


2. Input/output powered extension unit

 Example of program




Examples of wiring

In case of sink wiring

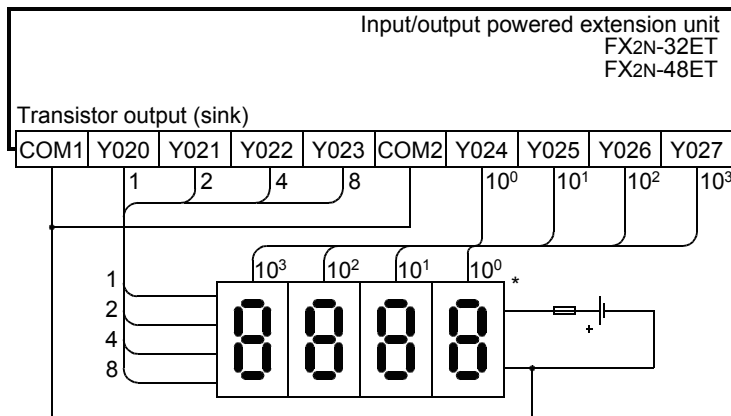


* Use a 7-segment display with a latch and a built-in BCD decoder.

7-segment display to be used for sink wiring
(in case of transistor output)

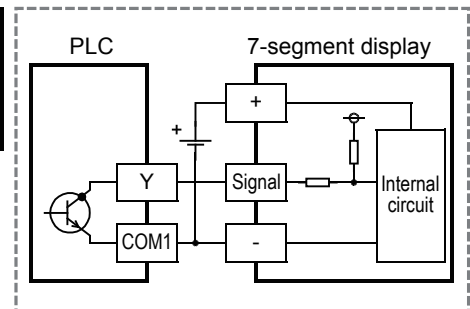


In case of source wiring

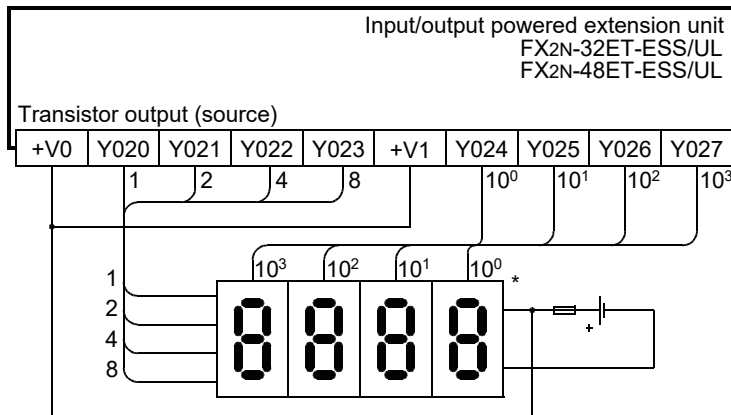

* Use a 7-segment display with a latch and a built-in BCD decoder.

7-segment display to be used for source wiring
(in case of transistor output)

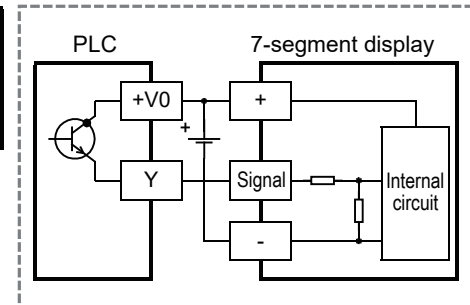


13.6.2 When BCD instructions are used

This subsection gives examples of wiring for displaying the current value of D100 on the 2-digit 7-segment display.


1. Main Unit

 Example of program




Example of wiring


In case of sink wiring

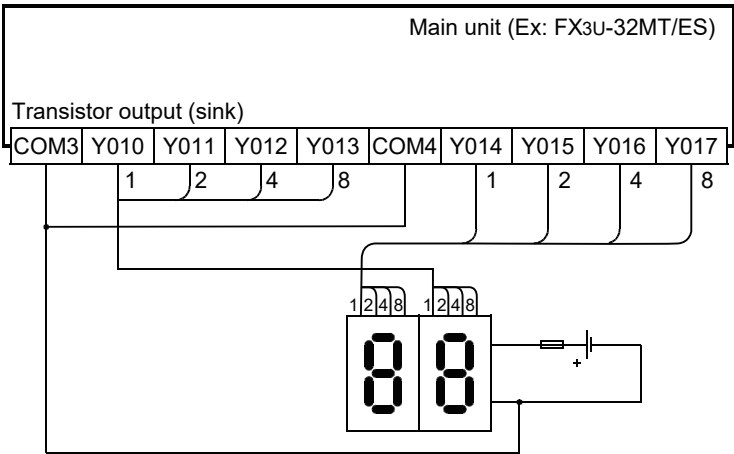


7-segment display to be used for sink wiring (in case of transistor output)

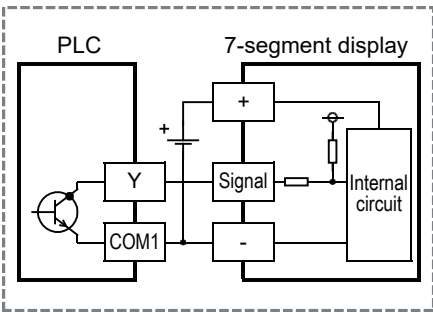

In case of source wiring

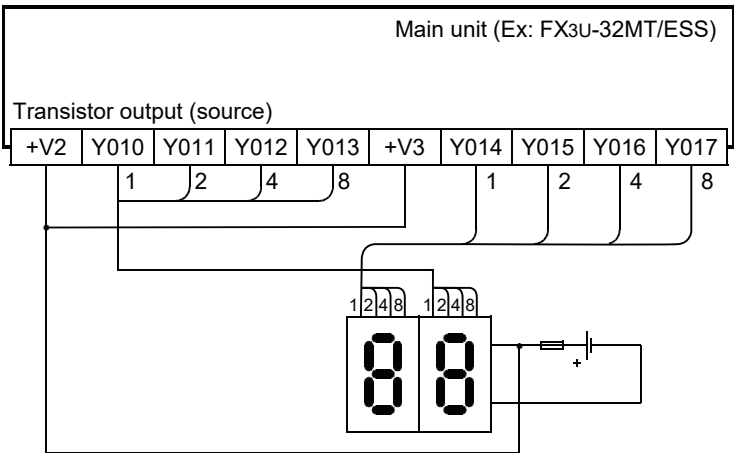


7-segment display to be used for source wiring (in case of transistor output)

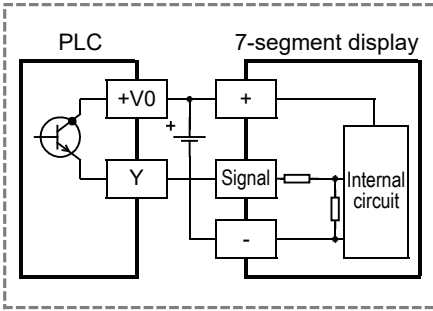


2. Input/output powered extension units

 Example of program




Examples of wiring


In case of sink wiring

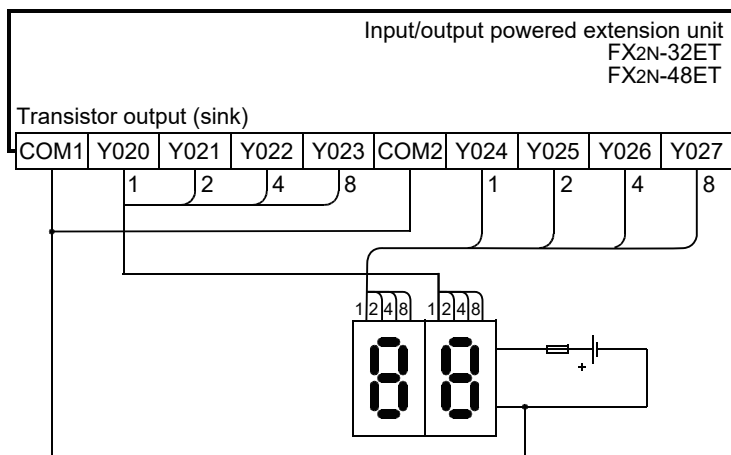


7-segment display to be used for source wiring (in case of transistor output)

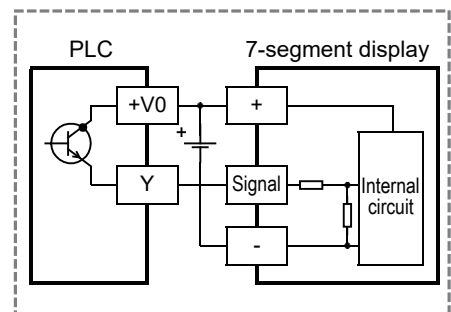

In case of source wiring

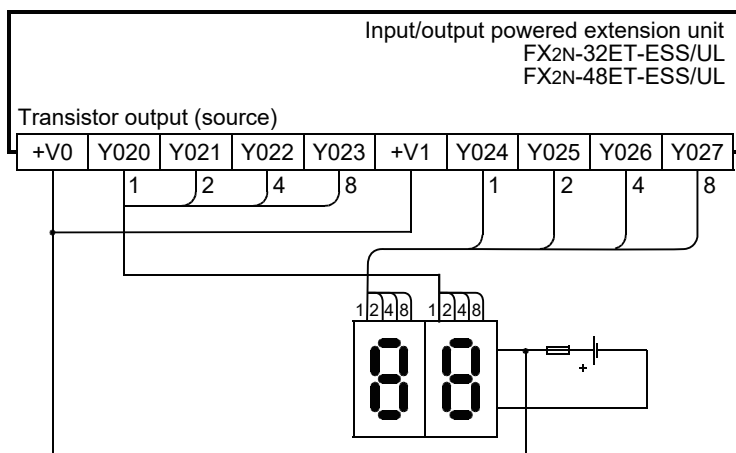

7-segment display to be used for sink wiring (in case of transistor output)

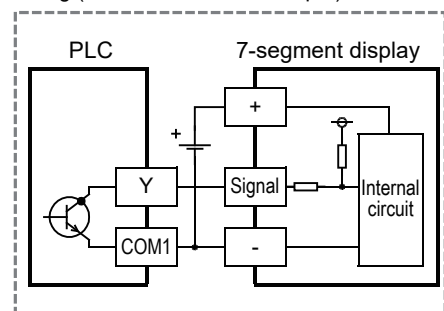

14. Test Operation, Adjustment, Maintenance and Troubleshooting

STARTUP AND MAINTENANCE PRECAUTIONS



WARNING

- Do not touch any terminal while the PLC's power is on.
Doing so may cause electric shock or malfunctions.
- Before cleaning or retightening terminals, cut off all phases of the power supply externally.
Failure to do so may cause electric shock.
- Use the battery for memory backup correctly in conformance to this manual.
 - Use the battery only for the specified purpose.
 - Connect the battery correctly.
 - Do not charge, disassemble, heat, put in fire, short-circuit, connect reversely, weld, swallow or burn the battery, or apply excessive forces (vibration, impact, drop, etc.) to the battery.
 - Do not store or use the battery at high temperatures or expose to direct sunlight.
 - Do not expose to water, bring near fire or touch liquid leakage or other contents directly.
 - Incorrect handling of the battery may cause heat excessive generation, bursting, ignition, liquid leakage or deformation, and lead to injury, fire or failures and malfunctions of facilities and other equipment.
 - When replacing the battery, make sure to use our specified product (FX3U-32BL).
 - When a battery error occurs ("BATT" LED is lit in red), follow the description in Manual.
- Before modifying or disrupting the program in operation or running the PLC, carefully read through this manual and the associated manuals and ensure the safety of the operation.
An operation error may damage the machinery or cause accidents.
- Do not change the program in the PLC from two or more peripheral equipment devices at the same time. (i.e. from a programming tool and a GOT)
Doing so may cause destruction or malfunction of the PLC program.

STARTUP AND MAINTENANCE PRECAUTIONS



CAUTION

- Turn off the power to the PLC before attaching or detaching the memory cassette. If the memory cassette is attached or detached while the PLC's power is on, the data in the memory may be destroyed, or the memory cassette may be damaged.
- Do not disassemble or modify the PLC.
Doing so may cause fire, equipment failures, or malfunctions.
For repair, contact your local Mitsubishi Electric representative.
- Turn off the power to the PLC before connecting or disconnecting any extension cable.
Failure to do so may cause equipment failures or malfunctions.
- Turn off the power to the PLC before attaching or detaching the following devices.
Failure to do so may cause equipment failures or malfunctions.
 - Peripheral devices, display module, expansion boards, and special adapters
 - Extension units/blocks and FX Series terminal blocks
 - Battery and memory cassette
- Do not use the chemicals for cleaning.
- If there is the possibility of touching the PLC inside a control panel in maintenance, make sure to discharge to avoid the influence of static electricity.
- Since there are risks such as burn injuries, please do not touch the surface of the equipment with bare hands when it is operating in an environment which exceeds ambient temperature of 50°C.

DISPOSAL PRECAUTIONS



CAUTION

- Please contact a certified electronic waste disposal company for the environmentally safe recycling and disposal of your device.
When disposing of batteries, separate them from other waste according to local regulations.
(For details of the Battery Directive in EU countries, refer to Appendix F)

11

High-Speed
Counters

12

Output Wiring

13

Wiring for
Various Uses

14

Test Run,
Maintenance,
Troubleshooting

15

Input/Output
Powered
Extension Units

16

Input/Output
Extension
Blocks

17

Extension
Power Supply
Unit

18

Other Extension
Units and
Options

19

Display Module

20

Terminal Block

TRANSPORTATION AND STORAGE PRECAUTIONS



- Before transporting the PLC, turn on the power to the PLC to check that the BATT LED is off.
If the PLC is transported with the BATT LED on or the battery exhausted, the battery-backed data may be unstable during transportation.
- The PLC is a precision instrument. During transportation, avoid impacts larger than those specified in the general specifications (section 4.1).
Failure to do so may cause failures in the PLC.
After transportation, verify the operations of the PLC.
- When transporting lithium batteries, follow required transportation regulations.
(For details of the regulated products, refer to Appendix E)

14.1 Preparation for Test Operation

14.1.1 Preliminary inspection [power OFF]

Incorrect connection of the power supply terminal, contact of the DC input wire and power supply wire, or short-circuiting of output wires may result in serious damage.

Before applying power, check that the power supply and ground terminals are connected correctly and input/output devices are wired properly.


Notes

The dielectric withstand voltage and insulation resistance test of the PLC should be measured in accordance with the following procedures.

- 1) Remove all input/output wires and power supply wires from the PLC.
- 2) Connect a crossing wire to each of the PLC terminals (power supply terminal, input terminals and output terminals) except the ground terminal.
For the dielectric withstand voltage test of each terminal, refer to the generic specifications for the product.
→ **Refer to Section 4.1.**
- 3) Measure the dielectric withstand voltage and insulation resistance between each terminal and the ground terminal.
Dielectric withstand voltage: 1.5kV AC or 500V for 1min (The terminals vary in dielectric withstand voltage.)
Insulation resistance: 5 MΩ or higher by 500 V DC insulation resistance tester

14.1.2 Connection to built-in programming connector

When connecting the communication cable of a peripheral device, align the positioning mark of the cable with that of the main unit.

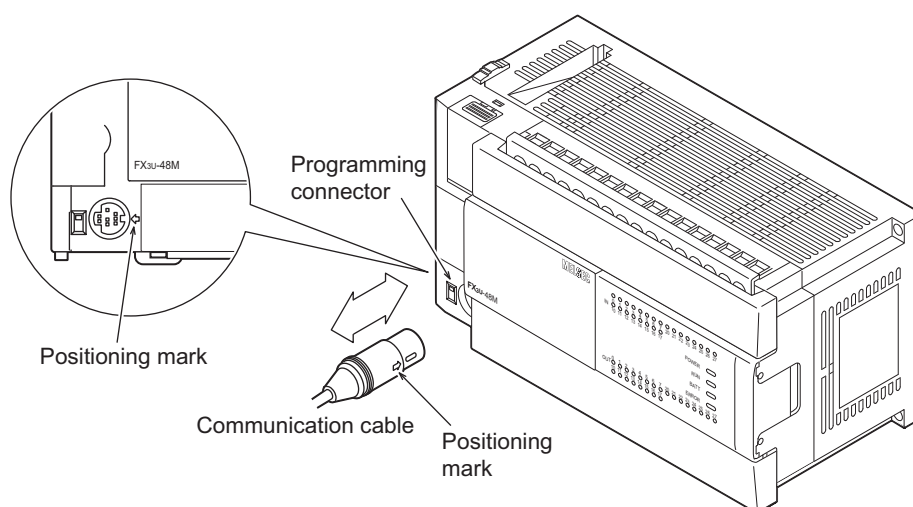

14.1.3 Writing of program and program check [power ON and PLC stopped]

1 Turn on the PLC power.

Make sure that the RUN/STOP switch of the PLC is set to STOP, and turn the power on.

2 Check the program.

Check for circuit errors and grammatical errors with the program check function of the programming tool.


3 Transfer the sequence program.

Write the program to the memory cassette with the programming tool.

When the memory cassette is used

Make sure to set the PROTECT switch of the memory cassette to OFF (shown right).

→ For details on handling of the memory cassette, refer to Chapter 21.

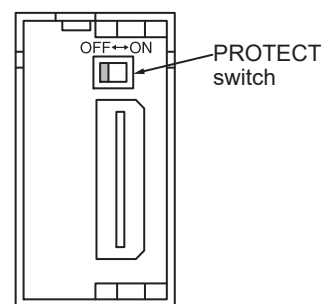

4 Verify the sequence program.

Verify that the program has been correctly written to the memory cassette.

5 Execute PLC diagnosis.

Check for errors in the PLC main body with the PLC diagnostic function of the programming tool.

→ For details on the PLC diagnosis with the display module or GX Developer, refer to Section 14.6.

11

High-Speed
Counters

12

Output Wiring

13

Wiring for
Various Uses

14

Test Run,
Maintenance,
Troubleshooting

15

Input/Output
Powered
Extension Units

16

Input/Output
Extension
Blocks

17

Extension
Power Supply
Unit

18

Other Extension
Units and
Options

19

Display Module

20

Terminal Block


14.2 Running and Stopping Procedures [Power ON]

14.2.1 Methods of running and stopping

FX3U PLCs can be started or stopped by any of the following three methods.
Two of the methods can be combined.

1. Operation with built-in RUN/STOP switch

Operate the RUN/STOP switch on the front panel of the main unit to start and stop the PLC (refer to the right figure).
Turn the switch to RUN, and the PLC will start. Turn it to STOP, and the PLC will stop.

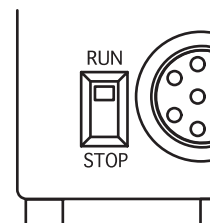



2. Running and stopping with general-purpose input (RUN terminal)

Operation with one switch (RUN)

One of the input terminals X000 to X017 of the main unit (X000 to X007 on a 16-point type unit) can be used as a RUN input terminal by a parameter setting (refer to the figure below).

When the specified input terminal is turned on, the PLC starts. When it is turned off, the PLC is started or stopped depending on the state of the built-in RUN/STOP switch.



→ For details, refer to "Kinds of Parameters and Settings" in Programming Manual.

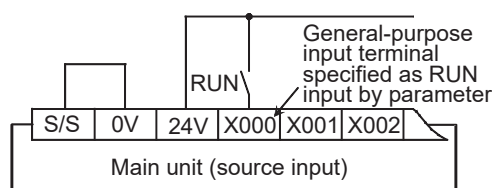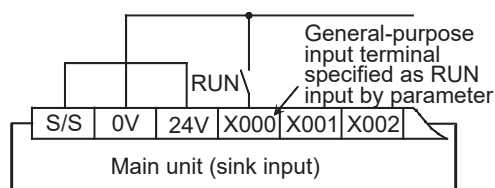

Operation with two switches (RUN and STOP)

The PLC can be started and stopped with individual RUN and STOP pushbutton switches.
For this operation, a sequence program using M8035 to M8037 is necessary.

→ For details, refer to "Operations of Special Devices" in Programming Manual.

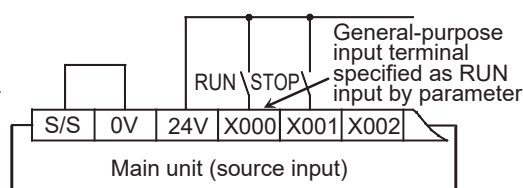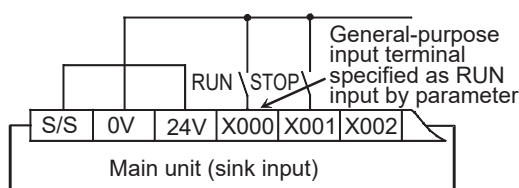

3. Starting and stopping by remote control from programming software

The programming software has a function to forcibly start and stop the PLC by remote control (remote RUN/STOP function).

However, when power is reapplied, the remote RUN/STOP function is disabled. The RUN/STOP status is then determined by the RUN/STOP switch or RUN terminal.

The remote operation for starting and stopping from the programming software is used in combination with the built-in RUN/STOP switch.

14.2.2 Use of several running/stopping methods

1. When the built-in RUN/STOP switch and the general-purpose RUN terminal are used (without remote running/stopping operation from the programming software)

The RUN/STOP status of the PLC is determined by the conditions shown in the following table.

| Condition of built-in RUN/STOP switch | Condition of general-purpose input terminal specified as RUN terminal by parameter | Status of PLC |
|---------------------------------------|--|---------------|
| RUN | OFF | RUN |
| | ON | RUN |
| STOP | OFF | STOP |
| | ON | RUN |

Use either built-in RUN/STOP switch or the general input specified as RUN terminal.

(When specifying the general-purpose terminal as the RUN terminal, always set the built-in RUN/STOP switch to STOP.)

2. When the remote running/stopping operation from the programming software is performed

For this operation, keep both the built-in RUN/STOP switch and the general-purpose input RUN terminal in the STOP position.

If the stop command is given from the programming software after the PLC is started by either the built-in RUN/STOP switch or the general-purpose input RUN terminal, the PLC will be restored to the running status by giving the RUN command from the programming software. This can also be accomplished by setting the built-in RUN/STOP switch or the general-purpose input RUN terminal to STOP and then to RUN.

11

High-Speed
Counters

12

Output Wiring

13

Wiring for
Various Uses

14

Test Run,
Maintenance,
Troubleshooting

15

Input/Output
Powered
Extension Units

16

Input/Output
Extension
Blocks

17

Extension
Power Supply
Unit

18

Other Extension
Units and
Options

19

Display Module

20

Terminal Block

14.3 Operation and Test [Power ON and PLC Running]

14.3.1 Self-diagnostic function

When the PLC's power is turned on, its self-diagnostic function starts automatically. If there are no problems with the hardware, parameters or program, the PLC will start and the RUN command (refer to Section 14.2) is given (RUN LED is lit).

If any problems are found, the "ERROR" LED flashes or lights.

14.3.2 Test functions

Functions of the programming tool to turn on/off the PLC devices and change the current values/settings are effective or ineffective depending on the PLC status as shown below.

✓ : Effective △ : Conditionally effective – : Ineffective

| Item | | In running status | In stopped status |
|--|---|-------------------|-------------------|
| Forcible ON/OFF*1 | Devices used in program | △*1 | ✓*1 |
| | Devices not in use | ✓ | ✓ |
| Change of current values of timers, counters, data registers, extension registers, extension file registers and file registers*4 | Devices used in program | △*2*3 | ✓*3 |
| | Devices not in use | ✓*3 | ✓*3 |
| Change of settings of timers and counters*5 | When the program memory is the built-in RAM | ✓ | ✓ |
| | When the program memory is in the memory cassette and the PROTECT switch is on | – | – |
| | When the program memory is in the memory cassette and the PROTECT switch is off | – | ✓ |

*1. Forcible ON/OFF

- The forcible ON/OFF function is effective on the input relays (X), output relays (Y), auxiliary relays (M), state (S), timers (T) and counters (C). On the display module, the function cannot be operated for the input relays (X).
- The forcible ON/OFF function can turn on or off the devices only for one scan.
While the PLC is running, the function is substantially effective in clearing the current values of the timers (T), counters (C), data registers (D), index registers (Z and V) and extension registers (R) and in controlling the SET/RST circuit and self-retaining circuit. (The operation to forcibly turn on timers is effective only when the timers are driven by the program.)
- The results of forcible ON/OFF operation performed while the PLC in the stopped state or performed for devices not used in the program are retained.
However, the results of the operation performed for the input relays (X) are not retained because the relays refresh input even while the PLC is in the stopped state. (They are updated according to the input terminal conditions.)

*2. Since the current values may be changed according to MOV instruction in the program and the operation results, the most recently obtained values are retained.

*3. Only display modules can change the current value by the extension file register test function.

*4. The current values of the file registers stored in the program memory cannot be monitored or tested on the display module.

*5. Change of timer and counter settings

The settings of the timers (T) and counters (C) can be changed only when the timers are driven by the program.

14.3.3 Program modification function

The sequence program can be transferred while the PLC is running or in the stopped state as shown below.
✓ : Effective – : Ineffective

| Item | | In running status | In stopped status |
|---|---|-------------------|-------------------|
| Batch writing of file registers (D) and extension file registers (ER) | | – | ✓ |
| Writing of program to PLC | Partial modification of program | ✓*1 | ✓ |
| | Modification of whole program (batch writing) | – | ✓ |
| Writing of symbolic information to PLC*2 | | ✓ | ✓ |
| Writing of parameters to PLC | | – | ✓ |
| Writing of comments to PLC | | – | ✓ |

*1. Since the writing function is used in running status, the programming tool must support the write during RUN function, such as GX Works2 or GX Developer.

→ **For the writing function during running, refer to Subsection 5.2.5.**

*2. GX Works2 Ver. 1.62Q or later is required to execute writing of the symbolic information.

→ **Refer to the GX Works2 Version 1 Operating Manual (Common) for the details on the writing of symbolic information.**

11

High-Speed
Counters

12

Output Wiring

13

Writing for
Various Uses

14

Test Run,
Maintenance,
Troubleshooting

15

Input/Output
Powered
Extension Units

16

Input/Output
Extension
Blocks

17

Extension
Power Supply
Unit

18

Other Extension
Units and
Options

19

Display Module

20

Terminal Block


14.4 Maintenance and Periodic Inspection

This PLC does not incorporate consumable parts that are factors in the reduction of service life. However, the batteries and output relays (points of contact) have a limited life expectancy.


14.4.1 Procedures for checking model name

The model name of the main unit can be checked on the nameplate on the right side. After extension devices are connected, the nameplate cannot be seen. Check the model name in the following places.

When the terminal block cover (output side) is opened

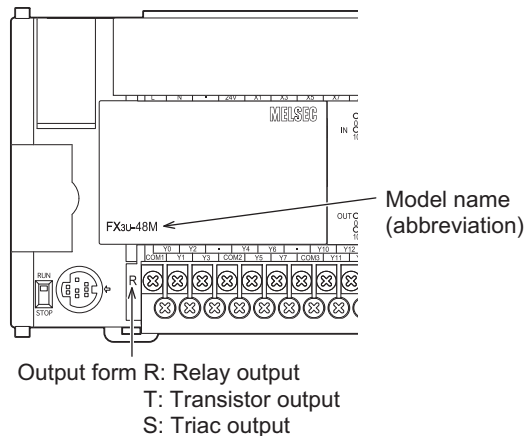

When the top cover is removed

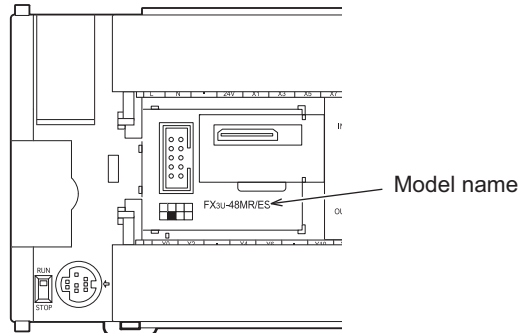

14.4.2 Periodic inspection - battery life, etc.

1. Battery

| Part | Life |
|-------------------------|--|
| Model FX3U-32BL battery | Standard life: 5 years (at ambient temperature of 25°C (77°F)) |

Standard life of FX3U-32BL: 5 years (at ambient temperature of 25°C (77°F))

→ For frequency of replacement, refer to Subsection 22.3.1.

2. Other devices

When inspecting the battery, check the following points.

- Check that the temperature in the panel is not abnormally increased by other heat generating bodies or direct sunlight.
- Check that dust or conductive dust has not entered the panel.
- Check for loosening of wiring and other abnormalities.

14.4.3 Maintenance - product life of relay contacts

The product life of relay contacts varies considerably depending on the load type used. Take care that loads generating reverse electromotive force or rush current may cause poor contact or deposition of contacts which may lead to considerable reduction of the contact product life.

1. Inductive load

Inductive loads generate large reverse electromotive force between contacts at shutdown, which may cause arcing. At a fixed current consumption, as the power factor (phase between current and voltage) gets smaller, the arc energy gets larger.

- 1) Main unit, input/output powered extension units and input/output extension blocks

The standard life of contacts used for Inductive loads, such as contactors and solenoid valves, is 500,000 operations at 20 VA.

The following table shows the approximate life of a relay based on the results of an operation life test.

→ For the applicable models, refer to Chapter 3.

Test condition: 1 sec. ON / 1 sec.OFF

| Load capacity | | Contact life |
|---------------|---------------|-----------------|
| 20VA | 0.2A/100V AC | 3,000,000 times |
| | 0.1A/200V AC | |
| 35VA | 0.35A/100V AC | 1,000,000 times |
| | 0.17A/200V AC | |
| 80VA | 0.8A/100V AC | 200,000 times |
| | 0.4A/200V AC | |

- 2) FX Series terminal blocks

→ For the applicable models, refer to Subsection 3.1.10.

The standard life of contacts used for Inductive loads, such as contactors and solenoid valves, is 500,000 operations at 35 VA.

The following table shows the approximate life of a relay based on the results of an operation life test.

Test condition: 1 sec. ON / 1 sec.OFF

| Load capacity | | Contact life |
|---------------|---------------|-----------------|
| 35VA | 0.35A/100V AC | 3,000,000 times |
| | 0.17A/200V AC | |
| 80VA | 0.8A/100V AC | 1,000,000 times |
| | 0.4A/200V AC | |
| 120VA | 1.2A/100V AC | 200,000 times |
| | 0.6A/200V AC | |

The product life of relay contacts becomes considerably shorter than the above conditions when the rush overcurrent is shut down.

Please refer to the following measures regarding the inductive load.

→ For precautions on the main unit, input/output powered extension unit and input/output extension block, refer to Subsection 12.2.4 2.

→ For precautions on inductive loads for the terminal block, refer to Subsection 20.7.4 2.

Some types of inductive loads generate rush current 5 to 15 times the stationary current at activation. Make sure that the rush current does not exceed the current corresponding to the maximum specified resistance load.

2. Lamp load

Lamp loads generally generate rush current 10 to 15 times the stationary current. Make sure that the rush current does not exceed the current corresponding to the maximum specified resistance load.

3. Capacitive load

Capacitive loads can generate rush current 20 to 40 times the stationary current. Make sure that the rush current does not exceed the current corresponding to the maximum specified resistance load. Capacitive loads such as capacitors may be present in electronic circuit loads including inverters.

*About the maximum load specifications of the resistance load, refer to the specification for each model.

- For specifications on the main unit, refer to Subsection 12.2.1.
- For specifications on the input/output powered extension units, refer to Chapter 15.
- For specifications on the input/output extension blocks, refer to Chapter 16.
- For specifications on the terminal block, refer to Subsection 20.7.1.

14.4.4 Procedures for replacing battery

When the battery voltage drops while the PLC power is on, the "BATT" LED on the panel is lit in red, and M8005 and M8006 (latch) are turned on.

The memory can be retained for about one month after the lamps turn on. However, the operators may not immediately find the lamps to be on. Prepare a new battery promptly, and replace the battery with the new one.

- For details on the specifications and functions of the battery, refer to Chapter 22 "FX_{3U}-32BL (Battery)"

14.5 Troubleshooting with LEDs

When trouble occurs, check the LEDs on the PLC to identify the problem with the PLC.

14.5.1 POWER LED [on/flashing/off]

| State of LED | State of PLC | Remedies |
|--------------|--|---|
| On | Power of the specified voltage is being correctly supplied to the power supply terminal. | The power supply is normal. |
| Flashing | One of the following problems may have occurred. <ul style="list-style-type: none"> Power of the specified voltage and current is not being supplied to the power supply terminal. External wiring is incorrect. Internal error of PLC | <ul style="list-style-type: none"> Check the supply voltage. After disconnecting the cables other than the power cable, re-apply power to the PLC, and check for changes in the state. If the problem persists, consult your local Mitsubishi Electric representative. |
| Off | One of the following problems may have occurred. <ul style="list-style-type: none"> The power supply is off. External wiring is incorrect. Power of the specified voltage is not being supplied to the power supply terminal. The power cable is broken. | <ul style="list-style-type: none"> If the power is not off, check the power supply and the power supply route. If power is being supplied correctly, consult your local Mitsubishi Electric representative. After disconnecting the cables other than the power cable, re-apply power to the PLC, and check for changes in the state. If the problem persists, consult your local Mitsubishi Electric representative. |

14.5.2 BATT LED [on/off]

| State of LED | State of PLC | Remedies |
|--------------|--|---|
| On | The battery voltage is low. | Immediately replace the battery. (Refer to Section 22.5.) |
| Off | The battery voltage is higher than the value set with D8006. | Normal |

→ For details on the battery, refer to Chapter 22.

11

High-Speed
Counters

12

Output Wiring

13

Wiring for
Various Uses

14

Test Run,
Maintenance,
Troubleshooting

15

Input/Output
Powered
Extension Units

16

Input/Output
Blocks

17

Extension
Power Supply
Unit

18

Other Extension
Units and
Options

19

Display Module

20

Terminal Block

14.5.3 ERROR LED [on/flashing/off]

| State of LED | State of PLC | Remedies |
|--------------|---|--|
| On | A watchdog timer error may have occurred, or the hardware of the PLC may be damaged. | <p>1) Stop the PLC, and re-apply power. If ERROR LED goes off, a watchdog timer error may have occurred. Take any of the following measures.</p> <ul style="list-style-type: none"> - Review the program. The maximum value (D8012) of the scan time should not exceed the setting (D8000) of the watchdog timer. - Check that the input used for input interruption or pulse catch is not being abnormally turned on and off in one scan. - Check that the frequency of the pulse (duty of 50%) input to the high-speed counter does not exceed the specified range. - Add the WDT instructions. Add some WDT instructions to the program, and reset the watchdog timer several times in one scan. - Change the setting of the watchdog timer. Change the watchdog timer setting (D8000) in the program so that the setting is larger than the maximum value of the scan time (D8012). <p>2) Remove the PLC and supply power to it from another power supply on a desk. If the ERROR LED goes off, noise may have affected the PLC. Take the following measures.</p> <ul style="list-style-type: none"> - Check the ground wiring, and reexamine the wiring route and installation location. - Fit a noise filter onto the power supply line. <p>3) If the ERROR LED does not go off even after the measures stated in (1) and (2) are taken, consult your local Mitsubishi Electric representative.</p> |
| Flashing | <p>One of the following errors has occurred in the PLC.</p> <ul style="list-style-type: none"> • Parameter error • Syntax error • Ladder error | <p>Perform PLC diagnosis and program check with the programming tool. For the remedies, refer to Section 14.6 "Judgment by Error Codes and Representation of Error Codes".</p> |
| Off | No errors that stop the PLC have occurred. | <p>If the operations of the PLC are abnormal, perform PLC diagnosis and program check with the programming tool. An I/O error, Comms.error or Runtime error may have occurred.</p> |


14.6 Judgment by Error Codes and Representation of Error Codes

Error codes can be checked with the programming tool or on the display module (FX3U-7DM).

14.6.1 Operation and check on display module (FX3U-7DM)

- 1) Move the cursor to "ErrorCheck" pressing the + or - button on the menu screen (shown right).
For the menu configuration, refer to Section 19.6.
The buttons on the menu screen work as stated below.

| Operation button | Operation |
|------------------|---|
| ESC | The screen returns to the top screen (time display). |
| - | The cursor moves upward. When the button is held for 1 second or more, the cursor moves quickly. When the cursor is in the uppermost position, the button is ineffective. |
| + | The cursor moves downward. When the button is held for 1 second or more, the cursor moves quickly. When the cursor is in the lowermost position, the button is ineffective. |
| OK | The flashing item at the cursor is selected. |

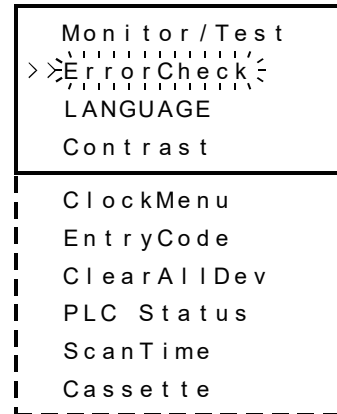


- 2) When the OK button is pressed, an error check is performed. The results are displayed on the error display screen (shown to the right).
Pressing the ESC button on the menu screen cancels the operation and returns the screen to the top screen (time display).
- 3) If some errors have occurred, the pages can be switched with the + or - button.

| Operation button | Operation |
|------------------|--|
| ESC | The screen returns to the Menu screen. |
| - | 1 error or less: Ineffective operation 2 errors or more: The previous page of the error display screen is displayed. |
| + | 1 error or less: Ineffective operation 2 errors or more: The following page of the error display screen is displayed. |
| OK | The screen returns to the Menu screen. |


Displayed data

| | Displayed data |
|-----|--|
| [1] | Flag of occurred error |
| [2] | Error name |
| [3] | Error code |
| [4] | Number of simultaneously occurring errors (displayed only when more than one error has occurred) |



When no errors have occurred

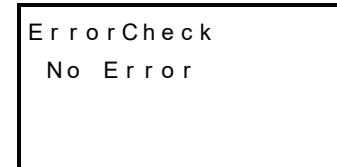

When one error has occurred

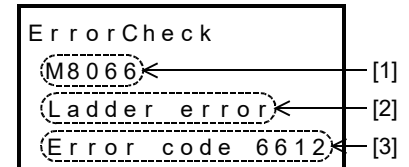

When more than one error has occurred

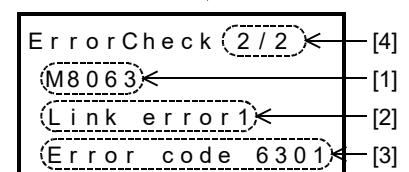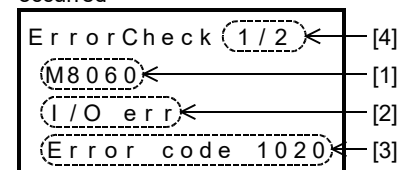


- 4) Pressing the ESC button cancels the operation and returns the screen to the Menu screen.

14.6.2 Operation and check by GX developer


- 1 Connect the personal computer and the PLC.**
- 2 Execute the PLC diagnosis.**

Click [Diagnostics] → [PLC diagnostics] on the tool menu, and the diagnosis of PLC will start.

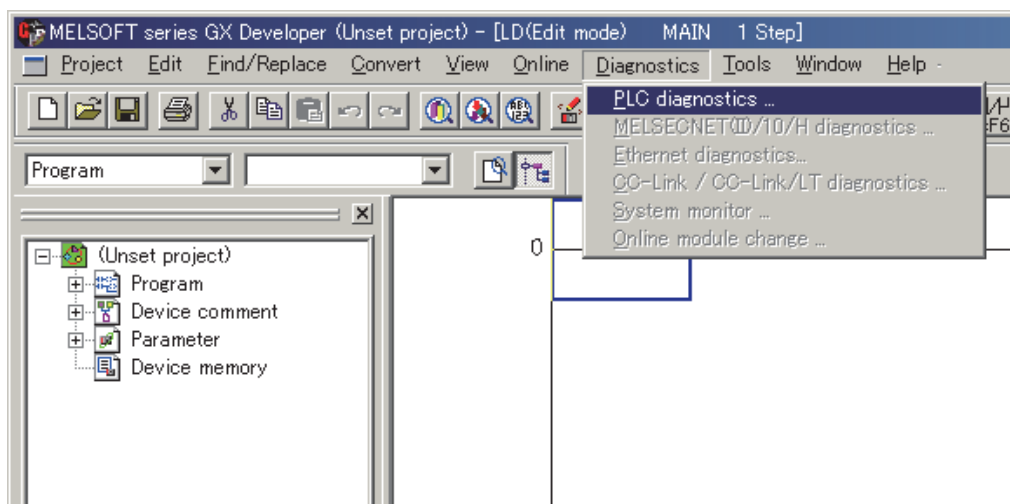

- 3 Check the results of diagnosis.**

Display the following window to check the errors.

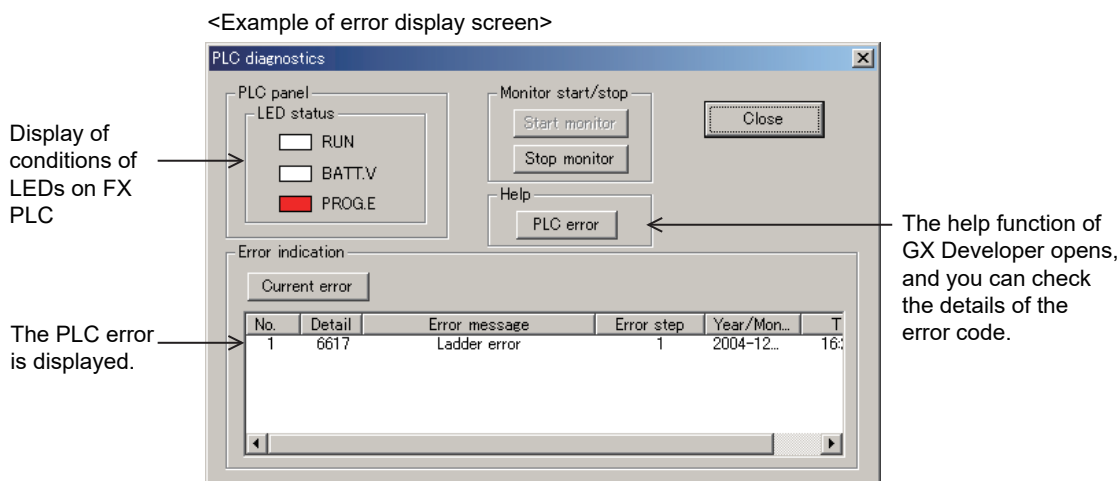

14.6.3 Representation of errors

Errors are represented in this manual, GX Works2, GX Developer, and the display module as shown in the following table.

- Comparison between this manual and GX Works2

| This manual | GX Works2 | |
|------------------------------------|-----------------------------------|-----------------|
| | SW□DNC-GXW2-E | SW□DNC-GXW2-J |
| I/O configuration error | I/O Configuration Error | I/O構成エラー |
| PLC hardware error | PLC Hardware Error | PCハードエラー |
| PLC/PP communication error | PLC/PP Communication Error | PC/PP通信エラー |
| Serial communication error 1 [ch1] | Link Error | リンクエラー |
| Serial communication error 2 [ch2] | Serial Communication Error 2[ch2] | シリアル通信エラー2[ch2] |
| Parameter error | Parameter Error | パラメータエラー |
| Syntax error | Syntax Error | 文法エラー |
| Circuit error | Ladder Error | 回路エラー |
| Operation error | Operation Error | 演算エラー |
| Special block error | Special Block Error | 特殊ブロックエラー |
| Special parameter error | Special Parameter Error | 特殊パラメータエラー |

- Comparison between this manual and GX Developer

| This manual | GX Developer | |
|------------------------------------|-----------------|-----------------|
| | SW□D5C-GPPW-E | SW□D5C-GPPW-J |
| I/O configuration error | I/O config err | I/O 構成エラー |
| PLC hardware error | PLC H/W error | PC ハードウェア エラー |
| PLC/PP communication error | PLC/PP comm err | PC/PP 通信 エラー |
| Serial communication error 1 [ch1] | Link error | リンク エラー |
| Serial communication error 2 [ch2] | Link Error 2 | シリアル通信エラー (CH2) |
| Parameter error | Param error | パラメータ エラー |
| Syntax error | Syntax error | 文法 エラー |
| Circuit error | Ladder error | 回路 エラー |
| Operation error | Operation err | 演算 エラー |
| Special block error | SFB Error | 特殊ブロックエラー |
| Special parameter error | — | — |

- Comparison between this manual and the display module

| This manual | Display module | |
|------------------------------------|--------------------|---------------------|
| | Display in English | Display in Japanese |
| I/O configuration error | I/O error | I/O構成エラー |
| PLC hardware error | PLC H/W error | PCハードエラー |
| PLC/PP communication error | Comms. error | PC/PP通信エラー |
| Serial communication error 1 [ch1] | Link error1 | シリアル通信エラー1 |
| Serial communication error 2 [ch2] | Link error2 | シリアル通信エラー2 |
| Parameter error | Parameter error | パラメータエラー |
| Syntax error | Grammer error | 文法エラー |
| Circuit error | Ladder error | 回路エラー |
| Operation error | Runtime error | 演算エラー |
| Special block error | SFB error | 特殊ブロックエラー |
| Special parameter error | — | — |

14.6.4 Error Code List and Action

When a program error occurs in the PLC, the error code is stored in the special data registers D8060 to D8067, D8438, D8449 and D8489, and the error bit turns ON in the special data register D8166 as follows. Take action based on the following information.

| Error code | PLC operation at error occurrence | Contents of error | Action |
|---|-----------------------------------|---|---|
| I/O configuration error [M8060(D8060)] | | | |
| Ex-ample: 1020 | Continues operation | <p>The head number of unconnected I/O device Example: When X020 is unconnected</p> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; padding: 2px; margin-right: 10px;">1020</div> <div>BCD conversion value</div> </div> <p style="margin-left: 40px;">↑ Device number: 10 to 337</p> <p style="margin-left: 40px;">↑ 1: Input (X), 0: Output (Y)</p> <ul style="list-style-type: none"> • 1st to 3rd digits: Device number • 4th digit: I/O type (1 = input (X), 0 = output (Y)) <p>Example: When 1020 is stored in D8060 Inputs X020 and later are unconnected.</p> | Unconnected I/O relay numbers are programmed. The PLC continues its operation. Modify the program, check wiring connection, or add the appropriate unit/block. |
| Serial communication error 2 [M8438 (D8438)] | | | |
| 0000 | — | No error | |
| 3801 | Continues operation | Parity, overrun or framing error | <ul style="list-style-type: none"> • Ethernet communication, inverter communication, computer link and programming: Ensure the parameters are correctly set according to their applications. • N:N network, parallel link, MODBUS communication, etc.: Check programs according to the applications. • Remote maintenance: Ensure modem power is ON and check the settings of the AT commands. • Wiring: Check the communication cables for correct wiring. |
| 3802 | | Communication character error | |
| 3803 | | Communication data sum check error | |
| 3804 | | Communication data format error | |
| 3805 | | Command error | |
| 3806 | | Communication time-out detected | |
| 3807 | | Modem initialization error | |
| 3808 | | N:N network parameter error | |
| 3809 | | N:N Network setting error | |
| 3812 | | Parallel link character error | |
| 3813 | | Parallel link sum error | |
| 3814 | | Parallel link format error | |
| 3820 | | Inverter communication error | |
| 3821 | | MODBUS communication error | |
| 3830 | | Memory access error | When the memory cassette is used, check whether it is mounted correctly. If the problem persists or if the memory cassette is not used, something may be malfunctioning inside the PLC. Consult your local Mitsubishi Electric representative. |
| 3840 | | Special adapter connection error | Check connection of the special adapter. |
| PLC hardware error [M8061(D8061)] | | | |
| 0000 | — | No error | |
| 6101 | Stops operation | Memory access error | When the memory cassette is used, check whether it is mounted correctly. If the problem persists or if the memory cassette is not used, something may be malfunctioning inside the PLC. Consult your local Mitsubishi Electric representative. |
| 6102 | | Operation circuit error | <p>Isolate the PLC and supply power to it using a different power supply.</p> <p>If the ERROR LED turns OFF, noise may be affecting the PLC. Take the following measures.</p> <ul style="list-style-type: none"> - Check the ground wiring, and reexamine the wiring route and installation location. - Fit a noise filter onto the power supply line. <p>If the ERROR LED does not turn OFF even after the above actions are taken, consult your local Mitsubishi Electric representative.</p> |

| Error code | PLC operation at error occurrence | Contents of error | Action |
|--|-----------------------------------|--|--|
| PLC hardware error [M8061(D8061)] | | | |
| 6103 | Stops operation | I/O bus error (M8069 = ON) | Verify that extension cables are correctly connected. |
| 6104 | | Powered extension unit 24 V failure (M8069 = ON) | |
| 6105 | | Watchdog timer error | Check user program. The scan time exceeds the value stored in D8000. |
| 6106 | | I/O table creation error (CPU error) | When turning the power ON to the main unit, a 24V power failure occurs in a powered extension unit. (The error occurs if the 24V power is not supplied for 10 seconds or more after the main power is turned ON.) |
| 6107 | | System configuration error | Check the number of the connected special function units/blocks. For certain special function units/blocks, the connectable number is limited. |
| 6108 | | Extension bus error | Verify that extension cables are correctly connected. |
| PLC/PP communication error (D8062) | | | |
| 0000 | — | No error | |
| 6201 | Continues operation | Parity, overrun or framing error | Check the cable connection between the programming panel (PP) / programming device and the PLC. This error may occur when a cable is disconnected and reconnected during PLC monitoring. |
| 6202 | | Communication character error | |
| 6203 | | Communication data sum check error | |
| 6204 | | Data format error | |
| 6205 | | Command error | |
| 6230 | | Memory access error | When the memory cassette is used, check whether it is mounted correctly. If the problem persists or if the memory cassette is not used, something may be malfunctioning inside the PLC. Consult your local Mitsubishi Electric representative. |
| Serial communication error 1 [M8063 (D8063)] | | | |
| 0000 | — | No error | |
| 6301 | Continues operation | Parity, overrun or framing error | <ul style="list-style-type: none">Ethernet communication, inverter communication, computer link and programming: Ensure the parameters are correctly set according to their applications.N:N network, parallel link, MODBUS communication, etc.: Check programs according to applications.Remote maintenance: Ensure modem power is ON and check the settings of the AT commands.Wiring: Check the communication cables for correct wiring. |
| 6302 | | Communication character error | |
| 6303 | | Communication data sum check error | |
| 6304 | | Communication data format error | |
| 6305 | | Command error | |
| 6306 | | Communication time-out detected | |
| 6307 | | Modem initialization error | |
| 6308 | | N:N network parameter error | |
| 6309 | | N:N Network setting error | |
| 6312 | | Parallel link character error | |
| 6313 | | Parallel link sum error | |
| 6314 | | Parallel link format error | |
| 6320 | | Inverter communication error | |
| 6321 | | MODBUS communication error | |
| 6330 | | Memory access error | When the memory cassette is used, check whether it is mounted correctly. If the problem persists or if the memory cassette is not used, something may be malfunctioning inside the PLC. Consult your local Mitsubishi Electric representative. |
| 6340 | | Special adapter connection error | Check connection of the special adapter. |

11

High-Speed Counters

12

Output Wiring

13

Wiring for Various Uses

14

Test Run, Maintenance, Troubleshooting

15

Input/Output Powered Extension Units

16

Input/Output Extension Blocks

17

Extension Power Supply Unit

18

Other Extension Units and Options

19

Display Module

20

Terminal Block

| Error code | PLC operation at error occurrence | Contents of error | Action |
|--------------------------------|-----------------------------------|--|--|
| Parameter error [M8064(D8064)] | | | |
| 0000 | — | No error | |
| 6401 | Stops operation | Program sum check error | <ul style="list-style-type: none">• STOP the PLC, and correctly set the parameters.• Check that the following functions are not used with an unsupported PLC version when a memory cassette is attached:<ul style="list-style-type: none">- Permanent PLC lock (supported in Ver. 2.61 or later)- Read-protect the execution program for block passwords (supported in Ver. 3.00 or later)- FX3U-FLROM-1M (supported in Ver. 3.00 or later) |
| 6402 | | Memory capacity setting error | |
| 6403 | | Latched device area setting error | |
| 6404 | | Comment area setting error | |
| 6405 | | File register area setting error | |
| 6406 | | Special unit (BFM) initial value setting, positioning instruction setting sum check error | |
| 6407 | | Special unit (BFM) initial value setting, positioning instruction setting error | |
| 6409 | | Other setting error | |
| 6420 | | Special parameter sum check error | |
| 6421 | | Special parameters setting error | |
| Syntax error [M8065(D8065)] | | | |
| 0000 | — | No error | |
| 6501 | Stops operation | Incorrect combination of instruction, device symbol and device number | During programming, each instruction is checked. If a syntax error is detected, modify the instruction correctly. |
| 6502 | | No OUT T or OUT C before setting value | |
| 6503 | | <ul style="list-style-type: none">• No setting value after OUT T or OUT C• Insufficient number of operands for an applied instruction | |
| 6504 | | <ul style="list-style-type: none">• Same label number is used more than once.• Same interrupt input or high-speed counter input is used more than once. | |
| 6505 | | Device number is out of allowed range. | |
| 6506 | | Invalid instruction | |
| 6507 | | Invalid label number [P] | |
| 6508 | | Invalid interrupt input [I] | |
| 6509 | | Other error | |
| 6510 | | MC nesting number error | |
| Circuit error [M8066(D8066)] | | | |
| 0000 | — | No error | |
| 6610 | Stops operation | LD, LDI is continuously used 9 times or more. | <p>This error occurs when a combination of instructions is incorrect in the entire circuit block or when the relationship between a pair of instructions is incorrect.</p> <p>Modify the instructions in the program mode so that their mutual relationship becomes correct.</p> |
| 6611 | | More ANB/ORB instructions than LD/LDI instructions | |
| 6612 | | Less ANB/ORB instructions than LD/LDI instructions | |
| 6613 | | MPS is continuously used 12 times or more. | |
| 6614 | | No MPS instruction | |
| 6615 | | No MPP instruction | |
| 6616 | | No coil between MPS, MRD and MPP, or incorrect combination | |
| 6617 | | Instruction below is not connected to bus line: STL, RET, MCR, P, I, DI, EI, FOR, NEXT, SRET, IRET, FEND or END | |
| 6618 | | STL, MC or MCR can be used only in main program, but it is used elsewhere (e.g. in interrupt routine or subroutine). | |

| Error code | PLC operation at error occurrence | Contents of error | Action |
|--------------------------------|-------------------------------------|---|---|
| Circuit error [M8066(D8066)] | | | |
| 6619 | Stops operation | Invalid instruction is used in FOR-NEXT loop: STL, RET, MC, MCR, I (interrupt pointer) or IRET. | This error occurs when a combination of instructions is incorrect in the entire circuit block or when the relationship between a pair of instructions is incorrect. Modify the instructions in the program mode so that their mutual relationship becomes correct. |
| 6620 | | FOR-NEXT instruction nesting level exceeded | |
| 6621 | | Numbers of FOR and NEXT instructions do not match. | |
| 6622 | | No NEXT instruction | |
| 6623 | | No MC instruction | |
| 6624 | | No MCR instruction | |
| 6625 | | STL instruction is continuously used 9 times or more. | |
| 6626 | | Invalid instruction is programmed within STL-RET loop: MC, MCR, I (interrupt pointer), SRET or IRET. | |
| 6627 | | No STL instruction | |
| 6628 | | Invalid instruction is used in main program: I (interrupt pointer), SRET or IRET | |
| 6629 | | No P or I (interrupt pointer) | |
| 6630 | | No SRET or IRET instruction | |
| 6631 | | STL-RET or MC-MCR instructions in subroutine | |
| 6632 | | SRET programmed in invalid location | |
| 6632 | FEND programmed in invalid location | | |
| Operation error [M8067(D8067)] | | | |
| 0000 | — | No error | |
| 6701 | Continues operation | <ul style="list-style-type: none">No jump destination (pointer) for CJ or CALL instructionLabel is undefined or out of P0 to P4095 due to indexingLabel P63 is executed in CALL instruction; cannot be used in CALL instruction as P63 is for jumping to END instruction. | This error occurs in the execution of operation. Review the program and check the contents of the operands used in applied instructions. Even if the syntax or circuit design is correct, an operation error may still occur. For example: "T200Z" itself is not an error. But if Z had a value of 400, the timer T600 would attempt to be accessed. This would cause an operation error since there is no T600 device available. |
| 6702 | | CALL instruction nesting level is 6 or more | |
| 6703 | | Interrupt nesting level is 3 or more | |
| 6704 | | FOR-NEXT instruction nesting level is 6 or more. | |
| 6705 | | Operand of applied instruction is inapplicable device. | |
| 6706 | | Device number range or data value for operand of applied instruction exceeds limit. | |
| 6707 | | File register is accessed without parameter setting of file register. | |
| 6708 | | FROM/TO instruction error | |
| 6709 | | Other (e.g. improper branching) | |
| 6709 | | | |

| | |
|----|--|
| 11 | High-Speed Counters |
| 12 | Output Wiring |
| 13 | Wiring for Various Uses |
| 14 | Test Run, Maintenance, Troubleshooting |
| 15 | Input/Output Powered Extension Units |
| 16 | Input/Output Extension Blocks |
| 17 | Extension Power Supply Unit |
| 18 | Other Extension Units and Options |
| 19 | Display Module |
| 20 | Terminal Block |

| Error code | PLC operation at error occurrence | Contents of error | Action |
|--------------------------------|-----------------------------------|--|--|
| Operation error [M8067(D8067)] | | | |
| 6710 | Continues operation | Mismatch among parameters | This error occurs when the same device is used within the source and destination in a shift instruction, etc. |
| 6730 | | Incorrect sampling time (TS) ($TS \leq 0$) | <PID instruction is stopped.> This error occurs in the parameter setting value or operation data executing PID instruction. Check the contents of the parameters. |
| 6732 | | Incompatible input filter constant (α) ($\alpha < 0$ or $100 \leq \alpha$) | |
| 6733 | | Incompatible proportional gain (KP) ($KP < 0$) | |
| 6734 | | Incompatible integral time (TI) ($TI < 0$) | |
| 6735 | | Incompatible derivative gain (KD) ($KD < 0$ or $201 \leq KD$) | |
| 6736 | | Incompatible derivative time (TD) ($TD < 0$) | |
| 6740 | | Sampling time (TS) \leq Scan time | <Auto tuning is continued.> The operation is continued in the condition "sampling time (TS) = cyclic time (scan time)". |
| 6742 | | Variation of measured value exceeds limit. ($\Delta PV < -32768$ or $+32767 < \Delta PV$) | <PID operation is continued.> The operation is continued with each parameter set to the maximum or minimum value. |
| 6743 | | Deviation exceeds limit. ($EV < -32768$ or $+32767 < EV$) | |
| 6744 | | Integral result exceeds limit. (Outside range from -32768 to $+32767$) | |
| 6745 | | Derivative value exceeds limit due to derivative gain (KD). | |
| 6746 | | Derivative result exceeds limit. (Outside range from -32768 to $+32767$) | |
| 6747 | | PID operation result exceeds limit. (Outside range from -32768 to $+32767$) | |
| 6748 | | PID output upper limit set value < PID output lower limit set value. | <Transpose of output upper limit value and output lower limit value. → PID operation is continued.> Check whether the target setting contents are correct. |
| 6749 | | Abnormal PID input variation alarm set value or output variation alarm set value (Set value < 0) | <Alarm output is not given. → PID operation is continued.> Check whether the target setting contents are correct. |
| 6750 | | <Step response method> Improper auto tuning result | <Auto tuning is finished. → PID operation is started.> <ul style="list-style-type: none"> The deviation at start of auto tuning is 150 or less. The deviation at end of auto tuning is 1/3 or more of the deviation at start of auto tuning. Check the measured value and target value, and then execute auto tuning again. |
| 6751 | | <Step response method> Auto tuning operation direction mismatch | <Auto tuning is forcibly finished. → PID operation is not started.> The operation direction estimated from the measured value at the start of auto tuning was different from the actual operation direction of the output during auto tuning. Correct the relationship among the target value, output value for auto tuning, and the measured value, and then execute auto tuning again. |
| 6752 | | <Step response method> Improper auto tuning operation | <Auto tuning is finished. → PID operation is not started.> Because the set value was fluctuated during auto tuning, auto tuning was not executed correctly. Set the sampling time to a value larger than the output change cycle, or set a larger value for the input filter constant. After changing the setting, execute auto tuning again. |

| Error code | PLC operation at error occurrence | Contents of error | Action |
|--------------------------------|-----------------------------------|--|---|
| Operation error [M8067(D8067)] | | | |
| 6753 | Continues operation | <Limit cycle method> Abnormal output set value for auto tuning [ULV (upper limit) ≤ LLV (lower limit)] | <Auto tuning is forcibly finished. → PID operation is not started.> |
| 6754 | | <Limit cycle method> Abnormal PV threshold (hysteresis) set value for auto tuning (SHPV < 0) | Check whether the target setting contents are correct. |
| 6755 | | <Limit cycle method> Abnormal auto tuning transfer status (Data of device controlling transfer status is abnormally overwritten.) | <Auto tuning is forcibly finished. → PID operation is not started.> Ensure that devices occupied by PID instruction are not overwritten in the program. |
| 6756 | | <Limit cycle method> Abnormal result due to excessive auto tuning measurement time ($\tau_{on} > \tau$, $\tau_{on} < 0$, $\tau < 0$) | <Auto tuning is forcibly finished. → PID operation is not started.> The auto tuning time is longer than necessary. Increase the difference (ULV - LLV) between the upper limit and lower limit of the output value for auto tuning, set a smaller value to the input filter constant (α), or set a smaller value to the PV threshold (SHPV) for auto tuning, and then check the result for improvement. |
| 6757 | | <Limit cycle method> Auto tuning result exceeds proportional gain. (KP = outside range from 0 to 32767) | <Auto tuning is finished (KP = 32767). → PID operation is started.> The variation of the measured value (PV) is small compared with the output value. Multiply the measured value (PV) by "10" so that the variation of the measured value will increase during auto tuning. |
| 6758 | | <Limit cycle method> Auto tuning result exceeds integral time. (TI = outside range from 0 to 32767) | <Auto tuning is finished (KP = 32767). → PID operation is started.> The auto tuning time is longer than necessary. |
| 6759 | | <Limit cycle method> Auto tuning result exceeds derivative time. (TD = outside range from 0 to 32767) | Increase the difference (ULV - LLV) between the upper limit and lower limit of the output value for auto tuning, set a smaller value to the input filter constant (α), or set a smaller value to the PV threshold (SHPV) for auto tuning, and then check the result for improvement. |
| 6760 | | ABS data read from servo sum check error | Check servo wiring and parameter setting. Also check ABS instruction. |
| 6762 | | Port specified by inverter communication instruction is already used in another communication. | Check to make sure the port is not specified by another instruction. |
| 6763 | | 1) Input (X) specified by DSZR, DVIT or ZRN instruction is already used in another instruction. 2) The interrupt signal device for DVIT instruction is outside the allowable setting range. | 1) Check to make sure the input (X), as specified by DSZR, DVIT or ZRN instruction, is not being used for the following purposes: - Input interrupt (including the delay function) - High-speed counter C235 to C255 - Pulse catch M8170 to M8177 - SPD instruction 2) Check the contents of D8336 for the correct interrupt signal specification for DVIT instruction. |
| 6764 | | Pulse output number is already used in a positioning instruction or pulse output instruction (PLSY, PWM, etc.). | Check to make sure the pulse output destination is not being driven by another positioning instruction. |
| 6765 | | Number of applied instruction exceeds limit. | The number of times an applied instruction is used in the program exceeds the specified limit. |
| 6770 | | Memory access error | When the memory cassette is used, check whether it is mounted correctly. If the problem persists or if the memory cassette is not used, something may be malfunctioning inside the PLC. Consult your local Mitsubishi Electric representative. |

| | |
|----|--|
| 11 | High-Speed Counters |
| 12 | Output Wiring |
| 13 | Wiring for Various Uses |
| 14 | Test Run, Maintenance, Troubleshooting |
| 15 | Input/Output Powered Extension Units |
| 16 | Input/Output Extension Blocks |
| 17 | Extension Power Supply Unit |
| 18 | Other Extension Units and Options |
| 19 | Display Module |
| 20 | Terminal Block |

| Error code | PLC operation at error occurrence | Contents of error | Action |
|---|-----------------------------------|---|--|
| Operation error [M8067(D8067)] | | | |
| 6771 | Continues operation | Memory cassette is not connected. | Check whether the memory cassette is mounted correctly. |
| 6772 | | Memory cassette is write protected. | The write-protect switch of the memory cassette was set to ON when data was transferred to the flash memory. |
| 6773 | | Access error to flash memory during writing in RUN mode | While data was written in the RUN mode, data was transferred to (read from or written to) the flash memory. |
| Special block error [M8449 (D8449)] | | | |
| □020*1 | Continues operation | General data sum error | Verify that extension cables are correctly connected. |
| □021*1 | | General data message error | |
| □022*1 | | System access error | |
| □025*1 | | Access sum error in other station via CC-Link | |
| □026*1 | | Message error in other station via CC-Link | |
| □030*1 | | Memory access error | When the memory cassette is used, check whether it is mounted correctly. If the problem persists or if the memory cassette is not used, something may be malfunctioning inside the PLC. Consult your local Mitsubishi Electric representative. |
| □080*1 | | FROM/TO error | This error occurs in the execution of operation. <ul style="list-style-type: none">• Review the program and check the contents of the operands used in applied instructions.• Verify that the specified buffer memories exist in the counterpart equipment.• Verify that extension cables are correctly connected. |
| □090*1 | | Peripheral equipment access error | <ul style="list-style-type: none">• Check the cable connection between the programming panel (PP) / programming device and the PLC.• Verify that extension cables are correctly connected. |
| Special parameter error [M8489 (D8489)] | | | |
| □□01*2 | Continues operation | Special parameter setting time-out error | Turn OFF the power, and check the power supply and connection of special adapters/special blocks. |
| □□02*2 | | Special parameter setting error | Special parameters are set improperly. <ul style="list-style-type: none">• Confirm troubleshooting for special adapters/special blocks, and set special parameters correctly.• Set special parameters correctly, turn OFF the power, and then turn ON the power. |
| □□03*2 | | Special parameter transfer target unconnected error | Special parameters are set, but special adapters/special blocks are not connected. Check whether special adapters/special blocks are connected. |
| □□04*2 | | Special parameter unsupported function | Check that special parameters with unsupported settings are not set for connected special adapters/special blocks. |

*1. The unit number 0 to 7 of the special function unit/block error is put in □.

*2. "□□" indicates the following values for each special adapter/special block where an error has occurred.
If an error has occurred in 2 or more special adapters/special blocks, "□□" indicates the lowest unit number among the special adapters/special blocks in which an error has occurred.

| Value of □□ (decimal) | Special adapter/special block where an error has occurred |
|-----------------------|---|
| 00 | Unit number 0 (Special block) |
| 10 | Unit number 1 (Special block) |
| 20 | Unit number 2 (Special block) |
| 30 | Unit number 3 (Special block) |
| 40 | Unit number 4 (Special block) |
| 50 | Unit number 5 (Special block) |
| 60 | Unit number 6 (Special block) |
| 70 | Unit number 7 (Special block) |
| 81 | Communication channel 1 (Special adapter) |
| 82 | Communication channel 2 (Special adapter) |

| Error bit | PLC operation at error occurrence | Contents of error | Action |
|---------------------------------------|-----------------------------------|---------------------|---|
| Special block error condition [D8166] | | | |
| b0 | Continues operation | Unit 0 access error | <p>This error occurs when an operation is executed or when the END instruction is executed.</p> <ul style="list-style-type: none"> Review the program and check the contents of the operands used in applied instructions. Verify that the specified buffer memories exist in the counterpart equipment. Verify that extension cables are correctly connected. |
| b1 | | Unit 1 access error | |
| b2 | | Unit 2 access error | |
| b3 | | Unit 3 access error | |
| b4 | | Unit 4 access error | |
| b5 | | Unit 5 access error | |
| b6 | | Unit 6 access error | |
| b7 | | Unit 7 access error | |
| b8 to b15 | — | Not used | |

11

High-Speed Counters

12

Output Wiring

13

Wiring for Various Uses

14

Test Run, Maintenance, Troubleshooting

15

Input/Output Powered Extension Units

16

Input/Output Extension Blocks

17

Extension Power Supply Unit

18

Other Extension Units and Options

19

Display Module

20

Terminal Block

14.7 Troubleshooting

- For the procedures on running and stopping the PLC, refer to Section 14.2.
- For the procedures on operating the display module, refer to Chapter 19.
- For the procedures on operating peripheral devices, refer to the manuals for the peripheral devices.

14.7.1 Output does not operate (main unit and input/output extension blocks)

1. Output does not turn on.

Stop the PLC, and forcibly turn the inoperable output on then off with a peripheral device or the display module to check its operation.

Check for troubles with external wiring.

- When the output operates
The output may be turned off unintentionally in the program. Reexamine the program.
(Duplicate coil or RST instructions)
- When the output does not operate
Check the configuration of the connected devices and the connection of the extension cables.
If the configuration of the external wiring and connected devices and the connection of the extension cables are acceptable, the output circuit may be damaged.
Consult your local Mitsubishi Electric representative.

2. Output does not turn off.

Stop the PLC, and check that the output turns off.

Check for trouble with external wiring.

→ For the procedures on running and stopping the PLC, refer to Section 14.2.

- When the output turns off
The output may be turned on unintentionally in the program.
Check that there are no duplicate coils in the program.
- When the output does not turn off
The output circuit may be damaged. Consult your local Mitsubishi Electric representative.

14.7.2 24V DC input does not operate (main unit and input/output extension blocks)

1. Input does not turn on.

Disconnect the external wiring and connect the S/S terminal and the 0V terminal or the 24V terminal.

Short-circuit the 0V terminal or 24V terminal not connected to the S/S terminal and the input terminal, then check the input display LED or a peripheral device to confirm that the input turns on.

| | Measures |
|-----------------------------|---|
| When input turns on | Check that the input device does not have a built-in diode or parallel resistance. If so, refer to Subsection 10.2.3. |
| When input does not turn on | Measure the voltage between the 0V terminal or 24V terminal not connected to the S/S terminal and the input terminal with a tester to confirm that the voltage is 24V DC. • Check the configuration of the external wiring and connected devices and the connection of the extension cables. |

2. Input does not turn off.

Check for leakage current from input devices.

If the leakage current is 1.5mA or more, it is necessary to connect a bleeder resistance.

→ For details on the measures, refer to Subsection 10.2.3.

14.7.3 Cautions on registering a keyword

1. Cautions on registering a keyword

The keyword limits access to the program prepared by the user from peripheral devices.

Retain the keyword carefully.

If you forget the keyword, you cannot operate the PLC online from a programming tool depending on the type of programming tool and the registered keyword.

2. Cautions on using peripheral devices not supporting the second keyword

Sequence programs for which the second keyword has been registered cannot be all-cleared using a peripheral device that does not support the second keyword (such as GX Developer earlier than Ver. 8.24A).

3. Cautions on using peripheral devices not supporting the customer keyword

Sequence programs for which the customer keyword has been registered cannot be all-cleared using a peripheral device that does not support the customer keyword (such as GX Developer earlier than Ver. 8.89T).

4. Non-resettable protect function

When the non-resettable protect function is set, the protect function cannot be reset.

5. Cautions on using a memory cassette in which keywords are already set

In FX3U PLCs whose version is earlier than Ver. 2.61, do not use a memory cassette in which the customer keyword or permanent PLC lock is set.

If a memory cassette where the permanent PLC lock is set is used in an FX3U PLC whose version is earlier than Ver. 2.61, the PLC does not run normally.

If the PLC memory is cleared or the keyword is canceled in a PLC whose version is earlier than Ver. 2.61 for a memory cassette where the customer keyword or permanent PLC lock are set, access restrictions of the keyword may not be removed normally.

14.7.4 Cautions on using block password

Note the following cautions when using a block password for which the setting "Read-protect the execution program." is valid.

- In a PLC that has been written to by a computer using a project including a block password for which the setting "Read-protect the execution program." is valid, restoration of programs is enabled only when the PLC is able to store symbolic information.
To allow for editing of the program by peripheral devices that do not support symbolic information (only supported in GX Works2 Ver. 1.62Q or later), do not use a block password for which the setting "Read-protect the execution program." is valid.
- When a peripheral device tries to read an execution program from a PLC that has been written to by a computer using a project including a block password for which the setting "Read-protect the execution program." is valid, a communication error occurs and reading is disabled.
- For writing a program using a peripheral device other than GX Works2 (Ver. 1.62Q or later) to a PLC that has been written to by a computer using a project including a block password for which the setting "Read-protect the execution program." is valid, execute "Clear PLC memory" to clear programs before writing.
If a program is written without executing "Clear PLC memory" in advance, the written program cannot be read.
- It is not possible to write programs including a block password for which the setting "Read-protect the execution program." is valid to a FX3U PLC whose version is earlier than Ver. 3.00.
- If a memory cassette storing a program that includes a block password for which the setting "Read-protect the execution program." is valid is used for a FX3U PLC whose version is earlier than Ver. 3.00, the FX3U PLC does not run normally.

| | |
|----|--|
| 11 | High-Speed Counters |
| 12 | Output Wiring |
| 13 | Wiring for Various Uses |
| 14 | Test Run, Maintenance, Troubleshooting |
| 15 | Input/Output Powered Extension Units |
| 16 | Input/Output Extension Blocks |
| 17 | Extension Power Supply Unit |
| 18 | Other Extension Units and Options |
| 19 | Display Module |
| 20 | Terminal Block |

15. FX2N-32/48E*-* (Input/Output Powered Extension Units)

DESIGN PRECAUTIONS



WARNING

- Make sure to have the following safety circuits outside of the PLC to ensure safe system operation even during external power supply problems or PLC failure.
Otherwise, malfunctions may cause serious accidents.
 - 1) Most importantly, have the following: an emergency stop circuit, a protection circuit, an interlock circuit for opposite movements (such as normal vs. reverse rotation), and an interlock circuit (to prevent damage to the equipment at the upper and lower positioning limits).
 - 2) Note that when the PLC CPU detects an error, such as a watchdog timer error, during self-diagnosis, all outputs are turned off. Also, when an error that cannot be detected by the PLC CPU occurs in an input/output control block, output control may be disabled.
External circuits and mechanisms should be designed to ensure safe machinery operation in such a case.
 - 3) Note that the output current of the 24V DC service power supply varies depending on the model and the absence/presence of extension blocks. If an overload occurs, the voltage automatically drops, inputs in the PLC are disabled, and all outputs are turned off.
External circuits and mechanisms should be designed to ensure safe machinery operation in such a case.
 - 4) Note that when an error occurs in a relay, triac or transistor output device, the output could be held either on or off.
For output signals that may lead to serious accidents, external circuits and mechanisms should be designed to ensure safe machinery operation in such a case.

DESIGN PRECAUTIONS



CAUTION

- Do not bundle the control line together with or lay it close to the main circuit or power line. As a guideline, lay the control line at least 100mm (3.94") or more away from the main circuit or power line.
Noise may cause malfunctions.

SECURITY PRECAUTIONS



WARNING

- To maintain the security (confidentiality, integrity, and availability) of the programmable controller and the system against unauthorized access, denial-of-service (DoS) attacks, computer viruses, and other cyberattacks from unreliable networks and devices via network, take appropriate measures such as firewalls, virtual private networks (VPNs), and antivirus solutions.

WIRING PRECAUTIONS



WARNING

- Make sure to cut off all phases of the power supply externally before attempting installation or wiring work.
Failure to do so may cause electric shock or damage to the product.
- Make sure to attach the terminal cover, offered as an accessory, before turning on the power or initiating operation after installation or wiring work.
Failure to do so may cause electric shock.
- The temperature rating of the cable should be 80°C or more.

WIRING PRECAUTIONS



- Do not supply power to the [24+] and [24V] terminals (24V DC service power supply) on the main unit or extension units.
Doing so may cause damage to the product.
- Perform class D grounding (grounding resistance: 100 Ω or less) to the grounding terminal on the main unit and extension units with a wire 2 mm² or thicker.
Do not use common grounding with heavy electrical systems (refer to Section 9.4).
- Connect the AC power supply wiring to the dedicated terminals described in this manual.
If an AC power supply is connected to a DC input/output terminal or DC power supply terminal, the PLC will burn out.
- Connect the DC power supply wiring to the dedicated terminals described in this manual.
If an AC power supply is connected to a DC input/output terminal or DC power supply terminal, the PLC will burn out.
- Do not wire vacant terminals externally.
Doing so may damage the product.
- When drilling screw holes or wiring, make sure that cutting and wiring debris do not enter the ventilation slits.
Failure to do so may cause fire, equipment failures or malfunctions.
- Make sure to properly wire the FX3U Series main unit and FX0N/FX2N/FX3U Series extension equipment in accordance with the following precautions.
Failure to do so may cause electric shock, equipment failures, a short-circuit, wire breakage, malfunctions, or damage to the product.
 - The disposal size of the cable end should follow the dimensions described in the manual.
 - Tightening torque should follow the specifications in the manual.
 - Tighten the screws using a Phillips-head screwdriver No.2 (shaft diameter 6mm (0.24") or less). Make sure that the screwdriver does not touch the partition part of the terminal block.

11

High-Speed
Counters

12

Output Wiring

13

Wiring for
Various Uses

14

Test Run,
Maintenance,
Troubleshooting

15

Input/Output
Powered
Extension Units

16

Input/Output
Extension
Blocks

17

Extension
Power Supply
Unit

18

Other Extension
Units and
Options

19

Display Module

20

Terminal Block

15.1 Outline


An input/output powered extension unit is used to expand inputs/outputs.

Power can be supplied to subsequent extension blocks from an input/output powered extension unit with a built-in 24V DC power supply.

An input/output powered extension unit is required when the capacity of the main unit's built-in power supply is insufficient for the current consumption demands of the extension blocks.

15.1.1 Product configuration

There are various types of input/output powered extension units. They differ in supply voltage, number of input/output points, input form, output form and connection type.

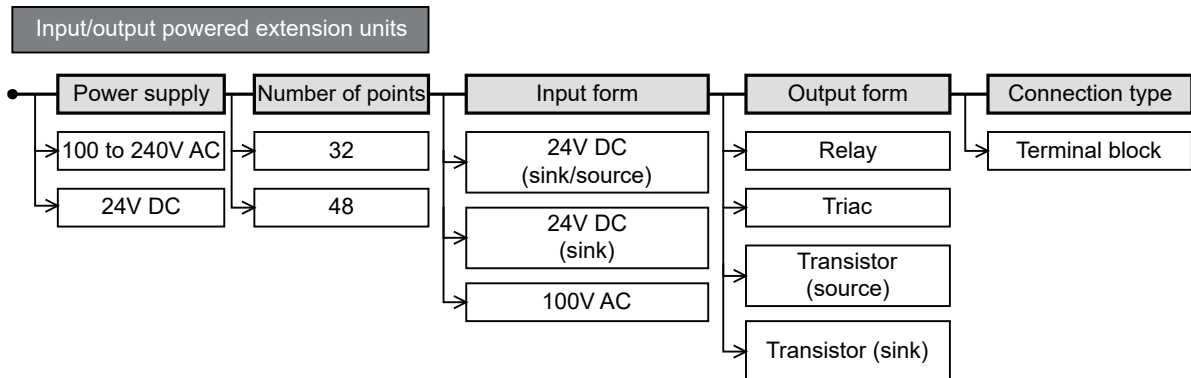

15.1.2 Product list

Each model of input/output powered extension unit has a sink and source type and a sink type. If you intend to add input/output powered extension units, we recommend you to add the same types of units as the main unit or the sink and source type.

→ For details on sink and source, refer to Subsection 10.1.1.

[Sink] :Sink [-common], [Source] :Source [+common]

| Model | Input | | | Output | | | Connection type |
|--|---------|------------------|---------------------------------------|------------|------------------|----------------------|-----------------|
| | Type | Number of points | Common wiring system | Type | Number of points | Common wiring system | |
| AC power supply common to 24V DC sink and source input | | | | | | | |
| FX2N-32ER-ES/UL | 24V DC | 16 | Sink Source | Relay | 16 | — | Terminal block |
| FX2N-48ER-ES/UL | | 24 | Sink Source | | 24 | — | |
| FX2N-32ET-ESS/UL | | 16 | Sink Source | Transistor | 16 | Source | |
| FX2N-48ET-ESS/UL | | 24 | Sink Source | | 24 | Source | |
| AC power supply only for 24V DC sink input | | | | | | | |
| FX2N-32ER | 24V DC | 16 | Sink | Relay | 16 | — | Terminal block |
| FX2N-48ER | | 24 | Sink | | 24 | — | |
| FX2N-32ES | | 16 | Sink | Triac(SSR) | 16 | — | |
| FX2N-32ET | | 16 | Sink | Transistor | 16 | Sink | |
| FX2N-48ET | | 24 | Sink | | 24 | Sink | |
| AC power supply only for 100V AC | | | | | | | |
| FX2N-48ER-UA1/UL | 100V AC | 24 | — | Relay | 24 | — | Terminal block |
| DC power supply common to 24V DC sink and source input | | | | | | | |
| FX2N-48ER-DS | 24V DC | 24 | Sink Source | Relay | 24 | — | Terminal block |
| FX2N-48ET-DSS | | | Sink Source | Transistor | | Source | |
| DC power supply only for 24V DC sink input | | | | | | | |
| FX2N-48ER-D | 24V DC | 24 | Sink | Relay | 24 | — | Terminal block |
| FX2N-48ET-D | | | Sink | Transistor | | Sink | |

15.2 Power Supply Specifications (Power Supply Input/24V DC Service Power Supply)

| Item | | FX2N-32ER-ES/UL FX2N-32ET-ESS/UL | FX2N-32ER FX2N-32ES FX2N-32ET | FX2N-48ER-ES/UL FX2N-48ET-ESS/UL | FX2N-48ER FX2N-48ET |
|-----------------------------|-------------------------|---|-------------------------------------|-------------------------------------|------------------------|
| Classification | | FX2N powered extension unit | | | |
| Supply voltage | | 100 to 240V AC | | | |
| Voltage fluctuation range | | -15%, +10% | | | |
| Rated frequency | | 50/60 Hz | | | |
| Power fuse | | 250V 3.15 A(3 A) | | 250V 5 A | |
| Rush current | 100V AC | Up to 40 A, 5 ms or less | | | |
| | 200V AC | Up to 60 A, 5 ms or less | | | |
| Power consumption | | 30 W | | 35 W | |
| 24V DC service power supply | Without extension block | 24V DC, 250 mA or less | | 24V DC, 460 mA or less | |
| | With extension block | When input/output extension blocks are connected, 24V DC service power is consumed by them. → For details, refer to Section 6.6. | | | |
| Connection type | | Removable terminal block (M3 screw) | | | |


| Item | | FX2N-48ER-UA1/UL | FX2N-48ER-DS FX2N-48ET-DSS | FX2N-48ER-D FX2N-48ET-D |
|-----------------------------|---------|-------------------------------------|-------------------------------|----------------------------|
| Classification | | FX2N powered extension unit | | |
| Supply voltage | | 100 to 240V AC | 24V DC | |
| Voltage fluctuation range | | -15%, +10% | +20%, -30% | |
| Power fuse | | 250V 5 A | | |
| Rush current | 100V AC | Up to 40 A, 5 ms or less | — | |
| | 200V AC | Up to 60 A, 5 ms or less | — | |
| Power consumption | | 35 W | 30 W | |
| 24V DC service power supply | | None | | |
| Connection type | | Removable terminal block (M3 screw) | | |

15.2.1 Weight, accessories, etc.

| Item | FX2N-32ER-ES/UL FX2N-32ET-ESS/UL | FX2N-32ER FX2N-32ES FX2N-32ET | FX2N-48ER-ES/UL FX2N-48ET-ESS/UL FX2N-48ER-DS FX2N-48ET-DSS | FX2N-48ER FX2N-48ET FX2N-48ER-D FX2N-48ET-D | FX2N-48ER- UA1/UL |
|-------------|--|-------------------------------------|--|--|--------------------------|
| Weight | Approx. 0.65 kg (1.43lbs) | | Approx. 0.85 kg (1.87lbs) | | Approx. 1.00 kg (2.2lbs) |
| Accessories | <ul style="list-style-type: none">Terminal protective cover (2 pcs.) (Fitted to FX2N-32ER-ES/UL, FX2N-32ET-ESS/UL, FX2N-48ER-ES/UL, FX2N-48ET-ESS/UL and FX2N-48ER-UA1/UL, FX2N-48ER-DS, FX2N-48ET-DSS)Extension cable (55 mm (2.16")) Optional extension cables (FX0N-30EC and FX0N-65EC) are available.Input/output number label | | | | |
| Others | <ul style="list-style-type: none">The terminal block uses M3 terminal screws.Installation of the DIN46277 (35 mm (1.37") wide) rail or screws. | | | | |

15.2.2 Part names

1. Front

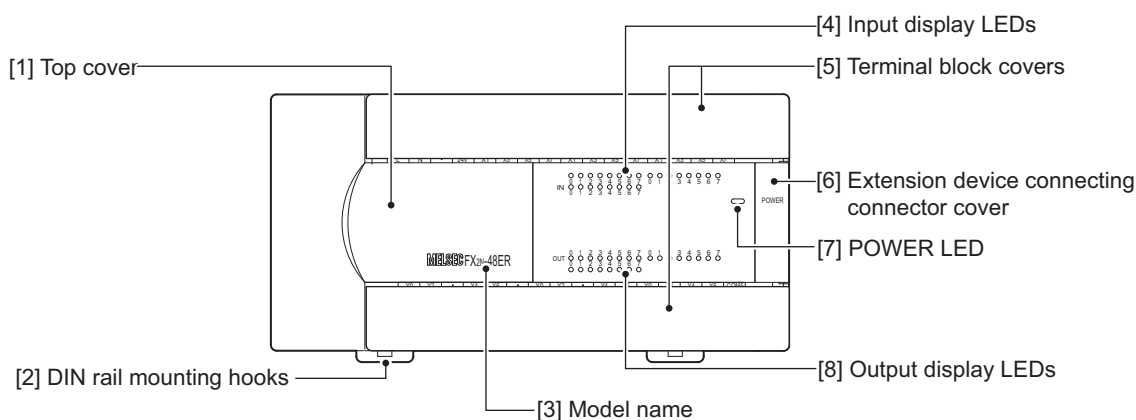

[1] **Top cover**

When adding this to the main unit, connect the supplied extension cable or the optional extension cable to the connector under this top cover.

[2] **DIN rail mounting hooks (2 places)**

The input/output powered extension unit can be installed on DIN rail (35 mm (1.38") wide).

[3] **Model name (abbreviation)**


The model name of the input/output powered extension unit is indicated.

[4] **Input display LEDs (red)**

When an input terminal (X0, X1, etc.) is turned on, the corresponding LED lamps are also turned on.

The input numbers change depending on input/output allocation.

The input/output powered extension unit (48 points type) assigns input numbers in ascending order from A→B→C below.

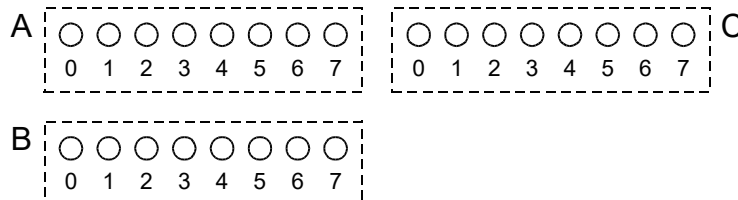

[5] **Terminal block covers**

The covers can be opened about 90° for wiring.

Keep the covers closed while the PLC is running (the unit power is on).

[6] **Extension device connecting connector cover**

Connect the extension cable of input/output powered extension unit/block or special function unit/block to the extension device connecting connector under this cover.

FX3U Series extension devices, FX2N Series extension devices and FX0N Series special function devices are compatible and can be connected.

→ **For details on extension devices, refer to Chapter 15, Chapter 16 and Section 18.1.**


[7] **POWER LED (green)**

The LED lamp is on (green) while the power supply terminal is on.


[8] **Output display LEDs (red)**

When an output terminal (Y0, Y1, etc.) is turned on, the corresponding LED lamps are also turned on. The output numbers change depending on input/output allocation.

The input/output powered extension unit (48 points type) assigns output numbers in ascending order from A→B→C below.

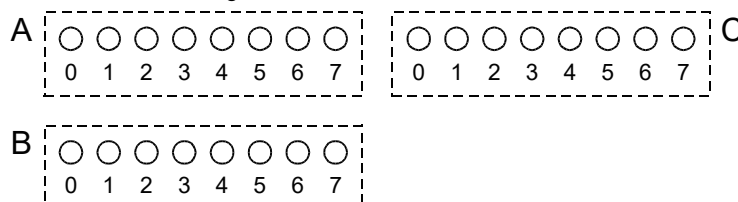


When the terminal block covers are open

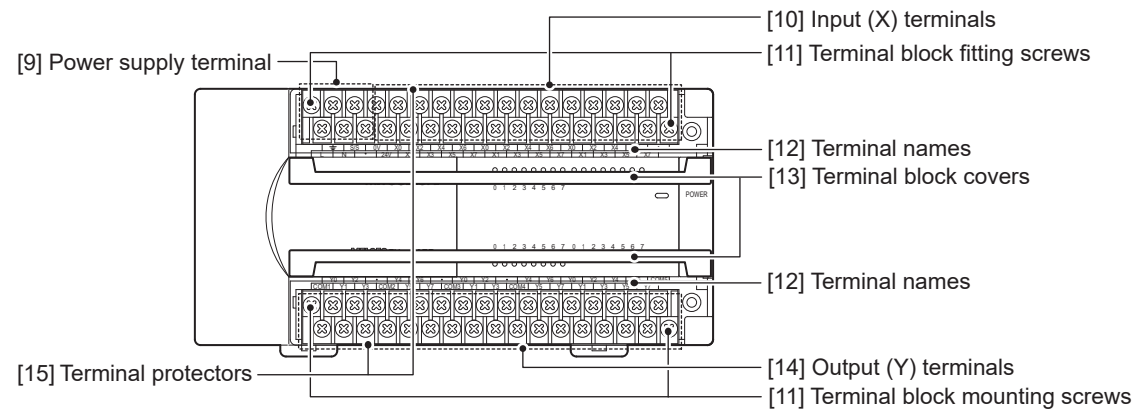

- | | |
|-------------------------------------|---|
| [9] Power supply terminal | Connect the power supply to the input/output powered extension unit at this terminal. |
| [10] Input (X) terminals | Wire switches and sensors to these terminals. |
| [11] Terminal block mounting screws | If the input/output powered extension unit must be replaced, loosen these screws to remove the upper part of the terminal block. → For anchoring the terminal block, refer to Subsection 9.1.2. |
| [12] Terminal names | The signal names for the power supply, input terminals and output terminals are shown. |
| [13] Terminal block covers | Protects the upper and lower stages of the terminal block. |
| [14] Output (Y) terminals | Wire the intended loads (contactors, solenoid valves, etc.) to these terminals. |
| [15] Terminal protectors | A terminal protector (refer to the following drawing) is fitted to the lower stage of each terminal block to prevent fingers from touching terminals, thereby improving the safety. |



2. Side

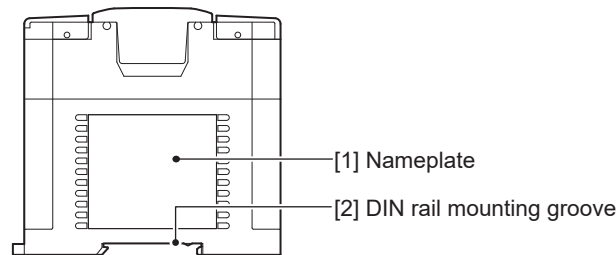

- | | |
|------------------------------|---|
| [1] Nameplate | The product model name, control number and power supply specifications are shown. |
| [2] DIN rail mounting groove | The unit can be installed on a 35 mm (1.38") wide DIN46277 rail. |

15.3 FX2N-32ER-ES/UL, FX2N-48ER-ES/UL, FX2N-48ER-DS

15.3.1 Product specifications

The generic specifications are the same as those for the main unit.

→ For the generic specifications, refer to Section 4.1.

For external wiring, refer to the following chapters.

→ Refer to Chapter 9 for power supply wiring.

→ Refer to Chapter 10 for input wiring.

→ Refer to Chapter 12 for output wiring.

1. Power supply specifications

→ For the power supply specifications, refer to Section 15.2.


2. Input specifications (for sink input [-common] and source input [+common])

| Item | | FX2N-32ER-ES/UL | FX2N-48ER-ES/UL, FX2N-48ER-DS |
|---------------------------------------|-------------------|--|-------------------------------|
| Number of input points | | 16 points | 24 points |
| Connection type | | Removable terminal block (M3 screw) | |
| Input form | | sink/source | |
| Input signal voltage | | 24V DC $\pm 10\%$ ^{*1} | |
| Input signal current | | 5 mA/24V DC | |
| Input impedance | | 4.3 k Ω | |
| Input sensitivity current | Input ON current | 3.5 mA or more/24V DC | |
| | Input OFF current | 1.5 mA or less | |
| Input response time | | About 10 ms | |
| Input signal form (Input sensor form) | | No-voltage contact input Sink: NPN open collector transistor Source: PNP open collector transistor | |
| Input circuit insulation | | Insulation with photocoupler | |
| Indication of input operation | | LED on panel is lit when there is input. | |
| Input circuit diagram | | <ul style="list-style-type: none"> AC power supply type | |
| | | Sink input wiring | Source input wiring |
| | | | |
| | | DC power supply type | DC power supply type |
| | | Sink input wiring | Source input wiring |
| | | | |

*1. The DC power type applies to the power supply voltage in "Power Supply Specifications (Power Supply Input/24V DC Service Power Supply)."


*2. Do not connect with 0V and 24V terminals.

3. Output specifications (relay output type)
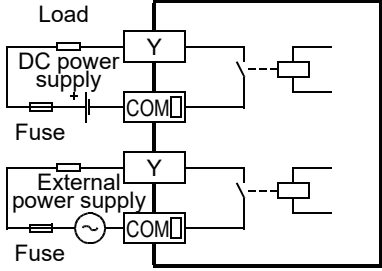
| Item | | FX2N-32ER-ES/UL | FX2N-48ER-ES/UL, FX2N-48ER-DS |
|--------------------------------|-----------------|--|---|
| Number of output points | | 16 points | 24 points |
| Connection type | | Removable terminal block (M3 screw) | |
| Output unit | | Relay | |
| External power supply | | 30V DC or less 240V AC or less (250V AC or less when the unit does not comply with CE, UL or cUL standards) | |
| Output circuit insulation | | Mechanical insulation | |
| Indication of output operation | | When power is applied to relay coil, LED is lit. | |
| Max. load | Resistance load | 2A/point The total load current per common terminal should be the following value. • 4 output points/common terminal: 8 A or less | 2A/point The total load current per common terminal should be the following value. • 4 output points/common terminal: 8 A or less • 8 output points/common terminal: 8 A or less |
| | Inductive load | 80 VA → For the product life, refer to Subsection 4.4.2. → For cautions on external wiring, refer to Subsection 12.2.4. | |
| Open circuit leakage current | | — | |
| Min. load | | 5V DC, 2 mA (reference value) | |
| Response time | OFF→ON | Approx. 10 ms | |
| | ON→OFF | Approx. 10 ms | |
| Output circuit diagram | |  <p>A number (1 or more) is entered in □ of [COM □].</p> | |


15.3.2 External dimensions

FX2N-32ER-ES/UL

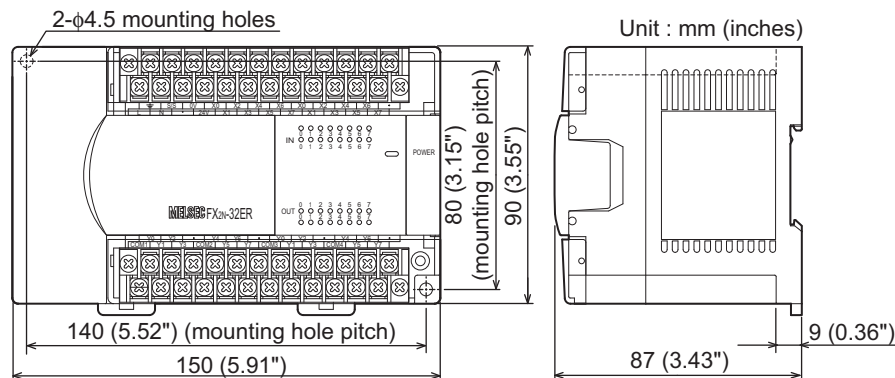


The terminal block uses M3 terminal screws.

FX2N-48ER-ES/UL, FX2N-48ER-DS

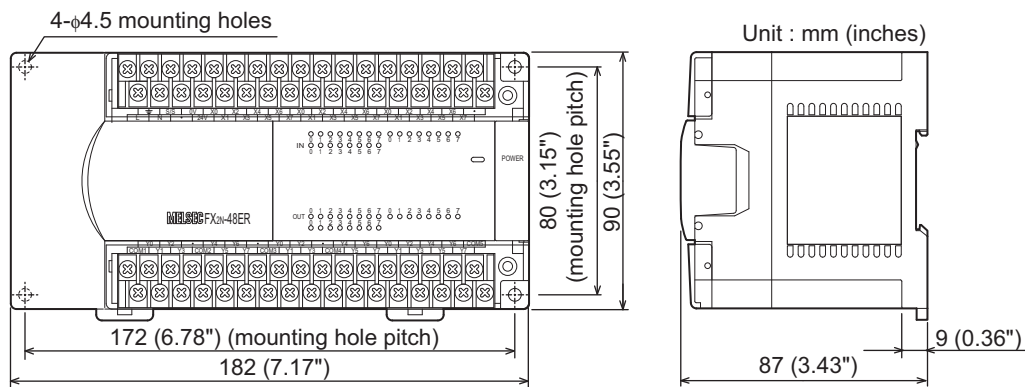


15.3.3 Terminal layout


FX2N-32ER-ES/UL

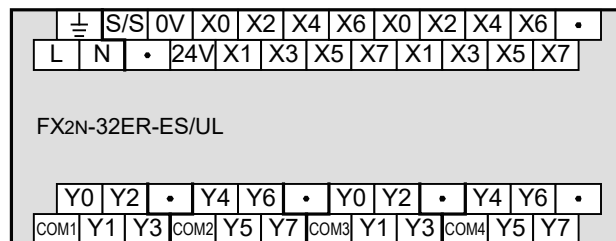

FX2N-48ER-ES/UL

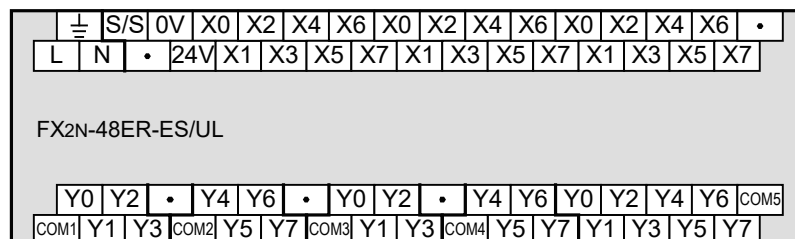

FX2N-48ER-DS

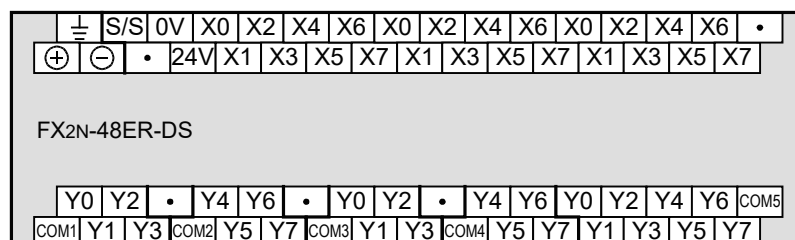

15.4 FX2N-32ET-ESS/UL, FX2N-48ET-ESS/UL, FX2N-48ET-DSS

15.4.1 Product specifications

The generic specifications are the same as those for the main unit.

→ For the generic specifications, refer to Section 4.1.

For external wiring, refer to the following chapters.

→ Refer to Chapter 9 for power supply wiring.

→ Refer to Chapter 10 for input wiring.


→ Refer to Chapter 12 for output wiring.

1. Power supply specifications

→ For the power supply specifications, refer to Section 15.2.

2. Input specifications (for sink input [-common] and source input [+common])


| Item | | FX2N-32ET-ESS/UL | FX2N-48ET-ESS/UL, FX2N-48ET-DSS |
|---------------------------------------|-------------------|--|---------------------------------|
| Number of input points | | 16 points | 24 points |
| Connection type | | Removable terminal block (M3 screw) | |
| Input form | | sink/source | |
| Input signal voltage | | 24V DC $\pm 10\%$ *1 | |
| Input signal current | | 5 mA/24V DC | |
| Input impedance | | 4.3 k Ω | |
| Input sensitivity current | Input ON current | 3.5 mA or more/24V DC | |
| | Input OFF current | 1.5 mA or less | |
| Input response time | | About 10 ms | |
| Input signal form (Input sensor form) | | No-voltage contact input Sink: NPN open collector transistor Source: PNP open collector transistor | |
| Input circuit insulation | | Insulation with photocoupler | |
| Indication of input operation | | LED on panel is lit when there is input. | |

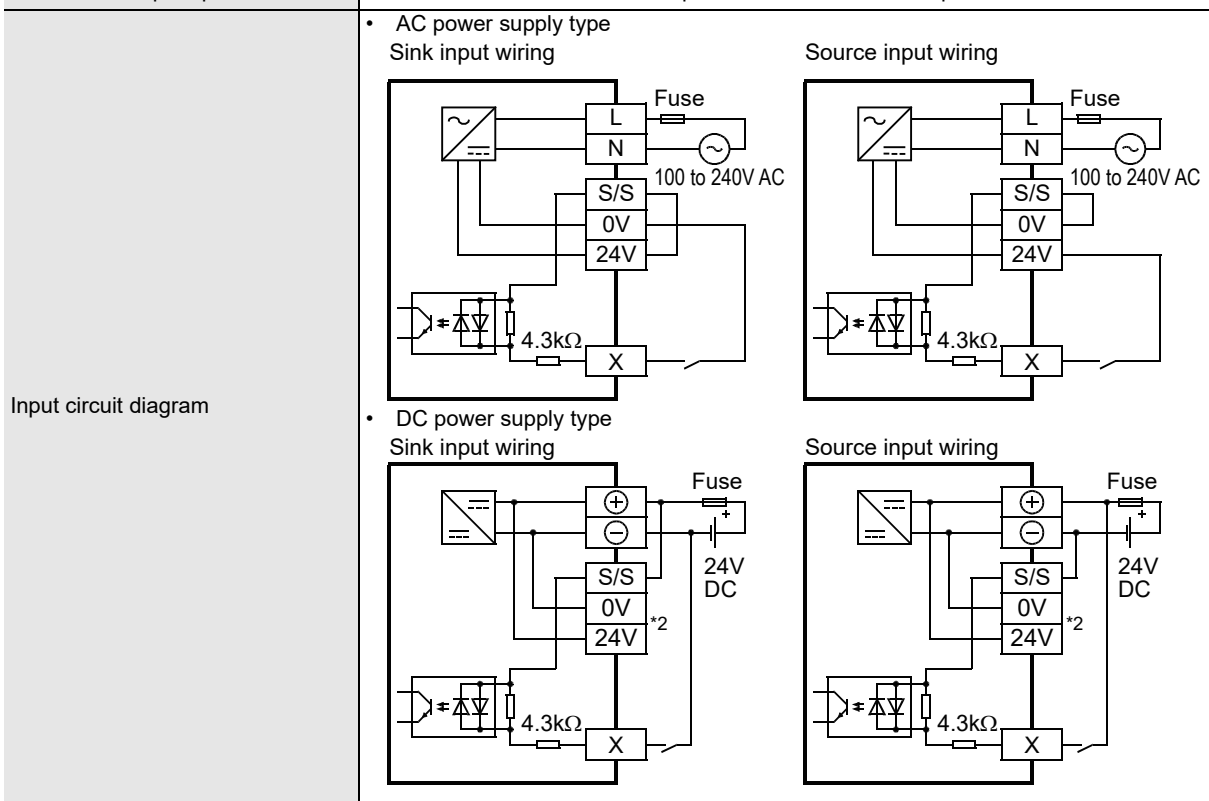

*1. The DC power type applies to the power supply voltage in "Power Supply Specifications (Power Supply Input/24V DC Service Power Supply)."


*2. Do not connect with 0V and 24V terminals.

3. Output specifications (transistor output type)

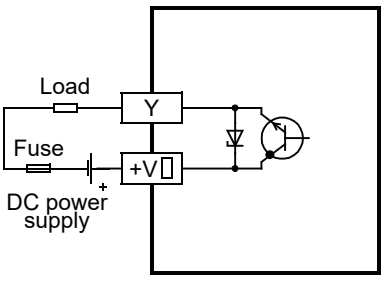
| Item | | FX2N-32ET-ESS/UL | FX2N-48ET-ESS/UL, FX2N-48ET-DSS |
|--------------------------------|-----------------|---|---|
| Number of output points | | 16 points | 24 points |
| Connection type | | Removable terminal block (M3 screw) | |
| Output unit/type | | Transistor/source output | |
| External power supply | | 5-30 V DC | |
| Output circuit insulation | | Insulation with photocoupler | |
| Indication of output operation | | When photocoupler is driven, LED on panel is lit. | |
| Max. load | Resistance load | 0.5A/point The total load current per common terminal should be the following value. • 4 output points/common terminal: 0.8 A or less | 0.5A/point The total load current per common terminal should be the following value. • 4 output points/common terminal: 0.8 A or less • 8 output points/common terminal: 1.6 A or less |
| | Inductive load | 12 W/24V DC | |
| Open circuit leakage current | | 0.1 mA/30V DC | |
| Min. load | | — | |
| Response time | OFF→ON | 0.2 ms or less/200 mA (at 24V DC) | |
| | ON→OFF | 0.2 ms or less/200 mA (at 24V DC) | |
| Output circuit diagram | |  <p>A common number applies to the □ of [+V □].</p> | |

15.4.2 External dimensions

FX2N-32ET-ESS/UL

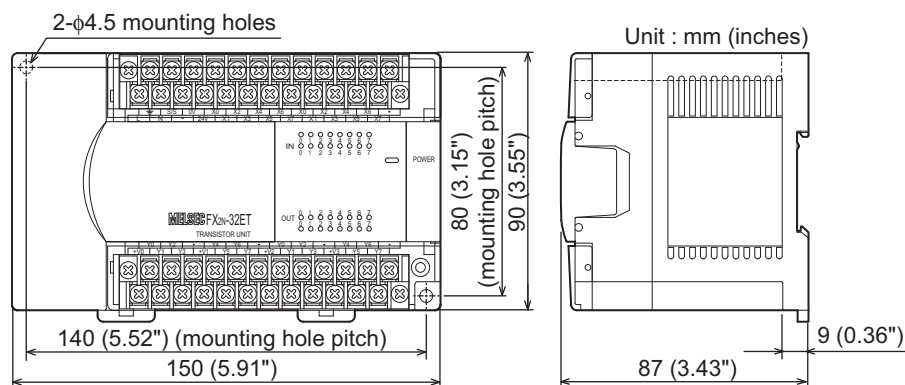

The terminal block uses M3 terminal screws.

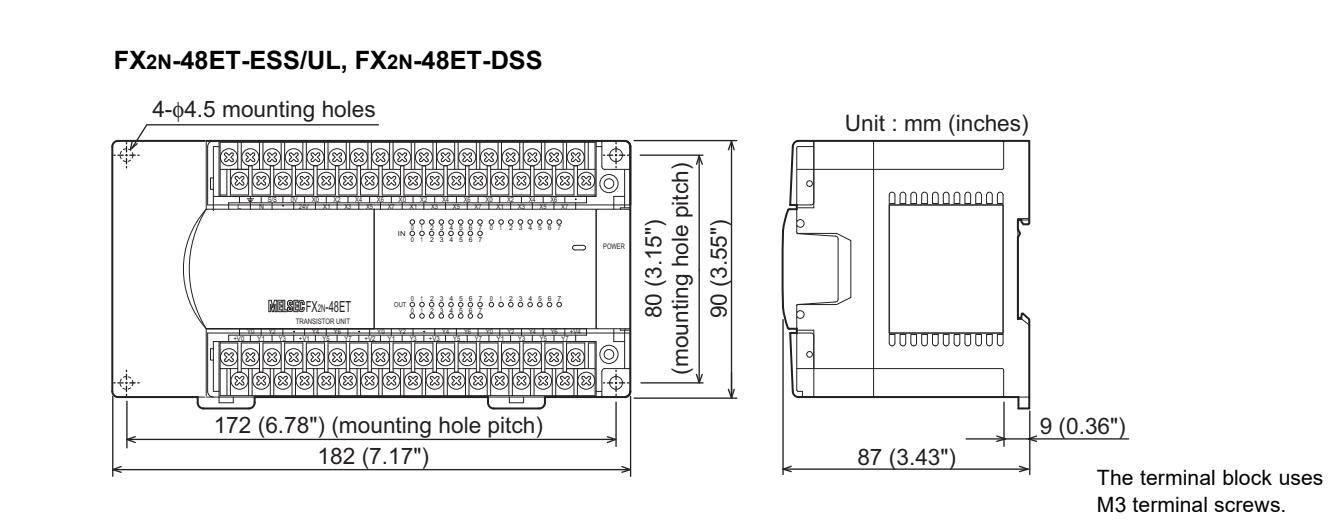

15.5 FX2N-32ER, FX2N-48ER, FX2N-48ER-D

15.5.1 Product specifications

The generic specifications are the same as those for the main unit.

→ For the generic specifications, refer to Section 4.1.

For external wiring, refer to the following chapters.

→ Refer to Chapter 9 for power supply wiring.



→ Refer to Chapter 10 for input wiring.

→ Refer to Chapter 12 for output wiring.

1. Power supply specifications

→ For the power supply specifications, refer to Section 15.2.


2. Input specifications (sink input [-common])
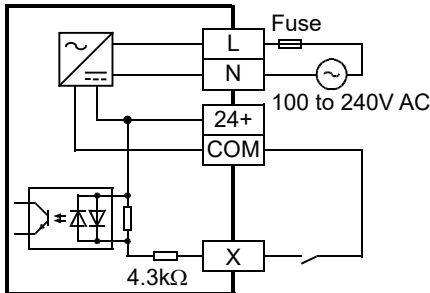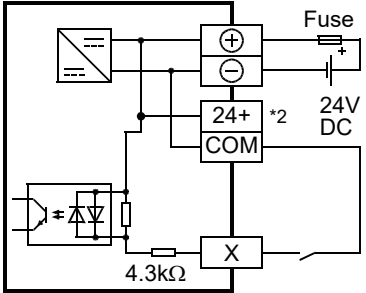
| Item | | FX2N-32ER | FX2N-48ER, FX2N-48ER-D |
|---------------------------------------|-------------------|--|--|
| Number of input points | | 16 points | 24 points |
| Connection type | | Removable terminal block (M3 screw) | |
| Input form | | Sink | |
| Input signal voltage | | 24V DC $\pm 10\%$ *1 | |
| Input signal current | | 5 mA/24V DC | |
| Input impedance | | 4.3 k Ω | |
| Input sensitivity current | Input ON current | 3.5 mA or more/24V DC | |
| | Input OFF current | 1.5 mA or less | |
| Input response time | | About 10 ms | |
| Input signal form (Input sensor form) | | No-voltage contact input or NPN open collector transistor | |
| Input circuit insulation | | Insulation with photocoupler | |
| Indication of input operation | | LED on panel is lit when there is input. | |
| Input circuit diagram | | <ul style="list-style-type: none"> AC power supply type Sink input wiring  | <ul style="list-style-type: none"> DC power supply type Sink input wiring  |

*1. The DC power type applies to the power supply voltage in "Power Supply Specifications (Power Supply Input/24V DC Service Power Supply)."


*2. Do not connect with 24+ terminals.

3. Output specifications (relay output type)
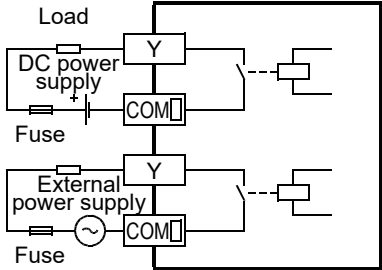
| Item | | FX2N-32ER | FX2N-48ER, FX2N-48ER-D |
|--------------------------------|-----------------|---|---|
| Number of output points | | 16 points | 24 points |
| Connection type | | Removable terminal block (M3 screw) | |
| Output unit | | Relay | |
| External power supply | | 250V AC/30V DC or less | |
| Output circuit insulation | | Mechanical insulation | |
| Indication of output operation | | When power is applied to relay coil, LED on panel is lit. | |
| Max. load | Resistance load | 2 A/point The total load current per common terminal should be the following value. <ul style="list-style-type: none"> 4 output points/common terminal: 8 A or less | 2 A/point The total load current per common terminal should be the following value. <ul style="list-style-type: none"> 4 output points/common terminal: 8 A or less 8 output points/common terminal: 8 A or less |
| | Inductive load | 80 VA → For the product life, refer to Subsection 4.4.2. → For cautions on external wiring, refer to Subsection 12.2.4. | |
| Open circuit leakage current | | — | |
| Min. load | | 5V DC, 2 mA (reference value) | |
| Response time | OFF→ON | Approx. 10 ms | |
| | ON→OFF | Approx. 10 ms | |
| Output circuit diagram | |  <p>A common number applies to the □ of [COM □].</p> | |


15.5.2 External dimensions

FX2N-32ER

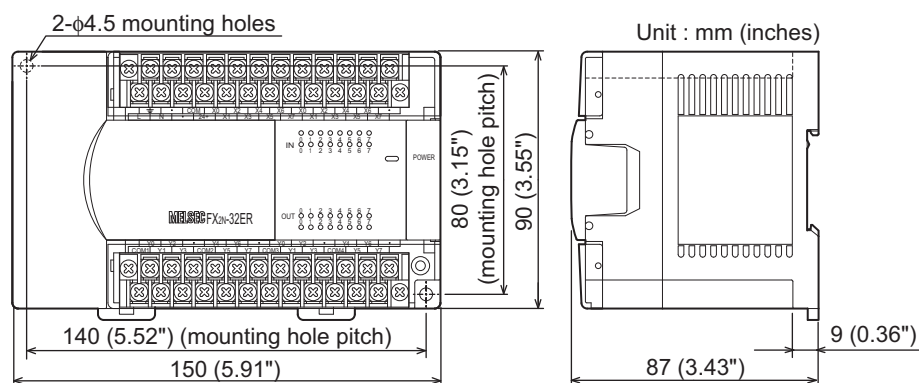


The terminal block uses M3 terminal screws.

FX2N-48ER, FX2N-48ER-D

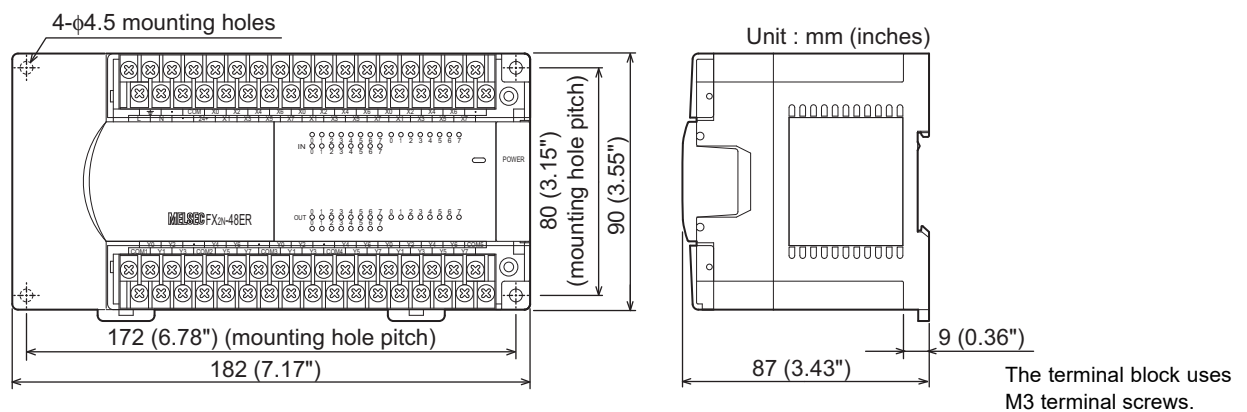


15.5.3 Terminal layout


FX2N-32ER

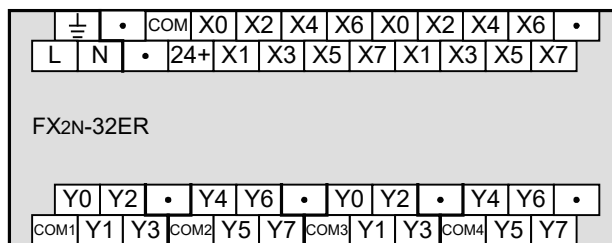

FX2N-48ER

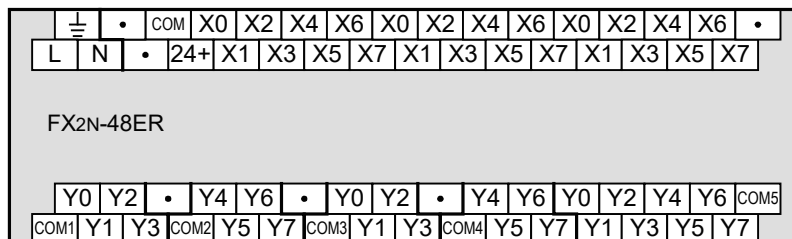

FX2N-48ER-D

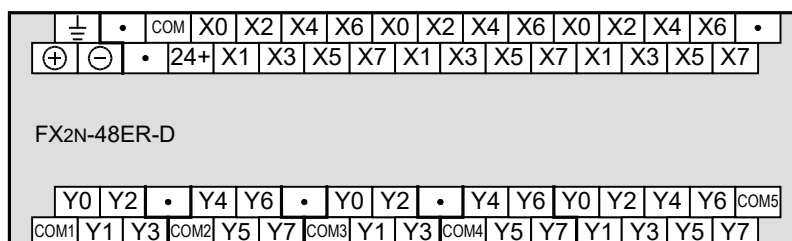

15.6 FX2N-32ET, FX2N-48ET, FX2N-48ET-D

15.6.1 Product specifications

The generic specifications are the same as those for the main unit.

→ For the generic specifications, refer to Section 4.1.

For external wiring, refer to the following chapters.

→ Refer to Chapter 9 for power supply wiring.



→ Refer to Chapter 10 for input wiring.

→ Refer to Chapter 12 for output wiring.

1. Power supply specifications

→ For the power supply specifications, refer to Section 15.2.


2. Input specifications (sink input [-common])
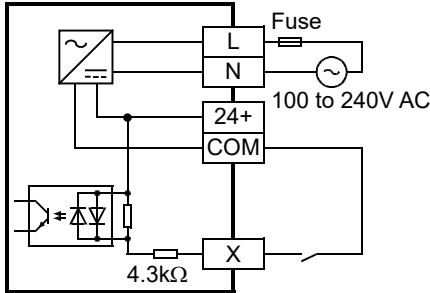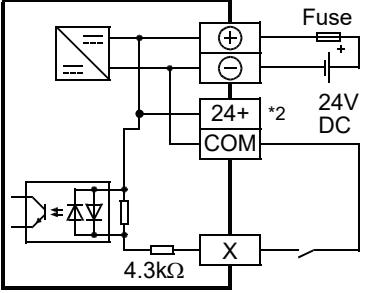
| Item | | FX2N-32ET | FX2N-48ET, FX2N-48ET-D |
|---------------------------------------|-------------------|--|--|
| Number of input points | | 16 points | 24 points |
| Connection type | | Removable terminal block (M3 screw) | |
| Input form | | Sink | |
| Input signal voltage | | 24V DC $\pm 10\%$ *1 | |
| Input signal current | | 5 mA/24V DC | |
| Input impedance | | 4.3 k Ω | |
| Input sensitivity current | Input ON current | 3.5 mA or more/24V DC | |
| | Input OFF current | 1.5 mA or less | |
| Input response time | | About 10 ms | |
| Input signal form (Input sensor form) | | No-voltage contact input or NPN open collector transistor | |
| Input circuit insulation | | Insulation with photocoupler | |
| Indication of input operation | | LED on panel is lit when there is input. | |
| Input circuit diagram | | <ul style="list-style-type: none"> AC power supply type Sink input wiring  | <ul style="list-style-type: none"> DC power supply type Sink input wiring  |

*1. The DC power type applies to the power supply voltage in "Power Supply Specifications (Power Supply Input/24V DC Service Power Supply)."


*2. Do not connect with 24+ terminal.

3. Output specifications (transistor output type)

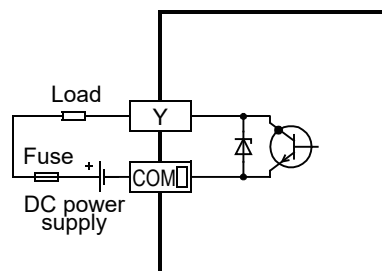
| Item | | FX2N-32ET | FX2N-48ET, FX2N-48ET-D |
|--------------------------------|-----------------|---|---|
| Number of output points | | 16 points | 24 points |
| Connection type | | Removable terminal block (M3 screw) | |
| Output unit/type | | Transistor/sink output | |
| External power supply | | 5-30 V DC | |
| Output circuit insulation | | Insulation with photocoupler | |
| Indication of output operation | | When photocoupler is driven, LED on panel is lit. | |
| Max. load | Resistance load | 0.5A/point The total load current per common terminal should be the following value. • 4 output points/common terminal: 0.8 A or less | 0.5A/point The total load current per common terminal should be the following value. • 4 output points/common terminal: 0.8 A or less • 8 output points/common terminal: 1.6 A or less |
| | Inductive load | 12 W/24V DC | |
| Open circuit leakage current | | 0.1 mA or less/30V DC | |
| Min. load | | — | |
| Response time | OFF→ON | 0.2 ms or less/200 mA (at 24V DC) | |
| | ON→OFF | 0.2 ms or less/200 mA (at 24V DC) | |
| Output circuit diagram | |  <p>A common number applies to the □ of [COM □].</p> | |

15.6.2 External dimensions


FX2N-32ET

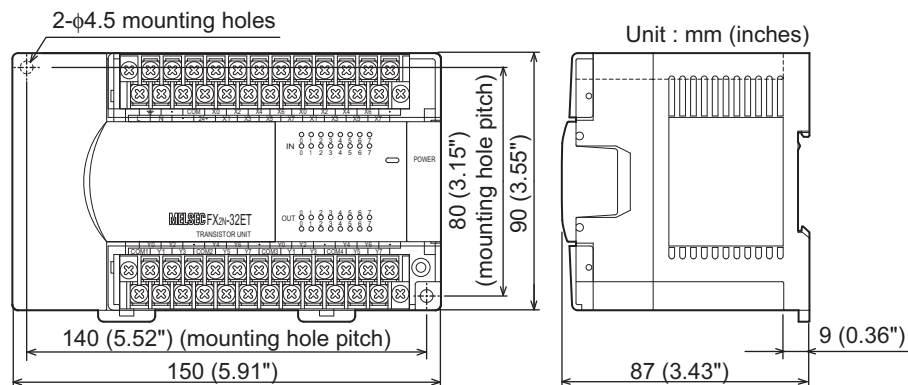

The terminal block uses M3 terminal screws.

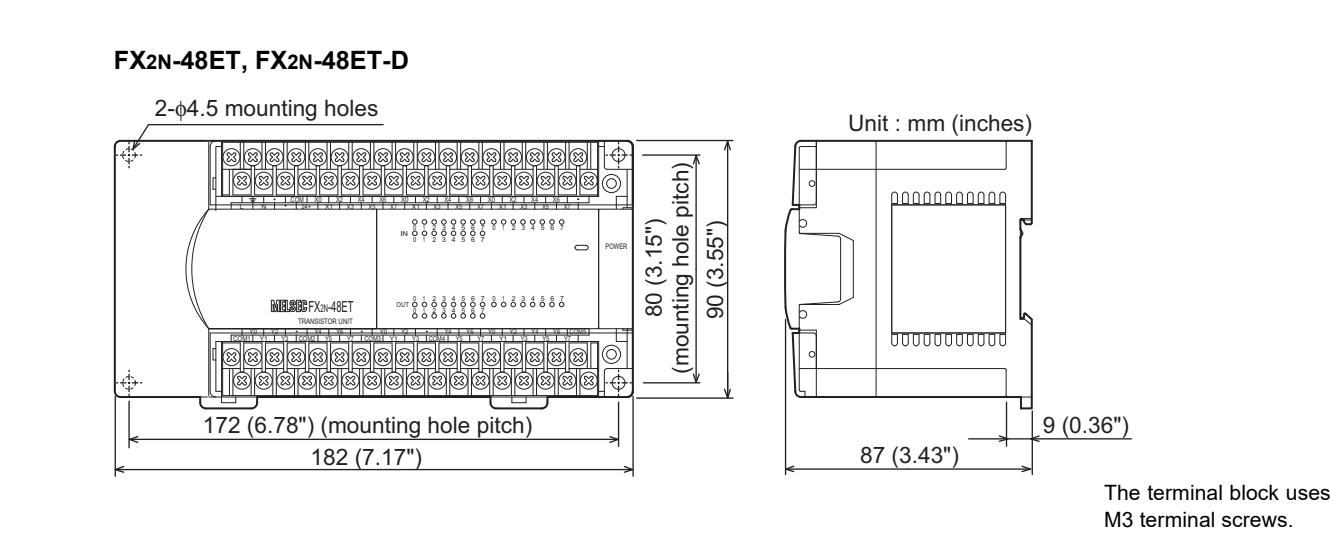

15.6.3 Terminal layout

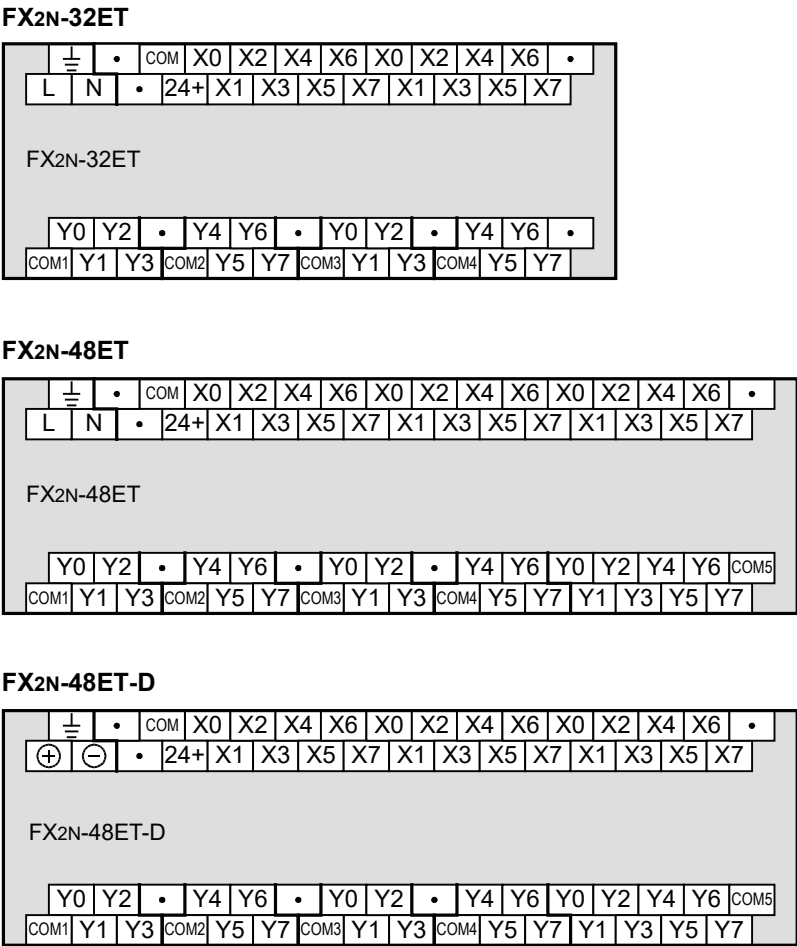

15.7 FX2N-32ES

15.7.1 Product specifications

The generic specifications are the same as those for the main unit.

→ For the generic specifications, refer to Section 4.1.

For external wiring, refer to the following chapters.

→ Refer to Chapter 9 for power supply wiring.


→ Refer to Chapter 10 for input wiring.

→ Refer to Chapter 12 for output wiring.


1. Power supply specifications

→ For the power supply specifications, refer to Section 15.2.

2. Input specifications (sink input [-common])

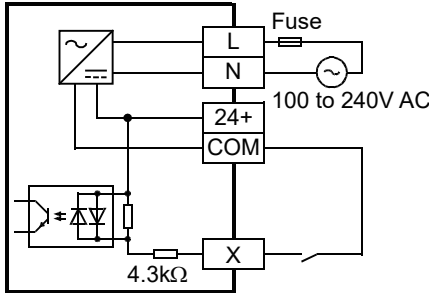
| Item | | FX2N-32ES |
|---------------------------------------|-------------------|---|
| Number of input points | | 16 points |
| Connection type | | Removable terminal block (M3 screw) |
| Input form | | Sink |
| Input signal voltage | | 24V DC \pm 10% |
| Input signal current | | 5 mA/24V DC |
| Input impedance | | 4.3 k Ω |
| Input sensitivity current | Input ON current | 3.5 mA or more/24V DC |
| | Input OFF current | 1.5 mA or less |
| Input response time | | About 10 ms |
| Input signal form (Input sensor form) | | No-voltage contact input or NPN open collector transistor |
| Input circuit insulation | | Insulation with photocoupler |
| Indication of input operation | | LED on panel is lit when there is input. |
| Input circuit diagram | | <p>Sink input wiring</p>  |

3. Output specifications (triac output type)
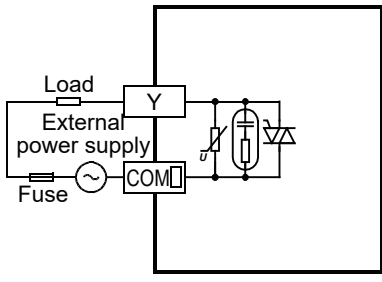
| Item | | FX2N-32ES |
|--------------------------------|-----------------|---|
| Number of output points | | 16 points |
| Connection type | | Removable terminal block (M3 screw) |
| Output unit | | Triac output (SSR) |
| External power supply | | 85 to 242V AC |
| Output circuit insulation | | Insulation with photo-thyristor |
| Indication of output operation | | When photo-thyristor is driven, LED on panel is lit. |
| Max. load | Resistance load | 0.3A/point The total load current per common terminal should be the following value. • 4 output points/common terminal: 0.8 A or less |
| | Inductive load | 15 VA/100V AC, 30 VA/200V AC |
| Open circuit leakage current | | 1 mA/100V AC, 2 mA/200V AC |
| Min. load | | 0.4 VA/100V AC, 1.6 VA/200V AC |
| Response time | OFF→ON | 1 ms or less |
| | ON→OFF | 10 ms or less |
| Output circuit diagram | |  <p>A common number applies to the □ of [COM □].</p> |

15.7.2 External dimensions


FX2N-32ES

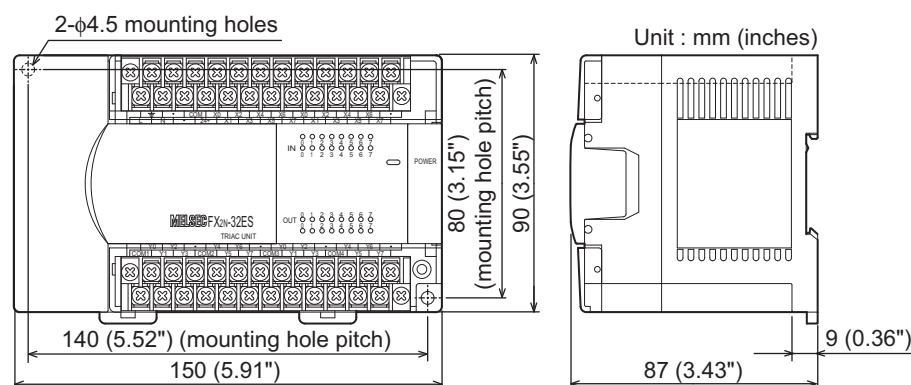

The terminal block uses M3 terminal screws.

15.7.3 Terminal layout

FX2N-32ES

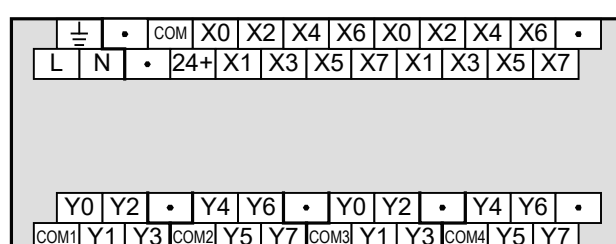

15.8 FX2N-48ER-UA1/UL

15.8.1 Product specifications

The generic specifications are the same as those for the main unit.

→ For the generic specifications, refer to Section 4.1.

For external wiring, refer to the following chapters.

→ Refer to Chapter 9 for power supply wiring.


→ Refer to Chapter 10 for input wiring.

→ Refer to Chapter 12 for output wiring.


1. Power supply specifications

→ For the power supply specifications, refer to Section 15.2.

2. Input specifications (100V AC Input)


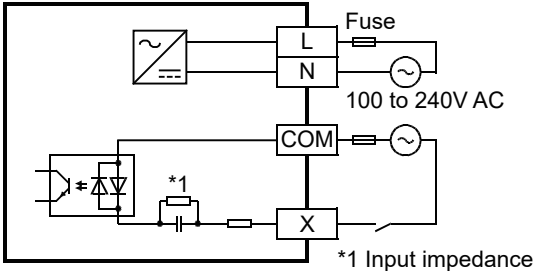
| Item | | FX2N-48ER-UA1/UL |
|-------------------------------|-------------------|--|
| Number of input points | | 24 points |
| Connection type | | Removable terminal block (M3 screw) |
| Input form | | AC input |
| Input signal voltage | | 100 to 120V AC +10%,-15% 50/60 Hz |
| Input signal current | | 4.7 mA/100V AC 50 Hz (70% or less when turned on simultaneously) 6.2 mA/110V AC 60 Hz (70% or less when turned on simultaneously) |
| Input impedance | | Approx. 21 k Ω /50 Hz Approx. 18 k Ω /60 Hz |
| Input sensitivity current | Input ON current | 3.8 mA or more/80V AC |
| | Input OFF current | 1.7 mA or less/30V AC |
| Input response time | | 30 ms or less |
| Input signal form | | Contact input |
| Input circuit insulation | | Photocoupler insulation |
| Indication of input operation | | LED on panel is lit when there is input. |
| Input circuit diagram | |  <p>*1 Input impedance</p> |

3. Output specifications (relay output type)
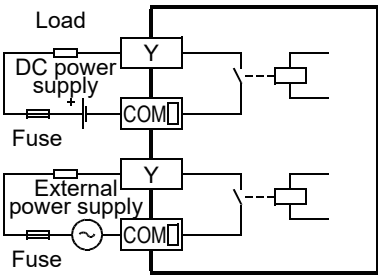
| Item | | FX _{2N} -48ER-UA1/UL |
|--------------------------------|-----------------|---|
| Number of output points | | 24 points |
| Connection type | | Removable terminal block (M3 screw) |
| Output unit | | Relay |
| External power supply | | 30V DC or less 240V AC or less (250V AC or less when the unit does not comply with CE, UL or cUL standards) |
| Output circuit insulation | | Mechanical insulation |
| Indication of output operation | | When power is applied to relay coil, LED on panel lights. |
| Max. load | Resistance load | 2A/point The total load current of resistance loads per common terminal should be the following value. <ul style="list-style-type: none"> 4 output points/common terminal: 8 A or less 8 output points/common terminal: 8 A or less |
| | Inductive load | 80 VA → For the product life, refer to Subsection 4.4.2. → For cautions on external wiring, refer to Subsection 12.2.4. |
| Open circuit leakage current | | — |
| Min. load | | 5V DC, 2 mA (reference value) |
| Response time | OFF→ON | Approx. 10 ms |
| | ON→OFF | Approx. 10 ms |
| Output circuit diagram | |  <p>A common number applies to the □ of [COM □].</p> |

15.8.2 External dimensions

FX_{2N}-48ER-UA1/UL

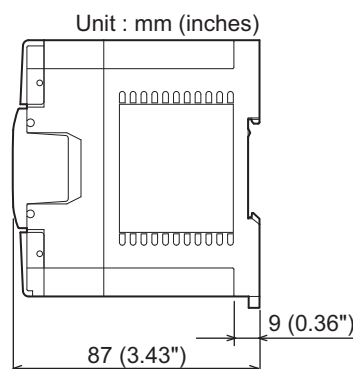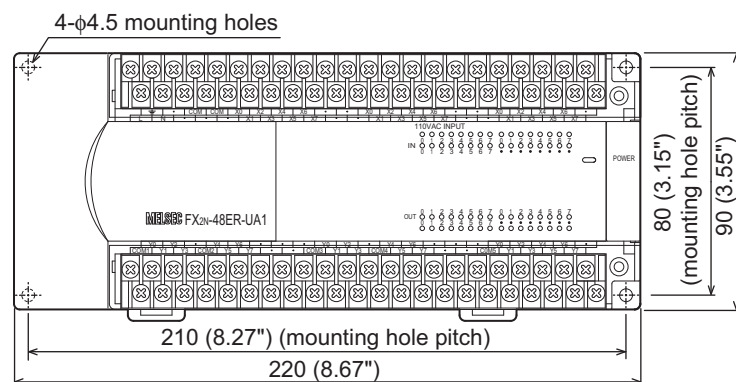

The terminal block uses M3 terminal screws.

16. FX2N-8/16E*-(Input/Output Extension Blocks)

DESIGN PRECAUTIONS



WARNING

- Make sure to have the following safety circuits outside of the PLC to ensure safe system operation even during external power supply problems or PLC failure. Otherwise, malfunctions may cause serious accidents.
 - 1) Most importantly, have the following: an emergency stop circuit, a protection circuit, an interlock circuit for opposite movements (such as normal vs. reverse rotation), and an interlock circuit (to prevent damage to the equipment at the upper and lower positioning limits).
 - 2) Note that when the PLC CPU detects an error, such as a watchdog timer error, during self-diagnosis, all outputs are turned off. Also, when an error that cannot be detected by the PLC CPU occurs in an input/output control block, output control may be disabled. External circuits and mechanisms should be designed to ensure safe machinery operation in such a case.
 - 3) Note that the output current of the 24V DC service power supply varies depending on the model and the absence/presence of extension blocks. If an overload occurs, the voltage automatically drops, inputs in the PLC are disabled, and all outputs are turned off. External circuits and mechanisms should be designed to ensure safe machinery operation in such a case.
 - 4) Note that when an error occurs in a relay, triac or transistor output device, the output could be held either on or off. For output signals that may lead to serious accidents, external circuits and mechanisms should be designed to ensure safe machinery operation in such a case.

DESIGN PRECAUTIONS



CAUTION

- Do not bundle the control line together with or lay it close to the main circuit or power line. As a guideline, lay the control line at least 100mm (3.94") or more away from the main circuit or power line. Noise may cause malfunctions.

SECURITY PRECAUTIONS



WARNING

- To maintain the security (confidentiality, integrity, and availability) of the programmable controller and the system against unauthorized access, denial-of-service (DoS) attacks, computer viruses, and other cyberattacks from unreliable networks and devices via network, take appropriate measures such as firewalls, virtual private networks (VPNs), and antivirus solutions.

WIRING PRECAUTIONS



WARNING

- Make sure to cut off all phases of the power supply externally before attempting installation or wiring work. Failure to do so may cause electric shock or damage to the product.
- Make sure to attach the terminal cover, offered as an accessory, before turning on the power or initiating operation after installation or wiring work. Failure to do so may cause electric shock.
- The temperature rating of the cable should be 80°C or more.

11

High-Speed
Counters

12

Output Wiring

13

Wiring for
Various Uses

14

Test Run,
Maintenance,
Troubleshooting

15

Input/Output
Powered
Extension Units

16

Input/Output
Extension
Blocks

17

Extension
Power Supply
Unit

18

Other Extension
Units and
Options

19

Display Module

20

Terminal Block

WIRING PRECAUTIONS



- Connect the AC power supply wiring to the dedicated terminals described in this manual.
If an AC power supply is connected to a DC input/output terminal or DC power supply terminal, the PLC will burn out.
- Connect the DC power supply wiring to the dedicated terminals described in this manual.
If an AC power supply is connected to a DC input/output terminal or DC power supply terminal, the PLC will burn out.
- Do not wire vacant terminals externally.
Doing so may damage the product.
- When drilling screw holes or wiring, make sure that cutting and wiring debris do not enter the ventilation slits.
Failure to do so may cause fire, equipment failures or malfunctions.
- Make sure to properly wire the FX3U Series main unit and FX0N/FX2N/FX3U Series extension equipment in accordance with the following precautions.
Failure to do so may cause electric shock, equipment failures, a short-circuit, wire breakage, malfunctions, or damage to the product.
 - The disposal size of the cable end should follow the dimensions described in the manual.
 - Tightening torque should follow the specifications in the manual.
 - Tighten the screws using a Phillips-head screwdriver No.2 (shaft diameter 6mm (0.24") or less). Make sure that the screwdriver does not touch the partition part of the terminal block.


16.1 Outline

Connect input/output extension blocks to the PLC to add more input/output points. 8 or 16 points can be added by an input/output extension block.

Since the power is supplied from the main unit, it is not necessary to prepare another power supply unit for each input/output extension block.

16.1.1 Product type

There are various types of input/output extension blocks. Select optimum blocks considering the input type, output type, and connection unit of your system.

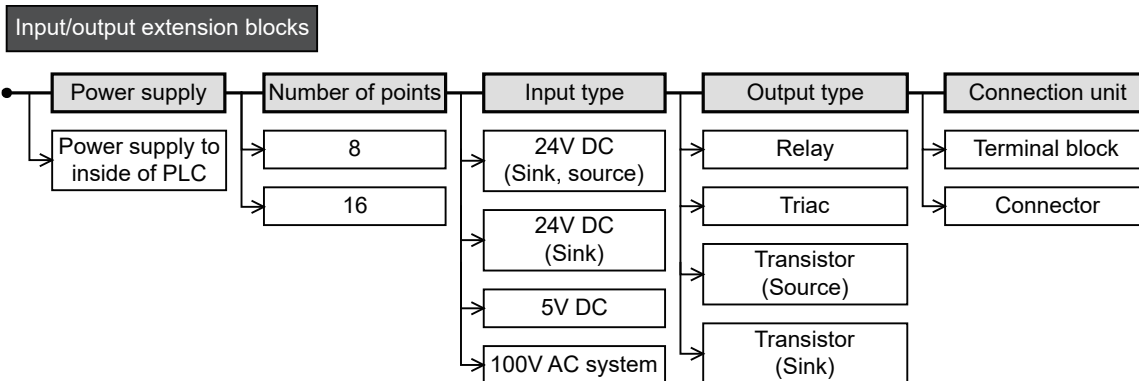

16.1.2 List of products

1. For input/output extension

Sink :Sink [-common], Source :Source [+common]

| Model | Input | | | Output | | | Connection unit |
|---------------------------------------|--------|------------------|---|--------|------------------|---------------|-----------------|
| | Type | Number of points | Common system | Type | Number of points | Common system | |
| Common to both sink and source inputs | | | | | | | |
| FX2N-8ER-ES/UL | 24V DC | 4(8)*1 | <div><div>Sink</div><div>Source</div></div> | Relay | 4(8)*1 | – | Terminal block |
| Dedicated to sink input only | | | | | | | |
| FX2N-8ER | 24V DC | 4(8)*1 | <div>Sink</div> | Relay | 4(8)*1 | – | Terminal block |

*1. Four inputs and four outputs are occupied as unused numbers.

2. For input extension

Sink :Sink [-common], Source :Source [+common]

| Model | Input | | | Output | | | Connection unit |
|---------------------------------------|---------|------------------|-----------------------------------|--------|------------------|---------------|-----------------|
| | Type | Number of points | Common system | Type | Number of points | Common system | |
| Common to both sink and source inputs | | | | | | | |
| FX2N-8EX-ES/UL | 24V DC | 8 | <div>Sink</div> <div>Source</div> | – | – | – | Terminal block |
| FX2N-16EX-ES/UL | 24V DC | 16 | <div>Sink</div> <div>Source</div> | – | – | – | Terminal block |
| Dedicated to sink input only | | | | | | | |
| FX2N-8EX | 24V DC | 8 | <div>Sink</div> | – | – | – | Terminal block |
| FX2N-16EX | 24V DC | 16 | <div>Sink</div> | – | – | – | Terminal block |
| FX2N-16EX-C | 24V DC | 16 | <div>Sink</div> | – | – | – | Connector |
| FX2N-16EXL-C | 5V DC | 16 | <div>Sink</div> | – | – | – | Connector |
| 100V AC input type | | | | | | | |
| FX2N-8EX-UA1/UL | 100V AC | 8 | – | – | – | – | Terminal block |

3. For output extension

Sink :Sink [-common], Source :Source [+common]

| Model | Input | | | Output | | | Connection unit |
|---------------------------------|-------|------------------|---------------|------------|------------------|--|-----------------|
| | Type | Number of points | Common system | Type | Number of points | Common system | |
| Relay output type | | | | | | | |
| FX2N-8EYR-ES/UL | — | — | — | Relay | 8 | — | Terminal block |
| FX2N-8EYR-S-ES/UL | — | — | — | Relay | 8 | — | Terminal block |
| FX2N-8EYR | — | — | — | Relay | 8 | — | Terminal block |
| FX2N-16EYR-ES/UL | — | — | — | Relay | 16 | — | Terminal block |
| FX2N-16EYR | — | — | — | Relay | 16 | — | Terminal block |
| Dedicated to sink output only | | | | | | | |
| FX2N-8EYT | — | — | — | Transistor | 8 | Sink | Terminal block |
| FX2N-8EYT-H | — | — | — | Transistor | 8 | Sink | Terminal block |
| FX2N-16EYT | — | — | — | Transistor | 16 | Sink | Terminal block |
| FX2N-16EYT-C | — | — | — | Transistor | 16 | Sink | Connector |
| FX2N-16EYS | — | — | — | Triac(SSR) | 16 | — | Terminal block |
| Dedicated to source output only | | | | | | | |
| FX2N-8EYT-ESS/UL | — | — | — | Transistor | 8 | Source | Terminal block |
| FX2N-16EYT-ESS/UL | — | — | — | Transistor | 16 | Source | Terminal block |

16.2 FX2N-8ER-ES/UL (24V DC Sink/Source Input, Relay Output)

16.2.1 Product specifications

The generic specifications are identical to the main unit specifications.

→ Refer to Section 4.1 for generic specifications.

For external wiring, refer to the following chapters.

→ Refer to Chapter 10 for input wiring.

→ Refer to Chapter 12 for output wiring.

1. Power supply specifications

| Item | FX2N-8ER-ES/UL |
|---------------|--|
| Product type | FX2N extension block |
| Rated voltage | 24V DC (supplied from main unit and input/output powered extension unit) |


2. Weight and Other specifications

| Item | FX2N-8ER-ES/UL |
|---------------|--|
| MASS (Weight) | Approx. 0.2 kg (0.44lbs) |
| Other | <ul style="list-style-type: none"> The extension cable is already connected to the extension block. Accessories: Label for indication of input/output number The DIN46277 rail (width: 35 mm (1.38")) or direct installation. |


3. Input specifications (common to both sink and source inputs)

| Item | | FX2N-8ER-ES/UL |
|---------------------------------------|-------------------|--|
| Input points | | 4 points |
| Connection unit | | Vertical terminal block (M3 screws) / For a detailed description of wiring, refer to the input line connection diagram of the main unit. |
| Input type | | sink/source |
| Input signal voltage | | 24V DC ± 10% |
| Input signal current | | 5 mA/24V DC |
| Input impedance | | 4.3kΩ |
| Input sensitivity current | Input-ON current | 3.5 mA or more at 24V DC |
| | Input-OFF current | 1.5 mA or less |
| Input response time | | Approx. 10 ms |
| Input signal type (Input sensor form) | | Sink input: No-voltage contact input, NPN open collector transistor Source input: No-voltage contact input, PNP open collector transistor |
| Input circuit insulation | | Photocoupler insulation |
| Indication of input operation | | LED on panel lights when input. |

Input circuit diagram

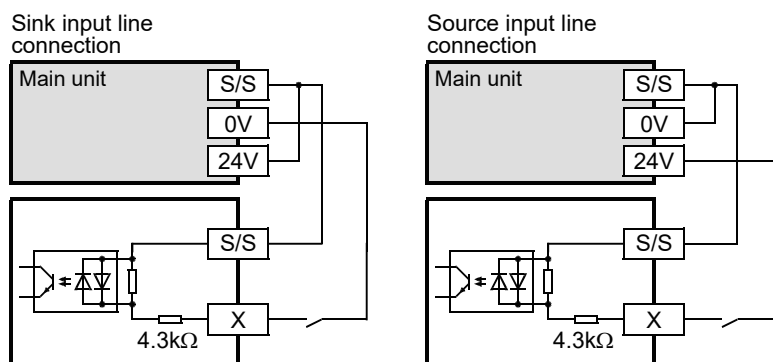


4. Output specifications (Relay output type)

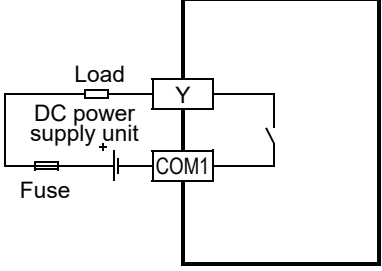
| Item | | FX2N-8ER-ES/UL |
|----------------------------------|-----------------|---|
| Output points | | 4 points |
| Connection unit | | Vertical terminal block (M3 screws) |
| Output unit | | Relay |
| External power supply | | 5 to 30V DC 240V AC or less (250V AC or less when the unit does not comply with CE, UL, or cUL standards) |
| Output circuit insulation method | | Mechanical insulation |
| Indication of output operation | | Supplying power to the relay coil will light the LED indicator lamp on panel. |
| Maximum load | Resistance load | 2 A/point The total resistance load current per common should be as follows: • 4 output points/common: 8A or less |
| | Inductive load | 80 VA → For the product life, refer to Subsection 4.4.2. → For cautions on external wiring, refer to Subsection 12.2.4. |
| Open circuit leakage current | | — |
| Minimum load | | 5V DC, 2 mA (reference values) |
| Response time | OFF→ON | Approx. 10 ms |
| | ON→OFF | Approx. 10 ms |
| Output circuit diagram | |  |

16.2.2 Parts identification and terminal arrangement

Input numbers (X) are assigned to the upper four points, and output numbers (Y) are assigned to the lower four points.

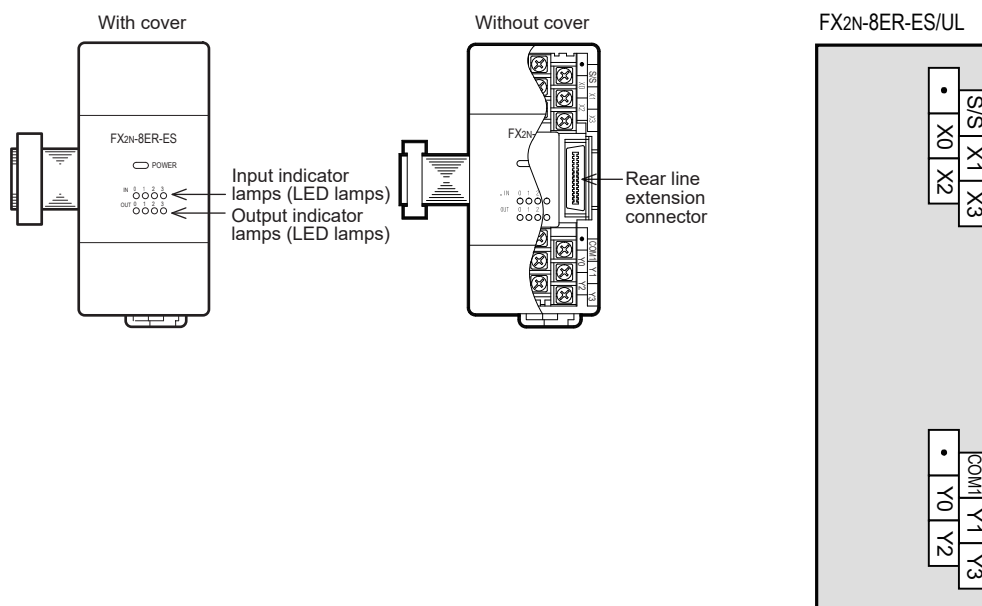

16.2.3 External dimensions

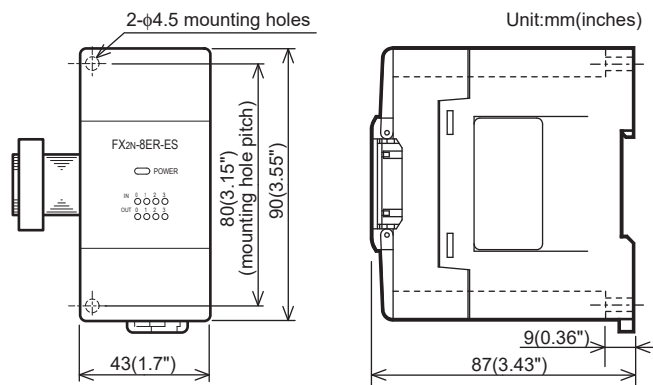

11

High-Speed
Counters

12

Output Wiring

13

Wiring for
Various Uses

14

Test Run,
Maintenance,
Troubleshooting

15

Input/Output
Powered
Extension Units

16

Input/Output
Extension
Blocks

17

Extension
Power Supply
Unit

18

Other Extension
Units and
Options

19

Display Module

20

Terminal Block

16.3 FX2N-8ER (24V DC Sink Input, Relay Output)

16.3.1 Product specifications

The generic specifications are identical to the main unit specifications.

→ Refer to Section 4.1 for generic specifications.

For external wiring, refer to the following chapters.

→ Refer to Chapter 10 for input wiring.

→ Refer to Chapter 12 for output wiring.

1. Power supply specifications

| Item | FX2N-8ER |
|---------------|--|
| Product type | FX2N extension block |
| Rated voltage | 24V DC (supplied from main unit and input/output powered extension unit) |

2. Weight and Other specifications


| Item | FX2N-8ER |
|---------------|--|
| MASS (Weight) | Approx. 0.2 kg (0.44lbs) |
| Other | <ul style="list-style-type: none"> The extension cable is already connected to the extension block. Accessories: Label for indication of input/output number The DIN46277 rail (width: 35 mm (1.38")) or direct installation. |

3. Input specifications

| Item | | FX2N-8ER |
|---------------------------------------|-------------------|--|
| Input points | | 4 points |
| Connection unit | | Vertical terminal block (M3 screws) / For a detailed description of wiring, refer to the input line connection diagram of the main unit. |
| Input type | | Sink |
| Input signal voltage | | 24V DC ± 10% |
| Input signal current | | 5 mA/24V DC |
| Input impedance | | 4.3kΩ |
| Input sensitivity current | Input-ON current | 3.5 mA or more at 24V DC |
| | Input-OFF current | 1.5 mA or less |
| Input response time | | Approx. 10 ms |
| Input signal type (Input sensor form) | | No-voltage contact input NPN open collector transistor |
| Input circuit insulation | | Photo-coupler insulation |
| Indication of input operation | | LED on panel lights when input. |

Input circuit diagram

Sink input line connection

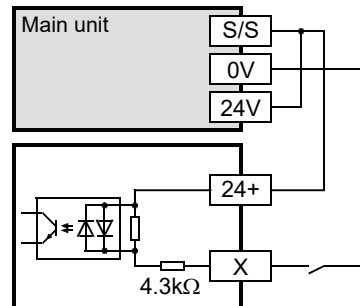


4. Output specifications (Relay output type)


| Item | | FX2N-8ER |
|----------------------------------|-----------------|---|
| Output points | | 4 points |
| Connection unit | | Vertical terminal block (M3 screws) |
| Output unit | | Relay |
| External power supply | | 250V AC 30V DC or less |
| Output circuit insulation method | | Mechanical insulation |
| Indication of output operation | | Supplying power to the relay coil will light the LED indicator lamp on panel. |
| Maximum load | Resistance load | 2 A/point The total resistance load current per common should be as follows: • 4 output points/common: 8A or less |
| | Inductive load | 80 VA → For the product life, refer to Subsection 4.4.2. → For cautions on external wiring, refer to Subsection 12.2.4. |
| Open circuit leakage current | | — |
| Minimum load | | 5V DC, 2 mA (reference values) |
| Response time | OFF→ON | Approx. 10 ms |
| | ON→OFF | Approx. 10 ms |
| Output circuit diagram | | |

16.3.2 Parts identification and terminal arrangement

Input numbers (X) are assigned to the upper four points, and output numbers (Y) are assigned to the lower four points.

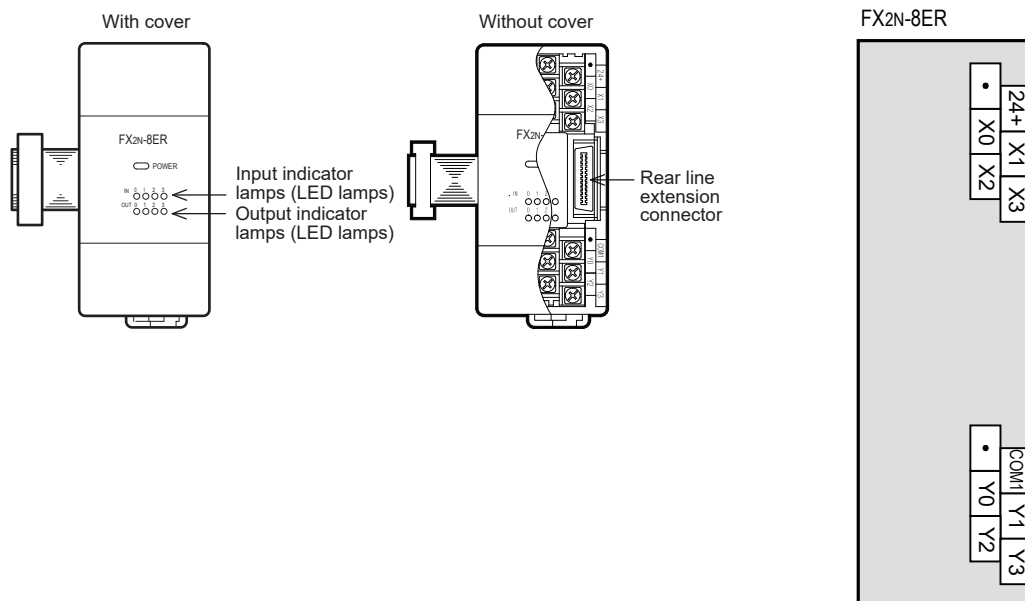

16.3.3 External dimensions

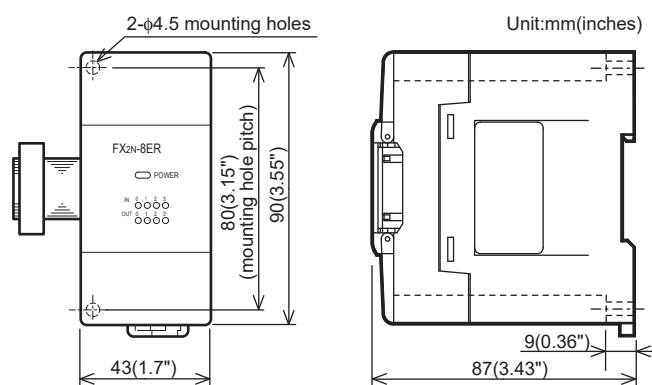

16.4 FX2N-8EX-ES/UL, FX2N-16EX-ES/UL (24V DC Sink/Source Input)

16.4.1 Product specifications

The generic specifications are identical to the main unit specifications.

→ Refer to Section 4.1 for generic specifications.

For external wiring, refer to the following chapter.

→ Refer to Chapter 10 for input wiring.

1. Power supply specifications

| Item | FX2N-8EX-ES/UL | FX2N-16EX-ES/UL |
|---------------|--|-----------------|
| Product type | FX2N extension block | |
| Rated voltage | 24V DC (supplied from main unit and input/output powered extension unit) | |

2. Weight and Other specifications


| Item | FX2N-8EX-ES/UL | FX2N-16EX-ES/UL |
|---------------|--|--------------------------|
| MASS (Weight) | Approx. 0.2 kg (0.44lbs) | Approx. 0.3 kg (0.66lbs) |
| Other | <ul style="list-style-type: none"> The extension cable is already connected to the extension block. Accessories: Label for indication of input/output number The DIN46277 rail (width: 35 mm (1.38")) or direct installation. | |

3. Input specifications (common to both sink and source inputs)

| Item | | FX2N-8EX-ES/UL | FX2N-16EX-ES/UL |
|---------------------------------------|-------------------|--|-----------------|
| Input points | | 8 points | 16 points |
| Connection unit | | Vertical terminal block (M3 screws) / For a detailed description of wiring, refer to the input line connection diagram of the main unit. | |
| Input type | | sink/source | |
| Input signal voltage | | 24V DC \pm 10% | |
| Input signal current | | 5 mA/24V DC | |
| Input impedance | | 4.3k Ω | |
| Input sensitivity current | Input-ON current | 3.5 mA or more at 24V DC | |
| | Input-OFF current | 1.5 mA or less | |
| Input response time | | Approx. 10 ms | |
| Input signal type (Input sensor form) | | Sink input: No-voltage contact input, NPN open collector transistor Source input: No-voltage contact input, PNP open collector transistor | |
| Input circuit insulation | | Photocoupler insulation | |
| Indication of input operation | | LED on panel lights when input. | |
| Input circuit diagram | | <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>Sink input line connection</p> </div> <div style="text-align: center;"> <p>Source input line connection</p> </div> </div> | |


16.4.2 Parts identification and terminal arrangement

FX2N-8EX-ES/UL

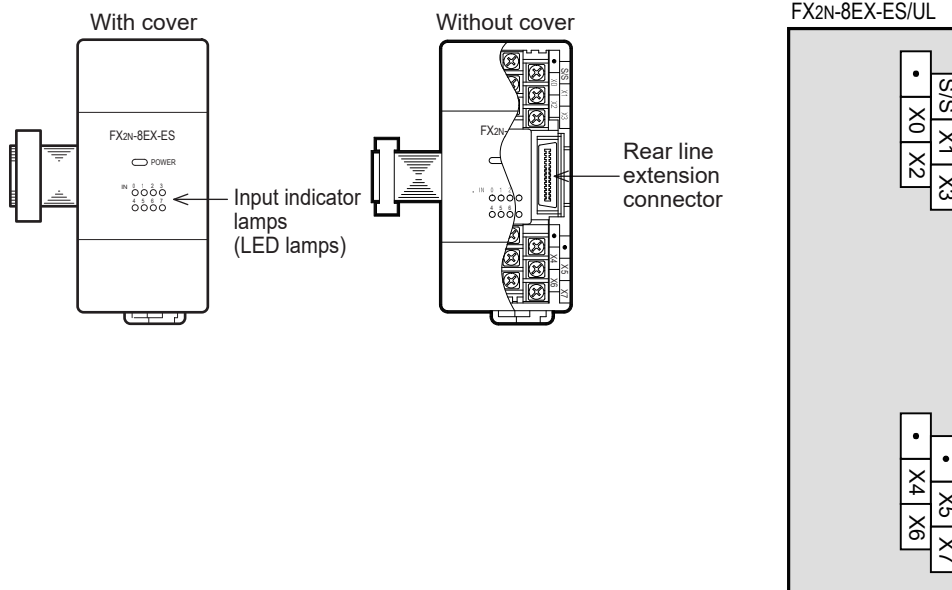


FX2N-16EX-ES/UL

When an input (X) number is assigned, 8 points on the upper side will be used for the lower input numbers, and 8 points on the lower side will be used for the higher input numbers.

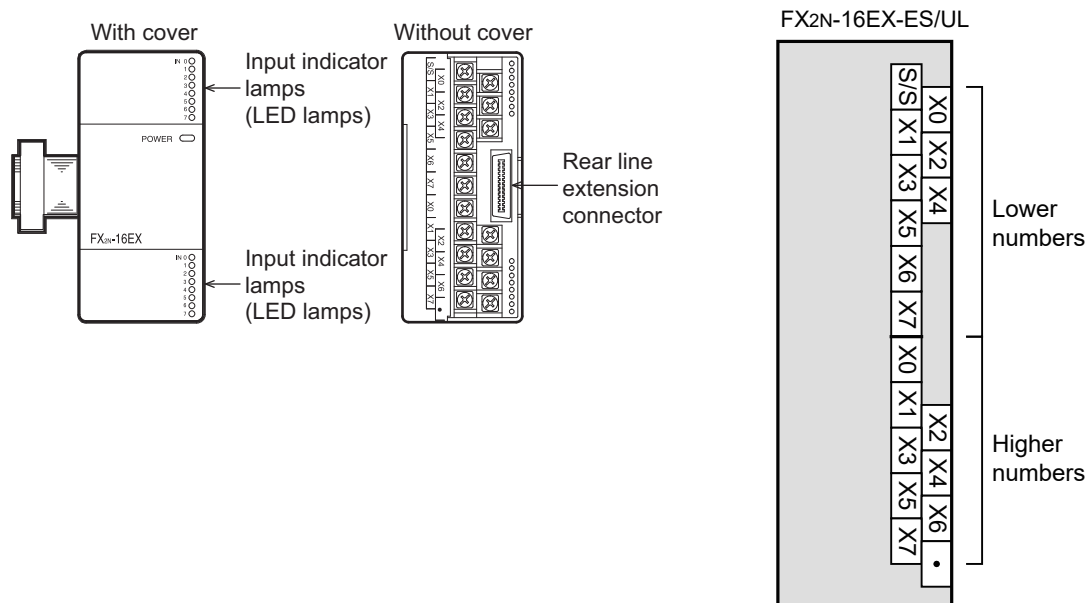


16.4.3 External dimensions

FX2N-8EX-ES/UL

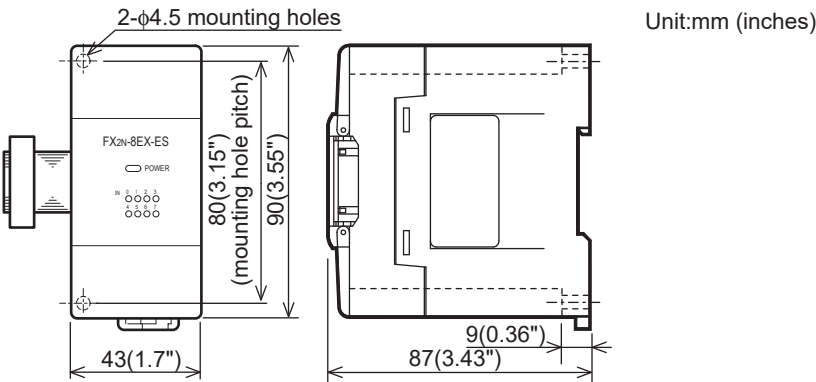

FX2N-16EX-ES/UL

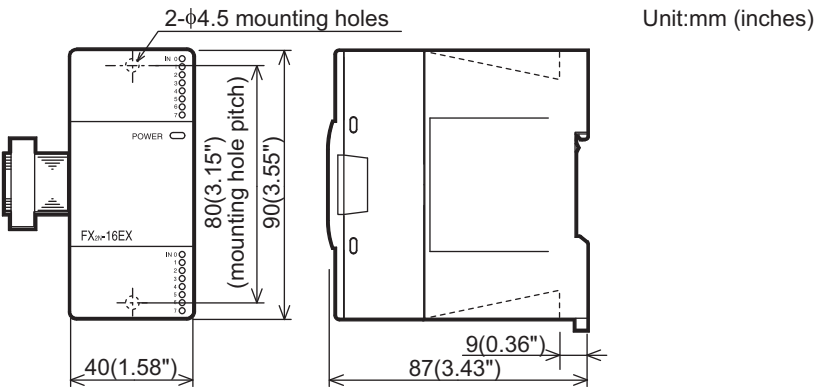

11

High-Speed
Counters

12

Output Wiring

13

Wiring for
Various Uses

14

Test Run,
Maintenance,
Troubleshooting

15

Input/Output
Powered
Extension Units

16

Input/Output
Extension
Blocks

17

Extension
Power Supply
Unit

18

Other Extension
Units and
Options

19

Display Module

20

Terminal Block

16.5 FX2N-8EX, FX2N-16EX and FX2N-16EX-C

16.5.1 Product specifications

The generic specifications are identical to the main unit specifications.

→ Refer to Section 4.1 for generic specifications.

For external wiring, refer to the following chapter.

→ Refer to Chapter 10 for input wiring.

1. Power supply specifications

| Item | FX2N-8EX | FX2N-16EX | FX2N-16EX-C |
|---------------|--|-----------|-------------------------------------|
| Product type | FX2N extension block | | FX2N connector type extension block |
| Rated voltage | 24V DC (supplied from main unit and input/output powered extension unit) | | |

2. Weight and Other specifications


| Item | FX2N-8EX | FX2N-16EX | FX2N-16EX-C |
|---------------|--|--------------------------|-------------|
| MASS (Weight) | Approx. 0.2 kg (0.44lbs) | Approx. 0.3 kg (0.66lbs) | |
| Other | <ul style="list-style-type: none">• The extension cable is already connected to the extension block.• Accessories: Label for indication of input/output number• The DIN46277 rail (width: 35 mm (1.38")) or direct installation. | | |

3. Input specifications

| Item | | FX2N-8EX | FX2N-16EX | FX2N-16EX-C |
|---------------------------------------|-------------------|---|-----------|--------------------------|
| Input points | | 8 points | 16 points | |
| Connection unit | | Vertical terminal block (M3 screws) / For a detailed description of wiring, refer to the input line connection diagram of the main unit. | | Connector terminal block |
| Input type | | Sink | | |
| Input signal voltage | | 24V DC ± 10% | | |
| Input signal current | | 5 mA/24V DC | | |
| Input impedance | | 4.3kΩ | | |
| Input sensitivity current | Input-ON current | 3.5 mA or more at 24V DC | | |
| | Input-OFF current | 1.5 mA or less | | |
| Input response time | | Approx. 10 ms | | |
| Input signal type (Input sensor form) | | No-voltage contact input NPN open collector transistor | | |
| Input circuit insulation | | Photo-coupler insulation | | |
| Indication of input operation | | LED on panel lights when input. | | |


Input circuit diagram

Sink input line connection

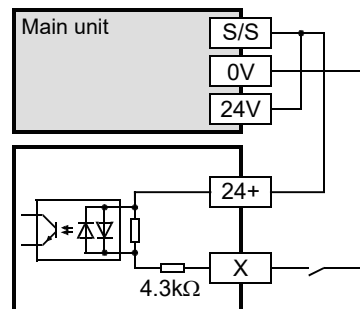


16.5.2 Parts identification and terminal arrangement

FX2N-8EX

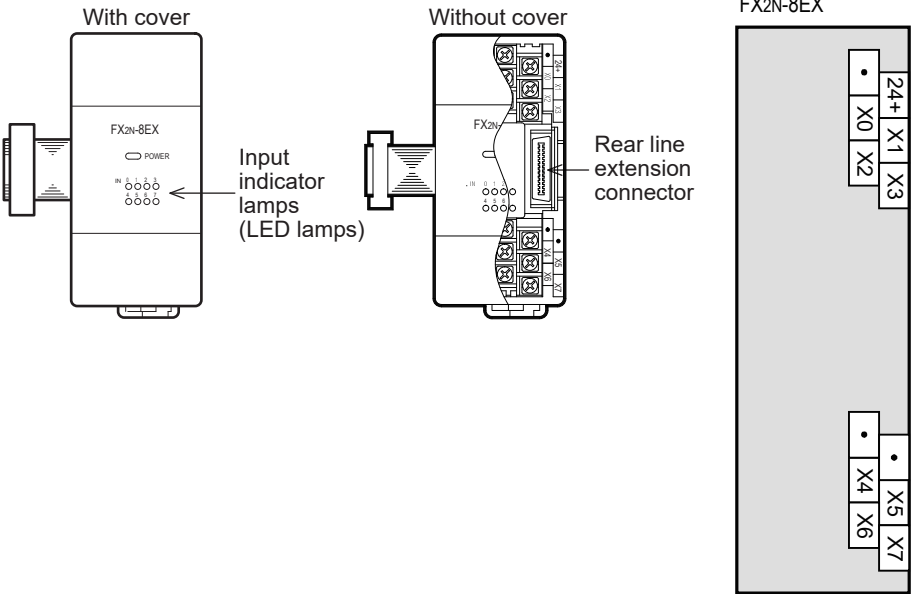


FX2N-16EX



When an input (X) number is assigned, 8 points on the upper side will be used for the lower input numbers, and 8 points on the lower side will be used for the higher input numbers.

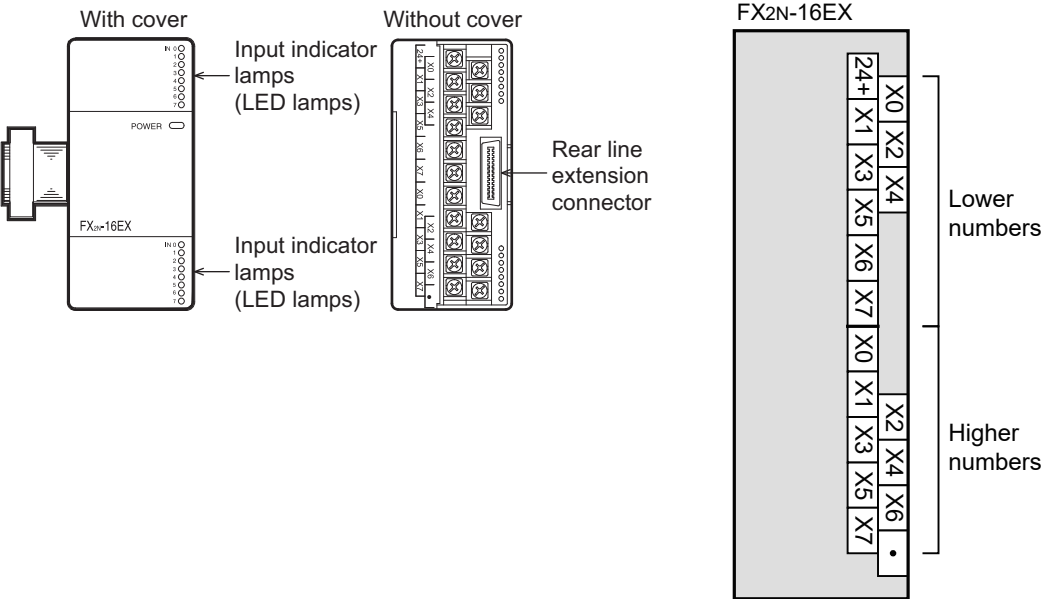


FX2N-16EX-C
When an input (X) number is assigned, 8 points on side A will be used for the lower input numbers, and 8 points on side B will be used for the higher input numbers.

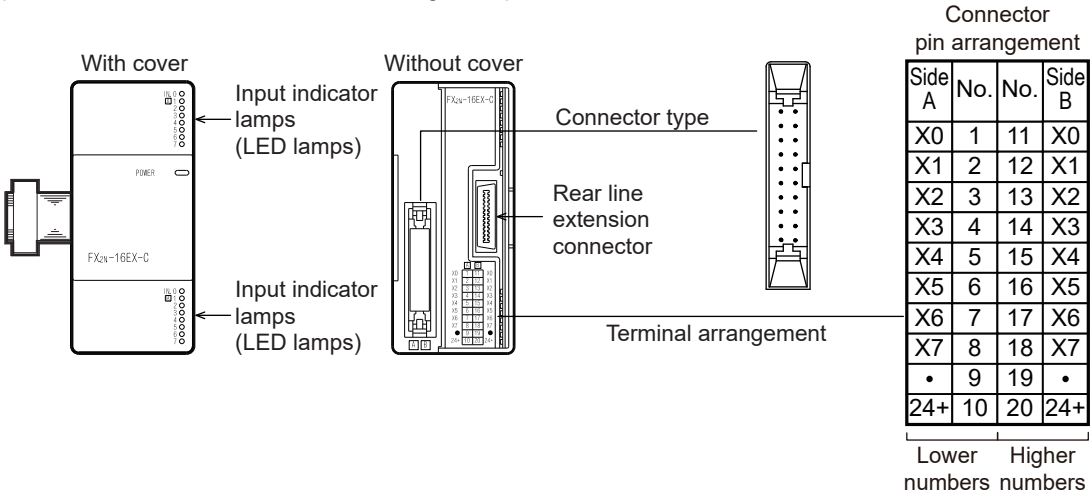


16.5.3 External dimensions

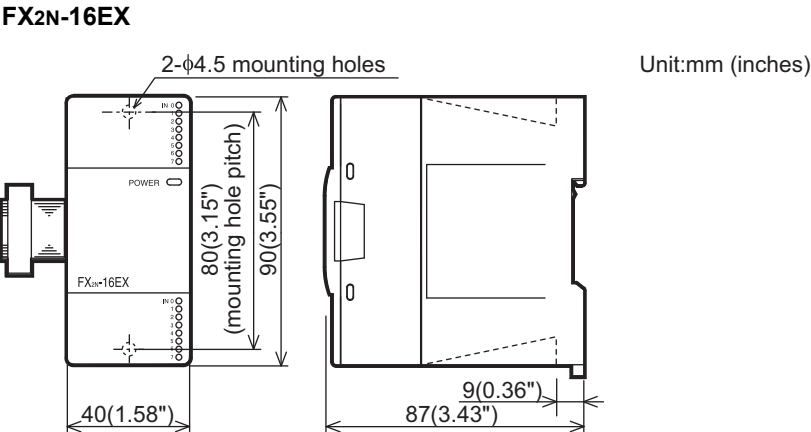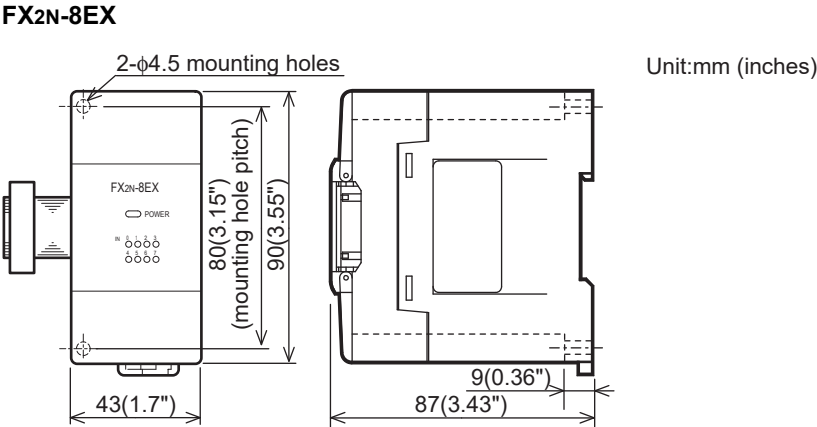

FX2N-16EX-C

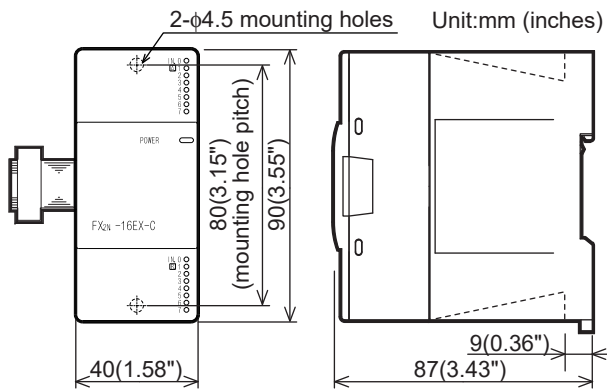

How to connect connector (FX2N-16EX-C)

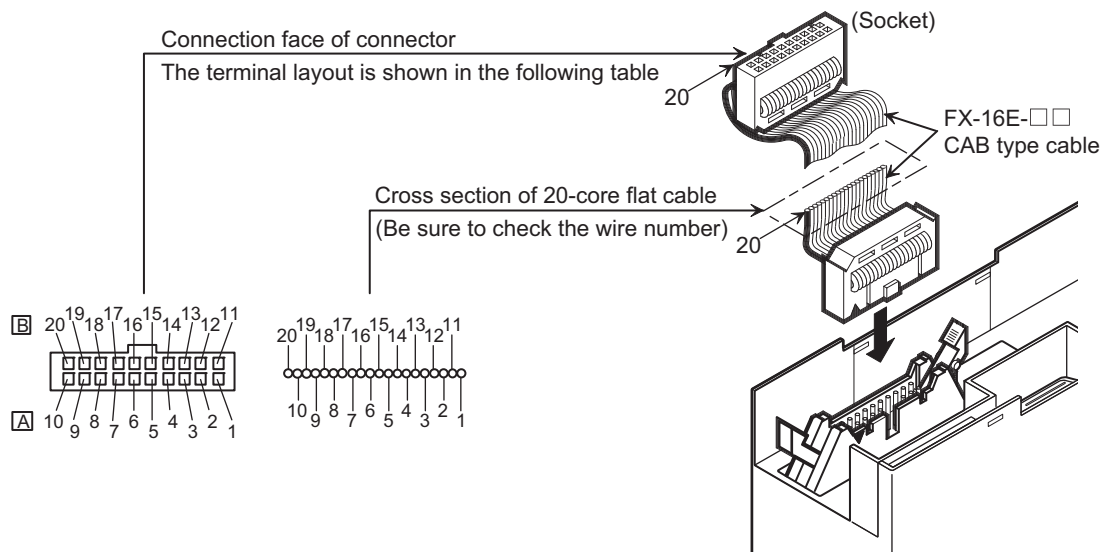

| | | | | | | | | | | |
|--------|-----|---|----|----|----|----|----|----|----|----|
| Side B | 24+ | • | X7 | X6 | X5 | X4 | X3 | X2 | X1 | X0 |
| Side A | 24+ | • | X7 | X6 | X5 | X4 | X3 | X2 | X1 | X0 |

Side B is for the higher input numbers,
and side A is for the lower input numbers.
(Exe.) Side B X050 to X057
Side A X040 to X047

| | |
|----|--|
| 11 | High-Speed Counters |
| 12 | Output Wiring |
| 13 | Wiring for Various Uses |
| 14 | Test Run, Maintenance, Troubleshooting |
| 15 | Input/Output Powered Extension Units |
| 16 | Input/Output Extension Blocks |
| 17 | Extension Power Supply Unit |
| 18 | Other Extension Units and Options |
| 19 | Display Module |
| 20 | Terminal Block |

16.6 FX2N-16EXL-C (5V DC Input: 16 Points)

16.6.1 Product specifications

The generic specifications are identical to the main unit specifications.

→ Refer to Section 4.1 for generic specifications.


1. Power supply specifications

| Item | FX2N-16EXL-C |
|---------------|--|
| Product type | FX2N connector type extension block for each application |
| Rated voltage | 24V DC (supplied from main unit and input/output powered extension unit) |

2. Weight and Other specifications


| Item | FX2N-16EXL-C |
|---------------|--|
| MASS (Weight) | Approx. 0.3 kg (0.66lbs) |
| Other | <ul style="list-style-type: none"> The extension cable is already connected to the extension block. Accessories: Label for indication of input/output number The DIN46277 rail (width: 35 mm (1.38")) or direct installation. |

3. Input specifications

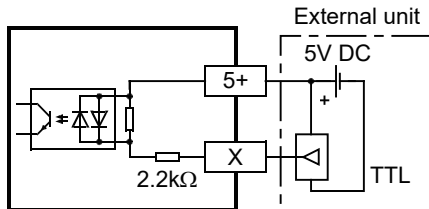
| Item | | FX2N-16EXL-C |
|-------------------------------|--|--|
| Input points | | 16 points |
| Connection unit | | Connector terminal block |
| Input type | | TTL level |
| Input signal voltage | | 5V DC \pm 5% |
| Input signal current | | 20 mA (at 5V DC), maximum |
| Input impedance | | 2.2k Ω |
| Input sensitivity current | ON(Low) | 1 mA or more |
| | OFF(High) | 0.4 mA or less |
| Input sensitivity voltage | ON(Low) | 1.5V DC or less |
| | OFF(High) | 3.5V DC or more |
| Input response time | OFF \rightarrow ON (High \rightarrow Low) | 1 ms +1 ms, -0.5 ms |
| | ON \rightarrow OFF (Low \rightarrow High) | 1 ms +1 ms, -0.5 ms |
| Input signal type | | TTL input |
| Input circuit insulation | | Photo-coupler insulation |
| Indication of input operation | | LED on panel lights when input. |
| Input circuit diagram | |  |

16.6.2 Parts identification and terminal arrangement

When an input (X) number is assigned, 8 points on side A will be used for the lower input numbers, and 8 points on side B will be used for the higher input numbers.

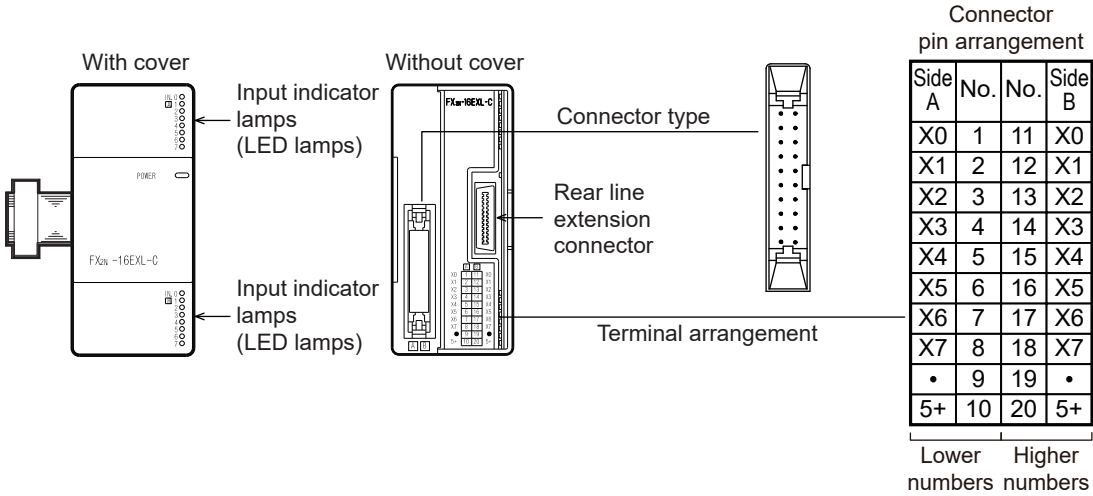


16.6.3 External dimensions

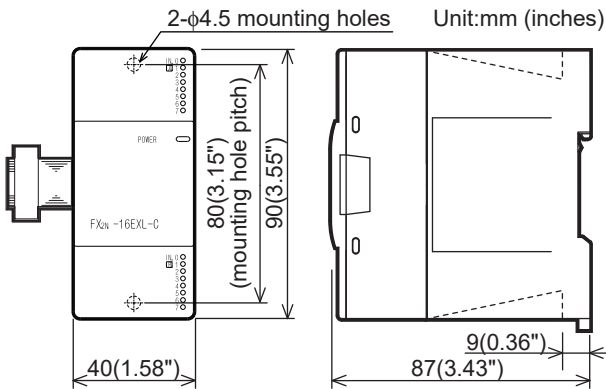


16.6.4 Example of wiring

1. Wiring on input side
Sink input

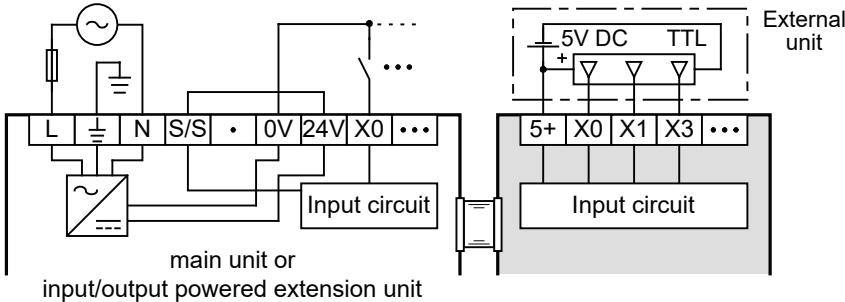

How to connect connector

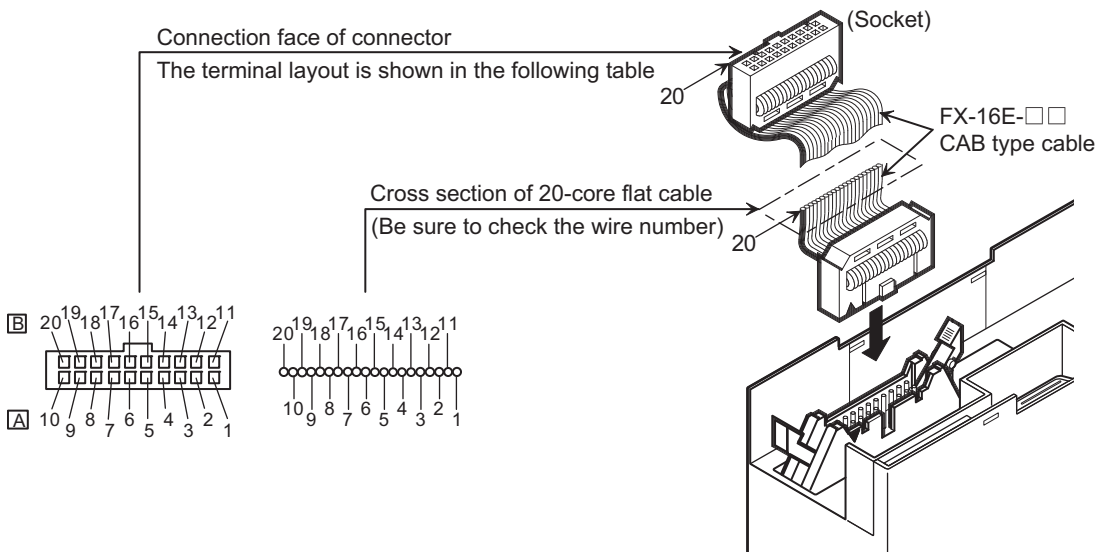

| | | | | | | | | | | |
|--------|----|---|----|----|----|----|----|----|----|----|
| Side B | 5+ | • | X7 | X6 | X5 | X4 | X3 | X2 | X1 | X0 |
| Side A | 5+ | • | X7 | X6 | X5 | X4 | X3 | X2 | X1 | X0 |

Side B is for the higher input numbers,
and side A is for the lower input numbers.
(Exe.) Side B X050 to X057
Side A X040 to X047

16.7 FX2N-8EX-UA1/UL (100V AC Input)

16.7.1 Product specifications

The generic specifications are identical to the main unit specifications.

→ Refer to Section 4.1 for generic specifications.

For external wiring, refer to the following chapter.

→ Refer to Chapter 10 for input wiring.

1. Power supply specifications

| Item | FX2N-8EX-UA1/UL |
|---------------|--|
| Product type | FX2N extension block |
| Rated voltage | 24V DC (supplied from main unit and input/output powered extension unit) |


2. Weight and Other specifications

| Item | FX2N-8EX-UA1/UL |
|---------------|--|
| MASS (Weight) | Approx. 0.2 kg (0.44lbs) |
| Other | <ul style="list-style-type: none"> The extension cable is already connected to the extension block. Accessories: Label for indication of input/output number The DIN46277 rail (width: 35 mm (1.38")) or direct installation. |


3. Input specifications

| Item | | FX2N-8EX-UA1/UL |
|-------------------------------|-------------------|--|
| Input points | | 8 points |
| Connection unit | | Vertical terminal block (M3 screws) / For a detailed description of wiring, refer to the input line connection diagram of the main unit. |
| Input type | | AC input |
| Input signal voltage | | 100 to 120V AC |
| Input signal current | | 6.2mA/110V AC 60Hz 4.7mA/100V AC 50Hz |
| Input impedance | | Approx. 21kΩ/50Hz Approx. 18kΩ/60Hz |
| Input sensitivity current | Input-ON current | 3.8mA/80V AC or more |
| | Input-OFF current | 1.7mA/30V AC or less |
| Input response time | | 30 ms or less |
| Input signal type | | Voltage contact |
| Input circuit insulation | | Photocoupler insulation |
| Indication of input operation | | LED on panel lights when input. |


Input circuit diagram

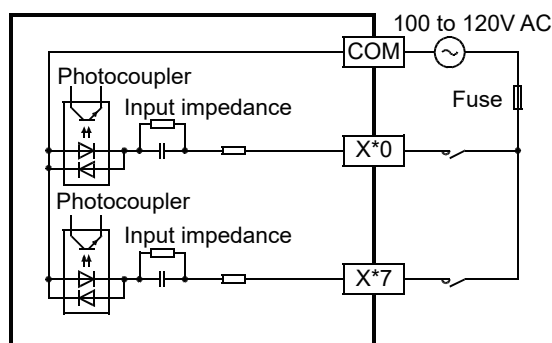

16.7.2 Parts identification and terminal arrangement

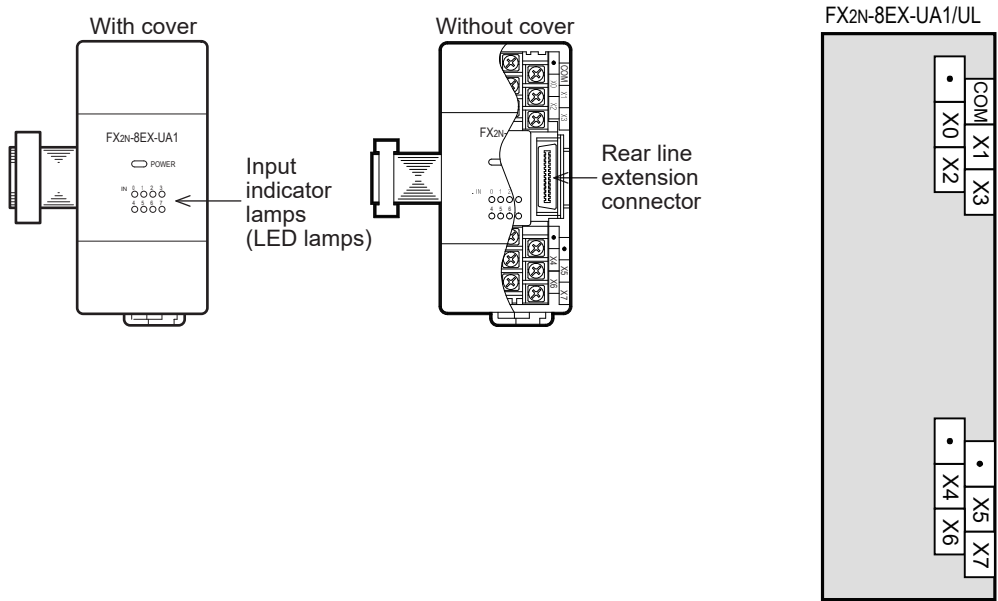

16.7.3 External dimensions

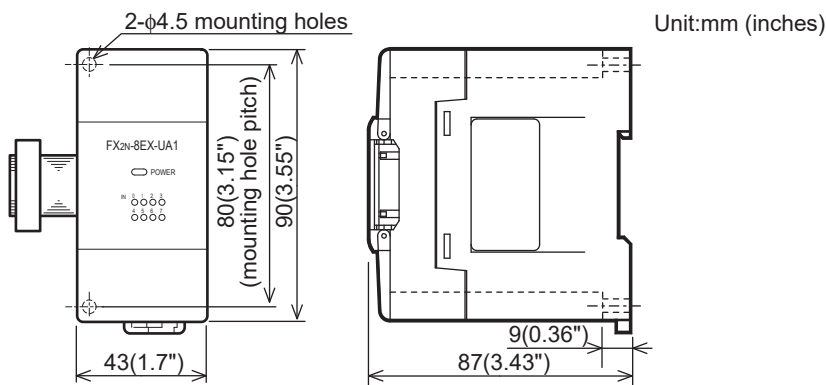

16.8 FX2N-8EYR-ES/UL, FX2N-8EYR-S-ES/UL, FX2N-16EYR-ES/UL (Relay Output)

16.8.1 Product specifications

The generic specifications are identical to the main unit specifications.

→ Refer to Section 4.1 for generic specifications.

For external wiring, refer to the following chapter.

→ Refer to Chapter 12 for output wiring.

1. Power supply specifications

| Item | FX2N-8EYR-ES/UL | FX2N-16EYR-ES/UL | FX2N-8EYR-S-ES/UL |
|---------------|--|------------------|-------------------|
| Product type | FX2N extension block | | |
| Rated voltage | 24V DC (supplied from main unit and input/output powered extension unit) | | |

2. Weight and Other specifications


| Item | FX2N-8EYR-ES/UL | FX2N-16EYR-ES/UL | FX2N-8EYR-S-ES/UL |
|---------------|--|--------------------------|-------------------|
| MASS (Weight) | Approx. 0.2 kg (0.44lbs) | Approx. 0.3 kg (0.66lbs) | |
| Others | <ul style="list-style-type: none">• The extension cable is already connected to the extension block.• Accessories: Label for indication of input/output number• The DIN46277 rail (width: 35 mm (1.38")) or direct installation. | | |

3. Output specifications (Relay output type)

| Item | | FX2N-8EYR-ES/UL | FX2N-16EYR-ES/UL | FX2N-8EYR-S-ES/UL |
|----------------------------------|-----------------|--|------------------|--|
| Output points | | 8 points | 16 points | 8 points (All points have separate reference terminals (commons)) |
| Connection unit | | Vertical terminal block (M3 screws) | | |
| Output unit | | Relay | | |
| External power supply | | 30V DC or less 240V AC or less (250V AC or less when the unit does not comply with CE, UL, or cUL standards) | | |
| Output circuit insulation method | | Mechanical insulation | | |
| Indication of output operation | | Supplying power to the relay coil will light the LED indicator lamp on panel. | | |
| Maximum load | Resistance load | 2 A/point The total resistance load current per common should be as follows: <ul style="list-style-type: none"> 4 output points/common: 8A or less 8 output points/common: 8A or less | | 2 A/point |
| | Inductive load | 80 VA → For the product life, refer to Subsection 4.4.2. → For cautions on external wiring, refer to Subsection 12.2.4. | | |
| Open circuit leakage current | | — | | |
| Minimum load | | 5V DC, 2 mA (reference values) | | |
| Response time | OFF→ON | Approx. 10 ms | | |
| | ON→OFF | Approx. 10 ms | | |
| Output circuit diagram | | <p>A common number applies to the □ of [COM□].</p> | | |

16.8.2 Parts identification and terminal arrangement


FX2N-8EYR-ES/UL

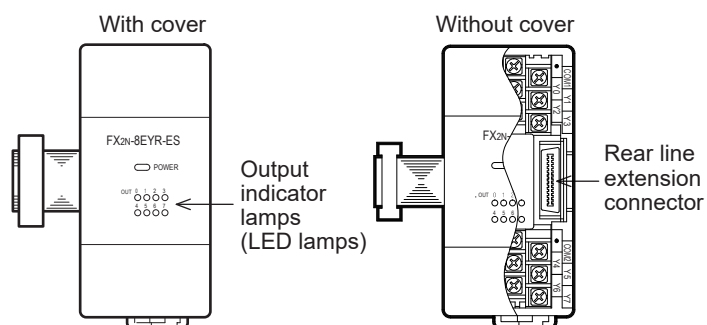


FX2N-8EYR-ES/UL



FX2N-8EYR-S-ES/UL

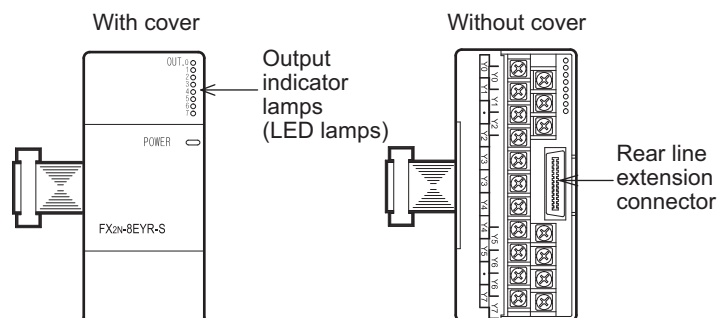


FX2N-8EYR-S-ES/UL

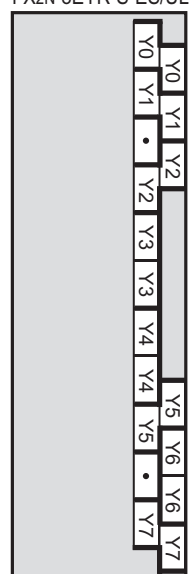


FX2N-16EYR-ES/UL

When an output (Y) number is assigned, 8 points on the upper side will be used for the lower output numbers, and 8 points on the lower side will be used for the higher output numbers.

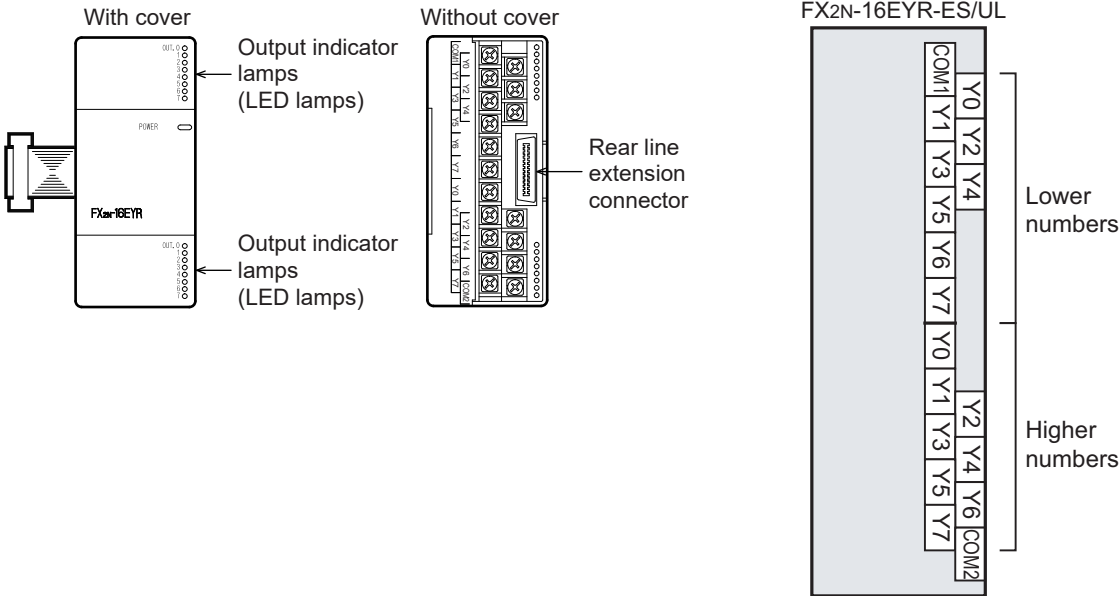


16.8.3 External dimensions


FX2N-8EYR-ES/UL

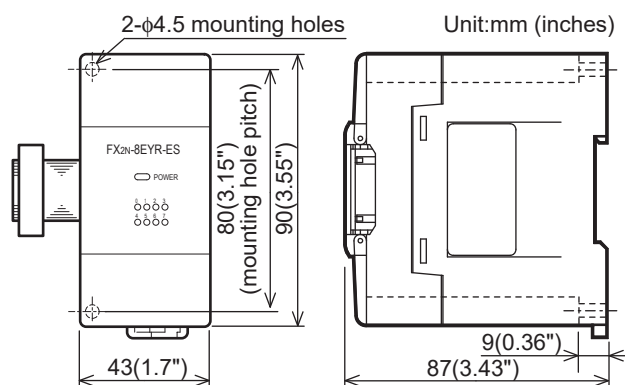

FX2N-8EYR-S-ES/UL

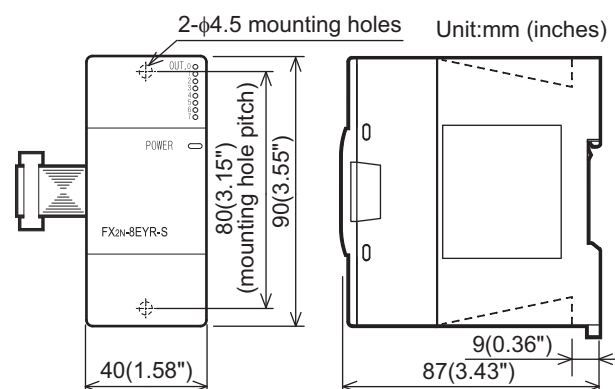

FX2N-16EYR-ES/UL

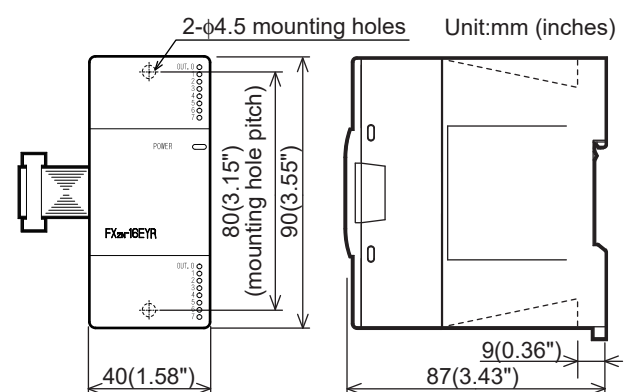

16.9 FX2N-8EYT-ESS/UL, FX2N-16EYT-ESS/UL (Transistor Output)

16.9.1 Product specifications

The generic specifications are identical to the main unit specifications.

→ Refer to Section 4.1 for generic specifications.

For external wiring, refer to the following chapter.

→ Refer to Chapter 12 for output wiring.

1. Power supply specifications

| Item | FX2N-8EYT-ESS/UL | FX2N-16EYT-ESS/UL |
|---------------|--|-------------------|
| Product type | FX2N extension block | |
| Rated voltage | 24V DC (supplied from main unit and input/output powered extension unit) | |

2. Weight and Other specifications


| Item | FX2N-8EYT-ESS/UL | FX2N-16EYT-ESS/UL |
|---------------|--|--------------------------|
| MASS (Weight) | Approx. 0.2 kg (0.44lbs) | Approx. 0.3 kg (0.66lbs) |
| Other | <ul style="list-style-type: none"> The extension cable is already connected to the extension block. Accessories: Label for indication of input/output number The DIN46277 rail (width: 35 mm (1.38")) or direct installation. | |

3. Output specifications (Transistor output type)

| Item | FX2N-8EYT-ESS/UL | FX2N-16EYT-ESS/UL |
|----------------------------------|---|---|
| Output points | 8 points | 16 points |
| Connection unit | Vertical terminal block (M3 screws) | |
| Output unit/type | Transistor/source output | |
| External power supply | 5-30 V DC | |
| Output circuit insulation method | Photo-coupler insulation | |
| Indication of output operation | Activation of the photo-coupler will light the LED indicator lamp on panel. | |
| Maximum load | Resistance load | 0.5 A/point The total load current per common should be as follows: <ul style="list-style-type: none"> 4 output points/common: 0.8A or less 8 output points/common: 1.6A or less |
| | Inductive load | 12 W/24V DC |
| Open circuit leakage current | 0.1 mA/30 A DC | |
| Minimum load | - | |
| Response time | OFF→ON | 0.2 ms or less for 200 mA (at 24V DC) |
| | ON→OFF | 0.2 ms or less for 200 mA (at 24V DC) |
| Output circuit diagram | <p>A common number applies to the □ of [+V□].</p> | |


16.9.2 Parts identification and terminal arrangement

FX2N-8EYT-ESS/UL

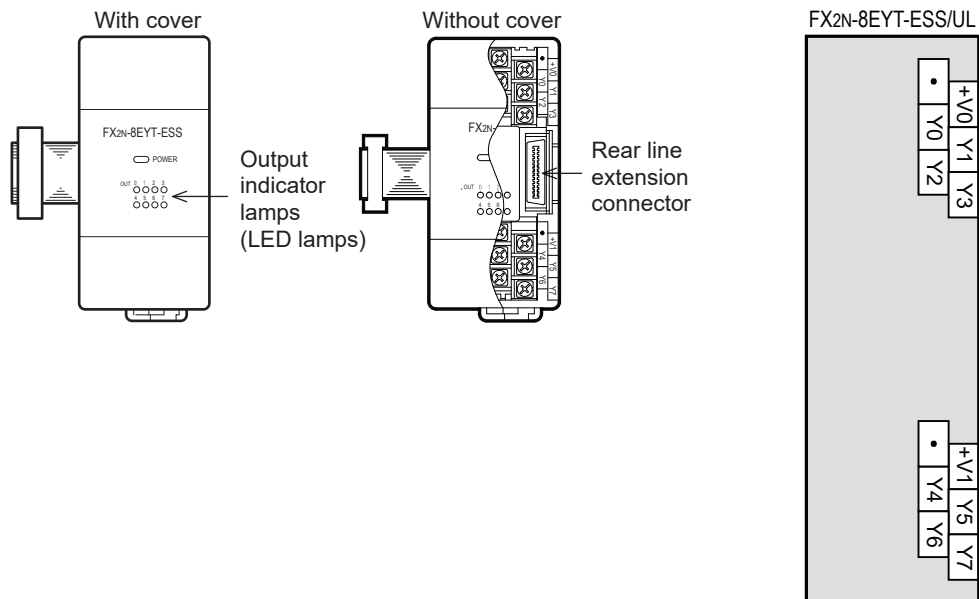


FX2N-16EYT-ESS/UL

When an output (Y) number is assigned, 8 points on the upper side will be used for the lower output numbers, and 8 points on the lower side will be used for the higher output numbers.

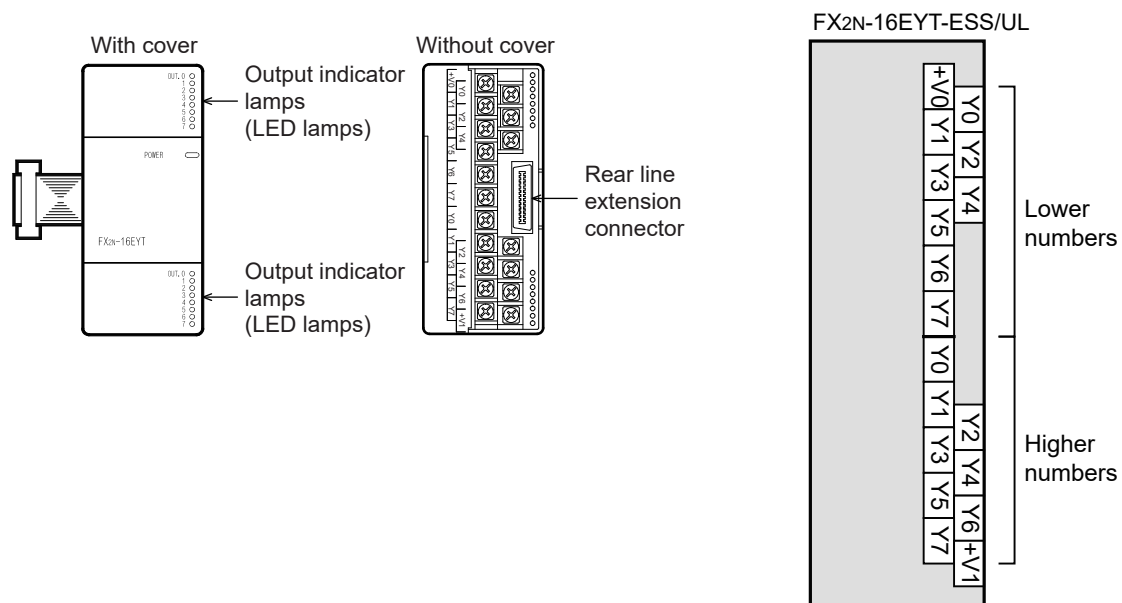


16.9.3 External dimensions

FX2N-8EYT-ESS/UL

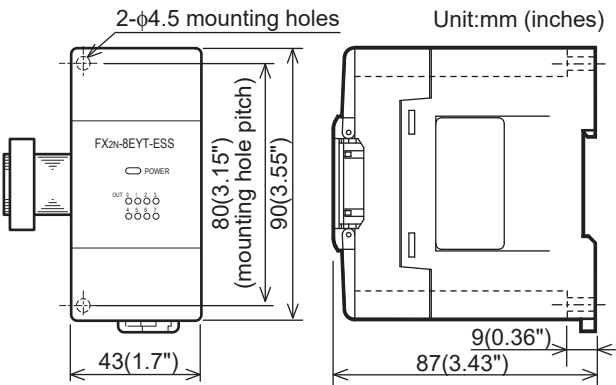

FX2N-16EYT-ESS/UL

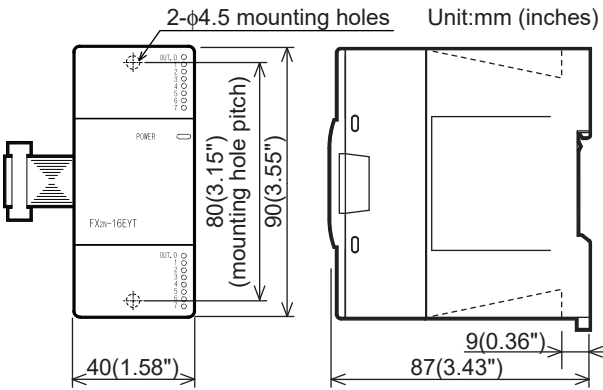

11

High-Speed
Counters

12

Output Wiring

13

Wiring for
Various Uses

14

Test Run,
Maintenance,
Troubleshooting

15

Input/Output
Powered
Extension Units

16

Input/Output
Extension
Blocks

17

Extension
Power Supply
Unit

18

Other Extension
Units and
Options

19

Display Module

20

Terminal Block

16.10 FX2N-8EYR, FX2N-16EYR (Relay Output)

16.10.1 Product specifications

The generic specifications are identical to the main unit specifications.

→ Refer to Section 4.1 for generic specifications.

For external wiring, refer to the following chapter.

→ Refer to Chapter 12 for output wiring.

1. Power supply specifications

| Item | FX2N-8EYR | FX2N-16EYR |
|---------------|--|------------|
| Product type | FX2N extension block | |
| Rated voltage | 24V DC (supplied from main unit and input/output powered extension unit) | |

2. Weight and Other specifications


| Item | FX2N-8EYR | FX2N-16EYR |
|---------------|--|--------------------------|
| MASS (Weight) | Approx. 0.2 kg (0.44lbs) | Approx. 0.3 kg (0.66lbs) |
| Other | <ul style="list-style-type: none"> The extension cable is already connected to the extension block. Accessories: Label for indication of input/output number The DIN46277 rail (width: 35 mm (1.38")) or direct installation. | |

3. Output specifications (Relay output type)

| Item | FX2N-8EYR | FX2N-16EYR |
|----------------------------------|---|--|
| Output points | 8 points | 16 points |
| Connection unit | Vertical terminal block (M3 screws) | |
| Output unit | Relay | |
| External power supply | 250V AC 30V DC or less | |
| Output circuit insulation method | Mechanical insulation | |
| Indication of output operation | Supplying power to the relay coil will light the LED indicator lamp on panel. | |
| Maximum load | Resistance load | 2 A/point The total resistance load current per common should be as follows: <ul style="list-style-type: none"> 4 output points/common: 8A or less 8 output points/common: 8A or less |
| | Inductive load | 80 VA → For the product life, refer to Subsection 4.4.2. → For cautions on external wiring, refer to Subsection 12.2.4. |
| Open circuit leakage current | - | |
| Minimum load | 5V DC, 2 mA (reference values) | |
| Response time | OFF→ON | Approx. 10 ms |
| | ON→OFF | Approx. 10 ms |
| Output circuit diagram | <p>A common number applies to the □ of [COM□].</p> | |


16.10.2 Parts identification and terminal arrangement

FX2N-8EYR

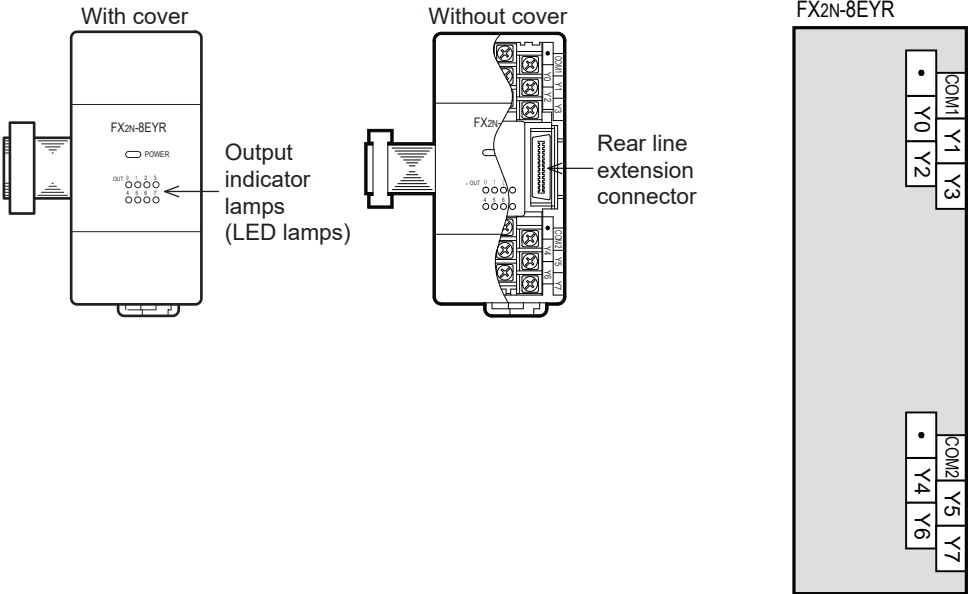


FX2N-16EYR

When an output (Y) number is assigned, 8 points on the upper side will be used for the lower output numbers, and 8 points on the lower side will be used for the higher output numbers.

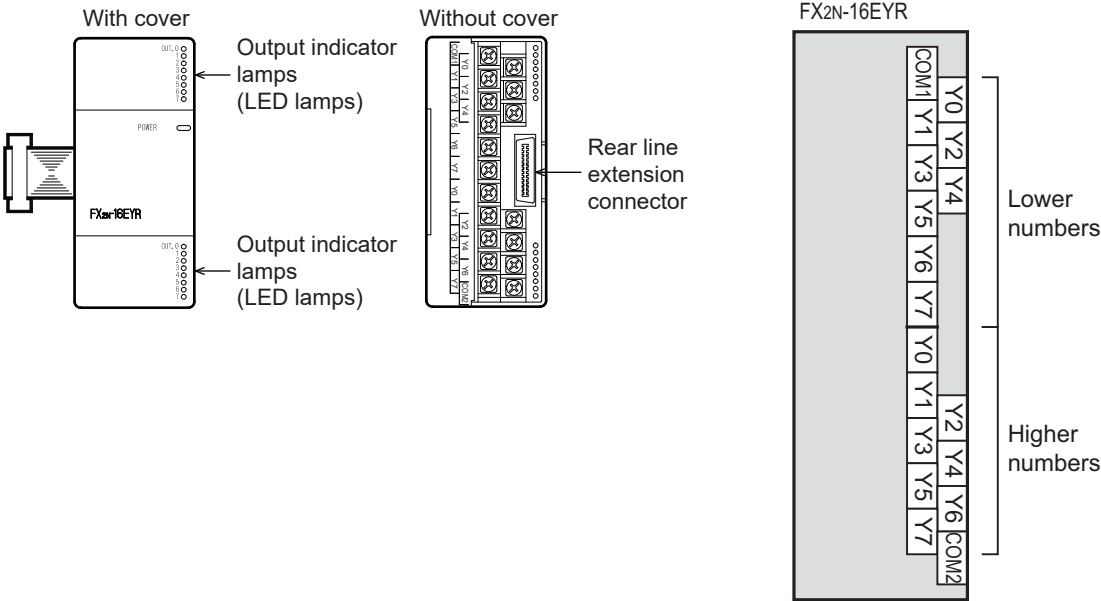


16.10.3 External dimensions

FX2N-8EYR

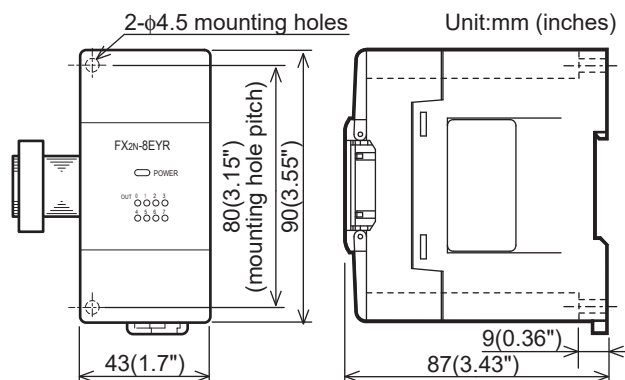

FX2N-16EYR

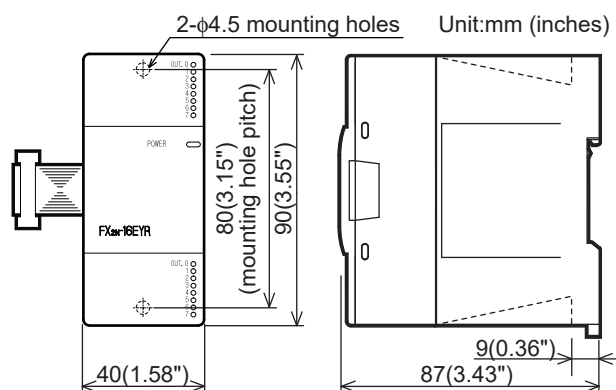

16.11 FX2N-8EYT, FX2N-16EYT and FX2N-16EYT-C (Transistor Output)

16.11.1 Product specifications

The generic specifications are identical to the main unit specifications.

→ Refer to Section 4.1 for generic specifications.

For external wiring, refer to the following chapter.

→ Refer to Chapter 12 for output wiring.


1. Power supply specifications

| Item | FX2N-8EYT | FX2N-16EYT | FX2N-16EYT-C |
|---------------|--|------------|-------------------------------------|
| Product type | FX2N extension block | | FX2N connector type extension block |
| Rated voltage | 24V DC (supplied from main unit and input/output powered extension unit) | | |

2. Weight and Other specifications


| Item | FX2N-8EYT | FX2N-16EYT | FX2N-16EYT-C |
|---------------|--|--------------------------|--------------|
| MASS (Weight) | Approx. 0.2 kg (0.44lbs) | Approx. 0.3 kg (0.66lbs) | |
| Other | <ul style="list-style-type: none">• The extension cable is already connected to the extension block.• Accessories: Label for indication of input/output number• The DIN46277 rail (width: 35 mm (1.38")) or direct installation. | | |

3. Output specifications (Transistor output type)
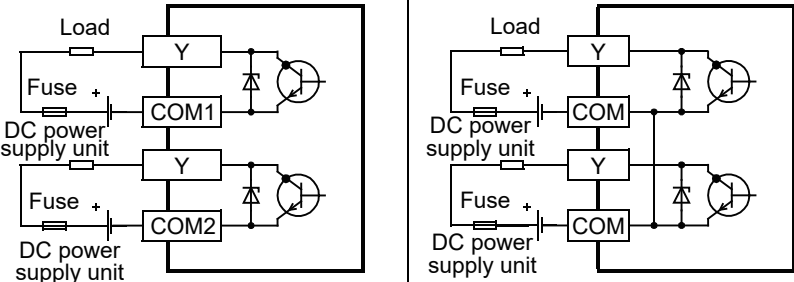
| Item | | FX2N-8EYT | FX2N-16EYT | FX2N-16EYT-C |
|----------------------------------|-----------------|---|------------|--|
| Output points | | 8 points | 16 points | |
| Connection unit | | Vertical terminal block (M3 screws) | | Connector terminal block |
| Output unit/type | | Transistor/sink output | | |
| External power supply | | 5-30 V DC | | |
| Output circuit insulation method | | Photo-coupler insulation | | |
| Indication of output operation | | Activation of the photo-coupler will light the LED indicator lamp on panel. | | |
| Maximum load | Resistance load | 0.5 A/point The total load current per common should be as follows: <ul style="list-style-type: none"> 4 output points/common: 0.8A or less 8 output points/common: 1.6A or less | | 0.3 A/point The total load current per common should be as follows: <ul style="list-style-type: none"> 16 output points/common: 1.6A or less |
| | Inductive load | 12 W/24V DC | | 7.2 W/24V DC |
| Open circuit leakage current | | 0.1 mA/30 A DC | | |
| Minimum load | | — | | |
| Response time | OFF→ON | 0.2 ms or less for 200 mA (at 24V DC) | | |
| | ON→OFF | 0.2 ms or less for 200 mA (at 24V DC) | | |
| Output circuit diagram | |  | | |


16.11.2 Parts identification and terminal arrangement

FX2N-8EYT

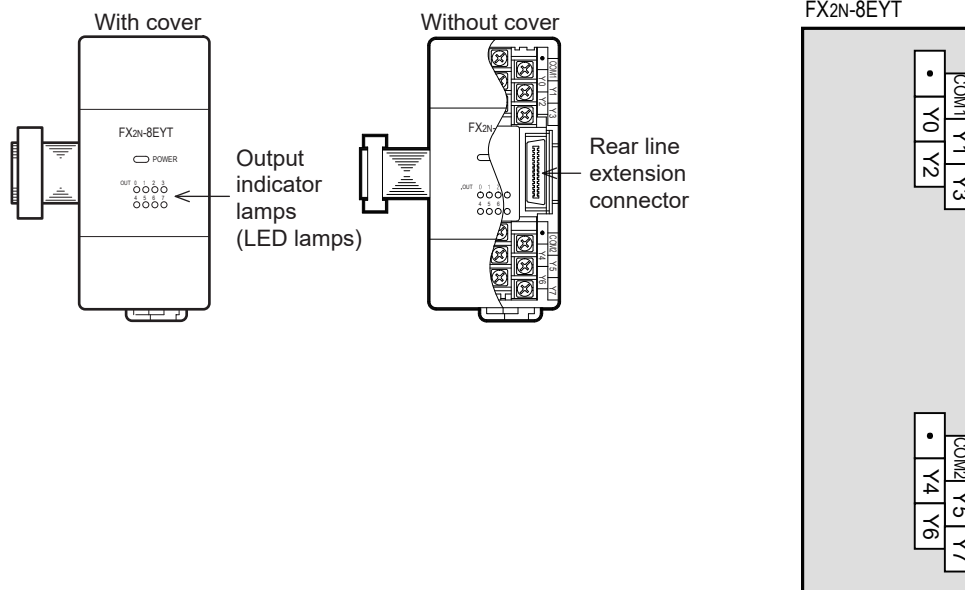


FX2N-16EYT

When an output (Y) number is assigned, 8 points on the upper side will be used for the lower output numbers, and 8 points on the lower side will be used for the higher output numbers.

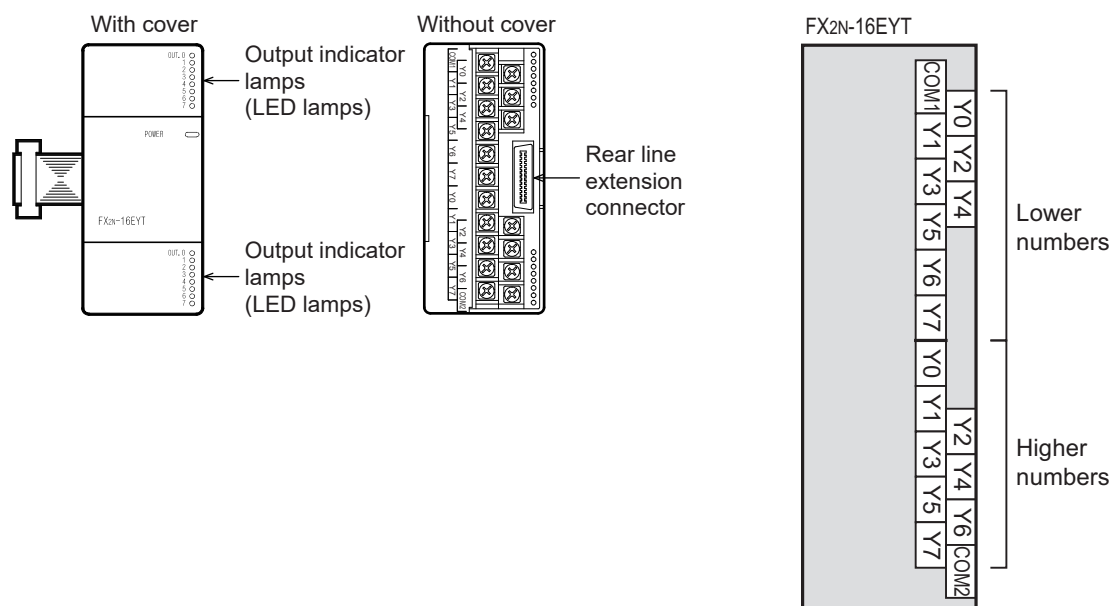


FX2N-16EYT-C

When an output (Y) number is assigned, 8 points on side A will be used for the lower output numbers, and 8 points on side B will be used for the higher output numbers.

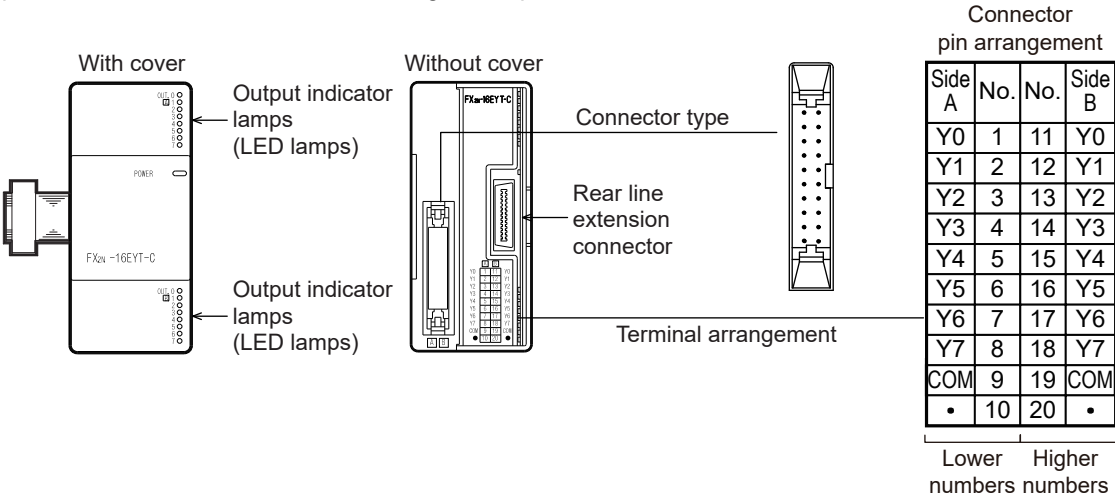


16.11.3 External dimensions


FX2N-8EYT

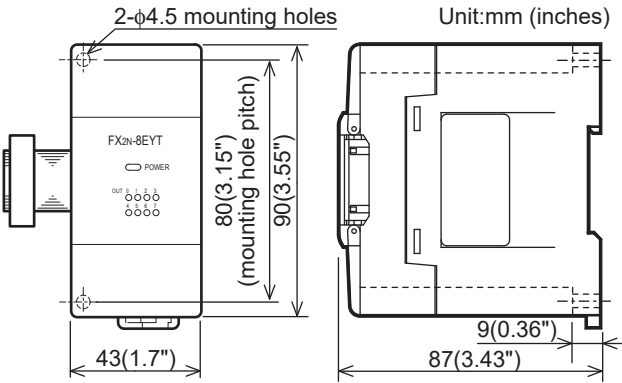


FX2N-16EYT

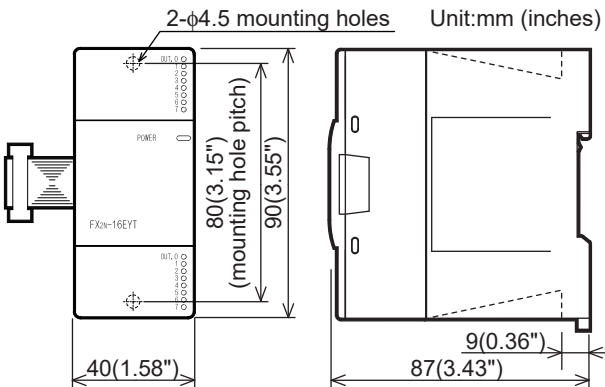

FX_{2N}-16EYT-C

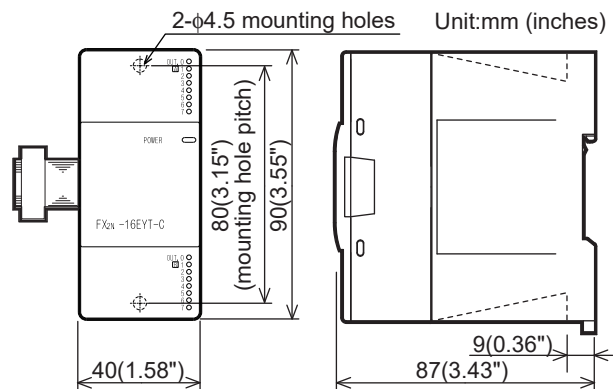

How to connect connector (FX_{2N}-16EYT-C)

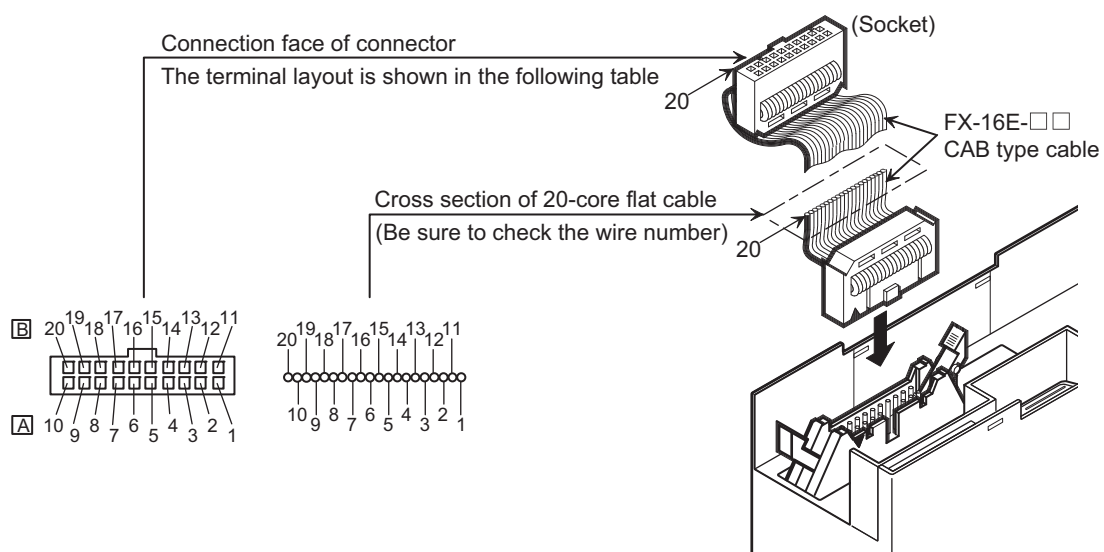

| | | | | | | | | | | |
|--------|---|-----|----|----|----|----|----|----|----|----|
| Side B | • | COM | Y7 | Y6 | Y5 | Y4 | Y3 | Y2 | Y1 | Y0 |
| Side A | • | COM | Y7 | Y6 | Y5 | Y4 | Y3 | Y2 | Y1 | Y0 |

Side B is for the higher input numbers,
and side A is for the lower input numbers.
(Exe.) Side B X050 to X057
Side A X040 to X047

16.12 FX2N-8EYT-H (Transistor Output)

16.12.1 Product specifications

The generic specifications are identical to the main unit specifications.

→ Refer to Section 4.1 for generic specifications.

For external wiring, refer to the following chapter.

→ Refer to Chapter 12 for output wiring.

1. Power supply specifications

| Item | FX2N-8EYT-H |
|---------------|--|
| Product type | FX2N extension block |
| Rated voltage | 24V DC (supplied from main unit and input/output powered extension unit) |


2. Weight and Other specifications

| Item | FX2N-8EYT-H |
|---------------|--|
| MASS (Weight) | Approx. 0.2 kg (0.44lbs) |
| Other | <ul style="list-style-type: none"> The extension cable is already connected to the extension block. Accessories: Label for indication of input/output number The DIN46277 rail (width: 35 mm (1.38")) or direct installation. |


3. Output specifications (Transistor output type)

| Item | FX2N-8EYT-H |
|----------------------------------|--|
| Output points | 8 points |
| Connection unit | Vertical terminal block (M3 screws) |
| Output unit/type | Transistor/sink output |
| External power supply | 5-30 V DC |
| Output circuit insulation method | Photo-coupler insulation |
| Indication of output operation | Activation of the photo-coupler will light the LED indicator lamp on panel. |
| Maximum load | 1A/point The total load current per common should be as follows: |
| | <ul style="list-style-type: none"> 4 output points/common: 2A or less |
| | Inductive load |
| Open circuit leakage current | 24W/24V DC |
| Minimum load | 0.1 mA/30V DC |
| Response time | – |
| | |
| Response time | OFF→ON |
| | 0.2 ms or less/1A |
| Response time | ON→OFF |
| | 0.4 ms or less/1A |
| Output circuit diagram | |

16.12.2 Parts identification and terminal arrangement

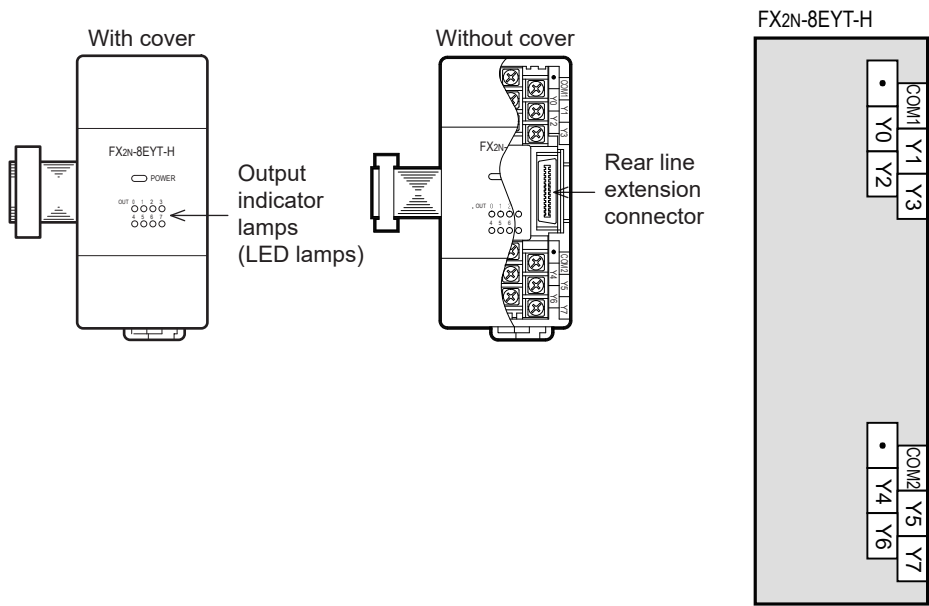

16.12.3 External dimensions

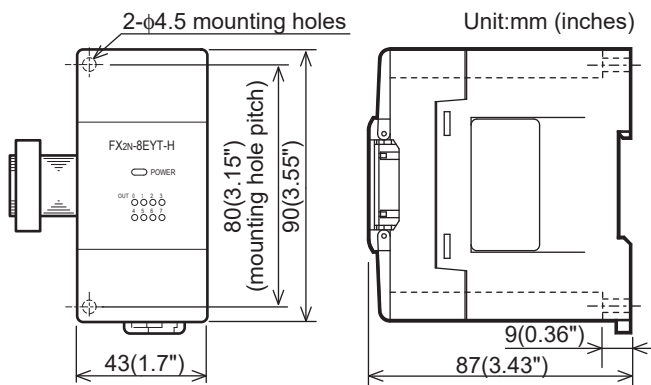

16.13 FX2N-16EYS (Triac Output: 16 Points)

16.13.1 Product specifications

The generic specifications are identical to the main unit specifications.

→ Refer to Section 4.1 for generic specifications.

For external wiring, refer to the following chapter.

→ Refer to Chapter 12 for output wiring.


1. Power supply specifications

| Item | FX2N-16EYS |
|---------------|--|
| Product type | FX2N extension block |
| Rated voltage | 24V DC (supplied from main unit and input/output powered extension unit) |

2. Weight and Other specifications


| Item | FX2N-16EYS |
|---------------|--|
| MASS (Weight) | Approx. 0.3 kg (0.66lbs) |
| Other | <ul style="list-style-type: none"> The extension cable is already connected to the extension block. Accessories: Label for indication of input/output number The DIN46277 rail (width: 35 mm (1.38")) or direct installation. |

3. Output specifications (Triac output type)

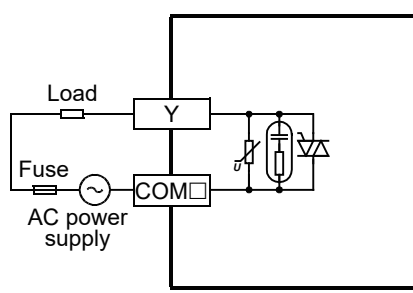
| Item | | FX2N-16EYS |
|----------------------------------|-----------------|---|
| Output points | | 16 points |
| Connection unit | | Vertical terminal block (M3 screws) |
| Output unit | | Triac output (SSR) |
| External power supply | | 85 to 242V AC |
| Output circuit insulation method | | Photo-coupler insulation |
| Indication of output operation | | Activation of the photo-thyristor will light the LED indicator lamp on panel. |
| Maximum load | Resistance load | 0.3 A/point The total load current per common should be as follows: • 8 output points/common: 0.8A or less |
| | Inductive load | 15 VA/100V AC, 30 VA/200V AC |
| Open circuit leakage current | | 1 mA/100V AC, 2 mA/200V AC |
| Minimum load | | 0.4 VA/100V AC, 1.6 VA/200V AC |
| Response time | OFF→ON | 1 ms or less |
| | ON→OFF | 10 ms or less |
| Output circuit diagram | |  <p>A common number applies to the □ of [COM□].</p> |

16.13.2 Parts identification and terminal arrangement

When an output (Y) number is assigned, 8 points on the upper side will be used for the lower output numbers, and 8 points on the lower side will be used for the higher output numbers.

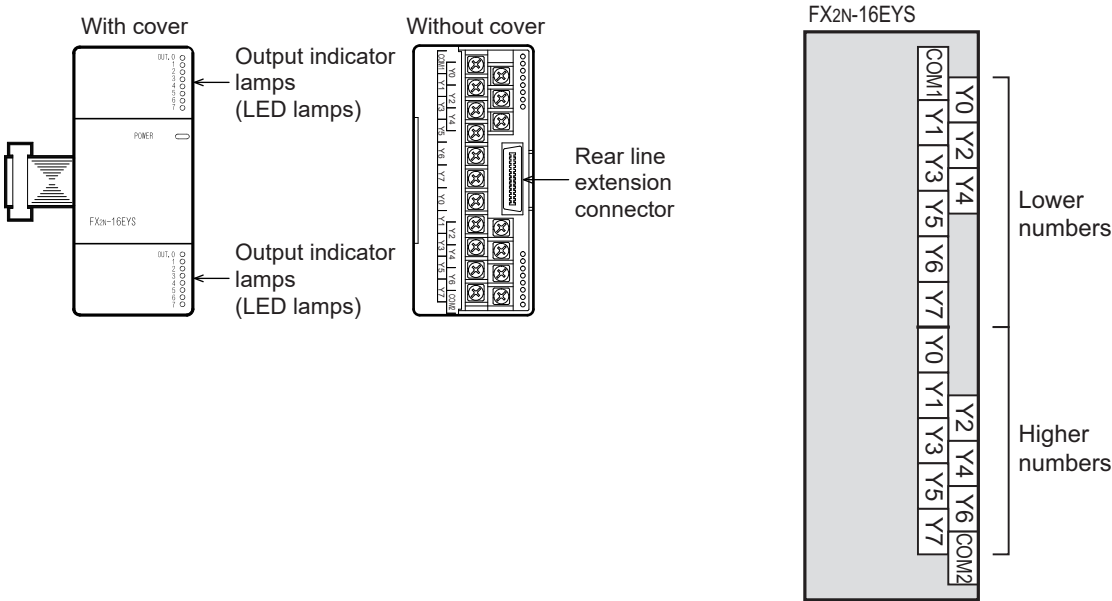

16.13.3 External dimensions

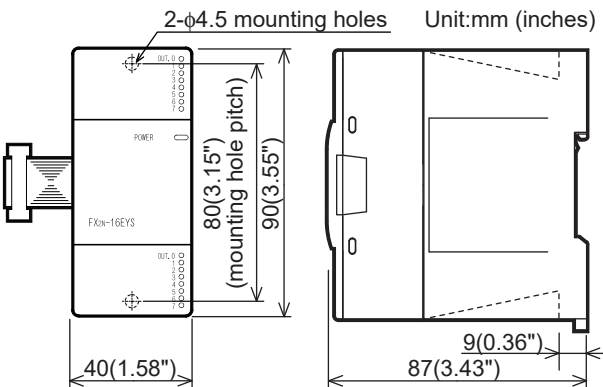

17. FX3U-1PSU-5V (Extension Power Supply Unit)

DESIGN PRECAUTIONS



WARNING

- Make sure to have the following safety circuits outside of the PLC to ensure safe system operation even during external power supply problems or PLC failure.
Otherwise, malfunctions may cause serious accidents.
 - 1) Most importantly, have the following: an emergency stop circuit, a protection circuit, an interlock circuit for opposite movements (such as normal vs. reverse rotation), and an interlock circuit (to prevent damage to the equipment at the upper and lower positioning limits).
 - 2) Note that when the PLC CPU detects an error, such as a watchdog timer error, during self-diagnosis, all outputs are turned off. Also, when an error that cannot be detected by the PLC CPU occurs in an input/output control block, output control may be disabled.
External circuits and mechanisms should be designed to ensure safe machinery operation in such a case.
 - 3) Note that the output current of the 24V DC service power supply varies depending on the model and the absence/presence of extension blocks. If an overload occurs, the voltage automatically drops, inputs in the PLC are disabled, and all outputs are turned off.
External circuits and mechanisms should be designed to ensure safe machinery operation in such a case.
 - 4) Note that when an error occurs in a relay, triac or transistor output device, the output could be held either on or off.
For output signals that may lead to serious accidents, external circuits and mechanisms should be designed to ensure safe machinery operation in such a case.

DESIGN PRECAUTIONS



CAUTION

- Do not bundle the control line together with or lay it close to the main circuit or power line. As a guideline, lay the control line at least 100mm (3.94") or more away from the main circuit or power line.
Noise may cause malfunctions.
- Install module so that excessive force will not be applied to peripheral device connectors.
Failure to do so may result in wire damage/breakage or PLC failure.

SECURITY PRECAUTIONS



WARNING

- To maintain the security (confidentiality, integrity, and availability) of the programmable controller and the system against unauthorized access, denial-of-service (DoS) attacks, computer viruses, and other cyberattacks from unreliable networks and devices via network, take appropriate measures such as firewalls, virtual private networks (VPNs), and antivirus solutions.

17.1 Introduction

When the internal power supplied from the FX3U Series PLC (AC power supply type) is insufficient for powering output extension blocks or special function blocks, the FX3U-1PSU-5V (extension power supply unit) is available. Up to two units of FX3U-1PSU-5V may be connected in one system. Connect extension equipment to the FX3U-1PSU-5V according to the configuration specification limits described in Subsection 17.2.2.

- For the system configuration with FX3U-1PSU-5V, refer to Chapter 6.
- For the mounting, refer to Chapter 8.
- For the wiring, refer to Chapter 9.

11

High-Speed
Counters

12

Output Wiring

13

Wiring for
Various Uses

14

Test Run,
Maintenance,
Troubleshooting

15

Input/Output
Powered
Extension Units

16

Input/Output
Extension
Blocks

17

Extension
Power Supply
Unit

18

Other Extension
Units and
Options

19

Display Module

20

Terminal Block

17.2 Specifications

17.2.1 Generic Specifications

The generic specifications are the same as those for the main unit.


→ For the generic specifications, refer to Section 4.1.

17.2.2 Performance Specifications

| Items | | Specifications |
|--|--------|---|
| Supply voltage | | 100-240V AC |
| Voltage fluctuation range | | -15%, +10% |
| Rated frequency | | 50/60Hz |
| Allowable instantaneous power failure time | | <p>The allowable momentary power failure time depends on the power supply used.</p> <ul style="list-style-type: none"> 100V AC power supply system: The operation is continued to the momentary power failure for 10 or less ms. 200V AC power supply system: The operation is continued to the momentary power failure for 100 or less ms. |
| Rush current | | 30A max. 5ms or less/100V AC, 65A max. 5ms or less/200V AC |
| Power consumption | | 20W Max. |
| Output current (Internal for supply) | 24V DC | 300mA ^{*1} |
| | 5V DC | 1000mA ^{*1} |

*1. The output current is restricted, depending on the ambient temperature. For details, refer to the derating curve in Section 6.7.

17.2.3 External Dimensions

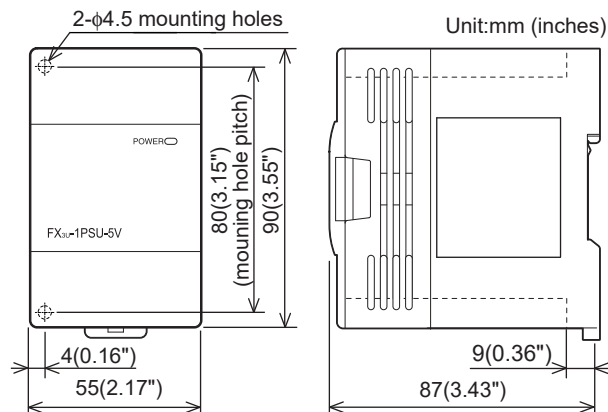

17.3 Extension Power Supply Unit Related Precaution


- Do not use when combining with a DC-power-supply type main unit.
- When connecting an input extension block (including FX2N-8ER-ES/UL, FX2N-8ER) to the FX3U-1PSU-5V, supply the power for it from the 24V DC service power supply of the connected main unit or powered extension unit on the upstream side.
- Grounding and power cables should be positioned to exit the unit from above.
→ For details, refer to Subsection 9.5.4 and 9.5.5.

18. Other Extension Devices and Optional Units (External Dimensions and Terminal Arrangement)

18.1 Special Function Units/Blocks


18.1.1 FX0N-3A

External Dimensions

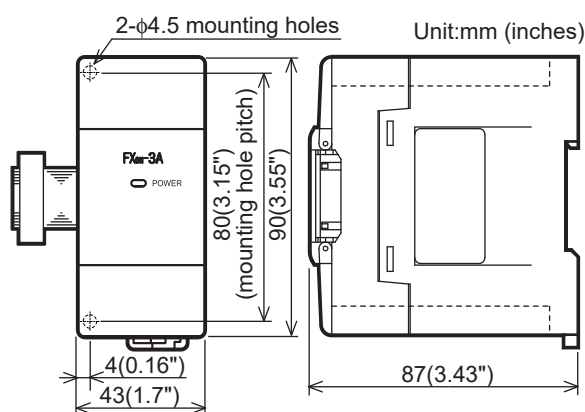


- MASS(Weight): Approx. 0.2kg (0.44lbs)
- Installation: 35 mm (1.38") wide DIN rail or screws
- Accessories: Label for indication of special unit/block number, Manual supplied with product
- Terminal block: M3 screws
- The extension cable is already connected to the extension block

Terminal Layout

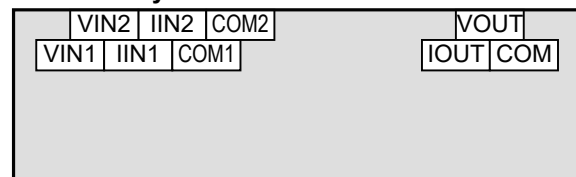


18.1.2 FX2N-2AD

External Dimensions

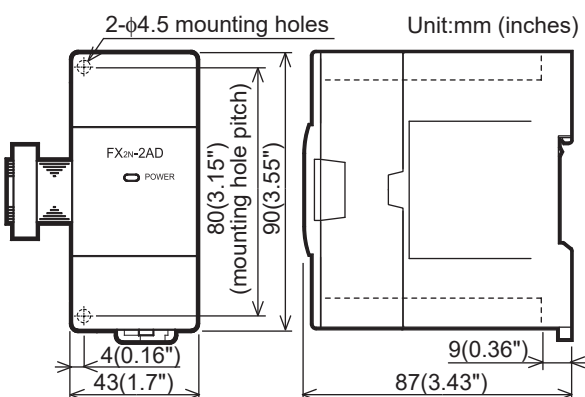


- MASS(Weight): Approx. 0.2kg (0.44lbs)
- Installation: 35 mm (1.38") wide DIN rail or screws
- Accessories: Label for indication of special unit/block number, Manual supplied with product
- Terminal block: M3 screws
- The extension cable is already connected to the extension block

Terminal Layout

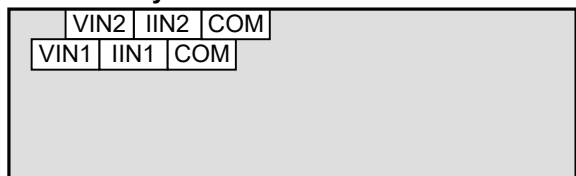


18.1.3 FX2N-2DA

External Dimensions

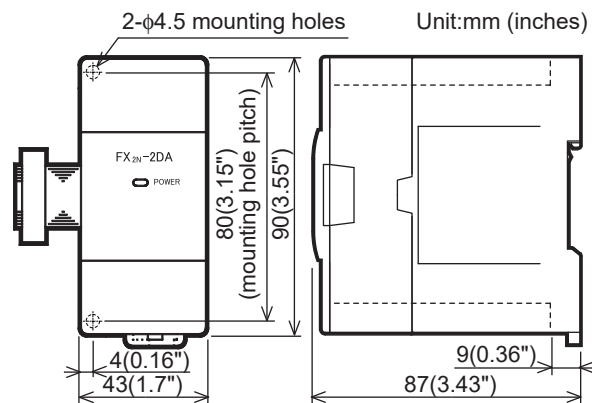


- MASS(Weight): Approx. 0.2kg (0.44lbs)
- Installation: 35 mm (1.38") wide DIN rail or screws
- Accessories: Label for indication of special unit/block number, Manual supplied with product
- Terminal block: M3 screws
- The extension cable is already connected to the extension block

Terminal Layout

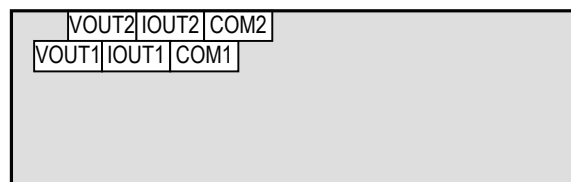


18.1.4 FX3U-4AD

External Dimensions

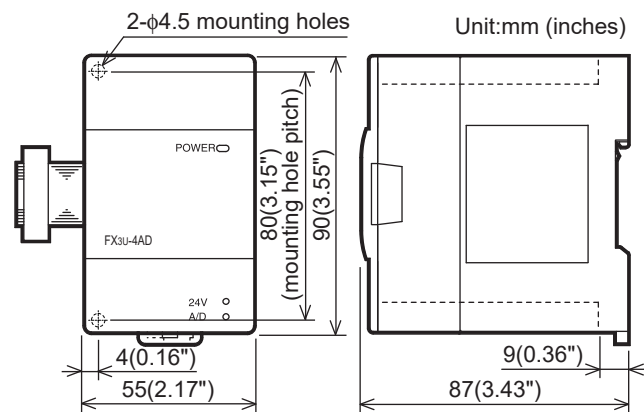


- MASS(Weight): Approx. 0.2kg (0.44lbs)
- Installation: 35 mm (1.38") wide DIN rail or screws
- Accessories: Label for indication of special unit/block number, Dust Proof sheet, Manual supplied with product
- Terminal block: M3 screws
- The extension cable is already connected to the extension block

Terminal Layout

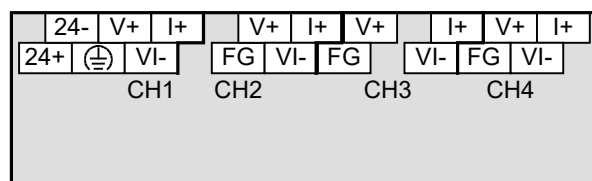


18.1.5 FX3U-4DA

External Dimensions

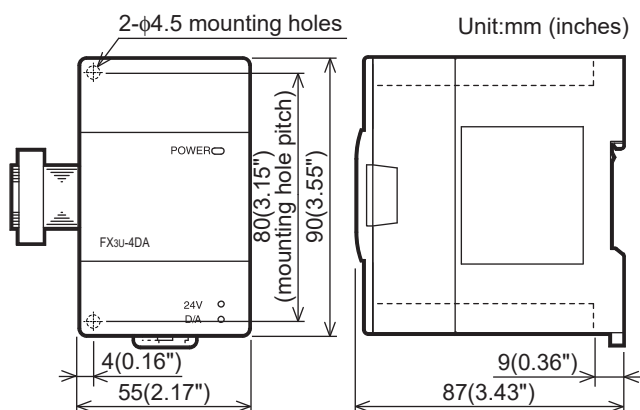


- MASS(Weight): Approx. 0.2kg (0.44lbs)
- Installation: 35 mm (1.38") wide DIN rail or screws
- Accessories: Label for indication of special unit/block number, Dust Proof sheet, Manual supplied with product
- Terminal block: M3 screws
- The extension cable is already connected to the extension block

Terminal Layout

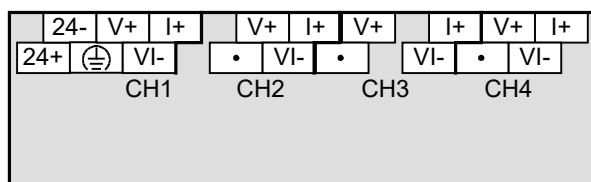


18.1.6 FX2N-4AD

External Dimensions

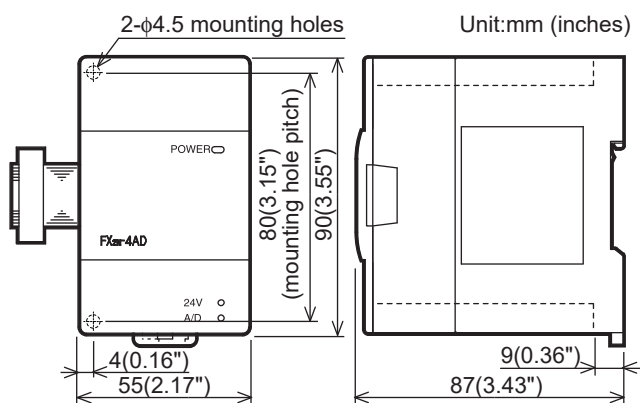


- MASS(Weight): Approx. 0.3kg (0.66lbs)
- Installation: 35 mm (1.38") wide DIN rail or screws
- Accessories: Label for indication of special unit/block number, Manual supplied with product
- Terminal block: M3 screws
- The extension cable is already connected to the extension block

Terminal Layout

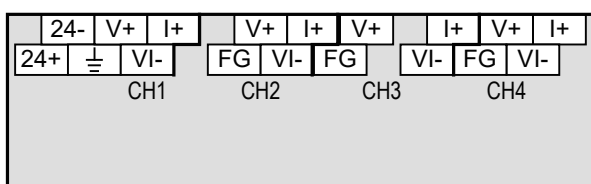


18.1.7 FX2N-4DA

External Dimensions

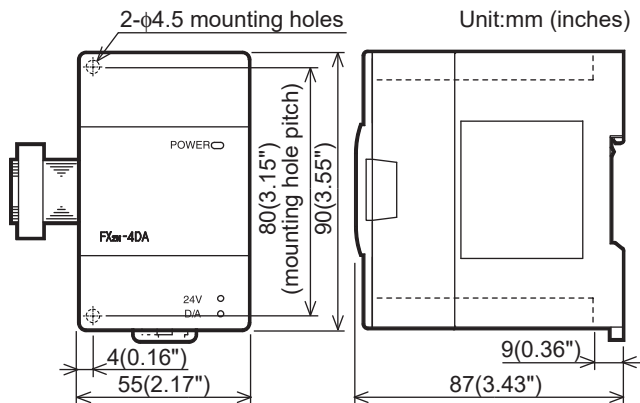


- MASS(Weight): Approx. 0.3kg (0.66lbs)
- Installation: 35 mm (1.38") wide DIN rail or screws
- Accessories: Label for indication of special unit/block number, Manual supplied with product
- Terminal block: M3 screws
- The extension cable is already connected to the extension block

Terminal Layout

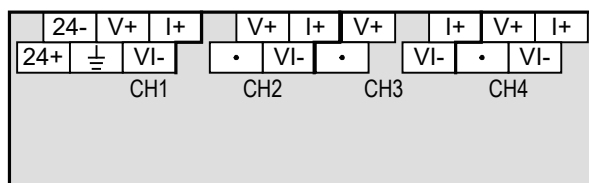


18.1.8 FX2N-4AD-PT

External Dimensions

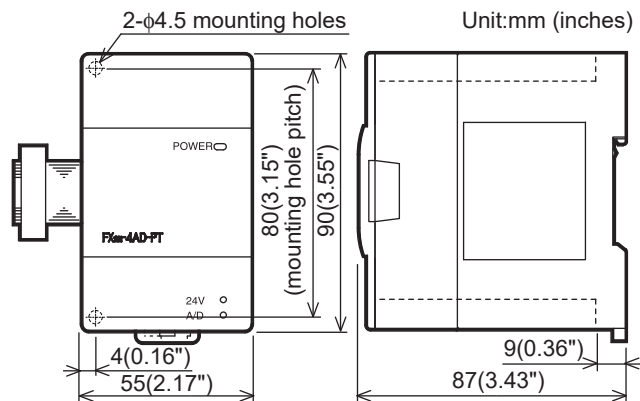


- MASS(Weight): Approx. 0.3kg (0.66lbs)
- Installation: 35 mm (1.38") wide DIN rail or screws
- Accessories: Label for indication of special unit/block number, Manual supplied with product
- Terminal block: M3 screws
- The extension cable is already connected to the extension block

Terminal Layout

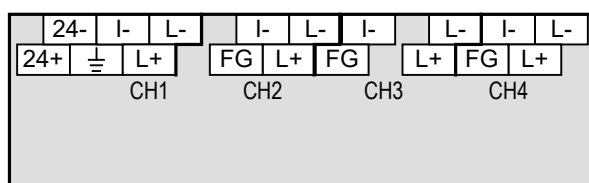


18.1.9 FX2N-4AD-TC

External Dimensions

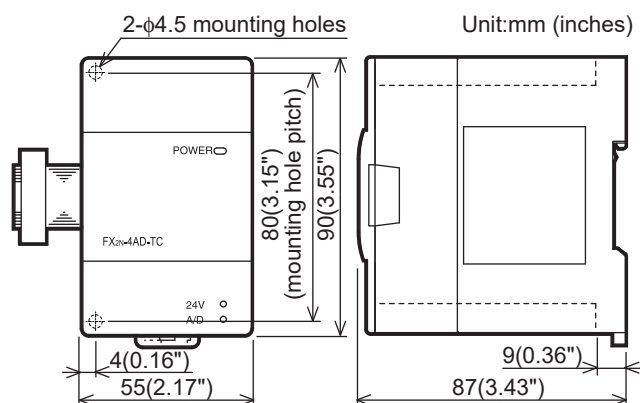


- MASS(Weight): Approx. 0.3kg (0.66lbs)
- Installation: 35 mm (1.38") wide DIN rail or screws
- Accessories: Label for indication of special unit/block number, Manual supplied with product
- Terminal block: M3 screws
- The extension cable is already connected to the extension block

Terminal Layout

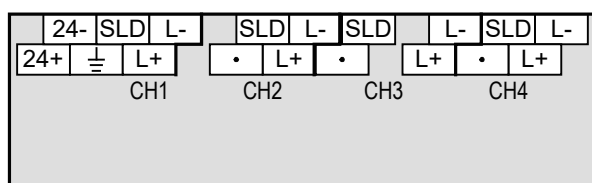


18.1.10 FX2N-5A

External Dimensions

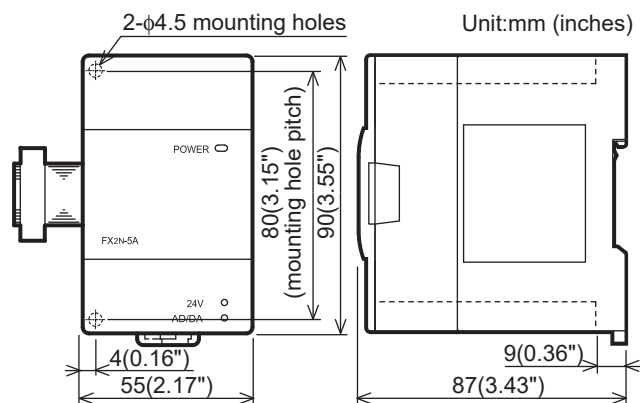

- MASS(Weight): Approx. 0.3kg (0.66lbs)
- Installation: 35 mm (1.38") wide DIN rail or screws
- Accessories: Label for indication of special unit/block number, Manual supplied with product
- Terminal block: M3 screws
- The extension cable is already connected to the extension block

Terminal Layout

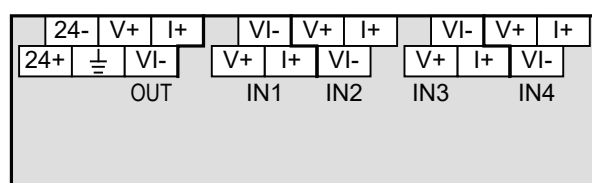

11

High-Speed
Counters

12

Output Wiring

13

Wiring for
Various Uses

14

Test Run,
Maintenance,
Troubleshooting

15

Input/Output
Powered
Extension Units

16

Input/Output
Extension
Blocks

17

Extension
Power Supply
Unit

18

Other Extension
Units and
Options

19


Display Module

20

Terminal Block


18.1.11 FX3U-4LC

External Dimensions

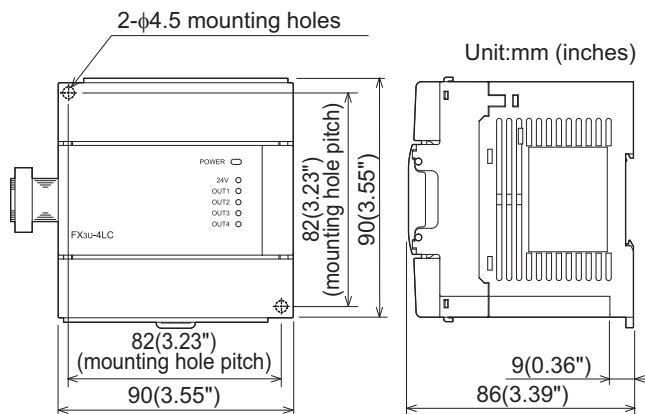


- MASS(Weight): Approx. 0.4kg (0.88lbs)
- Installation: 35mm (1.38") wide DIN rail or screws
- Accessories: Label for indication of special unit/block number,
Dust proof sheet,
Manual supplied with product
- Terminal block: M3 screws
- The extension cable is already connected to the extension block

Terminal Layout

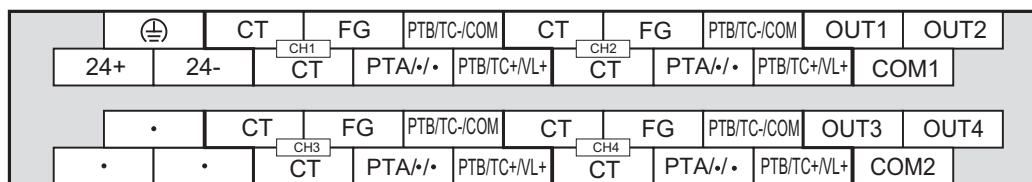


18.1.12 FX2N-2LC

External Dimensions

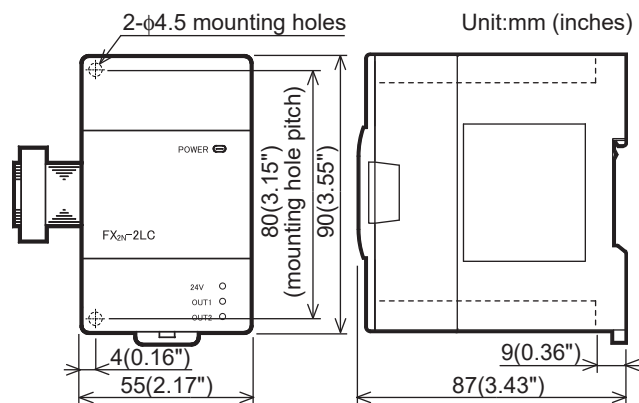


- MASS(Weight): Approx. 0.3kg (0.66lbs)
- Installation: 35mm (1.38") wide DIN rail or screws
- Accessories: Label for indication of special unit/block number,
Manual supplied with product
- Terminal block: M3 screws
- The extension cable is already connected to the extension block

Terminal Layout

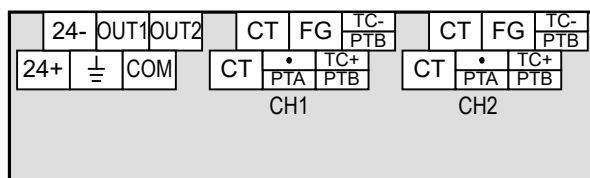


18.1.13 FX2N-8AD

External Dimensions

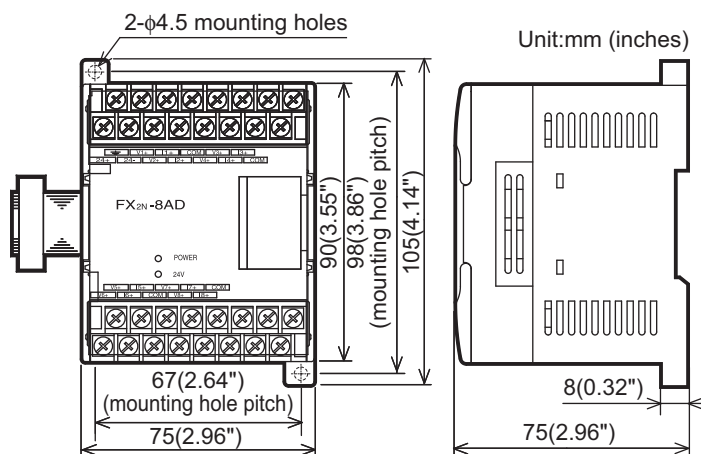


Terminal Layout

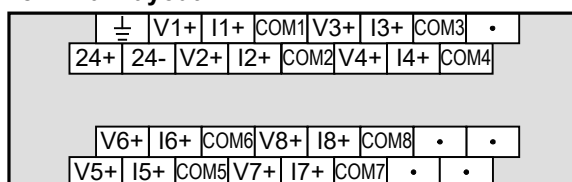


- MASS(Weight): Approx. 0.4kg (0.88lbs)
- Installation: 35mm (1.38") wide DIN rail or screws
- Accessories: Label for indication of special unit/block number, Manual supplied with product
- Terminal block: M3.5 screws
- The extension cable is already connected to the extension block

18.1.14 FX3U-2HC

External Dimensions

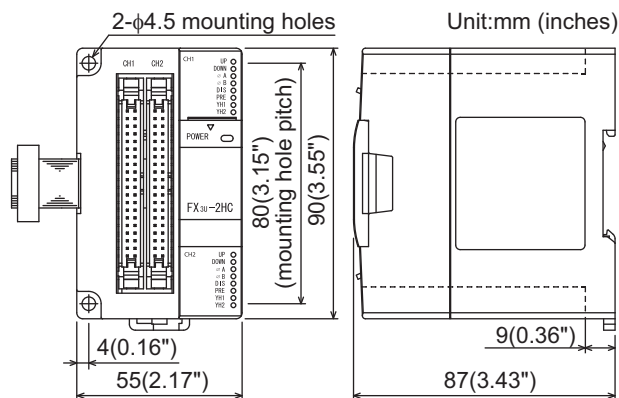


Terminal Layout

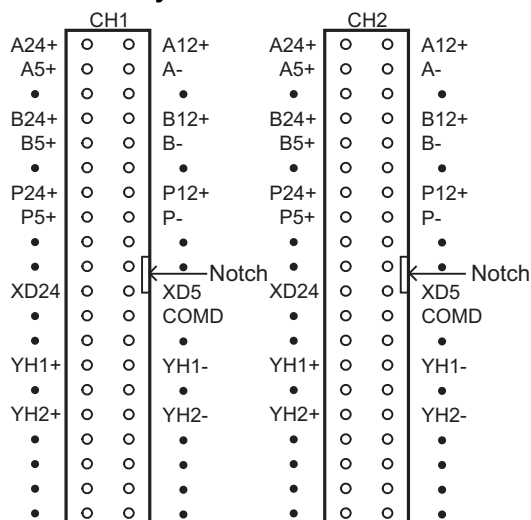

- MASS(Weight): Approx. 0.2kg (0.44lbs)
- Installation: 35mm (1.38") wide DIN rail or screws
- Accessories: Label for indication of special unit/block number, Dust proof sheet, Manual supplied with product
- Connector: 40-Pin
- The extension cable is already connected to the extension block


18.1.15 FX2N-1HC

External Dimensions

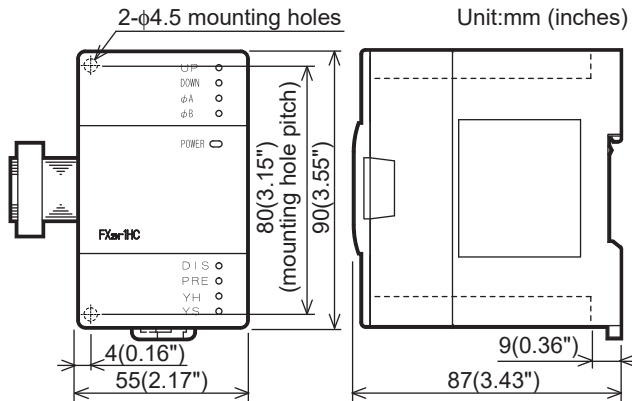


- MASS(Weight): Approx. 0.3kg (0.66lbs)
- Installation: 35mm (1.38") wide DIN rail or screws
- Accessories: Label for indication of special unit/block number, Manual supplied with product
- Terminal block: M3 screws
- The extension cable is already connected to the extension block

Terminal Layout

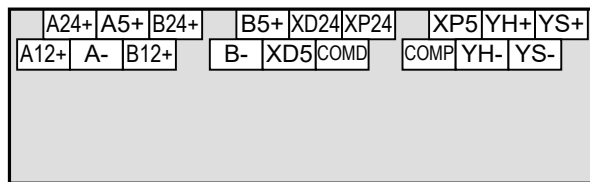


18.1.16 FX3U-20SSC-H

External Dimensions

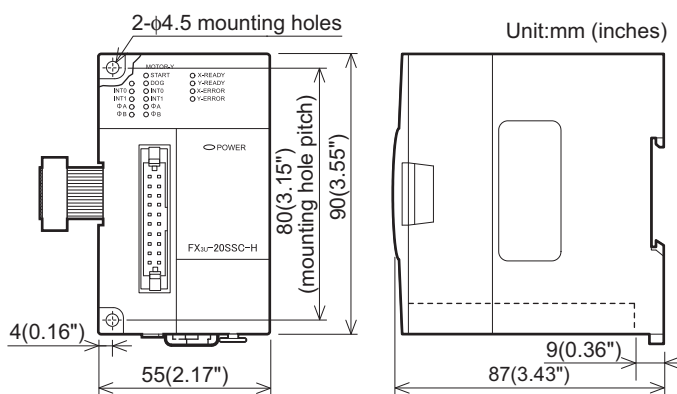


- MASS(Weight): Approx. 0.3kg (0.66lbs)
- Installation: 35mm (1.38") wide DIN rail or screws
- Accessories: Label for indication of special unit/block number, Dust Proof sheet, FX2NC-100MPCB Power supply cable (1m (3'3")), Manual supplied with product
- Connector: 20-Pin
- The extension cable is already connected to the extension block

Terminal Layout

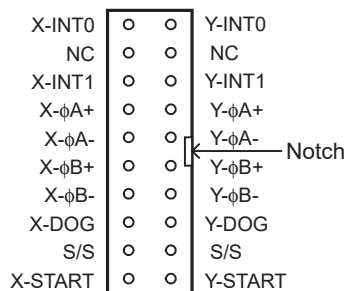


18.1.17 FX3U-1PG

External Dimensions

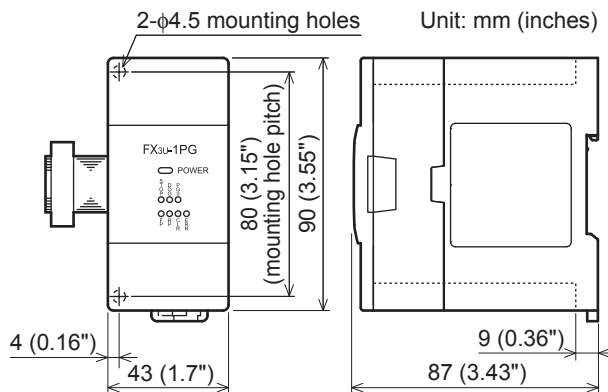


- MASS(Weight): Approx. 0.2kg (0.44lbs)
- Installation: 35mm (1.38") wide DIN rail or screws
- Accessories: Label for indication of special unit/block number, Dust proof protection sheet, Manual supplied with product
- Terminal block: M3 screws
- The extension cable is already connected to the extension block

Terminal Layout

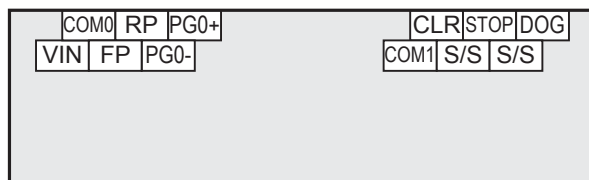


18.1.18 FX2N-1PG(-E)

External Dimensions

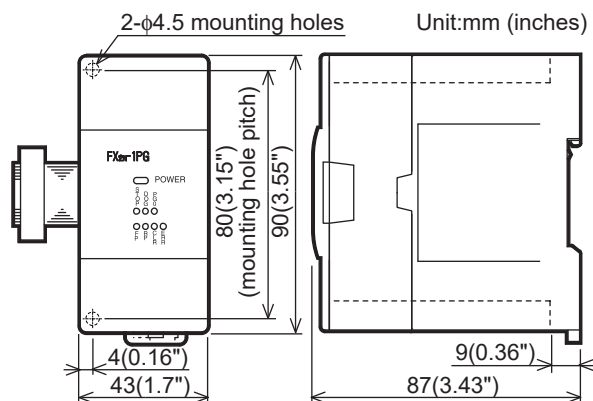


- MASS(Weight): Approx. 0.2kg (0.44lbs)
- Installation: 35mm (1.38") wide DIN rail or screws
- Accessories: Label for indication of special unit/block number, Manual supplied with product
- Terminal block: M3 screws
- The extension cable is already connected to the extension block

Terminal Layout

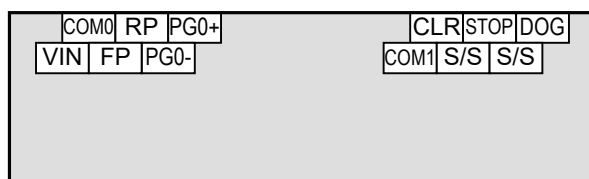

18.1.19 FX_{2N}-10PG

External Dimensions

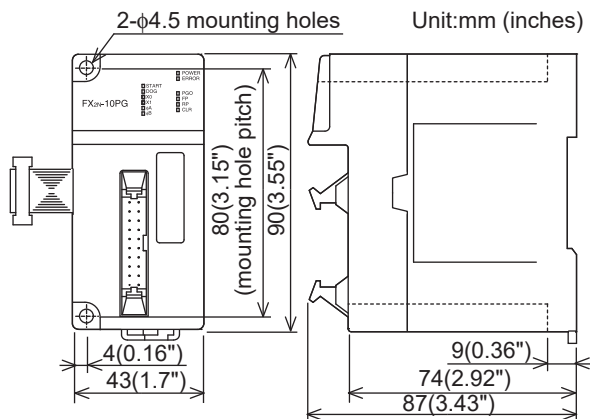

- MASS(Weight): Approx. 0.2kg (0.44lbs)
- Installation: 35mm (1.38") wide DIN rail or screws
- Accessories: Label for indication of special unit/block number, Manual supplied with product
- Connector: 20-Pin
- The extension cable is already connected to the extension block


Terminal Layout

| | | | |
|------|---|---|-------|
| VIN+ | ○ | ○ | VIN- |
| FP+ | ○ | ○ | FP- |
| RP+ | ○ | ○ | RP- |
| PG0+ | ○ | ○ | PG0- |
| CLR+ | ○ | ○ | CLR- |
| φA+ | ○ | ○ | φA- |
| φB+ | ○ | ○ | φB- |
| DOG | ○ | ○ | START |
| S/S | ○ | ○ | S/S |
| X0 | ○ | ○ | X1 |

Notch

18.1.20 FX_{2N}-10GM

External Dimensions

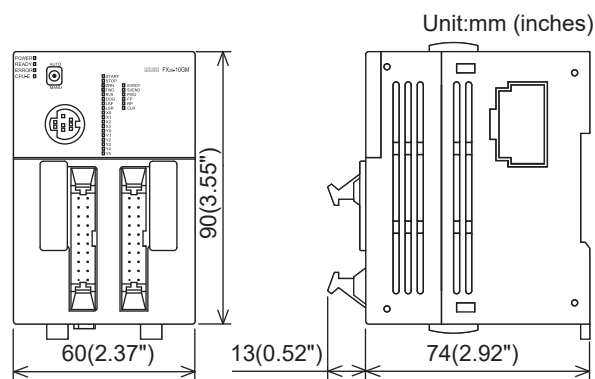

- MASS(Weight): Approx. 0.3kg (0.66lbs)
- Installation: 35mm (1.38") wide DIN rail only can be used for installation
- Accessories: FX_{2N}NC-100MPCB power cable, FX_{2N}-GM-5EC extension cable, label for indication of special unit/block number, Manual supplied with product
- Connector: 20-Pin


Terminal Layout

| CON1 | | | CON2 | | | | |
|-------|---|---|------|-------|---|---|-------|
| START | ○ | ○ | X0 | SVRDY | ○ | ○ | SVEND |
| STOP | ○ | ○ | X1 | COM2 | ○ | ○ | COM2 |
| ZRN | ○ | ○ | X2 | CLR | ○ | ○ | PG0 |
| FWD | ○ | ○ | X3 | COM3 | ○ | ○ | COM4 |
| RVS | ○ | ○ | Y0 | • | ○ | ○ | • |
| DOG | ○ | ○ | Y1 | FP | ○ | ○ | RP |
| LSF | ○ | ○ | Y2 | VIN | ○ | ○ | VIN |
| LSR | ○ | ○ | Y3 | VIN | ○ | ○ | VIN |
| COM1 | ○ | ○ | COM1 | COM5 | ○ | ○ | COM5 |
| Y4 | ○ | ○ | Y5 | ST1 | ○ | ○ | ST2 |

Notch

18.1.21 FX2N-20GM

External Dimensions

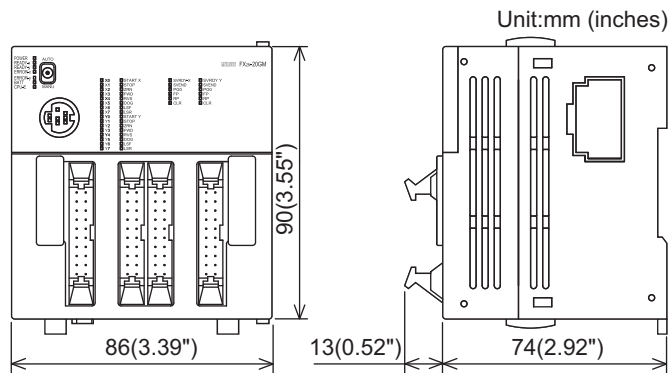


- MASS(Weight): Approx. 0.4kg (0.88lbs)
- Installation: 35mm (1.38") wide DIN rail only can be used for installation
- Accessories: FX2NC-100MPCB power cable, FX2NC-100BPCB power cable, FX2N-GM-5EC extension cable, label for indication of special unit/block number, Manual supplied with product
- Connector: 20-Pin

Terminal Layout


| CON1 | | Y axis | CON2 | X axis | CON3 | (X axis) | CON4 | (Y axis) |
|------|-----|--------|-------|--------|-------|----------|------|----------|
| Y00 | ○ ○ | X00 | START | ○ ○ | START | SVRDY | ○ ○ | SVEND |
| Y01 | ○ ○ | X01 | STOP | ○ ○ | STOP | COM2 | ○ ○ | COM6 |
| Y02 | ○ ○ | X02 | ZRN | ○ ○ | ZRN | CLR | ○ ○ | PG0 |
| Y03 | ○ ○ | X03 | FWD | ○ ○ | FWD | COM3 | ○ ○ | COM8 |
| Y04 | ○ ○ | X04 | RVS | ○ ○ | RVS | • | ○ ○ | • |
| Y05 | ○ ○ | X05 | DOG | ○ ○ | DOG | FP | ○ ○ | RP Notch |
| Y06 | ○ ○ | X06 | LSF | ○ ○ | LSF | VIN | ○ ○ | VIN |
| Y07 | ○ ○ | X07 | LSR | ○ ○ | LSR | VIN | ○ ○ | VIN |
| COM1 | ○ ○ | COM1 | COM1 | ○ ○ | COM1 | COM5 | ○ ○ | COM9 |
| • | ○ ○ | • | • | ○ ○ | • | ST1 | ○ ○ | ST4 |

18.1.22 FX2N-1RM(-E)-SET


External Dimensions

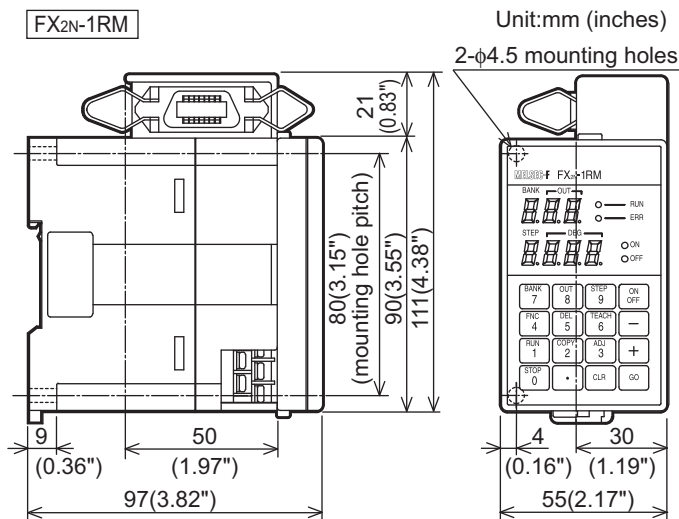

- MASS(Weight): Approx. 0.5kg (1.1lbs)
- Installation: 35mm (1.38") wide DIN rail or screws
- Accessories: FX2N-RS-5CAB signal cable (5m(16'4")), F2-720RSV resolver, extension cable (55mm(2.06")), label for indication of special unit/block number, Manual supplied with product
- Terminal block: M3 screws

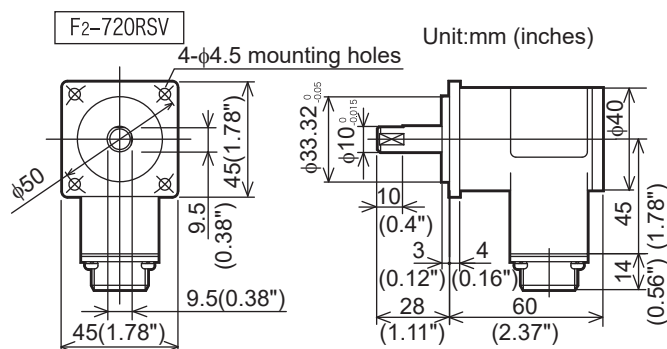


Terminal Layout

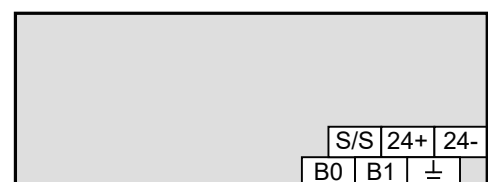


18.1.23 FX_{2N}-232IF

External Dimensions

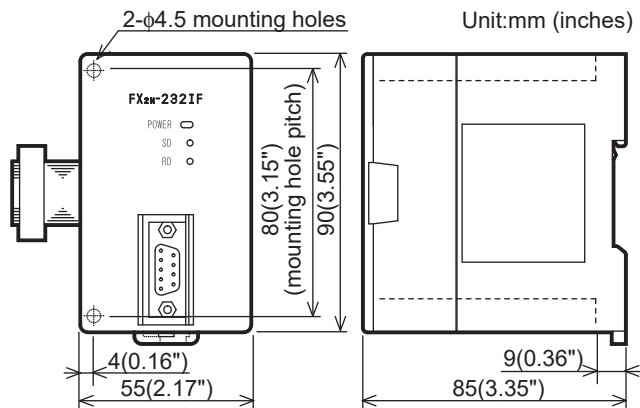

- MASS(Weight): Approx. 0.3kg (0.66lbs)
- Installation: 35mm (1.38") wide DIN rail or screws
- Accessories: Label for indication of special unit/block number, Manual supplied with product
- Connector: RS-232C (D-SUB 9-pin, male)
- The extension cable is already connected to the extension block

Pin Configuration

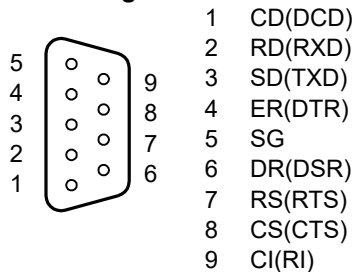


Terminal Layout




18.1.24 FX_{2N}-32ASI-M

External Dimensions

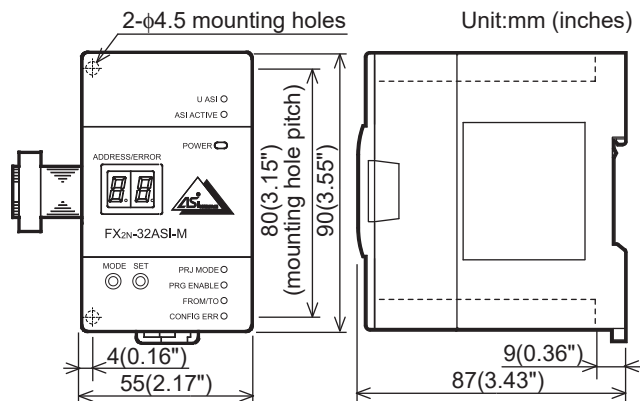


- MASS(Weight): Approx. 0.2kg (0.44lbs)
- Installation: 35mm (1.38") wide DIN rail or screws
- Accessories: Label for indication of special unit/block number, Manual supplied with product
- Terminal block: M3 screws
- The extension cable is already connected to the extension block

Terminal Layout

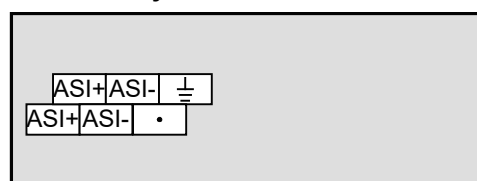


18.1.25 FX3U-128ASL-M

External Dimensions

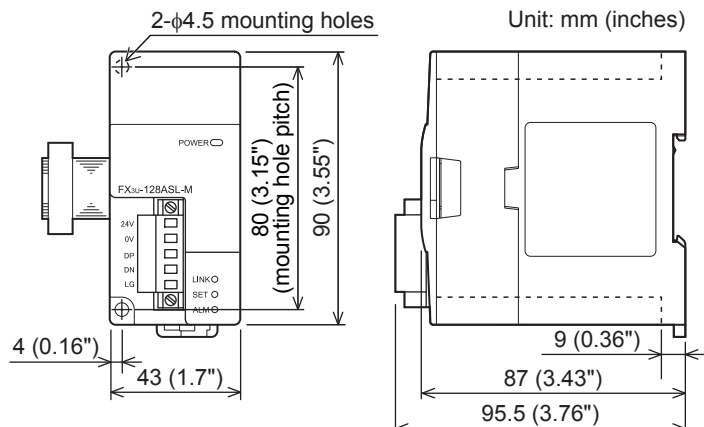


- MASS(Weight): Approx. 0.2kg (0.44lbs)
- Installation: 35mm (1.38") wide DIN rail or screws
- Accessories: Label for indication of special unit/block number, Dust proof protection sheet, Manual supplied with product
- The extension cable is already connected to the extension block

Terminal Layout

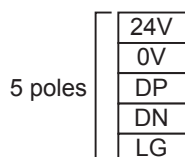


18.1.26 FX3U-64DP-M

External Dimensions

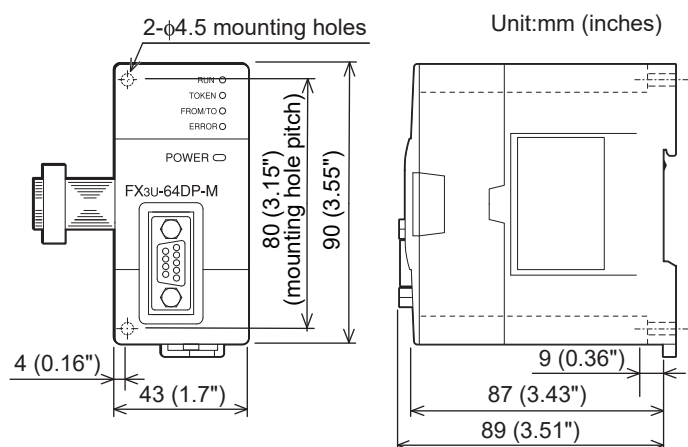

- MASS(Weight): Approx. 0.2kg (0.44lbs)
- Installation: 35mm (1.38") wide DIN rail or screws
- Accessories: Label for indication of special unit/block number, Dust proof protection sheet, Manual supplied with product
- Connector: PROFIBUS-DP interface connector (D-SUB 9-pin, female)
- The extension cable is already connected to the extension block

Pin Configuration

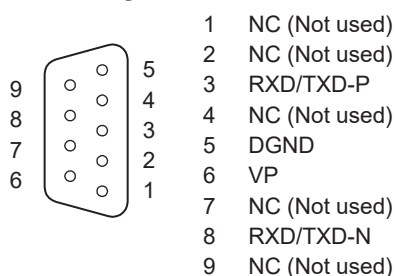

11

High-Speed
Counters

12

Output Wiring

13

Wiring for
Various Uses

14

Test Run,
Maintenance,
Troubleshooting

15

Input/Output
Powered
Extension Units

16

Input/Output
Extension
Blocks

17

Extension
Power Supply
Unit

18

Other Extension
Units and
Options

19


Display Module

20

Terminal Block


18.1.27 FX3U-32DP

External Dimensions

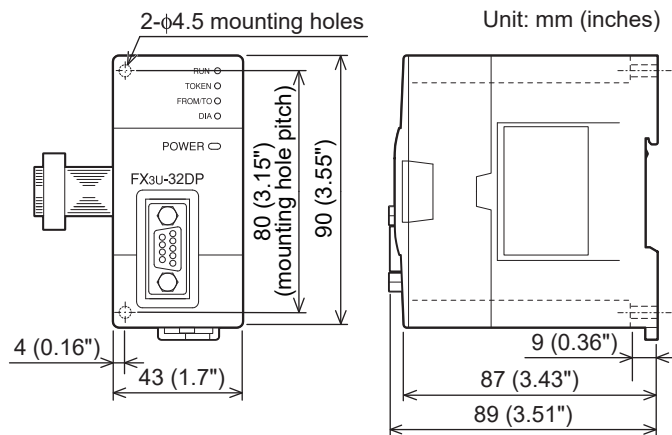


- MASS(Weight):** Approx. 0.2kg (0.44lbs)
- Installation:** 35mm (1.38") wide DIN rail or screws
- Accessories:** GSD file (CD-ROM), Label for indication of special unit/block number, Dust proof protection sheet, Manual supplied with product
- Connector:** PROFIBUS-DP interface connector (D-SUB 9-pin, female)
- The extension cable is already connected to the extension block

Pin Configuration

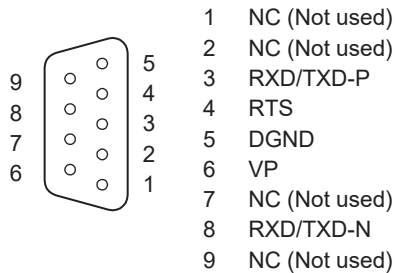

18.1.28 FX2N-64CL-M


External Dimensions

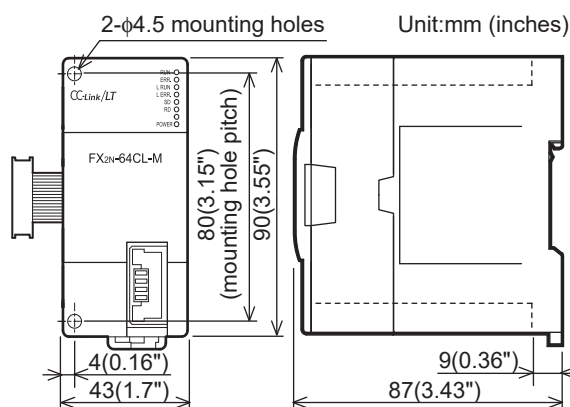


- MASS(Weight):** Approx. 0.15kg (0.33lbs)
- Installation:** 35mm (1.38") wide DIN rail or screws
- Accessories:** Label for indication of special unit/block number, Manual supplied with product
- The connector for CC-Link/LT interface is on the front face of the product
- The extension cable is already connected to the extension block

18.1.29 FX3U-16CCL-M

External Dimensions

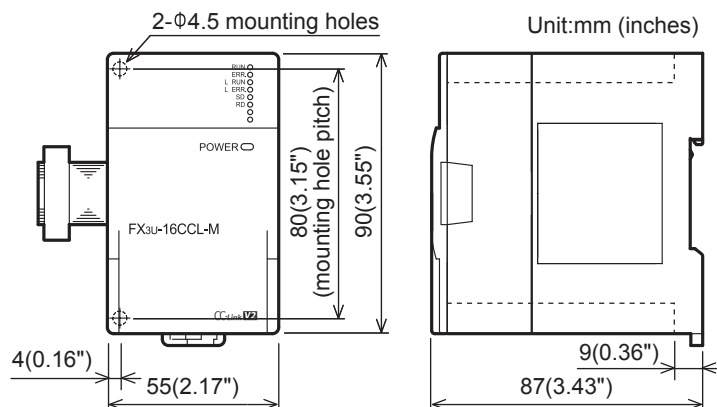


Terminal Layout

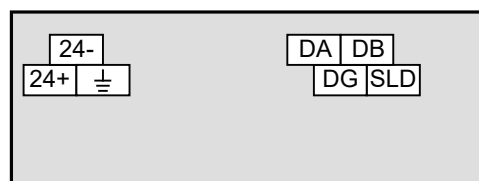


- MASS(Weight): Approx. 0.3kg (0.66lbs)
- Installation: 35mm (1.38") wide DIN rail or screws
- Accessories: Label for indication of special unit/block number, Terminal resistor: 2 resistors for CC-Link dedicated cable/2 resistors for CC-Link dedicated high-performance cable, Dust proof protection sheet, Manual supplied with product
- Terminal block: M3 screws for power supply terminal, CC-Link connection terminal, M3.5 screws for CC-Link connection terminal block mounting screws (black)
- The extension cable is already connected to the extension block

18.1.30 FX2N-16CCL-M

External Dimensions

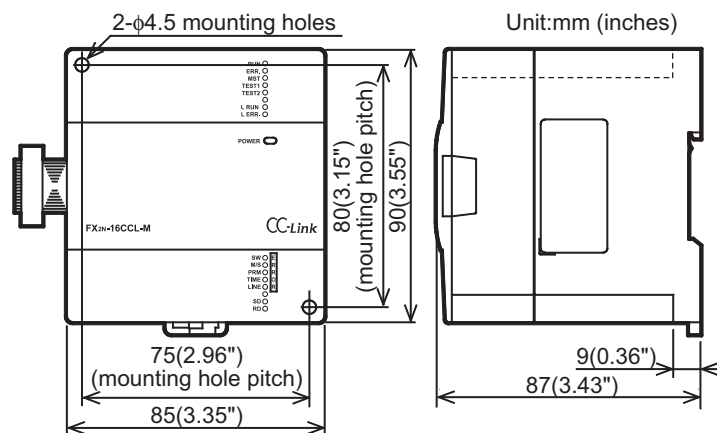


Terminal Layout

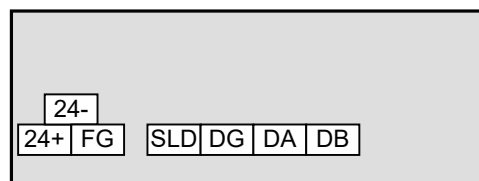

- MASS(Weight): Approx. 0.4kg (0.88lbs)
- Installation: 35mm (1.38") wide DIN rail or screws
- Accessories: Label for indication of special unit/block number, Terminal resistor: 2 resistors for CC-Link dedicated cable/2 resistors for CC-Link dedicated high-performance cable, Manual supplied with product
- Terminal block: M3 screw for power supply terminal, M3.5 screw for signal terminal
- The extension cable is already connected to the extension block


18.1.31 FX2N-32CCL

External Dimensions

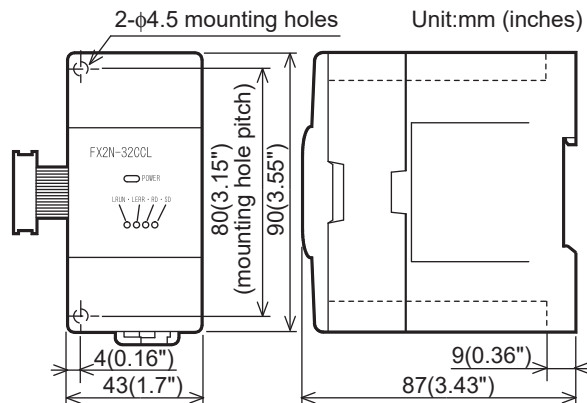


- MASS(Weight): Approx. 0.2kg (0.44lbs)
- Installation: 35mm (1.38") wide DIN rail or screws
- Accessories: Label for indication of special unit/block number, Manual supplied with product
- Terminal block: M3 screws
- The extension cable is already connected to the extension block

Terminal Layout

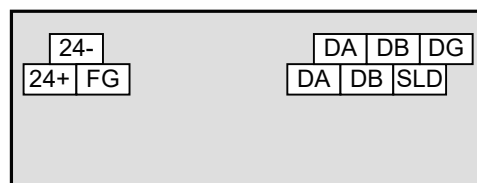


18.1.32 FX3U-64CCL

External Dimensions

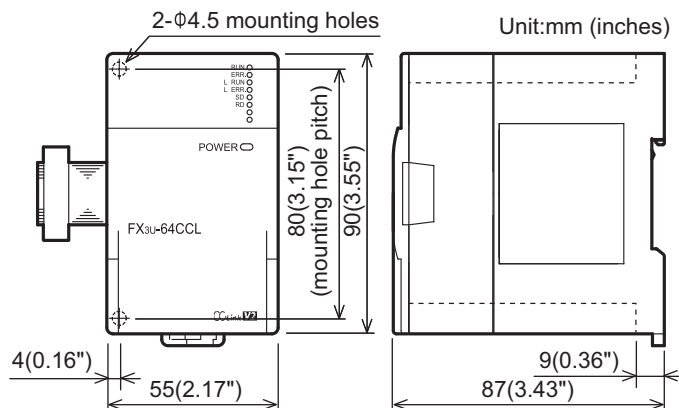


- MASS(Weight): Approx. 0.3kg (0.66lbs)
- Installation: 35mm (1.38") wide DIN rail or screws
- Accessories: Label for indication of special unit/block number, Dust Proof sheet, Manual supplied with product
- Terminal block: M3 screws for power supply terminal, CC-Link connection terminal, M3.5 screws for CC-Link connection terminal block mounting screws (black)
- The extension cable is already connected to the extension block

Terminal Layout

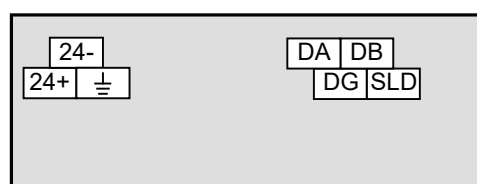

18.1.33 FX2N-16LNK-M

External Dimensions

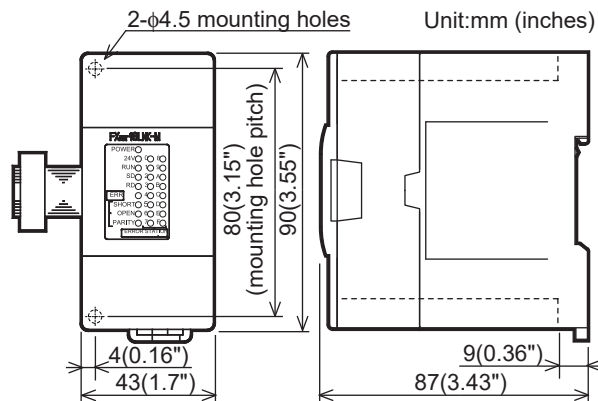

- MASS(Weight): Approx. 0.5kg (1.1lbs)
- Installation: 35mm (1.38") wide DIN rail or screws
- Accessories: Label for indication of special unit/block number, Manual supplied with product
- Terminal block: M3 screws
- The extension cable is already connected to the extension block


Terminal Layout



18.2 Extension Power Supply Unit

18.2.1 FX3U-1PSU-5V

External Dimensions

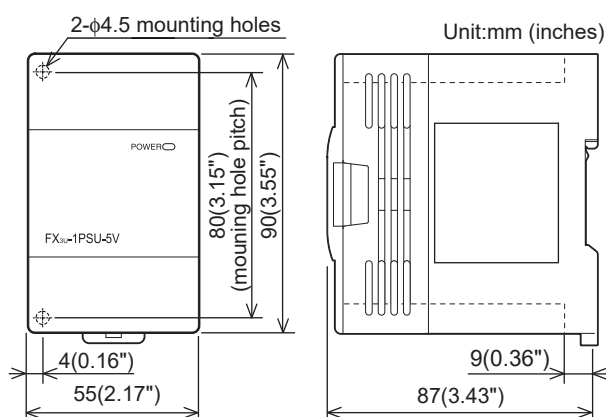

- MASS(Weight): Approx. 0.3kg (0.66lbs)
- Installation: 35mm (1.38") wide DIN rail or screws
- Accessories: Extension cable (55mm (2.16")), Dust Proof sheet, Manual supplied with product
- Terminal block: M3 screws


Terminal Layout



18.3 Special Adapters

18.3.1 FX3U-4AD-ADP


External Dimensions, Terminal Layout

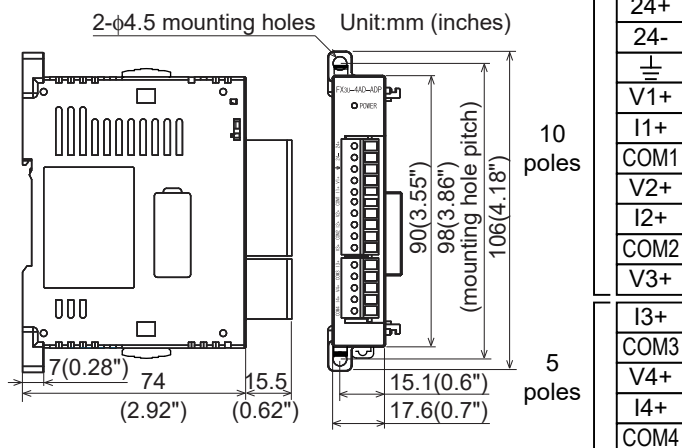

- MASS(Weight): Approx. 0.1kg (0.22lbs)
- Installation: 35 mm (1.38") wide DIN rail or screws
- Accessories: Manual supplied with product
- Terminal block: European type

18.3.2 FX3U-4DA-ADP


External Dimensions, Terminal Layout

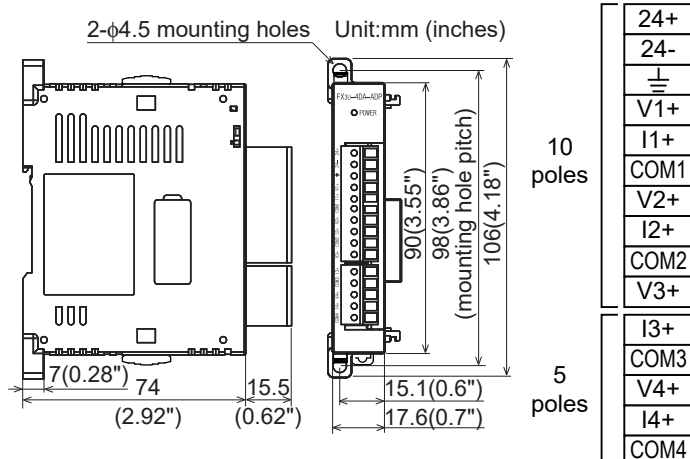

- MASS(Weight): Approx. 0.1kg (0.22lbs)
- Installation: 35 mm (1.38") wide DIN rail or screws
- Accessories: Manual supplied with product
- Terminal block: European type

18.3.3 FX3U-3A-ADP


External Dimensions, Terminal Layout

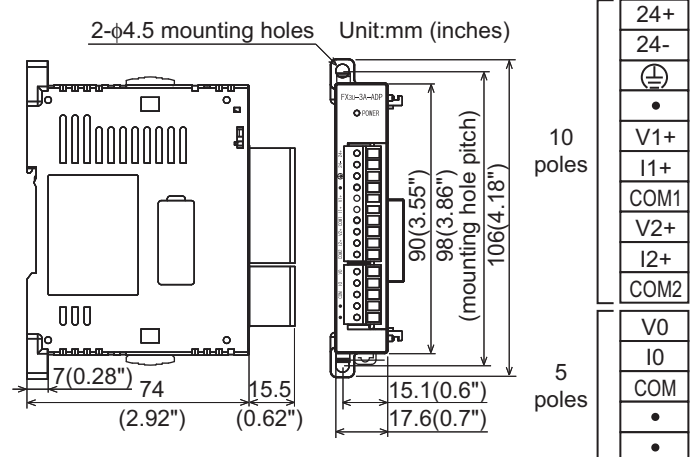

- MASS(Weight): Approx. 0.1kg (0.22lbs)
- Installation: 35 mm (1.38") wide DIN rail or screws
- Accessories: Manual supplied with product
- Terminal block: European type

18.3.4 FX3U-4AD-PT(W)-ADP


External Dimensions, Terminal Layout

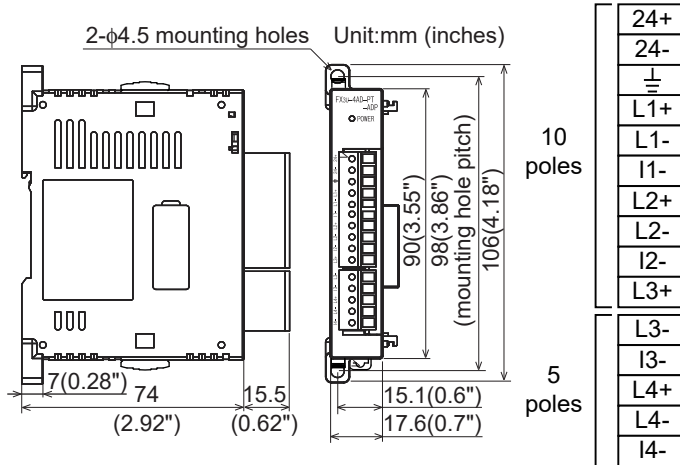

- MASS(Weight): Approx. 0.1kg (0.22lbs)
- Installation: 35 mm (1.38") wide DIN rail or screws
- Accessories: Manual supplied with product
- Terminal block: European type

18.3.5 FX3U-4AD-PNK-ADP


External Dimensions, Terminal Layout

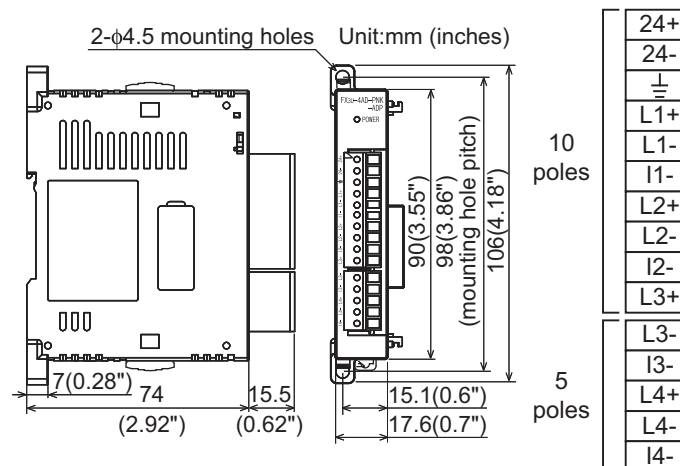

- MASS(Weight): Approx. 0.1kg (0.22lbs)
- Installation: 35 mm (1.38") wide DIN rail or screws
- Accessories: Manual supplied with product
- Terminal block: European type

18.3.6 FX3U-4AD-TC-ADP


External Dimensions, Terminal Layout

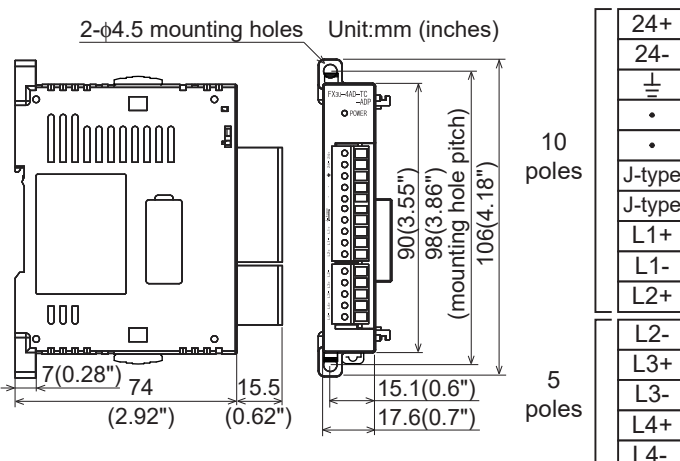

- MASS(Weight): Approx. 0.1kg (0.22lbs)
- Installation: 35 mm (1.38") wide DIN rail or screws
- Accessories: Manual supplied with product
- Terminal block: European type


18.3.7 FX3U-232ADP(-MB)

External Dimensions

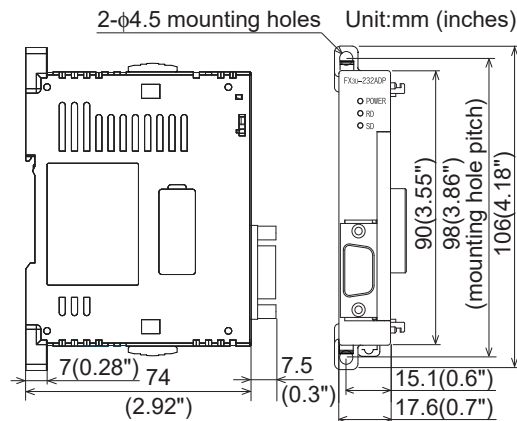


- MASS(Weight): Approx. 80g (0.18lbs)
- Installation: 35 mm (1.38") wide DIN rail or screws
- Accessories: Manual supplied with product
- Connector: RS-232C (D-SUB 9-pin, male)

Pin Configuration

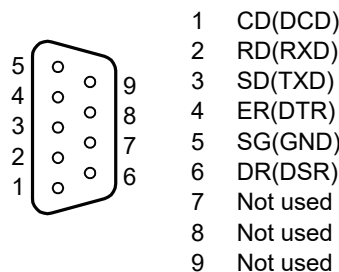


18.3.8 FX3U-485ADP(-MB)

External Dimensions

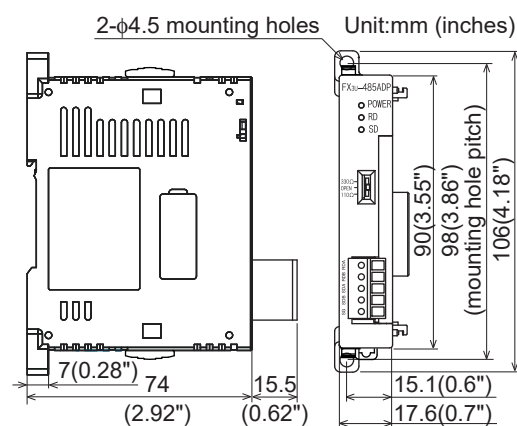


- MASS(Weight): Approx. 80g (0.18lbs)
- Installation: 35 mm (1.38") wide DIN rail or screws
- Accessories: Label for indication of link station number, Manual supplied with product
- Terminal block: European type
- Terminal resistance: 330Ω/110Ω, built-in

Terminal Layout

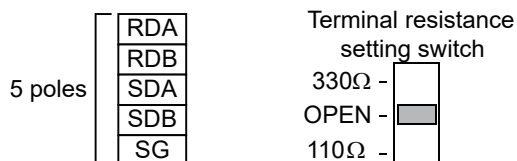


18.3.9 FX3U-ENET-ADP

External Dimensions

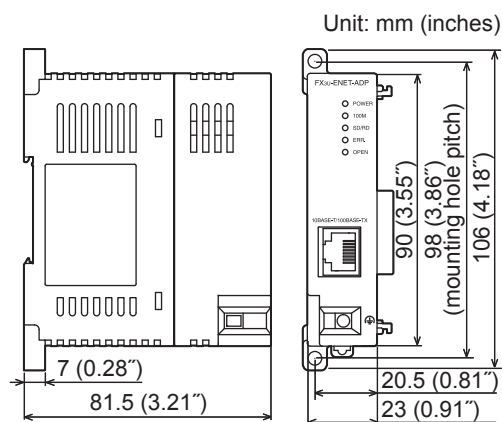


Pin Configuration

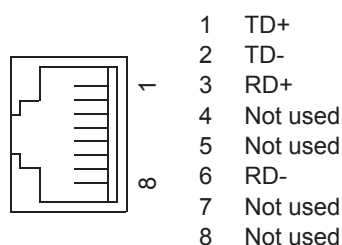

- MASS (Weight): Approx. 0.1 kg (0.22lbs)
- Installation: DIN rail of 35 mm (1.38") in width or screws
- Accessories: Manual supplied with product
- Connector: 10BASE-T/100BASE-TX (RJ45)
- Terminal block: External ground terminal (M2.5 terminal block screw)

18.3.10 FX3U-CF-ADP


External Dimensions, Terminal Layout

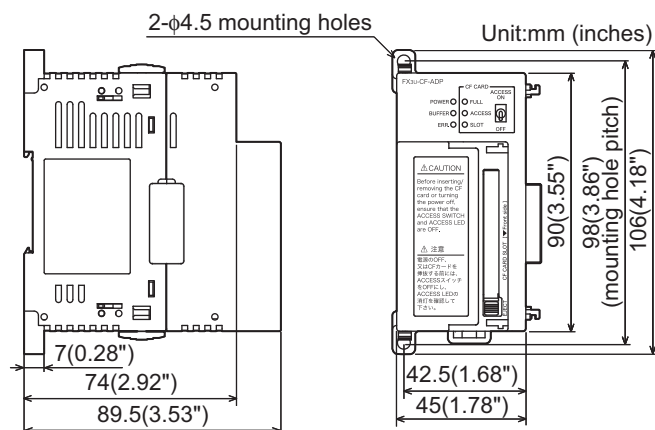

- MASS(Weight): Approx. 0.3kg (0.66lbs) (CF card not attached)
- Installation: 35 mm (1.38") wide DIN rail or screws
- Accessories: FX2NC-100MPCB Power supply cable [1m(3'3")]
Dust proof protection sheet
Manual supplied with product

18.3.11 FX3U-4HSX-ADP


External Dimensions, Terminal Layout

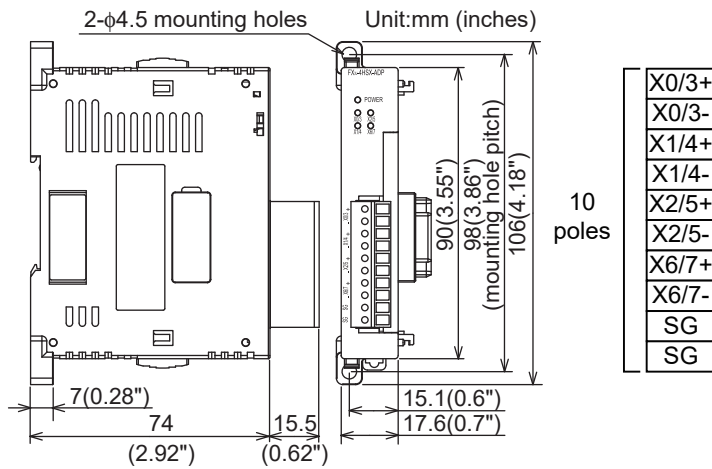

- MASS(Weight): Approx. 80g (0.18lbs)
- Installation: 35 mm (1.38") wide DIN rail or screws
- Accessories: Manual supplied with product
- Terminal block: European type

18.3.12 FX3U-2HSY-ADP

External Dimensions, Terminal Layout

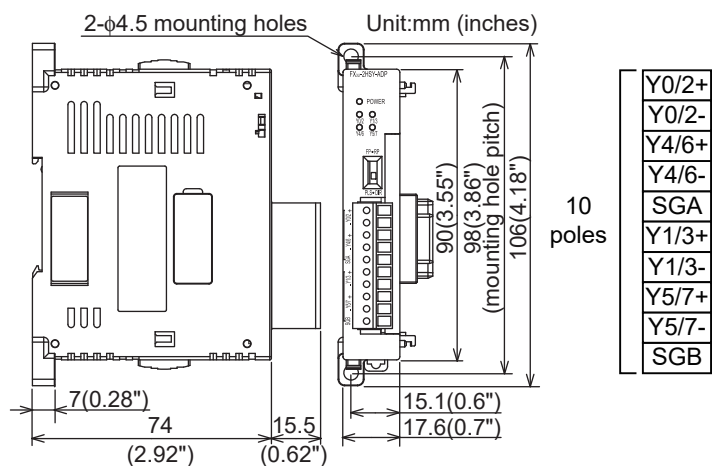


- MASS(Weight): Approx. 80g (0.18lbs)
- Installation: 35 mm (1.38") wide DIN rail or screws
- Accessories: Manual supplied with product
- Terminal block: European type
- Switch: Output form switching between PLS•EDIR and FP•ERP

18.4 Expansion Board

18.4.1 FX3U-USB-BD


External Dimensions

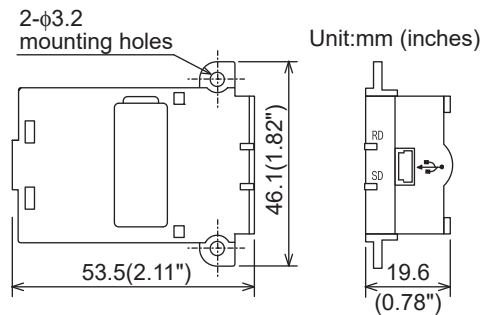

- MASS(Weight): Approx. 20g (0.05lbs)
- Accessories: Two M3 tapping screws (for installation of board), USB cable (3m(9'10")), Manual supplied with product
- Connector: USB Mini-B connector


18.4.2 FX3U-232-BD

External Dimensions

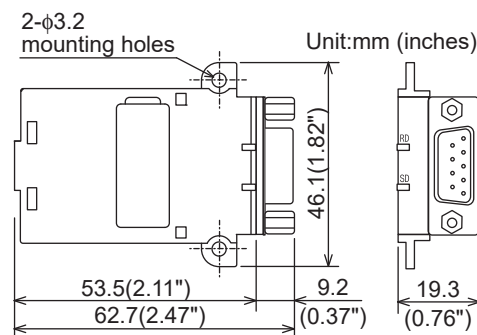


- MASS(Weight): Approx. 20g (0.05lbs)
- Accessories: Two M3 tapping screws (for installation of board), Manual supplied with product
- Connector: RS-232C (D-SUB 9-pin, male)

Pin Configuration

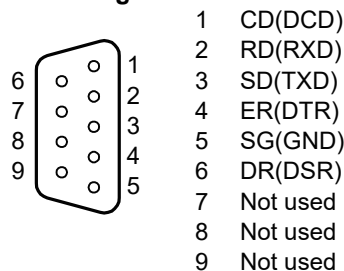

18.4.3 FX3U-422-BD


External Dimensions

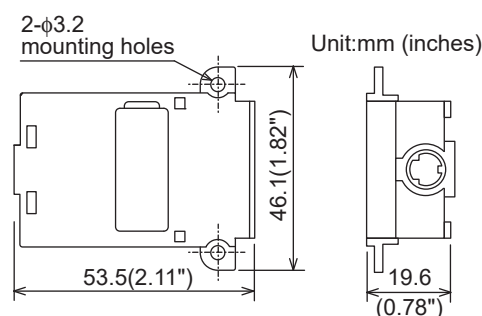

- MASS(Weight): Approx. 20g (0.05lbs)
- Accessories: Two M3 tapping screws (for installation of board), Manual supplied with product
- Connector: RS-422 (MINI DIN 8-pin, female)


18.4.4 FX3U-485-BD

External Dimensions

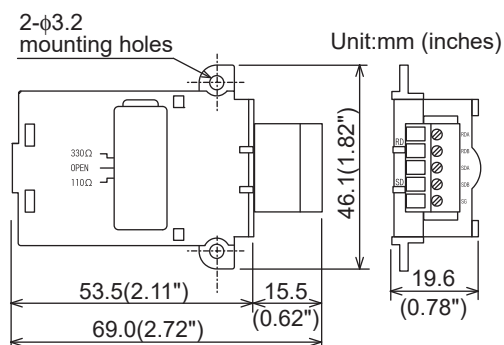


- MASS(Weight): Approx. 20g (0.05lbs)
- Accessories: Two M3 tapping screws (for installation of board),
Label for indication of link station number,
Manual supplied with product
- Terminal block: European type
- Terminal resistance:330Ω/110Ω, built-in

Terminal Layout

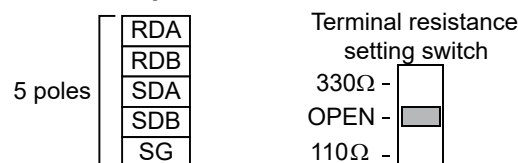


18.4.5 FX3U-8AV-BD

External Dimensions

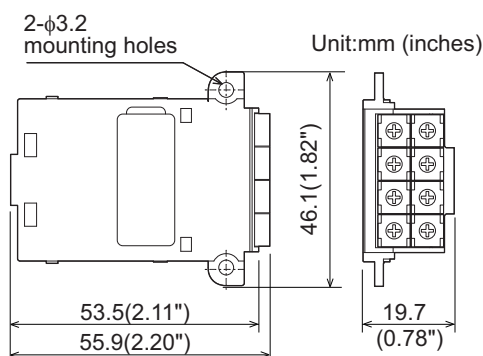


- MASS(Weight): Approx. 20g (0.05lbs)
- Accessories: Two M3 tapping screws (for installation of board),
Trimmer layout label,
Manual supplied with product

 Trimmer Layout



18.4.6 FX3U-CNV-BD


External Dimensions

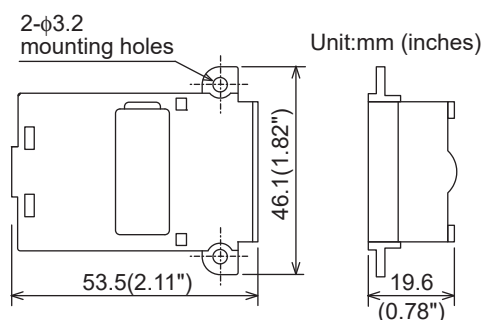

- MASS(Weight): Approx. 10g (0.03lbs)
- Accessories: Two M3 tapping screws (for installation of board),
Manual supplied with product


18.5 Power Supply

18.5.1 FX2N-20PSU

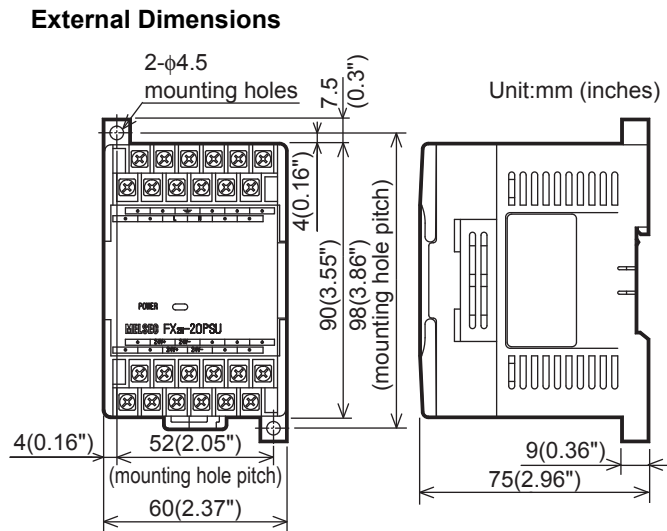


- MASS(Weight): Approx. 0.3kg (0.66lbs)
- Installation: 35 mm (1.38") wide DIN rail or screws
- Accessories: Manual supplied with product
- Terminal block: M3.5 screws

Terminal Layout

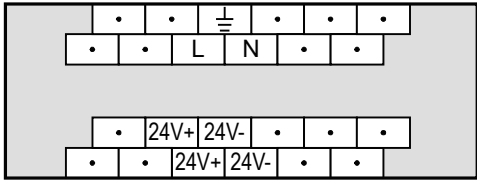

18.6 Connector Conversion Adapter

18.6.1 FX2N-CNV-BC

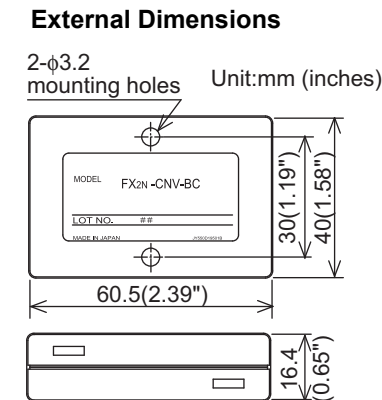


- MASS(Weight): Approx. 40g (0.09lbs)
- Installation: Screws only

18.7 Interface Module

18.7.1 FX-232AWC-H


External Dimensions

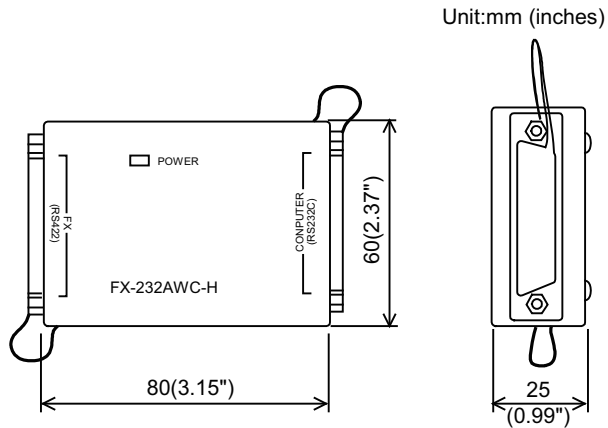

- MASS(Weight): Approx. 0.1kg (0.22lbs)
- Accessories: Manual supplied with product
- Connector: RS-232C
(D-SUB 25-pin, female)
RS-422
(D-SUB 25-pin, female)

18.7.2 FX-USB-AW

External Dimensions

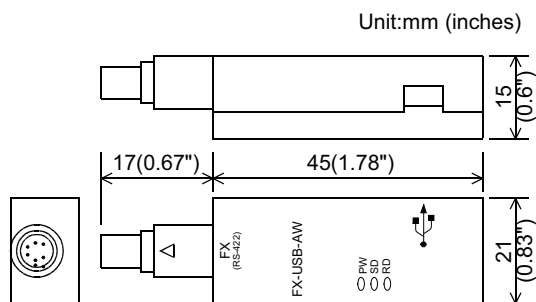


- MASS(Weight): Approx. 20g (0.05lbs)
- Accessories: USB cable (3m(9'10")),
Manual supplied with product
- Connector: RS-422
(MINI DIN 8-pin, male)
USB Mini-B connector

18.8 Display Module

18.8.1 FX3U-7DM


External Dimensions

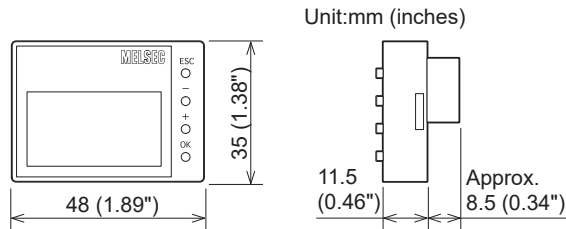

- MASS(Weight): Approx. 20g (0.05lbs)
- Accessories: Display module mounting top cover,
Manual supplied with product

18.8.2 FX3U-7DM-HLD

External Dimensions

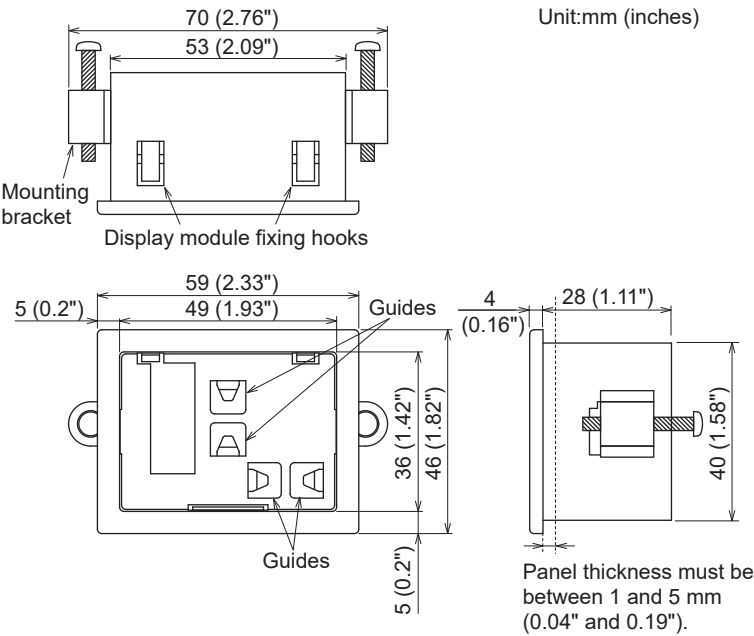

- MASS(Weight): Approx. 20g (0.05lbs)
- Accessories: PLC cover,
Mounting bracket × 2 pieces,
Tightening bolt (M4 × 25) × 2 pieces,
Extension cable with ferrite core (1.4m(4'7")),
Clamp A × 5 pieces,
Clamp B × 1 piece,
Cable tie × 1 piece,
Manual supplied with product

19. FX3U-7DM (Display Module)

STARTUP AND MAINTENANCE PRECAUTIONS



WARNING

- Do not touch any terminal while the PLC's power is on.
Doing so may cause electric shock or malfunctions.
- Before cleaning or retightening terminals, cut off all phases of the power supply externally.
Failure to do so may cause electric shock.
- Before modifying or disrupting the program in operation or running the PLC, carefully read through this manual and the associated manuals and ensure the safety of the operation.
An operation error may damage the machinery or cause accidents.
- Do not change the program in the PLC from two or more peripheral equipment devices at the same time. (i.e. from a programming tool and a GOT)
Doing so may cause destruction or malfunction of the PLC program.

STARTUP AND MAINTENANCE PRECAUTIONS




CAUTION

- Turn off the power to the PLC before attaching or detaching the memory cassette. If the memory cassette is attached or detached while the PLC's power is on, the data in the memory may be destroyed, or the memory cassette may be damaged.
- Do not disassemble or modify the PLC.
Doing so may cause fire, equipment failures, or malfunctions.
For repair, contact your local Mitsubishi Electric representative.
- Turn off the power to the PLC before connecting or disconnecting any extension cable.
Failure to do so may cause equipment failures or malfunctions.
- Turn off the power to the PLC before attaching or detaching the following devices.
Failure to do so may cause equipment failures or malfunctions.
 - Peripheral devices, display module, expansion boards, and special adapters
 - Extension units/blocks and FX Series terminal blocks
 - Battery and memory cassette

19.1 Description of Products (Introduction of Related Products)

The FX3U-7DM display module can be incorporated in the main unit, or can be installed in the enclosure using the FX3U-7DM-HLD display module holder.

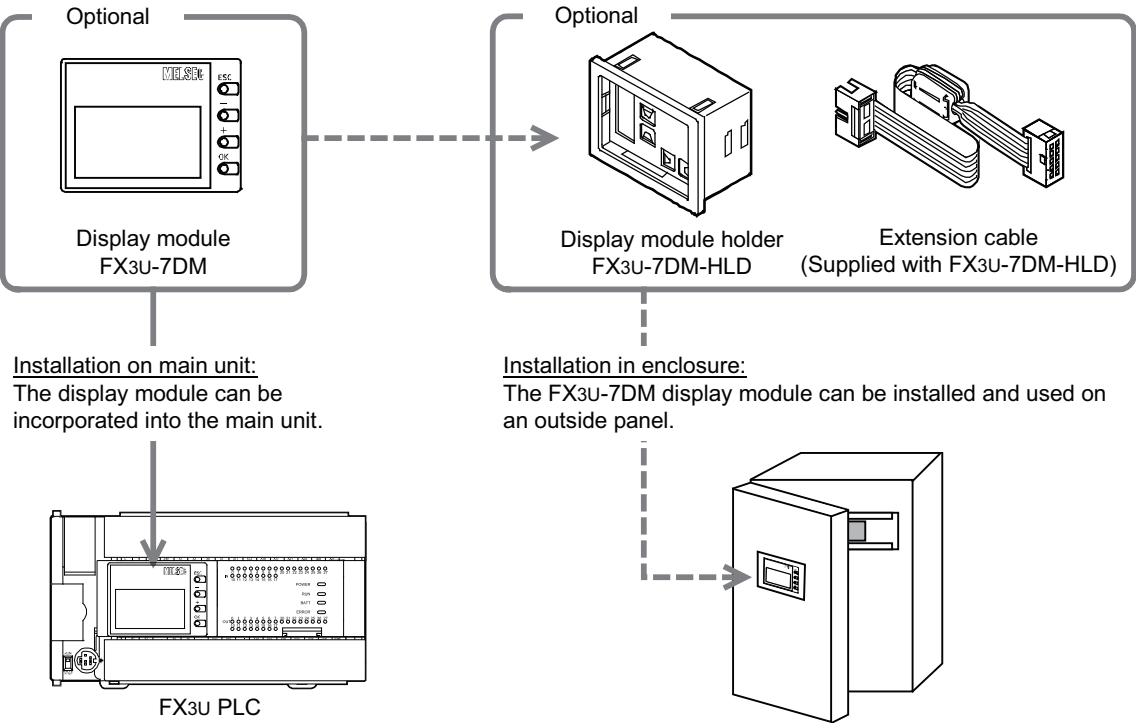

For a detailed description of the display module holder, refer to the "FX3U-7DM-HLD User's Manual".

| | |
|----|--|
| 11 | High-Speed Counters |
| 12 | Output Wiring |
| 13 | Wiring for Various Uses |
| 14 | Test Run, Maintenance, Troubleshooting |
| 15 | Input/Output Powered Extension Units |
| 16 | Input/Output Extension Blocks |
| 17 | Extension Power Supply Unit |
| 18 | Other Extension Units and Options |
| 19 | Display Module |
| 20 | Terminal Block |

19.2 Specifications


19.2.1 Display/switch specifications

| Item | | Description |
|---------------------------|---------------------------|--|
| Display device/ backlight | | STN monochrome liquid crystal display/Backlight: LED (green) |
| Displayed letters | Number of letters | 16 letters × 4 lines (2 byte letters: 8 letters × 4 lines) |
| | Characters | English Alphabet, Numbers, Japanese Characters, Shift JIS Level-1, 2 |
| | Language for menu display | Japanese/English |
| Button | | 4 operation buttons (OK, ESC, +, and -) |

Notes for displaying symbols(ASCII Code)

- ¥ (ASCII Code:5C) symbol is displayed as " ¥ " even if the language display setting at FX3U-7DM is set to English(LANGUAGE:ENGLISH).
- The Character at ASCII Code:7E "~" is not displayed.

19.2.2 Parts layout

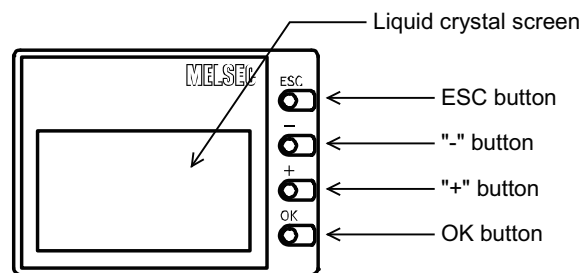


Functions of operation buttons:

The display module has 4 operation buttons as shown in the following table.

| Name of button | Function of operation button |
|----------------|---|
| ESC | Use this button to cancel the operation and to return to the previous screen. |
| - | Use this button to move the cursor or to set a numeric value. |
| + | Use this button to move the cursor or to set a numeric value. |
| OK | Use this button to select an item or to determine the set numeric value. |


19.2.3 External dimensions

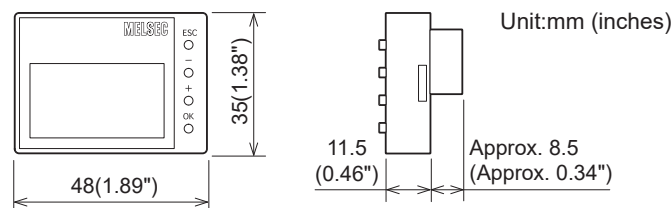

For FX3U PLC installation:

After installing the display module on the main unit, the main unit will be approximately 2.5 mm (0.1") higher than the initial height.

For the other dimensions, refer to the dimensional outline drawing of the main unit.

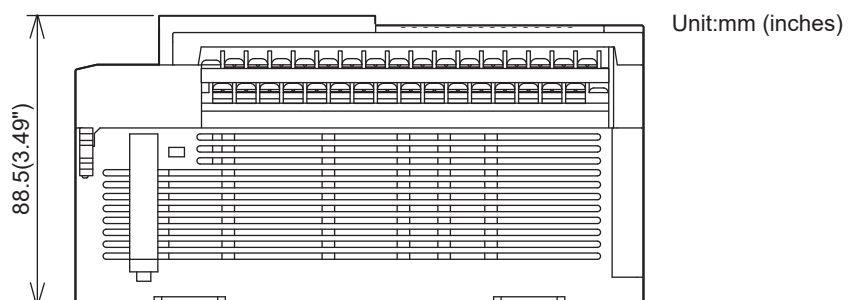

19.3 Installation and Removal


This section describes how to install and remove the display module.

1 Turn off the power of the PLC.

Before installing or removing the display module, be sure to turn off the power to the PLC.

2 Remove the top cover.


While pressing the top cover hook ("A"), remove the top cover ("B") as shown in the right figure.

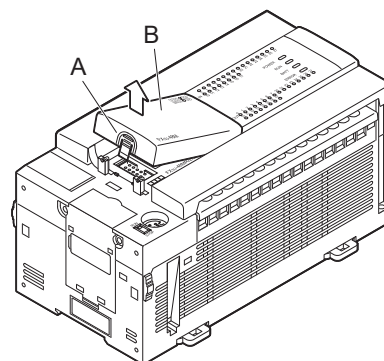

3 Install/remove the display module.

Installation: Push the display module ("C") down at position "E" shown in the lower right figure to install the display module on the main unit ("D").


Removal: Pull the display module outward ("C") to remove the display module from the main unit ("D").

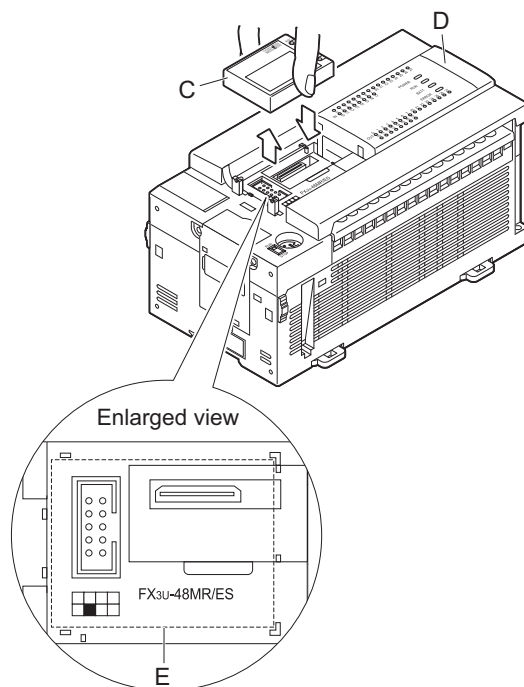

4 Attach the top cover.

Put side "G" of the display module's top cover ("F") on the main unit ("D") as shown, then push down on the top cover ("F") until it locks into place.

The top cover of the display module is supplied with the FX3U-7DM (display module).

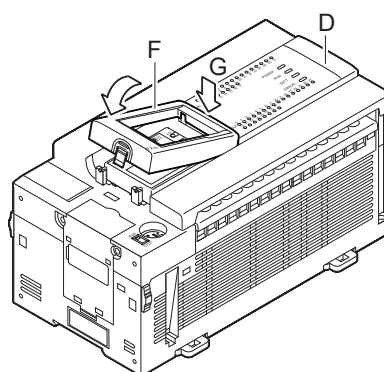

11

High-Speed
Counters

12

Output Wiring

13

Wiring for
Various Uses

14

Test Run,
Maintenance,
Troubleshooting

15

Input/Output
Powered
Extension Units

16

Input/Output
Extension
Blocks

17

Extension
Power Supply
Unit

18

Other Extension
Units and
Options

19

Display Module

20

Terminal Block

19.4 Summary of Functions

The display module functions are summarized below.

| Item | | Function | Remarks | Reference |
|--|-------------------------------|--|--------------------------------|--------------------------------|
| Top screen (time display) | | Displays the time indicated by the main unit's internal real-time clock. | Button operation | Subsection 19.5.2 |
| Menu screen functions | | | | |
| Monitor/Test | Devices | Input (X) ^{*1} , output (Y), auxiliary relay (M), state (S), timer (T), counter (C), data register (D) [16-bit/32-bit], extended register (R), and extended file register (ER) [16-bit/32-bit] monitor/test function. | Button operation | Section 19.7 |
| | User (User-registered device) | Up to 4 data registers (D) [16-bit/32-bit] can be registered. | Requires program | Section 19.8 and Section 19.19 |
| ErrorCheck | | Performs error checks and displays the results. | Button operation | Section 19.9 |
| LANGUAGE (selects the menu display language) | | Selects either Japanese or English as the menu display language. | Button operation | Section 19.10 |
| Contrast | | Adjusts the contrast (-5 to 10); default setting: 0 | Button operation | Section 19.11 |
| ClockMenu (Time setting) | Setting | Sets the current time. | Button operation | Subsection 19.12.1 |
| | Display | Displays the current time. | | Subsection 19.12.2 |
| EntryCode | | The currently specified entry code can be canceled. | Button operation | Section 19.13 |
| ClearAllDev (Device all clear) | | Initializes the Input (X) ^{*1} , output (Y), auxiliary relay (M), state (S), timer (T), counter (C), data register (D) [16-bit/32-bit], and extended register (R). The file register (D) is excluded from this function. (Bit devices are turned OFF, and word device current values are set to "0".) | Button operation | Section 19.14 |
| PLC Status | | Verifies the version information, entry code status, program memory type status, and battery voltage, etc. | Button operation | Section 19.15 |
| ScanTime | | Displays the scan time (max./min./current value) | Button operation | Section 19.16 |
| Cassette (Memory cassette transfer) | | Allows data transfers (and consistency checks) between the internal RAM and the memory cassette. | Button operation | Section 19.17 |
| Non-menu functions | | | | |
| Operation button ON/OFF information | | Allows monitoring of operation button ON/OFF status. | Requires program or monitor | Section 19.20 |
| Hexadecimal current value display setting | | Changes the display format of the current values and setting values for the timer, counter, data register, extended register, and extended file register to a hexadecimal display format. | Requires program ^{*2} | Section 19.21 |
| Display screen protect function | | Enables all functions, prohibits change (test) functions, and protects the top screen (time display). | Requires program | Section 19.22 |
| User message display | | The following codes saved at the display device can be used as display commands: Alphanumeric: 20H to 7DH ASCII code Katakana: A1H to DFH ASCII code Japanese character: Shift JIS Level-1, 2 | Requires program | Section 19.23 |

*1. There is no test function for "Input (X)".

*2. A sequence program is required to enable a hexadecimal display of the timer (T), counter (C), data register (file register) (D), extended register (R) [16-bit/32-bit], and extended file register (ER) [16-bit/32-bit] current values.
→ Refer to Section 19.21 for the setting procedure.

19.5 Procedure for Accessing the Menu Screen from the Title Screen

All operation explanations and display screen examples in this manual are in English. When the menu display language is set to Japanese, please convert the screen messages to their Japanese translations.


→ Refer to Section 19.25 for the Japanese & English display character correspondence table.

→ Refer to Section 19.10 for menu display language setting.

19.5.1 Title screen


The screen shown at right is displayed for 1.5 seconds after the power is turned on.

| | Content |
|-----|------------|
| [1] | Model name |
| [2] | Version |

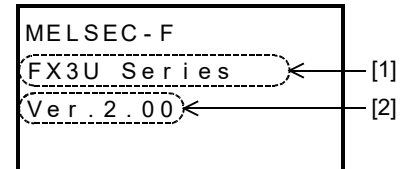

19.5.2 Top screen (time display)

Following the title screen display, the "Current Time screen" is then displayed.

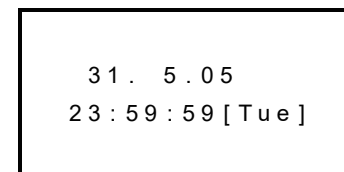

A user screen can also be displayed by using the user message display function.

→ Refer to Section 19.23 for user message display function.

Although the year displays in a 2-digit format (05), this can be changed to a 4-digit format (2005) by revising the program.


→ Refer to Subsection 19.12.3 for the 2-digit year to 4-digit year change procedure.

19.5.3 Menu screen


As shown in the figure at right, the menu screen displays 4 lines of the total menu. Press the [+] button to scroll downward through the menu.


Button operations at this menu screen are explained below.

| Button | Operation Description |
|--------|---|
| ESC | Returns to the "top screen" (time display). |
| - | Scrolls upward through the menu. Hold for 1 second or longer for high-speed scrolling. This button is disabled when the cursor is located at the beginning of the menu. |
| + | Scrolls downward through the menu. Hold for 1 second or longer for high-speed scrolling. This button is disabled when the cursor is located at the end of the menu. |
| OK | Selects the item where the cursor is blinking. |

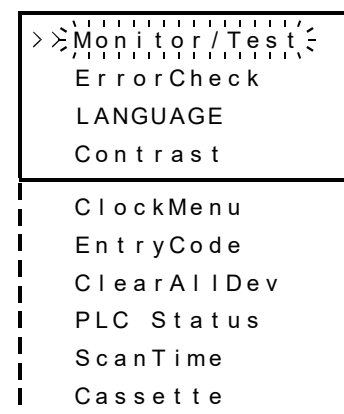

19.6 Menu Structure

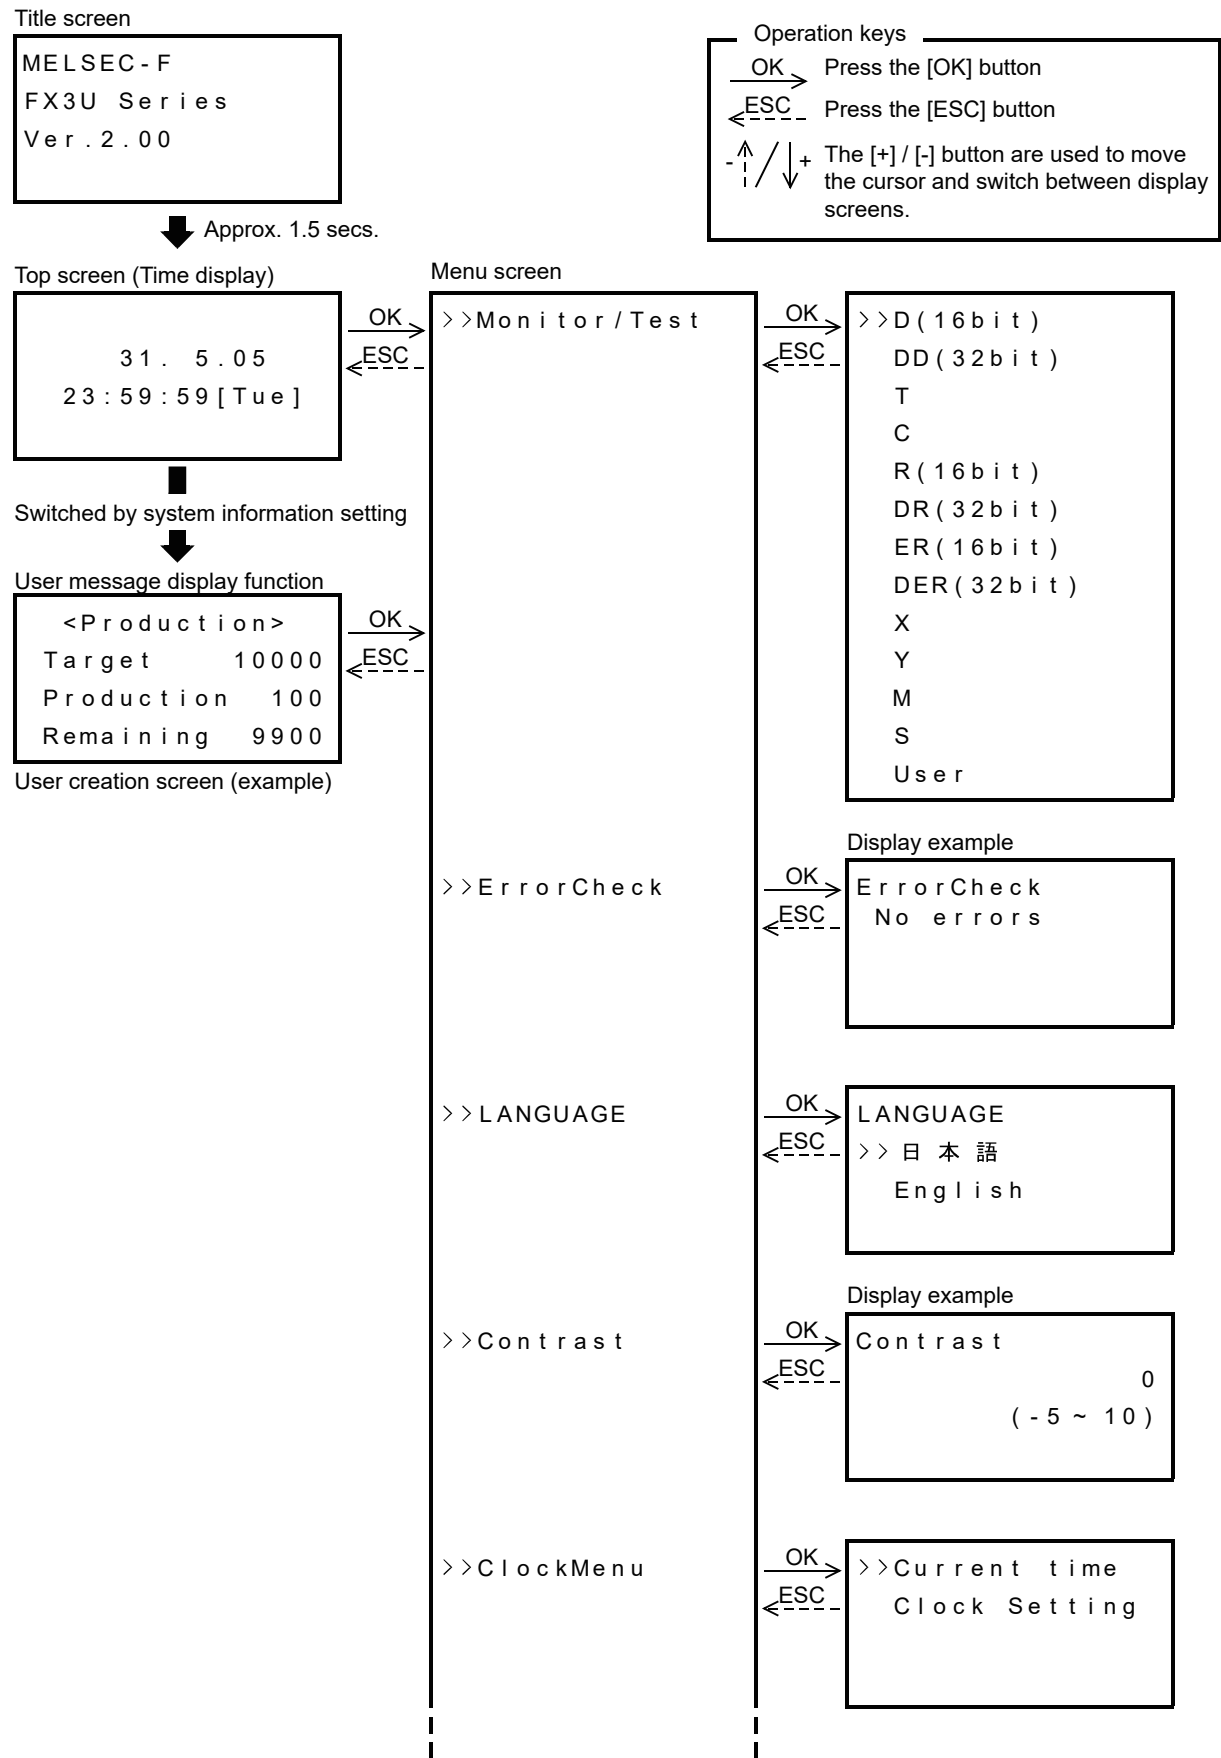

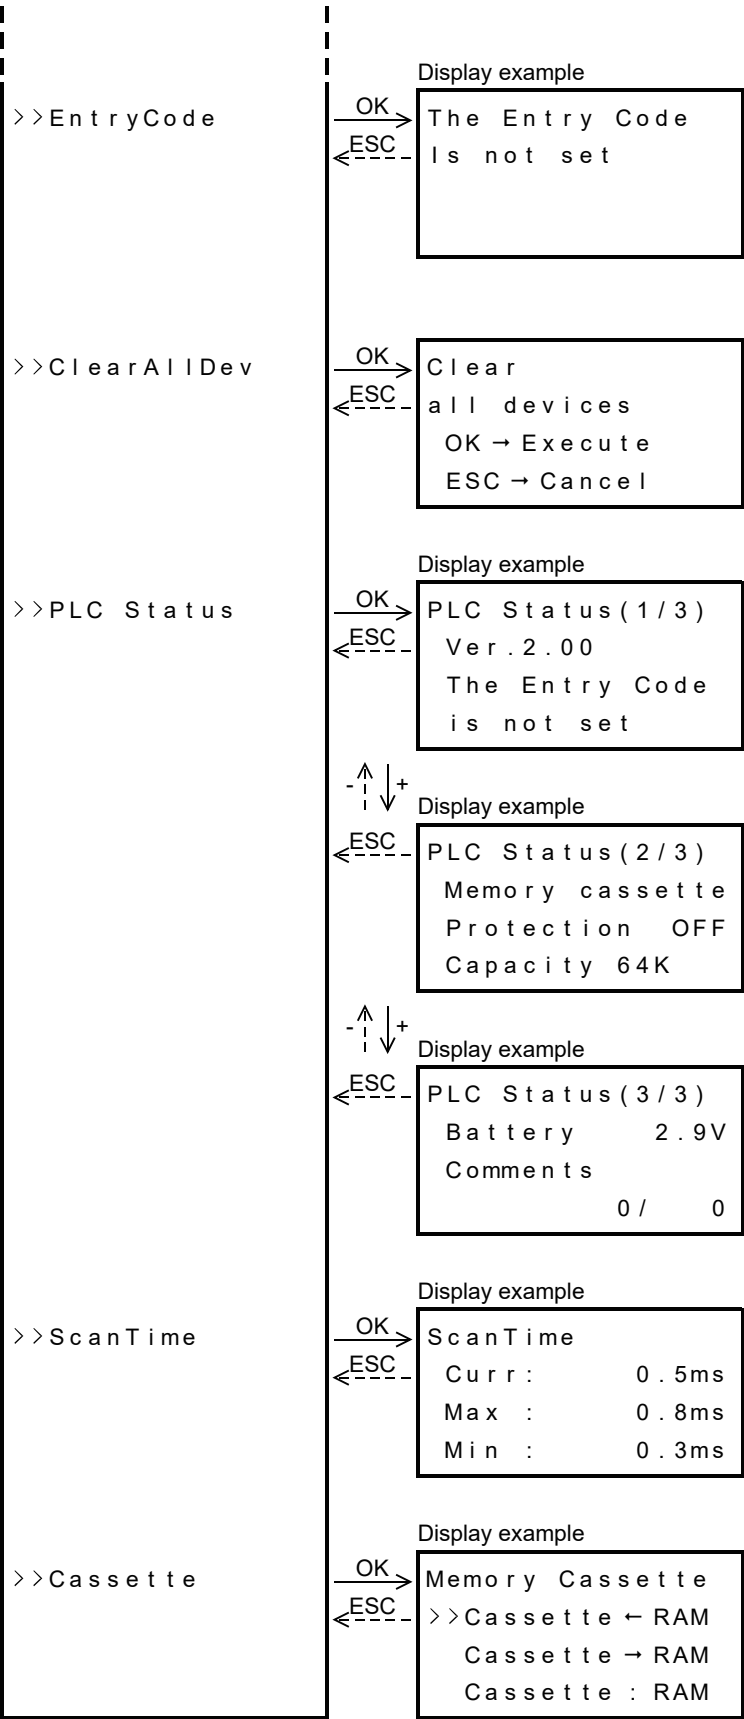

| | |
|----|--|
| 11 | High-Speed Counters |
| 12 | Output Wiring |
| 13 | Wiring for Various Uses |
| 14 | Test Run, Maintenance, Troubleshooting |
| 15 | Input/Output Powered Extension Units |
| 16 | Input/Output Extension Blocks |
| 17 | Extension Power Supply Unit |
| 18 | Other Extension Units and Options |
| 19 | Display Module |
| 20 | Terminal Block |

19.7 Monitor/Test Mode [Excluding User-Registered Devices]

19.7.1 Relevant devices

Monitoring and testing can be performed from the "Monitor/Test" menu for the devices listed below. (Monitoring/testing is not possible for the file register (D) and the index register (V/Z)).

✓: Possible

△: Possible under certain conditions

□: Not possible

—: Item not supported by this device

| Device | Monitored Items | | | | | Test Items | | |
|------------------------------------|-----------------|-------|---------------------|---------------|---------------|---------------|----------------------|----------------|
| | Contact | Reset | Operation Direction | Current Value | Setting Value | Forced ON/OFF | Current Value Change | Setting Change |
| Input [X] | ✓ | — | — | — | — | — | — | — |
| Output [Y] | ✓ | — | — | — | — | △*1 | — | — |
| Auxiliary relay [M] | ✓ | — | — | — | — | △*1 | — | — |
| State [S] | ✓ | — | — | — | — | △*1 | — | — |
| Timer [T] | ✓ | ✓ | — | ✓ | ✓ | ✓ | ✓ | △*2*3 |
| Counter [C] | ✓ | ✓ | ✓*4 | ✓ | ✓ | ✓ | ✓ | △*2*3 |
| Data register [D, DD] | — | — | — | ✓ | — | — | ✓ | — |
| File register [D, DD] | — | — | — | □ | — | — | □ | — |
| Extended register [R, DR] | — | — | — | ✓ | — | — | ✓ | — |
| Extended file register [ER, DER]*5 | — | — | — | ✓ | — | — | ✓ | — |
| Index register (V,Z) | — | — | — | □ | — | — | □ | — |

*1. A forced ON or OFF is executed for only one operation cycle, and therefore has a considerable effect on the SET/RST and self retaining circuits when the PLC is running. Moreover, a forced ON/OFF result is retained for devices (Y,M,S) which are not being driven by an OUT instruction, etc., in the program.

*2. Setting values of timer and counter can be changed when the PLC status is as shown below.

| Program Memory Type | | RUN/STOP Status | Setting Change Enabled/Disabled |
|---------------------|--------------------|-----------------|---------------------------------|
| Internal RAM | | RUN | Enabled |
| | | STOP | Enabled |
| Memory cassette | PROTECT switch ON | RUN | Disabled |
| | | STOP | Disabled |
| | PROTECT switch OFF | RUN | Enabled |
| | | STOP | Enabled |

*3. The following setting changes are possible.

| Selectable Setting Values | | Changeable Content | Setting Description |
|---------------------------|--|---------------------------------|--|
| Direct setting | Without index modifier [Direct (K,H)] | Direct numeral setting | The directly specified value becomes the setting value. |
| | With index modifier [direct (K,H) + index register (V0 to V7, Z0 to Z7)] | | The [directly specified numerical value] + [index register's current value] becomes the setting value. |
| Indirect setting | Without index modifier [data register D, extended register (R)] | Indirectly specified device No. | The specified device's current value becomes the setting value. |
| | With index modifier [data register (D) + index register (V0 to V7, Z0 to Z7)], [Extended register (R) + index register (V0 to V7, Z0 to Z7)] | | The [directly specified device No.] + [index register's current value] becomes the device No. specified by the setting value. That device's current value becomes the setting value. |

*4. The C200 to C255 32-bit up/down counters and the high-speed counters have counting directions.

*5. Enabled only when a memory cassette is installed.

19.7.2 Monitor mode operation

This section explains the procedure for monitoring the input [X], output [Y], auxiliary relay [M], state [S], timer [T], counter [C], data registers [D, DD], extended registers [R, DR], and the extended file registers [ER, DER]. The file register [D] and the index registers [V, Z] cannot be monitored.

→ Refer to Subsection 19.7.3 for a monitor screen display example.

→ Refer to Section 19.8 for user-registered device operation procedures.

→ Refer to Section 19.21 for the procedure used to display the timer, counter, and data register current values as hexadecimal values.

- 1) At the menu screen, use the [+] and [-] buttons to move the cursor to the "Monitor/Test" item, then press [OK] to display the "device selection screen" shown at right.

To cancel the operation and return to the "top screen (time display)", press [ESC] at the menu screen

- 2) Use the [+] and [-] buttons to move the cursor to the device which is to be monitored.

To cancel the operation and return to the "menu screen", press [ESC].

```
> > D ( 1 6 b i t )
      DD ( 3 2 b i t )
      T
      C
      R ( 1 6 b i t )
      DR ( 3 2 b i t )
      ER ( 1 6 b i t )
      DER ( 3 2 b i t )
      X
      Y
      M
      S
      U s e r
```

- 3) Press [OK] to display the monitor screen for the device which was selected for monitoring.

To cancel the operation and return to the "device selection screen", press [ESC].

After the power is turned on, the number of the device to be displayed is shown as follows.

```
> > D    0      0
      D    1      0
      D    2      0
      D    3      0
```

- a) The first time the power is turned on, the display begins with device No.1.

- b) At subsequent power ONs, the device which was being monitored at the previous operation is displayed (they are saved in memory for each device type).

```
D    3 4      0
D    3 5      0
D    3 6      0
> > D    3 7      0
```

- 4) Use the [+] and [-] buttons to move the cursor or the screen to the until the device to be monitored is displayed.

→ Refer to Subsection 19.7.3 for status display.


| Selected Device Type | Button | Operation Description |
|-------------------------------------|--------|---|
| • All devices | ESC | Returns to the "device selection screen". |
| • Data registers (D, DD) | - | Scrolls upward. Press for 1 second or longer for high-speed scrolling. If pressed again at the beginning of the device No. list, the display jumps to the end of the device No. list. |
| • Extended registers (R, DR) | | |
| • Extended file registers (ER, DER) | + | Scrolls downward. Hold for 1 second or longer for high-speed scrolling. If pressed again at the end of the device No. list, the display jumps to the beginning of the device No. list. |
| • Timer (T) | | |
| • Counter (C) | | |
| • Input (X) | | |
| • Output (Y) | - | Scrolls the display screen upward. Hold for 1 second or longer for high-speed scrolling. If pressed again at the beginning of the device No. list, the display jumps to the end of the device No. list. |
| • Auxiliary relay (M) | | |
| • State (S) | + | Scrolls the display screen downward. Hold for 1 second or longer for high-speed scrolling. If pressed again at the end of the device No. list, the display jumps to the beginning of the device No. list. |
| • All devices except (x) | | |
| • All devices except (x) | OK | Switches to the test mode when hold for 1 second or longer. |

19.7.3 Monitor screen & status display

→ Refer to Section 19.21 for the procedure used to display the current values as hexadecimal values.


1. Data register [D (16-bit)] / extended register [R (16-bit)] / extended file register [ER (16-bit)]

| | Display Content |
|-----|-----------------|
| [1] | Device No. |
| [2] | Current value |

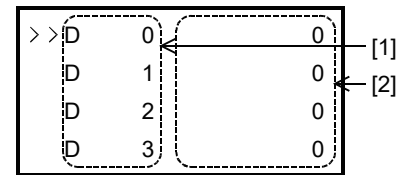

2. Data register [DD (32-bit)] / extended register [DR (32-bit)] / extended file register [DER (32-bit)]

| | Display Content |
|-----|---|
| [1] | Device No. [Upper 16-bit device No. (odd number)] [Lower 16-bit device No. (even number)] |
| [2] | Current value |

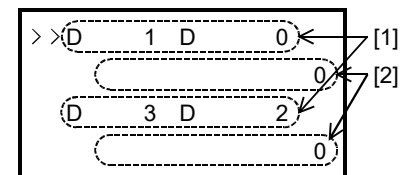


File register (D):

The file register (D) current value cannot be directly monitored at the display module.





3. Timer (T)

| | Display Content |
|-----|--|
| [1] | Device No. |
| [2] | Contact image ON: ■ OFF: Blank |
| [3] | Reset image ON: ■ OFF: Blank |
| [4] | Current value |
| [5] | Setting value or device specified by setting value (if an index modifier is present, the index register's device is also displayed). |
| [6] | Current value of device specified by setting value. |

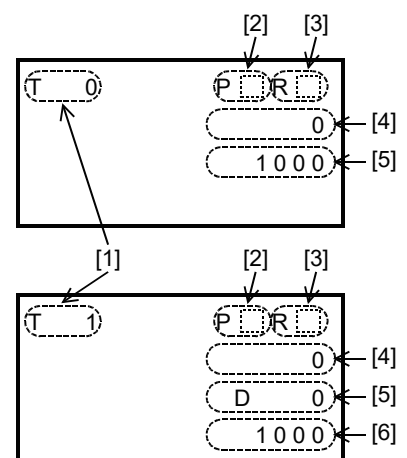



4. Counter [C]

| | Display Content |
|-----|--|
| [1] | Device No. |
| [2] | Contact image ON: ■ OFF: Blank |
| [3] | Reset image ON: ■ OFF: Blank |
| [4] | Count direction display UP count: ■ DOWN count: Blank (32-bit up/down counter and high-speed counter only) |
| [5] | Current value |
| [6] | Setting value or device specified by setting value (if an index modifier is present, the index register's device is also displayed). |
| [7] | Current value of device specified by setting value. |

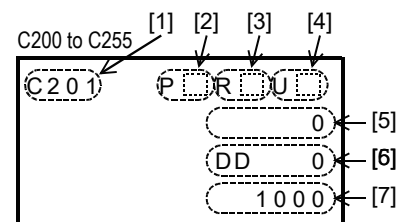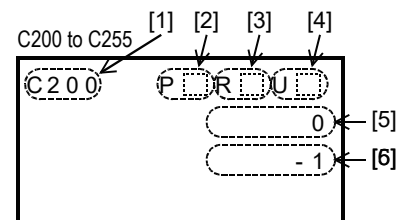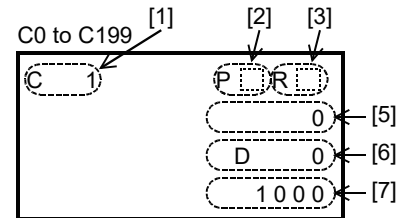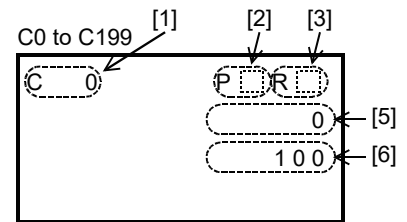

5. Input [X] / Output [Y] / Auxiliary Relay [M] / State [S]

| | Display Content |
|-----|--|
| [1] | Device No. at beginning of line. Input (X) and output (Y): 8 points per line. Auxiliary relay (M), special auxiliary relay (M), and state (S): 10 points per line. |
| [2] | ON/OFF status ON: Last digit of device No.. OFF: "•". |

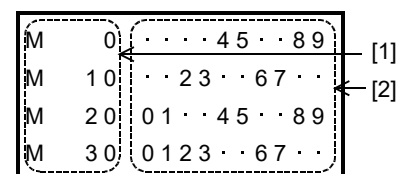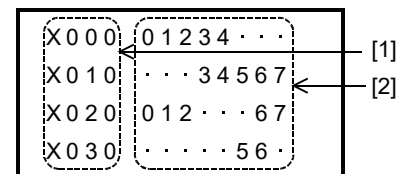

| | |
|----|--|
| 11 | High-Speed Counters |
| 12 | Output Wiring |
| 13 | Wiring for Various Uses |
| 14 | Test Run, Maintenance, Troubleshooting |
| 15 | Input/Output Powered Extension Units |
| 16 | Input/Output Extension Blocks |
| 17 | Extension Power Supply Unit |
| 18 | Other Extension Units and Options |
| 19 | Display Module |
| 20 | Terminal Block |

19.7.4 Test mode operation

There are 3 types of test mode operations, depending on the device type. The 3 operations are explained below.

→ Refer to Subsection 19.7.1 for test mode subject devices.

1. Data registers [D: D (16-bit), DD (32-bit)] / extended registers [R: R (16-bit), DR (32-bit)] / extended file registers [ER: ER (16-bit), DER (32-bit)] / user-registered devices

- 1) Perform a monitor mode operation to display the device whose current value is to be changed.

→ Refer to Subsection 19.7.2 for monitor function operation.

| | |
|---------------|---|
| D 6 2 0 0 | 0 |
| > > D 6 2 0 1 | 0 |
| D 6 2 0 2 | 0 |
| D 6 2 0 3 | 0 |

- 2) Hold the [OK] button for 1 second or longer to switch to the test mode. The current value begins blinking (refer to fig. at right).

| | |
|-----------|-----|
| D 6 2 0 0 | 0 |
| D 6 2 0 1 | > 0 |
| D 6 2 0 2 | 0 |
| D 6 2 0 3 | 0 |

- 3) Use the [+] / [-] buttons to change the value as desired.
To cancel the operation and return to the "monitor screen", press [ESC].

| Button | Operation Description |
|--------|---|
| ESC | Cancels the operation and returns to the "monitor screen". |
| - | Reduces the value. Hold for 1 second or longer for high-speed reduction. |
| + | Increases the value. Hold for 1 second or longer for high-speed increase. |
| OK | Registers the current value and returns to the "monitor screen". |

| | |
|-----------|-----|
| D 6 2 0 0 | 0 |
| D 6 2 0 1 | > 5 |
| D 6 2 0 2 | 0 |
| D 6 2 0 3 | 0 |

- 4) Press [OK] to register the current value and return to the "monitor screen".


- File register (D)

The display module's test function cannot be used to change the current value of the file register (D) which is stored in the program memory.

2. Timer [T], counter [C]


- 1) Perform a monitor mode operation to display the device where the test function is to be used.
→ Refer to Subsection 19.7.2 for monitor function operation.

[Monitor screen]

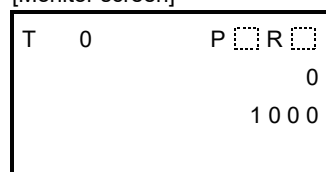


- 2) Press the [OK] button to display the cursor, then select the "test subject selection screen".
To cancel the operation and return to the "monitor screen", press [ESC].

[Test subject selection screen]

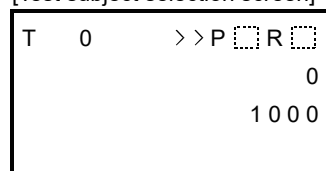


- 3) Use the [+] / [-] buttons to select the test subject.
To cancel the operation and return to the "monitor screen", press [ESC].

| Test Subject | Test Description |
|--------------|-----------------------|
| [1] | Contact forced ON/OFF |
| [2] | Current value change |
| [3] | Setting value change |

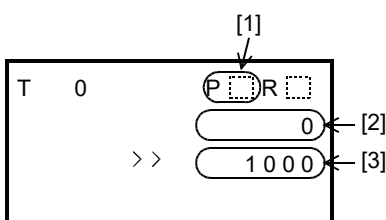

- 4) Hold the [OK] button for 1 second or longer to register the test subject selection, and switch to the test mode.
To cancel the operation and return to the "test subject selection screen", press [ESC].

| Test Subject | Status when [OK] is hold for 1 second or longer |
|--------------|---|
| [1] | No change |
| [2] | Numeric value begins blinking. |
| [3] | |

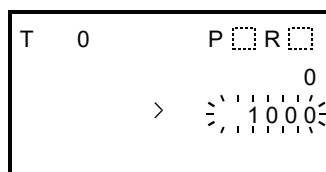


- 5) Operation varies as shown below, depending on the selected test subject.

- a) For "contact forced ON/OFF"

The contact ON/OFF status is highlighted when [OK] is pressed.


| Button | Operation Description |
|--------|---|
| ESC | Cancels the operation and returns to the "test subject selection screen". |
| - | Disabled |
| + | Disabled |
| OK | Highlights the contact ON/OFF status, meaning the current value can not be changed. |

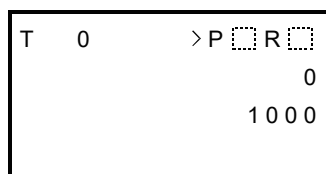

- b) For "current value change"

Use the [+] / [-] buttons to change the value as desired, then press [OK] to register the changed value.

| Button | Operation Description |
|--------|--|
| ESC | Cancels the operation and returns to the "test subject selection screen". |
| - | Reduces the value. Hold for 1 second or longer for high-speed reduction. |
| + | Increases the value. Hold for 1 second or longer for high-speed increase. |
| OK | Registers the current value or the setting value and returns to the "test subject selection screen". |

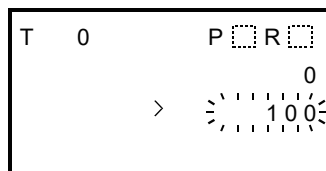

- c) For indirect setting format

- ① Use the [+] / [-] buttons to select the desired setting method (refer to table below), then press [OK] to register this selection.

| Selectable Setting Values | Changeable Content | Setting Description |
|---|---------------------------------|--|
| Direct setting (without index modifier) [Direct (K,H)] | Direct numeral setting | The directly specified value becomes the setting value. |
| Direct setting (with index modifier) [direct (K,H) + index register (V0 to V7, Z0 to Z7)] | | The [directly specified numerical value] + [index register's current value] becomes the setting value. |
| Indirect setting (without index modifier) [data register (D), extended register (R)] | Indirectly specified device No. | The specified device's current value becomes the setting value. |
| Indirect setting (with index modifier) [data register (D) + index register (V0 to V7, Z0 to Z7)], [Extended register (R) + index register (V0 to V7, Z0 to Z7)] | | The [directly specified device No.] + [index register's current value] becomes the device No. specified by the setting value. That device's current value becomes the setting value. |

- ② Use the [+] / [-] buttons to determine the setting value.
The content that is changed varies according to the selected setting method, as shown below.
- For "direct setting" or "direct setting + index register" method:
Use the [+] / [-] buttons to change the value as desired, then press [OK] to register the changed value.
 - For "indirect setting" or "indirect setting + index register" method:
Use the [+] / [-] buttons to change the device No. as desired, then press [OK] to register the setting value.

- 6) After the setting operation is completed, return to the "test subject selection screen", where the [ESC] button can then be pressed to return to the "monitor screen".

3. Output [Y] / auxiliary relay [M] / special auxiliary relay [M] / state [S]

Forced ON/OFF operations are possible for the output [Y] / auxiliary relay [M] / special auxiliary relay [M] / state [S] contacts.

- 1) Perform a monitor mode operation to display the device whose ON/OFF status is to be changed.

→ **Refer to Subsection 19.7.2 for monitor function operation.**

```
Y 0 0 0  . . . . .
Y 0 1 0  . . . . .
Y 0 2 0  . . . . .
Y 0 3 0  . . . . .
```

- 2) Hold the [OK] button for 1 second or longer to switch to the test mode. The device then begins blinking (refer to figure at right). To cancel the operation and return to the "test subject selection screen", press [ESC].

```
Y 0 0 0  . . . . .
Y 0 1 0  . . . . .
Y 0 2 0  . . . . .
Y 0 3 0  . . . . .
```

- 3) Use the [+] / [-] buttons to move the blinking position to the device where a forced ON/OFF is desired. To cancel the operation and return to the "monitor screen", press [ESC].

```
Y 0 0 0  . . . . .
Y 0 1 0  . . . . .
Y 0 2 0  . . . . .
Y 0 3 0  . . . . .
```

| Button | Operation Description |
|--------|--|
| ESC | Cancels the operation and returns to the "monitor screen". |
| - | Moves in the lower device No. direction (for forced ON/OFF subject selection). Hold for 1 second or longer for high-speed scrolling. |
| + | Moves in the higher device No. direction (for forced ON/OFF subject selection). Hold for 1 second or longer for high-speed scrolling. |
| OK | Highlights the contact's ON/OFF status. |

- 4) Press the [OK] button to highlight the contact's ON/OFF status. To cancel the operation and return to the "monitor screen", press [ESC].

```
Y 0 0 0  . . . . .
Y 0 1 0  . . . . .
Y 0 2 0  . . . . .
Y 0 3 0  . . . . .
```

| Button | Operation Description |
|--------|--|
| ESC | Cancels the operation and returns to the "monitor screen". |
| - | Moves in the lower device No. direction (for forced ON/OFF subject selection). Hold for 1 second or longer for high-speed scrolling. |
| + | Moves in the higher device No. direction (for forced ON/OFF subject selection). Hold for 1 second or longer for high-speed scrolling. |
| OK | Highlights the contact ON/OFF status. |

- 5) Press [ESC] to return to the monitor screen.

19.7.5 Test mode operation notes

When using multiple same-number timers (T) and counters (C).

Operation occurs as follows if multiple timers [T] and counters [C] are used in programs which contain CJ instructions and step ladders.

- When a setting change is performed after switching from the device monitor to the test function mode, the setting change is applied to the timer [T] or counter [C] which is nearest to Step 0.
- When changing the setting values for same-number timers [T] and counters [C], use the programming tool to change the program.

19.8 Monitor/Test Mode [User-Registered Devices]

Regarding user-registered devices at "Monitor/Test" menu, monitor and test operations can be performed for a maximum of 4 data registers (16-bit/32-bit) specified by the system information.


→ Refer to Section 19.19 for the user-registered device setting procedure.

19.8.1 Monitor mode operation

- 1) At the menu screen, use the [+] and [-] buttons to move the cursor to the "Monitor/Test" item, then press [OK] to display the "device selection screen" shown to the right.

To cancel the operation and return to the "top screen (time display)", press [ESC] at the menu screen

- 2) "Use the [+] and [-] buttons to move the cursor to the "User" item. To cancel the operation and return to the "device selection screen", press [ESC].

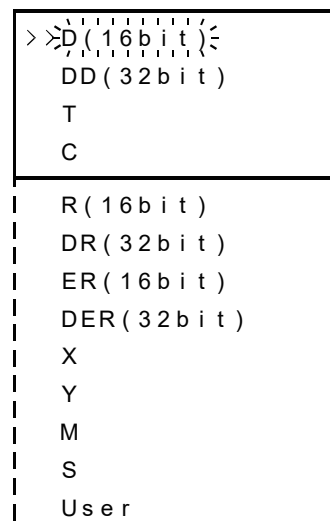


- 3) Press [OK] to display the data registers specified by the system information.

The first time the power is turned on, the display begins with device No.1 of the "user-registered devices". At subsequent power ONs, the device which was being monitored at the previous operation is displayed.

If a specified user-registered device has been changed, the newly specified device is displayed.


To cancel the operation and return to the "device selection screen", press [ESC].

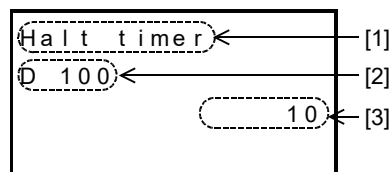

| | Display Content |
|-----|--|
| [1] | Device comments (registered at the PLC) are displayed together with the devices. If no device comment has been registered, the device comment area is left blank. |
| [2] | Device included in the user-registered devices |
| [3] | Current value |

- 4) Use the [+] and [-] buttons to scroll the user-registered devices screen.

To cancel the operation and return to the "device selection screen", press [ESC].

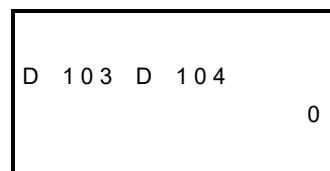

| Button | Operation Description |
|--------|---|
| ESC | Returns to the "device selection screen". |
| - | Scrolls the user-registered devices. (User-specified device 1 → user-specified device 4 → user-specified device 3 → user-specified device 2 → user-specified device 1) |
| + | Scrolls the user-registered devices. (User-specified device 1 → user-specified device 2 → user-specified device 3 → user-specified device 4 → user-specified device 1) |
| OK | Switches to the test mode when hold for 1 second or longer. |

19.8.2 Test mode operation

- 1) Perform a monitor mode operation to display the user-registered device whose current value is to be changed.
→ Refer to Subsection 19.7.2 for monitor function operation.

```
Halt timer
D 100
10
```

- 2) Hold the [OK] button for 1 second or longer to switch to the test mode. The current value then begins blinking (refer to fig. at right).
- 3) Use the [+] / [-] buttons to change the value as desired. To cancel the operation and return to the "monitor screen", press [ESC].

```
Halt timer
D 100
>:100<
```

| Button | Operation Description |
|--------|--|
| ESC | Cancels the operation and returns to the "monitor screen". |
| - | Reduces the value. Hold for 1 second or longer for high-speed reduction. |
| + | Increases the value. Hold for 1 second or longer for high-speed increase. |
| OK | Registers the current value and returns to the "monitor screen". |

```
Halt timer
D 100
>:200<
```

- 4) Press [OK] to register the current value and return to the "user registered devices screen".

19.9 Error Check

The main unit's error status displays at the "ErrorCheck" menu.

- 1) At the menu screen, use the [+] / [-] buttons to move the cursor to the "ErrorCheck" item, then press [OK].
The error check result then displays at the "error display screen" (refer to fig. at right).
To cancel the operation and return to the "top screen (time display)", press [ESC] at the menu screen
- 2) If multiple errors have occurred, the [+] / [-] keys can be used to switch between the error display pages.

When no errors have occurred

```
ErrorCheck
No errors
```

When 1 error has occurred

```
ErrorCheck
M8066 ← [1]
Ladder error ← [2]
Error code 6612 ← [3]
```

When multiple errors have occurred

```
ErrorCheck 1/2 ← [4]
M8060 ← [1]
I/O err ← [2]
Error code 1020 ← [3]
```

↑ / ↓

```
ErrorCheck 2/2 ← [4]
M8063 ← [1]
Link error1 ← [2]
Error code 6301 ← [3]
```

| Button | Operation Description |
|--------|---|
| ESC | Returns to the "menu screen". |
| - | 1 error or less: Disabled 2 errors or more: Displays the previous-page's error screen. |
| + | 1 error or less: Disabled 2 errors or more: Displays the next-page's error screen. |
| OK | Returns to the "menu screen". |

Display Content

| | Display Content |
|-----|---|
| [1] | Active error flag |
| [2] | Error name |
| [3] | Error code |
| [4] | Number of concurrent errors (displays only when multiple errors have occurred) |

- 3) To cancel the operation and return to the "menu screen", press [ESC].

19.10 LANGUAGE (Menu Display Language Setting)

The language used at the display module menus is specified at the "LANGUAGE" menu. The language setting procedure is described below.

All operation explanations and display screen examples in this manual are in Japanese. When the menu display language is set to English, please convert the screen messages to their English translations.

→ Refer to Section 19.25 for the Japanese & English display character correspondence table.

19.10.1 Changing to Japanese menus

The procedure for changing from English menus to Japanese menus is described below.

- 1) Turn the PLC power on.

Following a brief title screen display (1.5 seconds), the "current time screen" or a "user message" is displayed.

Title screen

```
MELSEC - F
FX3U Series
Ver. 2.00
```

↓ Approx.
1.5 secs.

Top screen (Time display)

```
05 . 5 . 31
23 : 59 : 59 [ Tue ]
```

OR

User creation screen (example)

```
<Production>
Target      10000
Production   100
Remaining    9900
```

- 2) Press the [OK] button to display the menu screen shown to the right (4 lines of the menu display).

```
> > Monitor / Test <
ErrorCheck
LANGUAGE
Contrast
```

```
ClockMenu
EntryCode
ClearAllDev
PLC Status
ScanTime
Cassette
```

- 3) At the menu screen, use the [+] / [-] buttons to move the cursor to the "LANGUAGE" item, then press [OK] to display the "display language selection screen".
To cancel the operation and return to the "top screen (time display)", press [ESC].

```
LANGUAGE
  日本語
> > English <
```

- 4) Use the [+] / [-] buttons to move the cursor to "日 本 語".
To cancel the operation and return to the "menu screen", press [ESC].

| Button | Operation Description |
|--------|---|
| ESC | Cancels the operation and returns to the "menu screen". |
| - | Moves the cursor upward. |
| + | Moves the cursor downward. |
| OK | Registers the selected display language and returns to the "menu screen". |

- 5) Press [OK] to register the selected display language and return to the "menu screen".

19.10.2 Changing to English menus

Refer to Subsection 19.10.1 "Changing to Japanese menus" for the access procedure from the title screen.

- 1) At the menu screen, use the [+] / [-] buttons to move the cursor to the "LANGUAGE" item, then press [OK] to display the "display language selection screen".
To cancel the operation and return to the "top screen (time display)", press [ESC].

LANGUAGE
日 本 語
> E n g l i s h <

- 2) Use the [+] / [-] buttons to move the cursor to "English".
To cancel the operation and return to the "menu screen", press [ESC].

| Button | Operation Description |
|--------|---|
| ESC | Cancels the operation and returns to the "menu screen". |
| - | Moves the cursor upward. |
| + | Moves the cursor downward. |
| OK | Registers the selected display language and returns to the "menu screen". |


- 3) Press [OK] to register the selected display language and return to the "menu screen".

19.10.3 D8302 changes by program & related devices

Selections made at this menu are saved at D8302.
D8302 has a battery backup for latch.
D8302 changes by user program can also be specified.

| D8302 Current Value | Display Language |
|---------------------|------------------|
| K0 | Japanese |
| K1 | English |
| Other | English |

 
When the display language is set to "Japanese"




19.11 Contrast

The liquid crystal display contrast setting is specified at the "Contrast" menu. Selections made at this menu are saved at D8302. A contrast setting of "0" is specified at factory default.

- 1) At the menu screen, use the [+] / [-] buttons to move the cursor to the "Contrast" item, then press [OK] to display the "contrast adjustment screen".
To cancel the operation and return to the "top screen (time display)", press [ESC].

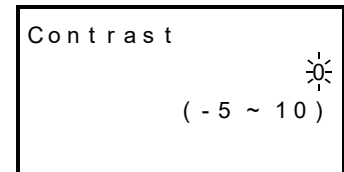

- 2) Use the [+] / [-] buttons to adjust the contrast.
To cancel the operation and return to the "menu screen", press [ESC].

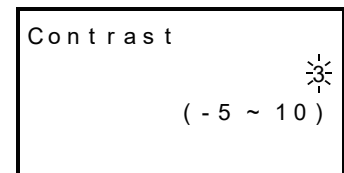

| Button | Operation Description |
|--------|---|
| ESC | Cancels the operation and returns to the "menu screen". |
| - | Lowest the contrast (decreases the numeric value. The value can be decreased to -5.) |
| + | Increases the contrast (increases the numeric value. The value can be increased to +10.) |
| OK | Registers the selected setting and returns to the "menu screen". |

- 3) Press the [OK] button to register the selected setting and return to the "menu screen".

19.12 Clock Menu (Current Time Setting)

The "ClockMenu" menu consists of "current time display" and the "time setting" items.
The current time should be set before operating the system.

19.12.1 Current time setting procedure

- 1) At the menu screen, use the [+] / [-] buttons to move the cursor to the "ClockMenu" item, then press [OK] to display the selection screen shown at right.
To cancel the operation and return to the "top screen (time display)", press [ESC].

```
> > Current time <
  Clock setting
```

- 2) Use the [+] / [-] buttons to move the cursor to the "Clock setting" item.
To cancel the operation and return to the "menu screen", press [ESC].

```
Current time
> > Clock setting <
```

- 3) Press the [OK] button to display the "Clock setting screen".
To cancel the operation and return to the "selection screen", press [ESC].

```
Clock setting
  19 . 8 . 1993*
  7 : 11 : 19 [ Thu ]
```

- 4) Use the [+] / [-] buttons to change the blinking data as desired, then press [OK] to register the change.
Settings are performed in the following sequence: Year → Month → Day → Hours → Minutes → Seconds.
After pressing [OK] to register the final "seconds" setting, a "Current time is set" message is displayed, completing the current time setting procedure.

```
Clock setting
  31 . 1 . 2004 *
  23 : 59 : 59 [ Sat ]
```

* The default "Year" display is a 2-digit value indicating the Western calendar year.

| Button | Operation Description |
|--------|--|
| ESC | Returns to the previous setting item. Returns to the "selection screen", when at the "Year" item ("Year" is blinking) position. |
| - | Reduces the value. Hold for 1 second or longer for high-speed reduction. |
| + | Increases the value. Hold for 1 second or longer for high-speed increase. |
| OK | Proceeds to the next setting item. "Current time is set" message displays if pressed at the "Seconds" item ("Seconds" is blinking). |

- 5) Press [OK] or [ESC] to return to the "selection screen".
- 6) Press [ESC] to return to the "menu screen".

```
Current time
> > Clock setting <
```

19.12.2 Displaying the current time

- 1) At the menu screen, use the [+] / [-] buttons to move the cursor to the "ClockMenu" item, then press [OK] to display the selection screen shown to the right.
To cancel the operation and return to the "top screen (time display)", press [ESC].

```
>>Current time<
Clock setting
```

- 2) Use the [+] / [-] buttons to move the cursor to the "Current time" item. To cancel the operation and return to the "menu screen", press [ESC].

- 3) Press the [OK] button to display the current time.
To cancel the operation and return to the "selection screen", press [ESC].

| Button | Operation Description |
|--------|------------------------------------|
| ESC | Returns to the "selection screen". |
| - | Disabled |
| + | Disabled |
| OK | Returns to the "selection screen". |

2-digit display

```
3 1 . 1 . 0 4
2 3 : 5 9 : 5 9 [ S a t ]
```

 
4-digit display

```
3 1 . 1 . 2 0 0 4
2 3 : 5 9 : 5 9 [ S a t ]
```

- 4) Press [OK] or [ESC] to return to the "selection screen".
- 5) Press [ESC] to return to the "menu screen".

19.12.3 Changing the current time's "Year" from 2-digit format to 4-digit format

The "Year" data displays as 2-digit value with a default. This can be changed to a 4-digit display by the following programming.



It is also possible to set the current time with a sequence program.

→ Refer to the "time setting" (special devices D8013 to D8019) section of the Programming Manual.

19.13 Keyword (Entry code)

Entry codes registered at the PLC can be canceled from the "EntryCode" menu.
When canceled, all operations are enabled.
Registering or changing entry codes is not possible at the display module.
The programming tool must be used in advance to register new entry codes.

19.13.1 Keyword (Entry code) types & levels

Entry codes can be entered in 2 ways (8-digit or 16-digit^{*1}), depending on the peripheral device in question.

- For a [entry code (8-digit)] + [2nd entry code (8-digit)] = 16-digit input:
Processing is possible only with a peripheral device version compatible with the FX3U PLC.
- For an entry code (8-digit) input only:
Processing is possible even with a peripheral device version that is not compatible with the FX3U PLC.

| Number Of Digits | Registration Method | Peripheral Device ^{*2} | | Entry Code Registration Level | Entry Code Description |
|------------------------|--|---------------------------------|---------------------|----------------------------------|--|
| | | FX3U Compatible | Not FX3U Compatible | | |
| 16-digit ^{*1} | By selecting the entry code registration level at the GX Works2, etc., setting screen. | ✓ | – | Reading/writing prohibited | 16-digit hexadecimal value (A to F, 0 to 9) [Ex] FAB05C25DAECF293 AABCDEFF34509345 |
| | | | | Writing prohibited | |
| | | | | All online operations prohibited | |
| 8-digit | By entering the level at the first character when entering the entry code. | ✓ | ✓ | A (A, 0 to 9 first char.) | 8-digit hexadecimal value beginning with "A" or "0 to 9". [Ex] 0ABCDEF2, AABCD345 |
| | | | | B | 8-digit hexadecimal value beginning with "B". [Ex] B1234567, BABCDEF7 |
| | | | | C | 8-digit hexadecimal value beginning with "C". [Ex] C8904567, CDEF567F |

- *1. Customer keyword / permanent PLC lock included. However, permanent PLC lock does not have a keyword input.
FX3U PLC Ver. 2.61 or later supports the customer keyword and permanent PLC lock.
- *2. GX Works2, GX Developer Ver. 8.89T or later and FX-30P Ver. 1.20 or later supports the customer keyword and permanent PLC lock.

19.13.2 Level-specific restrictions screen list

- ✓: Function enabled
△: Timer and counter setting values cannot be changed.
–: Function disabled

| Function name | | None | Entry Code: 8 digits Label entered as the first character at Entry Code input | | | Entry Code*1 : 16 digits Selected at peripheral device setting screen*2 | | |
|-------------------------------------|-------------------------------|------|--|---|---|--|--------------------|----------------------------|
| | | | A | B | C | All online operations prohibited | Writing prohibited | Reading/writing prohibited |
| Top screen (time display) | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| Monitor/Test | Device | ✓ | – | △ | – | – | – | △ |
| | User (User-registered device) | ✓ | – | ✓ | – | – | – | ✓ |
| ScanTime (Scan time display) | | ✓ | – | ✓ | – | – | – | ✓ |
| PLC status | | ✓ | – | ✓ | – | – | – | ✓ |
| ErrorCheck | | ✓ | – | ✓ | – | – | – | ✓ |
| User message display | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| Display screen protect function | | ✓ | – | – | – | – | – | – |
| Menu display language setting | | ✓ | – | ✓ | – | – | – | ✓ |
| Contrast adjustment | | ✓ | – | ✓ | – | – | – | ✓ |
| Time | Display | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| | Setting | ✓ | – | ✓ | – | – | – | ✓ |
| Entry Code (cancel) | | – | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| Clear all device (Device all-clear) | | ✓ | – | ✓ | – | – | – | ✓ |
| Memory cassette transfer | | ✓ | – | – | – | – | – | – |


- *1. Customer keyword / permanent PLC lock included. However, permanent PLC lock does not have a keyword input.
FX3U PLC Ver. 2.61 or later supports the customer keyword and permanent PLC lock.
- *2. GX Works2, GX Developer Ver. 8.89T or later and FX-30P Ver. 1.20 or later supports the customer keyword and permanent PLC lock.

19.13.3 Keyword (Entry code) storage

The system has no process for recovering registered entry codes which are forgotten.
Therefore, be sure to store the entry codes in a secure location.

19.13.4 Screens requiring keywords (entry codes) for access

At the menu screen, use the [+] / [-] buttons to move the cursor to the "EntryCode" item, then press [OK] to display one of the 4 screens shown below (the screen that displays depends on the entry code status).
If no entry codes are registered, press [ESC] to return to the "menu screen".
To cancel the operation and return to the "top screen (time display)", press [ESC].

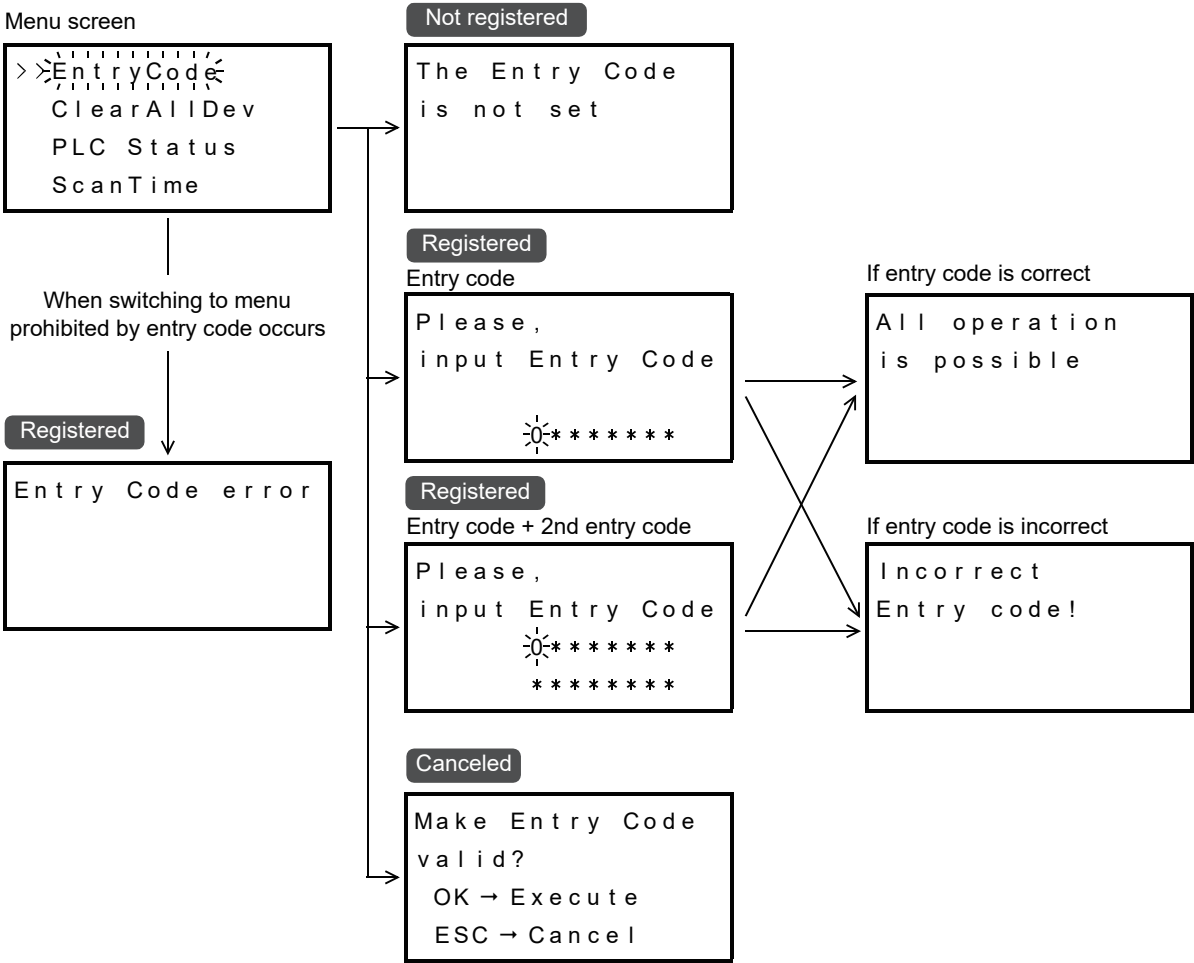


19.13.5 Canceling an keyword (entry code)

- 1) At the menu screen, use the [+] / [-] buttons to move the cursor to the "EntryCode" item, then press [OK] to display the "entry code input screen".


If an entry code has been registered, one of the following screens is displayed.

- If a 16-digit entry code is registered, an 8-digit × 2-line screen (shown at left below) is displayed.
- If an 8-digit entry code is registered, an 8-digit × 1-line screen (shown at right below) is displayed.

16-digit entry code

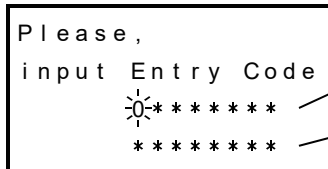


8-digit entry code

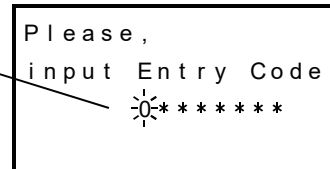


- 2) Use the [+] / [-] buttons to specify the first digit of the entry code, then press [OK] to proceed to the next digit. To cancel the operation and return to the "menu screen", press [ESC].

16-digit entry code

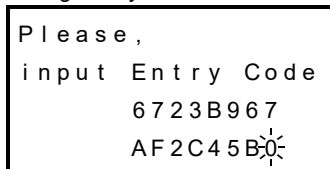

Lowest order digit
(final digit)

8-digit entry code

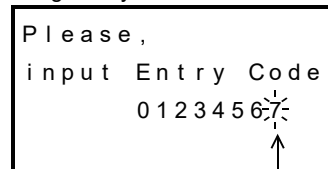

Lowest order digit
(final digit)


| Button | | Operation Description | |
|--------|----------------------------------|---|---|
| ESC | | Cancels the operation and returns to the "menu screen" if pressed when the entry code's left-most digit (highest order digit) is blinking. Cancels the input and moves leftward to the next digit (higher order digit) if pressed when a digit other than the left-most digit is blinking. | |
| - | | Reduces the value (F→E...2→1→0). Hold for 1 second or longer for high-speed reduction. | |
| + | | Increases the value (0→1→2...E→F). Hold for 1 second or longer for high-speed increase. | |
| OK | Highest order digit to 2nd digit | Registers the specified value and moves to the next digit input position. If [OK] is pressed at the lowest order digit, and if the entered entry code is correct, the Entry Code is canceled. | |
| | Lowest order digit (final digit) | Correct Entry Code | An "All operation is possible" message appears, and the Entry Code is canceled. |
| | | Incorrect Entry Code | A "Incorrect Entry Code" message appears. |

- 3) If the [OK] button is pressed at the lowest order position, the entered Entry Code is registered and the message shown to the right appears.


If the "Incorrect Entry Code" message appears, press [ESC] and return to step 1).

- 4) Press [OK] or [ESC] to return to the "menu screen".

If entry code is correct

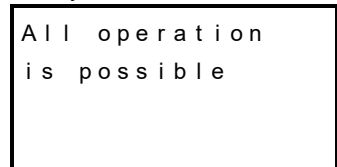

If entry code is incorrect

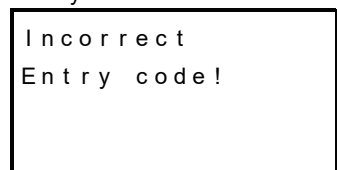

19.13.6 Enabling an entry code

- 1) At the menu screen, use the [+] / [-] buttons to move the cursor to the "EntryCode" item, then press [OK] to display the "enable entry code" screen.
- 2) Press the [OK] button to enable the entry code. Or, to retain the entry code's canceled status, press [ESC].

| Button | Operation Description |
|--------|--|
| ESC | Cancels the operation and returns to the "menu screen". |
| - | Disabled |
| + | Disabled |
| OK | Enables the Entry Code and returns to the "menu screen". |

Make Entry Code
valid?

OK → Execute

ESC → Cancel

19.14 Device All-Clear

The devices listed below can be initialized (contact OFF, or current value to "0") from the "Clear all devices" menu when a PLC STOP status is in effect.

| | |
|---------------------|---|
| Subject devices | Output [Y], auxiliary relay (special relay) [M], state [S], timer [T], counter [C], data register (special data register) [D], extended register [R]. File register [D] is not a subject device. |
| Non-subject devices | Input [X], file register [D], extended file register [ER]. |

19.14.1 Device all-clear operation

- 1) At the menu screen, use the [+] / [-] buttons to move the cursor to the "ClearAllDev" item, then press [OK] to display the "Clear all devices" screen.
To cancel the operation and return to the "top screen (time display)", press [ESC].

Clear
all devices
OK → Execute
ESC → Cancel

- 2) Press the [OK] button to initialize the subject devices. Or, to cancel the operation, press [ESC].
If the PLC is running at this time, a "PLC is running" message is displayed and the all-clear is not executed. In this case, press [OK] or [ESC] to return to the "menu screen".

| Button | Operation Description |
|--------|---|
| ESC | Cancels the operation and returns to the "menu screen". |
| - | Disabled |
| + | Disabled |
| OK | Initializes the subject devices and returns to the "menu screen". |

All device
were cleared

When PLC is running

PLC is running

- 3) Press [OK] or [ESC] to display the "menu screen".

11

High-Speed
Counters

12

Output Wiring

13

Wiring for
Various Uses

14

Test Run,
Maintenance,
Troubleshooting

15

Input/Output
Powered
Extension Units

16

Input/Output
Extension
Blocks

17

Extension
Power Supply
Unit

18

Other Extension
Units and
Options

19

Display Module

20

Terminal Block

19.15 PLC Status

The PLC statuses shown below can be displayed from the "PLC Status" menu.

→ Refer to Subsection 19.15.2 for display details.

| Page Title | Display Item |
|-----------------|--|
| PLC Status(1/3) | <ul style="list-style-type: none"> Version Entry code status |
| PLC Status(2/3) | <ul style="list-style-type: none"> Program memory type Memory cassette's write protect status Program memory capacity |
| PLC Status(3/3) | <ul style="list-style-type: none"> Battery voltage Number of registered comments |

19.15.1 Display operation

- At the menu screen, use the [+] / [-] buttons to move the cursor to the "PLC Status" item, then press [OK] to display the "PLC Status (1/3)" screen.
To cancel the operation and return to the "top screen (time display)", press [ESC].

```
PLC Status ( 1 / 3 )
Ver . 2 . 0 0
All operation
is unrestricted
```

```
PLC Status ( 1 / 3 )
Ver . 2 . 0 0
PLC operation
is limited
```

- Use the [+] / [-] buttons to switch between the PLC Status screen pages.
Press [OK] or [ESC] to return to the "menu screen".

| Button | Operation Description |
|--------|--|
| ESC | Returns to the "menu screen". |
| - | Returns to the previous page. ↳ PLC Status(3/3) → PLC Status(2/3) → PLC Status(1/3) — |
| + | Proceeds to the next page. ↳ PLC Status(1/3) → PLC Status(2/3) → PLC Status(3/3) — |
| OK | Returns to the "menu screen". |


```
PLC Status ( 2 / 3 )
Internal Memory
Protection - -
Capacity 64K
```

```
PLC Status ( 3 / 3 )
Battery      3 . 2 V
Comments
1000 / 2000
```

- Press [OK] or [ESC] to return to the "menu screen".


19.15.2 PLC status display items

1. PLC Status 1/3

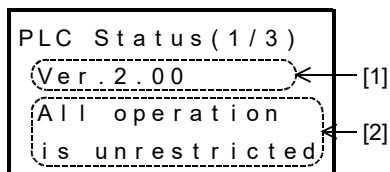


| | Display Content | |
|-----|--|--|
| [1] | Main unit's version information. | |
| [2] | Indicates the PLC's entry code registration status. Messages vary according to the entry code status. When a 16-bit entry code status is "all online operations prohibited", and when an 8-bit entry code status is "level A", the entry code must be canceled in order to view the PLC information. | |
| | Displayed message | PLC status |
| | PLC operation is limited | <ul style="list-style-type: none">For 16-bit entry code: A "writing prohibit" or "reading/writing prohibit" entry code is registered.For 8-bit entry code: A "Level B" or "Level C" entry code is registered. |
| | All operation is unrestricted | The registered entry code has been canceled by an "entry code" menu operation. |
| | The Entry Code is not set | No entry codes have been registered. |
| | Fatal error occurred | → Refer to Subsection 19.24.1 for details. |

2. PLC Status 2/3

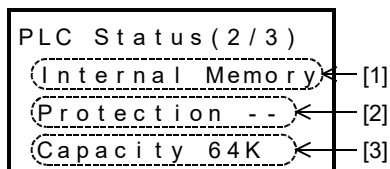

| | Display Content | |
|-----|--|--|
| [1] | Program memory type | |
| | Displayed message | Program memory type |
| | Internal Memory | PLC internal RAM memory |
| | Memory Cassette | Memory cassette flash memory |
| [2] | Memory cassette protect switch status | |
| | Displayed message | Switch Status |
| | Protection switch -- | Internal RAM memory (without protect switch) |
| | Protection switch ON | Memory cassette protect switch is ON |
| | Protection switch OFF | Memory cassette protect switch is OFF |
| [3] | Program memory's max. setting capacity (in step units) | |

3. PLC Status 3/3

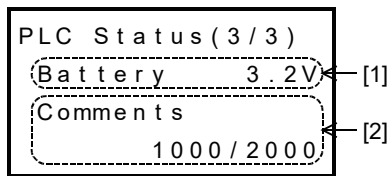

| | Display Content |
|-----|---|
| [1] | Battery voltage |
| [2] | Number of registered comments ([number of registered comments] / [number of parameter-specified comments]) |

19.16 Scan Time (Scan Time Display)

The scan time's current value, minimum value, and maximum value can be displayed from the "ScanTime" menu.

19.16.1 Scan time display operation

- At the menu screen, use the [+] / [-] buttons to move the cursor to the "ScanTime" item, then press [OK] to display the "scan time screen".
To cancel the operation and return to the "top screen (time display)", press [ESC].
- Press [OK] or [ESC] to return to the "menu screen".

| | |
|----------|---------|
| ScanTime | |
| Cur r : | 0 . 7ms |
| Max : | 5 . 6ms |
| Min : | 0 . 6ms |

19.17 Cassette (Memory Cassette Transfers)

Data transfers (and consistency checks) between the internal RAM memory and a connected memory cassette can be performed from the "Cassette" menu when the PLC is in a STOP state.

This menu is disabled, however, if an entry code is registered in the internal RAM. In this case, remove the memory cassette and use the programming tool to cancel the internal RAM's entry code.

| Item | Operation Description |
|----------------|--|
| Cassette←RAM | Copies internal program memory (RAM) data to a connected memory cassette. |
| Cassette→RAM | Copies data from a connected memory cassette to the internal program memory (RAM). |
| Cassette : RAM | Performs a consistency check of the connected memory cassette data and the internal program memory (RAM) data. |

19.17.1 Transfer from internal RAM to memory cassette (Cassette ← RAM)

- 1) At the menu screen, use the [+] / [-] buttons to move the cursor to the "Cassette" item, then press [OK] to display the "memory cassette transfer screen".
To cancel the operation and return to the "top screen (time display)", press [ESC].

```
Memory Cassette
>>Cassette ← RAM
Cassette → RAM
Cassette : RAM
```

- 2) Use the [+] / [-] buttons to move the cursor to the "Cassette ← RAM" item, then press [OK] to display the screen shown to the right.
To cancel the operation and return to the "memory cassette transfer screen", press [ESC].

```
Cassette ← RAM
(W r i t e )
OK → Execute
ESC → Cancel
```

- 3) Press [OK] to begin the transfer.
Or, press [ESC] to cancel the operation.

| Button | Operation Description |
|--------|---|
| ESC | Cancels the operation and returns to the "memory cassette transfer screen". |
| - | Disabled |
| + | Disabled |
| OK | Executes the transfer. |

```
Cassette ← RAM
(W r i t e )
Please wait...
```

- Caution:
Do not turn the PLC power off or perform writing from the programming tool while a program is being transferred by a "memory cassette transfer" menu operation, as these actions could destroy the program, causing incorrect operation of the PLC.

- 4) Press [OK] or [ESC] to return to the "memory cassette transfer screen".

- Result and measures to take:

- The transfer is not executed if a "PLC is running" message appears.
In this case, set the PLC to the STOP state, then perform step 3) described above.

```
PLC is running
```

- The transfer is not executed if a "Transfer failed" message appears.
In this case, turn the power off, check the memory cassette connection, then attempt the operation again from the first step.

```
Cassette ← RAM
(W r i t e )
Transfer
failed
```

- The transfer is not executed if a "Memory Cassette is write-protected" message displays.
In this case, turn the power OFF, set the memory cassette PROTECT switch to OFF, then attempt the operation again from the first step.

```
Memory Cassette
is
write-protected
```

- A "Transfer completed" message appears when the transfer is completed.
When this message appears, press [OK] or [ESC] to display the "Cassette screen".

```
Cassette ← RAM
(W r i t e )
Transfer
completed
```

- 5) Press [ESC] to display the "menu screen".

19.17.2 Transfer from memory cassette to internal RAM (Cassette → RAM)

- 1) At the menu screen, use the [+] / [-] buttons to move the cursor to the "Cassette" item, then press [OK] to display the "memory cassette transfer screen".
To cancel the operation and return to the "top screen (time display)", press [ESC].

```
Memory Cassette
  Cassette ← RAM
> > Cassette → RAM
  Cassette : RAM
```

- 2) Use the [+] / [-] buttons to move the cursor to the "Cassette → RAM" item, then press [OK] to display the screen shown to the right.
To cancel the operation and return to the "memory cassette transfer screen", press [ESC].

```
Cassette → RAM
                      ( Read )
OK → Execute
ESC → Cancel
```

- 3) Press [OK] to begin the transfer.
Or, press [ESC] to cancel the operation.

| Button | Operation Description |
|--------|---|
| ESC | Cancels the operation and returns to the "memory cassette transfer screen". |
| - | Disabled |
| + | Disabled |
| OK | Executes the transfer. |

```
Cassette → RAM
                      ( Read )
Please wait...
```

- Caution:
Do not turn the PLC power off or perform writing from the programming tool while a program is being transferred by a "memory cassette transfer" menu operation, doing so may destroy the program and disorder the PLC.

- 4) Press [OK] or [ESC] to return to the "memory cassette transfer screen".

- Result and measures to take:

- The transfer is not executed if a "PLC is running" message appears.
In this case, set the PLC to the STOP state, then perform the step 3) operation described above.

```
PLC is running
```

- The transfer is not executed if a "Transfer failed" message appears.
In this case, turn the power off, check the memory cassette connection, then attempt the operation again from the first step.

```
Cassette → RAM
                      ( Read )
Transfer
failed
```

- A "Transfer completed" message appears when the transfer is completed.
When this message appears, press [OK] or [ESC] to display the "memory cassette transfer screen".

```
Cassette → RAM
                      ( Read )
Transfer
completed
```

- 5) Press [ESC] to display the "menu screen".

19.17.3 Memory cassette & internal RAM consistency check (Cassette : RAM)

- 1) At the menu screen, use the [+] / [-] buttons to move the cursor to the "Cassette" item, then press [OK] to display the "memory cassette transfer screen".
To cancel the operation and return to the "top screen (time display)", press [ESC].

```
Memory Cassette
  Cassette ← RAM
  Cassette → RAM
> >Cassette : RAM
```

- 2) Use the [+] / [-] buttons to move the cursor to the "Cassette : RAM" item, then press [OK] to display the screen shown at right.
To cancel the operation and return to the "memory cassette transfer screen", press [ESC].

```
Cassette : RAM
              (Verify)
OK → Execute
ESC → Cancel
```

- 3) Press [OK] to begin the consistency check.
Or, press [ESC] to cancel the operation.

| Button | Operation Description |
|--------|---|
| ESC | Cancels the operation and returns to the "memory cassette transfer screen". |
| - | Disabled |
| + | Disabled |
| OK | Executes the consistency check. |

```
Cassette : RAM
              (Verify)
Please wait...
```

- 4) Press [OK] or [ESC] to return to the "memory cassette transfer screen".

- Result and measures to take:
 - The consistency check is not executed if a "PLC is running" message appears.
In this case, stop the PLC, then perform step 3) described above.

```
PLC is running
```

- 5) Press [ESC] to display the "menu screen".

```
Cassette : RAM
              (Verify)
Programs match
```

```
Cassette : RAM
              (Verify)
Programs
don't match
```

11

High-Speed
Counters

12

Output Wiring

13

Wiring for
Various Uses

14

Test Run,
Maintenance,
Troubleshooting

15

Input/Output
Powered
Extension Units

16

Input/Output
Extension
Blocks

17

Extension
Power Supply
Unit

18

Other Extension
Units and
Options

19

Display Module

20

Terminal Block

19.18 System Information (Restrictions From PLC)

Some of the display module functions require system information settings in order to enable program control of these functions. Functions which require the use of system information are listed below.

- Monitor/test function
 - For hexadecimal display of current value:
→ **Refer to Section 19.21 for the setting procedure.**
 - To use user-registered devices:
→ **Refer to Section 19.19 for the setting procedure.**
- Display screen protect function
→ **Refer to Section 19.22 for details.**
- Operation button ON/OFF information
→ **Refer to Section 19.20 for details.**
- User message display function
→ **Refer to Section 19.23 for details.**

19.18.1 System information list

Special data register D8300 and D8301 devices with first numbers specified are assigned as system information devices (data register, auxiliary relay). The data register (excluding special data register) should be specified at the system information's "system signal 1", and the auxiliary relay (excluding special auxiliary relay) should be specified at the system information's "system signal 2". Both D8300 and D8301 have default settings of "-1".

→ **Refer to Section 19.19 to 19.23 for explanations of each system signal.**

1. System signal 1


| Special data register | System Information | Description | Reference |
|-----------------------------------|--------------------|---|-------------------------------|
| D8300 = K□□ Occupies 41 points | D□□ | Devices for user-registered device settings Only data registers can be specified for user-registered devices. | User-registered device 1 type |
| | D□□+1 | | User-registered device 1 No. |
| | D□□+2 | | User-registered device 2 type |
| | D□□+3 | | User-registered device 2 No. |
| | D□□+4 | | User-registered device 3 type |
| | D□□+5 | | User-registered device 3 No. |
| | D□□+6 | | User-registered device 4 type |
| | D□□+7 | | User-registered device 4 No. |
| | D□□+8 | Device for display screen protect function | Section 19.22 |
| | D□□+9 | Device where user message display character strings are saved. Use either character data or the data shown below. | Section 19.23 |
| | ? | <ul style="list-style-type: none"> • Alphanumeric: 20H to 7DH, A1H to DFH ASCII code • Japanese: Shift JIS code | |
| | D□□+40 | | |

2. System signal 2

| Special data register | System Information | Description | Reference |
|----------------------------------|--------------------|--|---|
| D8301 = K△△ Occupies 7 points | M△△ | Operation button ON/OFF information | [OK] button ON/OFF |
| | M△△+1 | | [ESC] button ON/OFF |
| | M△△+2 | | [-] button ON/OFF |
| | M△△+3 | | [+] button ON/OFF |
| | M△△+4 | User message display command | |
| | M△△+5 | Device for specifying the "Monitor/Test" menu's current value and setting the value display format (hexadecimal or decimal). | |
| | M△△+6 | Display screen information | ON during "user-registered device monitoring screen" or "user message" display. |

19.18.2 System information setting program example

The following is a program example in which the system information has been assigned to D50 to D90 and M50 to M56.

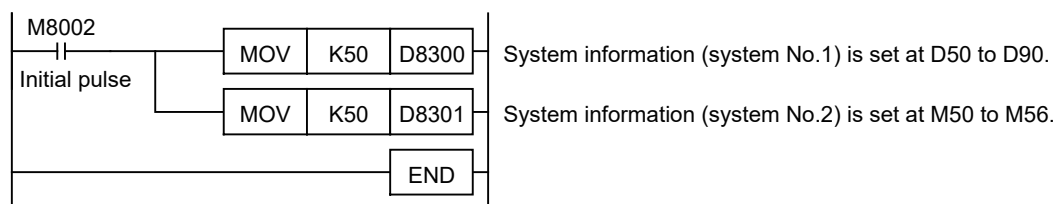

11

High-Speed
Counters

12

Output Wiring

13

Wiring for
Various Uses

14

Test Run,
Maintenance,
Troubleshooting

15

Input/Output
Powered
Extension Units

16

Input/Output
Extension
Blocks

17

Extension
Power Supply
Unit

18

Other Extension
Units and
Options

19

Display Module

20

Terminal Block

19.19 User (User-Registered Device Setting)

The procedure for specifying the devices which display as "User" at the "Monitor/Test" menu is explained below. The user-registered devices are specified by writing the "device type" and "device No." at "D□□ to D□□+7" in the system information (system signal 1).

→ Refer to Section 19.8 for operation.

→ Refer to Section 19.18 for system information setting.

→ Refer to Subsection 19.19.3 to 19.19.5 for program examples.

19.19.1 System information - user-registered device setting

1. System signal 1

| User-Registered Device No. | System Information | Description | Setting Value |
|----------------------------|--------------------|-------------|--|
| 1 | D□□ | Device type | D□□= K7: Data register [D] (16-bit) D□□= K8: Data register [D] (32-bit) |
| | D□□+1 | Device No. | When D□□ = K7, D□□ + 1 = K0 to K8511 When D□□ = K8, D□□ + 1 = K0 to K7998, K8000 to K8510 |
| 2 | D□□+2 | Device type | D□□+2= K7: Data register [D] (16-bit) D□□+2= K8: Data register [D] (32-bit) |
| | D□□+3 | Device No. | When D□□ = K7, D□□ + 3 = K0 to K8511 When D□□ = K8, D□□ + 3 = K0 to K7998, K8000 to K8510 |
| 3 | D□□+4 | Device type | D□□+4= K7: Data register [D] (16-bit) D□□+4= K8: Data register [D] (32-bit) |
| | D□□+5 | Device No. | When D□□ = K7, D□□ + 5 = K0 to K8511 When D□□ = K8, D□□ + 5 = K0 to K7998, K8000 to K8510 |
| 4 | D□□+6 | Device type | D□□+6= K7: Data register [D] (16-bit) D□□+6= K8: Data register [D] (32-bit) |
| | D□□+7 | Device No. | When D□□ = K7, D□□ + 7 = K0 to K8511 When D□□ = K8, D□□ + 7 = K0 to K7998, K8000 to K8510 |

2. System signal 2

| System Information | Setting Content | Display Screen Status |
|--------------------|-----------------|---|
| M△△+6 | ON | "User-registered device" screen, or "user message" screen is displayed. |
| | OFF | Other screen is displayed. |

19.19.2 Precaution when setting 3 or fewer devices

When 3 or fewer devices are set as user-registered devices, the "type" setting for unused devices should be set to a value other than 7 and 8.

→ Refer to Subsection 19.19.4 for a program example.

19.19.3 Program example 1 (when 4 devices are displayed as user-registered devices)

Use this program example as a reference when setting 4 devices as user-registered devices.


1. Operation

In this program example, the 4 devices shown in the table below are set as user-registered devices, with a hexadecimal format specified for the current value display.

- 1) The hexadecimal display format applies only to current values which display at the "user-registered device" menu. Other current values display in a decimal format.
- 2) In this program example, system information is assigned from D50 to D90 and from M50 to M56.

| User-Registered Device No. | Devices Set As User-Registered Devices | Data Length | Display Format |
|----------------------------|--|-------------|----------------|
| 1 | D100 (D101) | 32Bit | Hexadecimal |
| 2 | D102 | 16Bit | |
| 3 | D103 | 16Bit | |
| 4 | D104 | 16Bit | |

2. Program

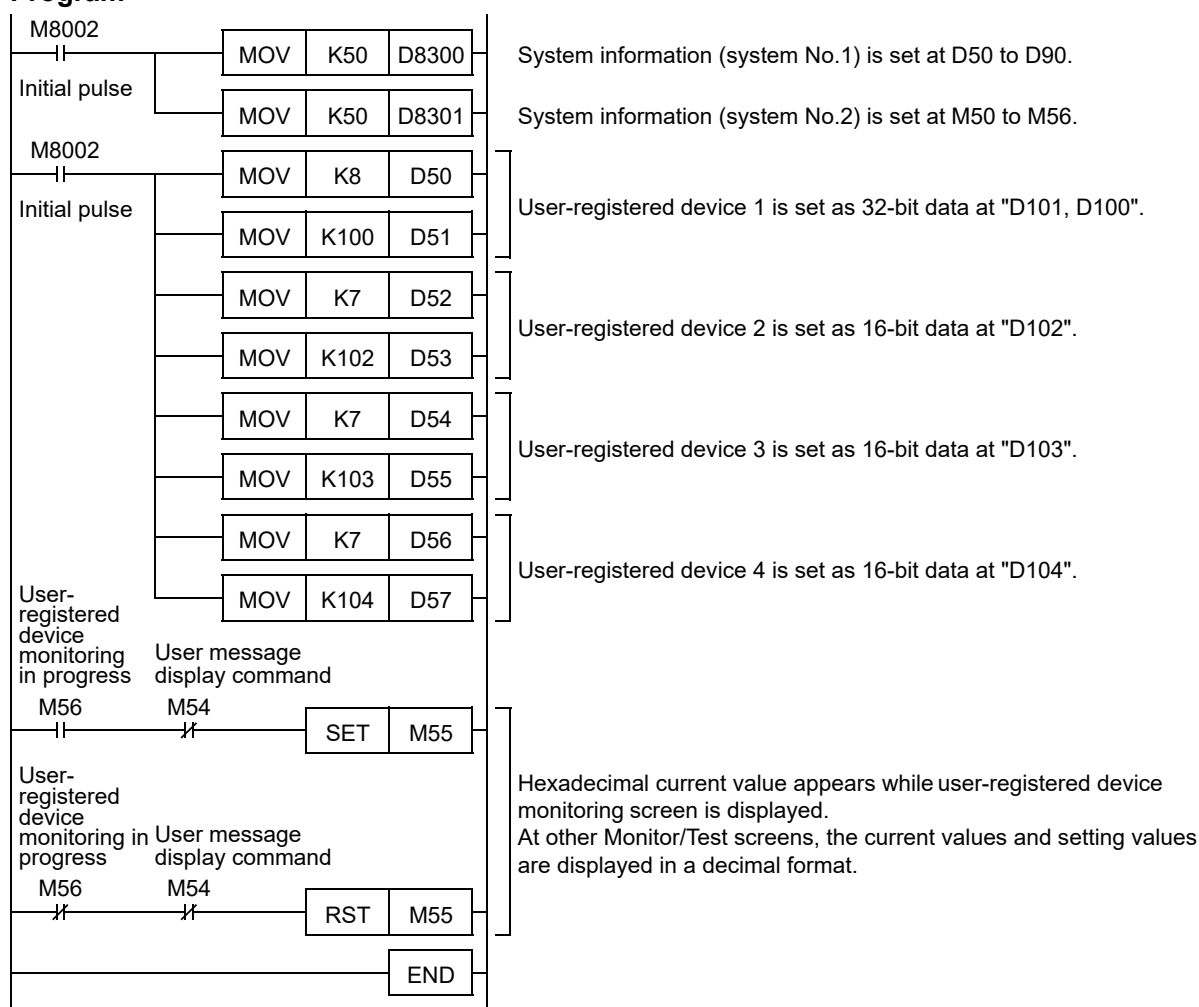

19.19.4 Program example 2 (when 3 or fewer devices are displayed as user-registered devices)

Use this program example as a reference when setting 3 or fewer devices as user-registered devices.

1. Precaution When Setting 3 Or Fewer Devices

When 3 or fewer devices are set as user-registered devices, the "type" setting for unused devices should be set to a value other than 7 and 8.


2. Operation

In this program example, the 3 devices shown in the table below are set as user-registered devices, with a hexadecimal format specified for the current value display.

- 1) The hexadecimal display format applies only to current values which are displayed at the "user-registered device" menu. Other current values are displayed in a decimal format.
- 2) In this program example, system information is assigned from D50 to D90 and from M50 to M56.

| User-Registered Device No. | Devices Set As User-Registered Devices | Data Length | Display Format |
|----------------------------|--|-------------|----------------|
| 1 | D100 (D101) | 32-Bit | Hexadecimal |
| 2 | D102 | 16-Bit | |
| 3 | D103 | 16-Bit | |

3. Program

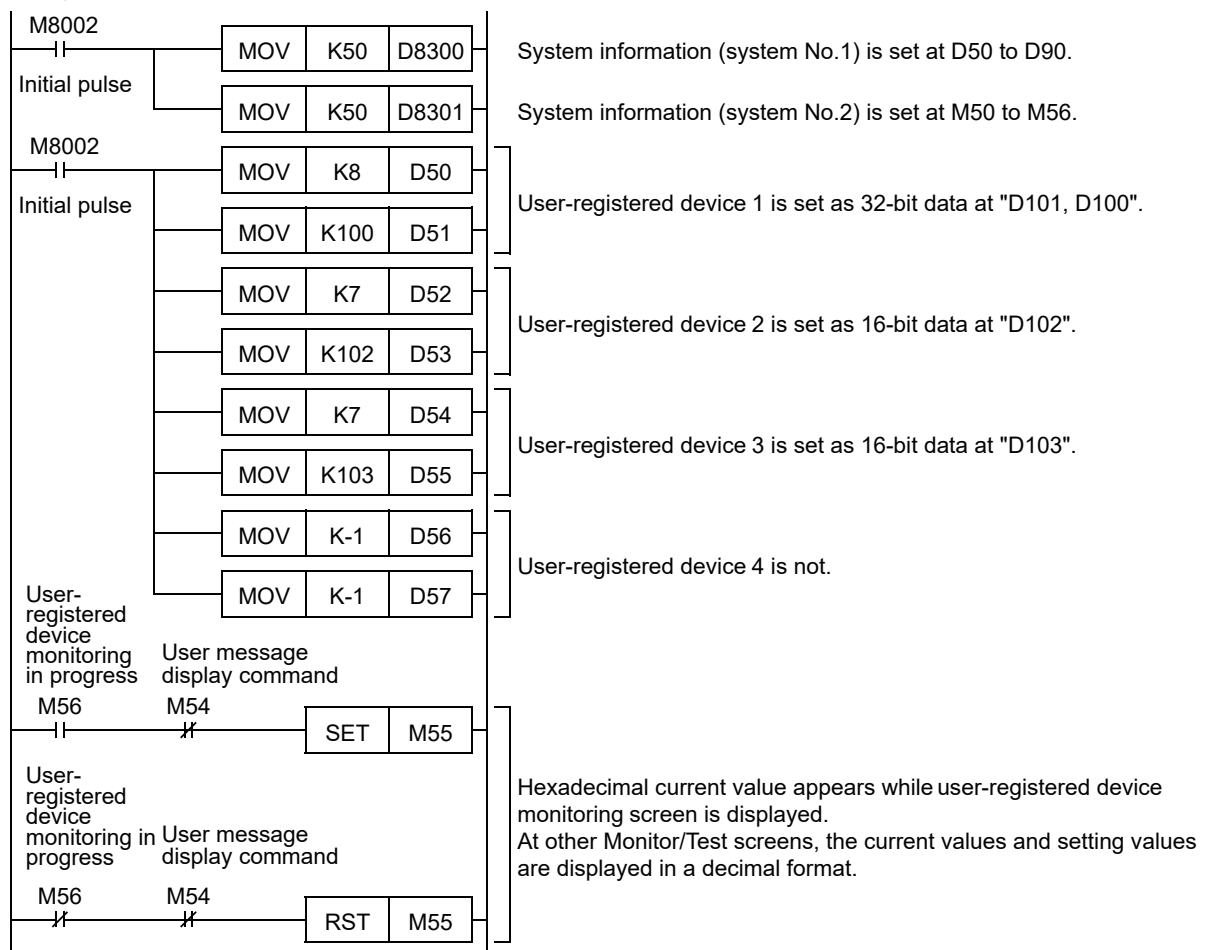

19.19.5 Program example 3 (when 5 or more devices are displayed as user-registered devices)

Use this program example as a reference when setting 5 or more devices as user-registered devices.


1. Operation

In this program example, the 7 devices shown in the table below are set as user-registered devices, with the current value display format set individually for each device.

- 1) The display formats specified here apply only to current values which appear at the "user-registered device" menu. Other current values appear in decimal format.
- 2) In this program example, system information is assigned from D50 to D90 and from M50 to M56.


| User-Registered Device No. | Devices Set As User-Registered Devices | Data Length | Display Format |
|----------------------------|--|-------------|----------------|
| 1 | D100 (D101) | 32-Bit | Hexadecimal |
| 2 | D102 | 16-Bit | Decimal |
| 3 | D103 | 16-Bit | Decimal |
| 4 | D104 | 16-Bit | Decimal |
| 5 | D200 | 16-Bit | Hexadecimal |
| 6 | D210 | 16-Bit | Decimal |
| 7 | D201 | 16-Bit | Hexadecimal |

2. Program

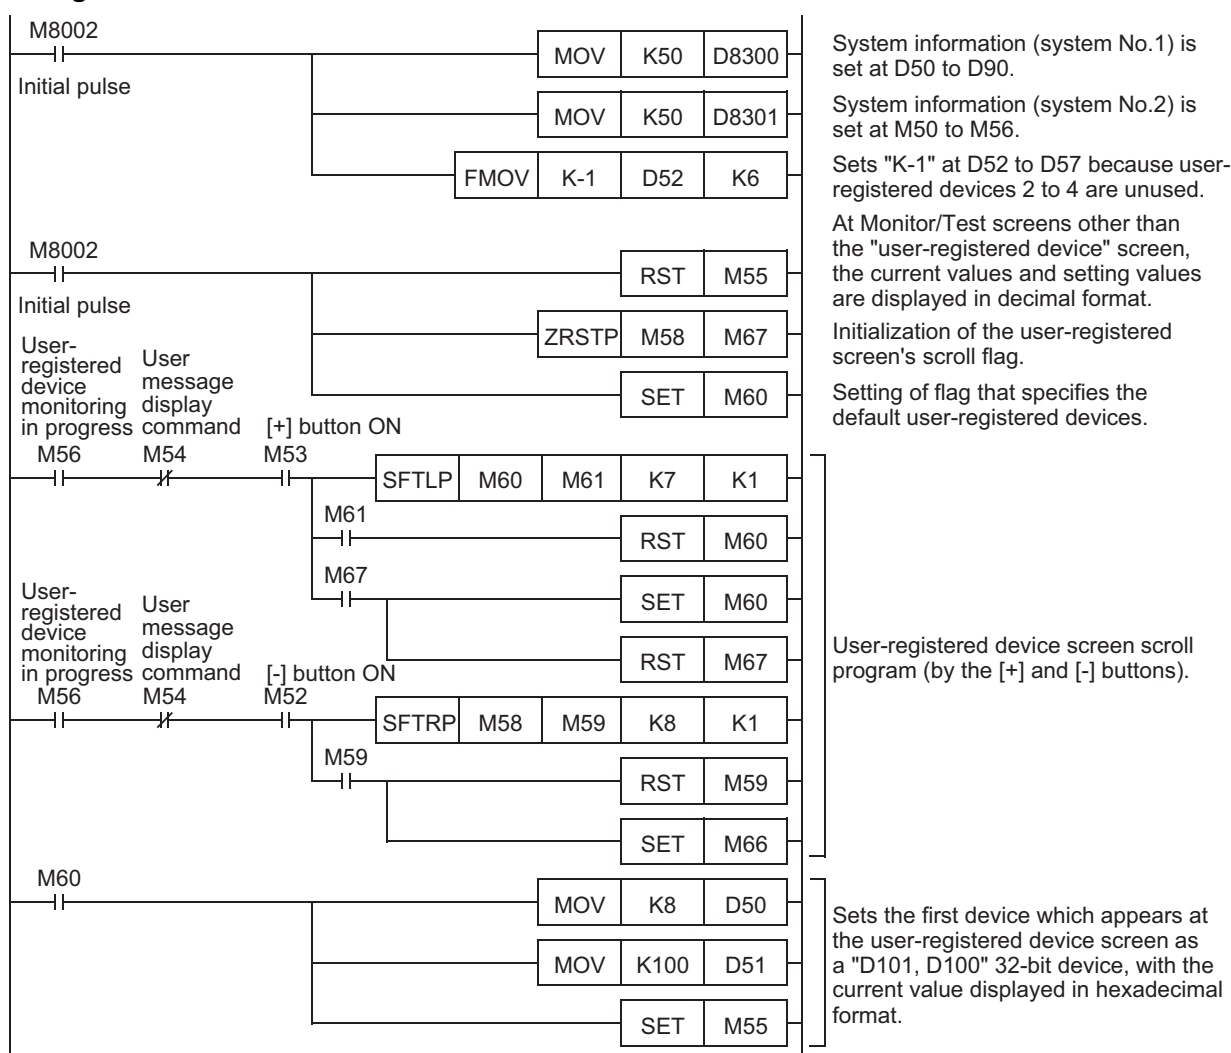

Continued on next page

Continued from previous page

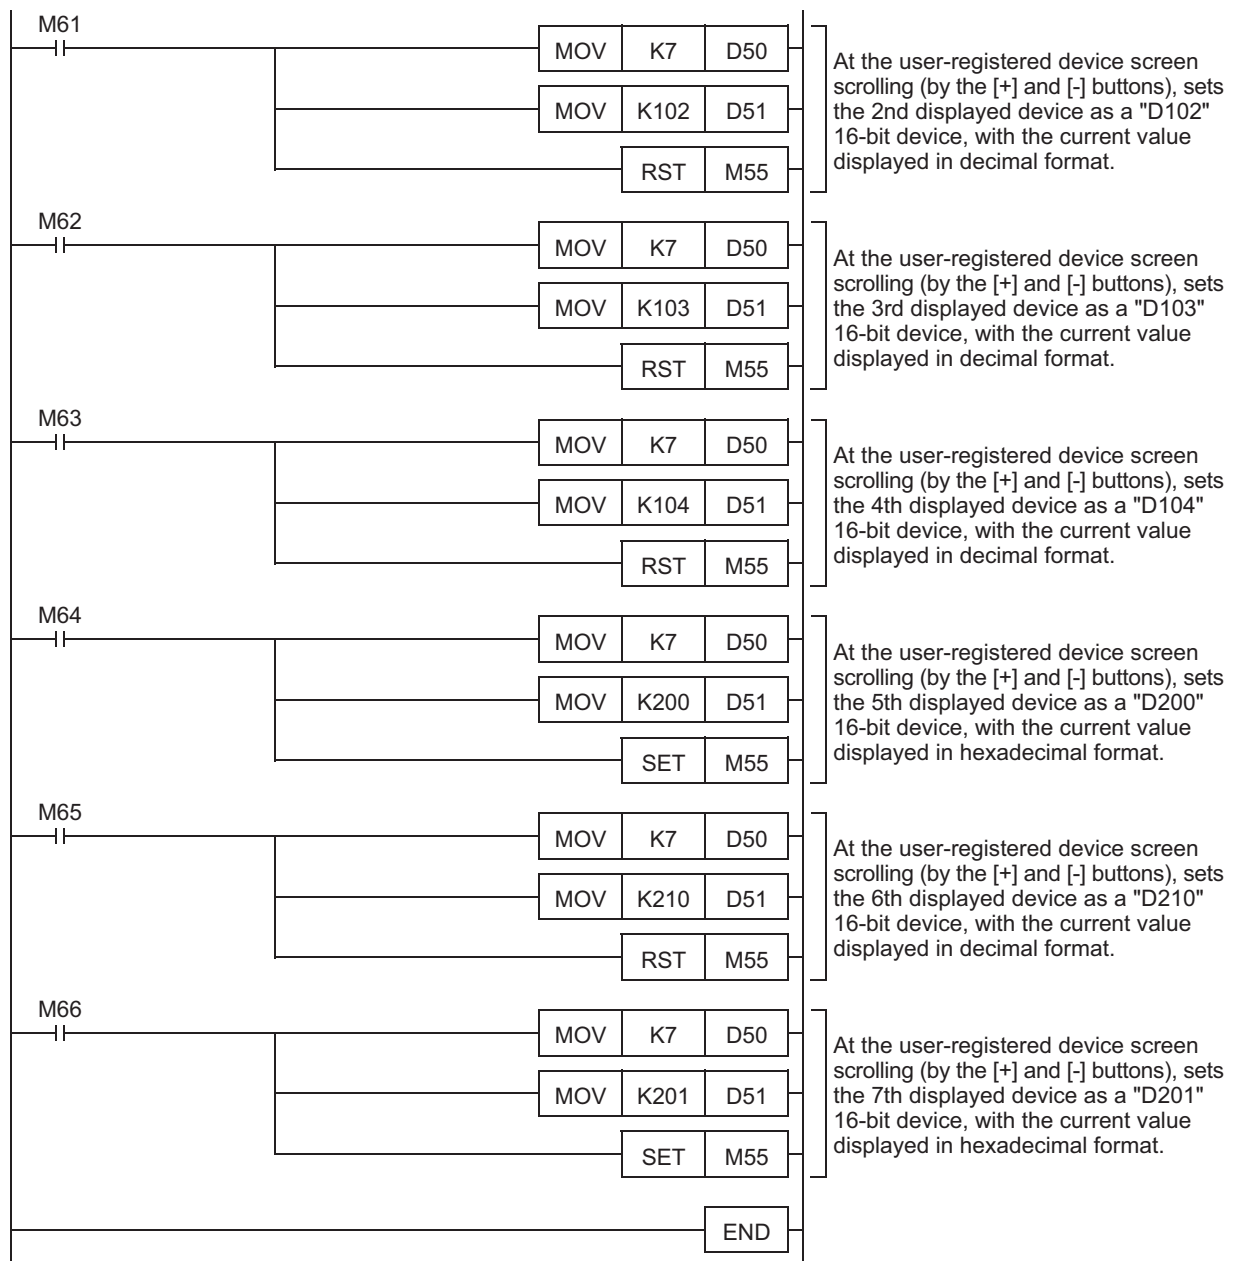

19.20 Operation Button ON/OFF Information

Operation button ON/OFF information can be monitored at the system information (system signal 2) "M△△ to M△△+3" while the PLC is running. Various applications of this function are described below.

→ Refer to Section 19.18 for system information setting.

19.20.1 Various applications

1. Operation button function checks

The programming tool can be used to monitor the system information's (system signal 2) "operation button ON/OFF information", to verify that operation buttons are functioning properly.

2. User-registered device changes

The system information's (system signal 2) "display screen information" and "operation button ON/OFF information" can be used together to change and display 4 or more user-registered devices.

→ Refer to Section 19.19 for the user-registered device setting procedure.

→ Refer to Subsection 19.19.3 to 19.19.5 for program examples.

3. User message changes

The system information's (system signal 2) "display screen information" and "user message display command", and "operation button ON/OFF information" can be used together while a user message is displayed in order to change (by [+] / [-] button operation) the user message that the program displays.

→ Refer to Section 19.23 user message display function.

→ Refer to Subsection 19.23.4 to 19.23.6 for program examples.

19.20.2 System information - operation button ON/OFF information

1. System signal 1

System signal 1 has no system information related to this function.

2. System signal 2

| System Information | Status | Description |
|--------------------|--------|------------------------------|
| M△△ | ON | [OK] button is pressed. |
| | OFF | [OK] button is not pressed. |
| M△△+1 | ON | [ESC] button is pressed. |
| | OFF | [ESC] button is not pressed. |
| M△△+2 | ON | [-] button is pressed. |
| | OFF | [-] button is not pressed. |
| M△△+3 | ON | [+] button is pressed. |
| | OFF | [+] button is not pressed. |

11

High-Speed
Counters

12

Output Wiring

13

Wiring for
Various Uses

14

Test Run,
Maintenance,
Troubleshooting

15

Input/Output
Powered
Extension Units

16

Input/Output
Extension
Blocks

17

Extension
Power Supply
Unit

18

Other Extension
Units and
Options

19

Display Module

20

Terminal Block

19.21 Specifying a Hexadecimal Current Value Display Format

The procedure for specifying a hexadecimal display format for current values which display at the "Monitor/Test" menu explained below. The display format is specified by the system information's (system signal 2) "M□□+5" ON/OFF status.

The display formats which correspond to the ON and OFF statuses are shown in Subsection 19.21.1 below. The display format should either be fixed as decimal or hexadecimal. Switching between the two should be possible by an external operation.

→ Refer to Section 19.18 for system information setting.

19.21.1 System information - specifying a hexadecimal current value display format

1. System signal 1


System signal 1 is unrelated to this function.

2. System signal 2

| System Information | Setting Content | Display Format | Display Subjects |
|--------------------|-----------------|----------------|---|
| M△△+5 | ON | Hexadecimal | Timer (T) [current value], counter (C) [current value], data register (D) [16-bit/32-bit], extended register (R) [16-bit/32-bit], and extended file register (ER) [16-bit/32-bit] |
| | OFF | Decimal | |


19.21.2 Program example 1 (specifying a hexadecimal data display format)

The following program example specifies a hexadecimal display format for current values and setting values which display at the "Monitor/Test" screen. In this program example, system information is assigned from D50 to D90 and from M50 to M56.

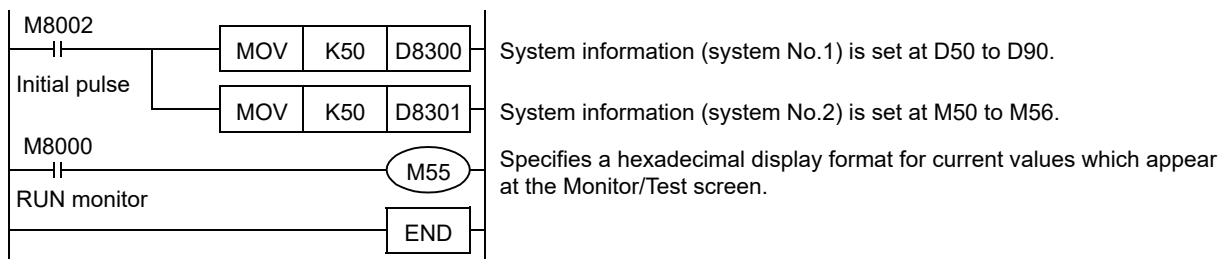

19.21.3 Program example 2 (specifying a decimal data display format)

The following program example specifies a decimal display format for current values and setting values which appear at the "Monitor/Test" screen. In this program example, system information is assigned from D50 to D90 and from M50 to M56.

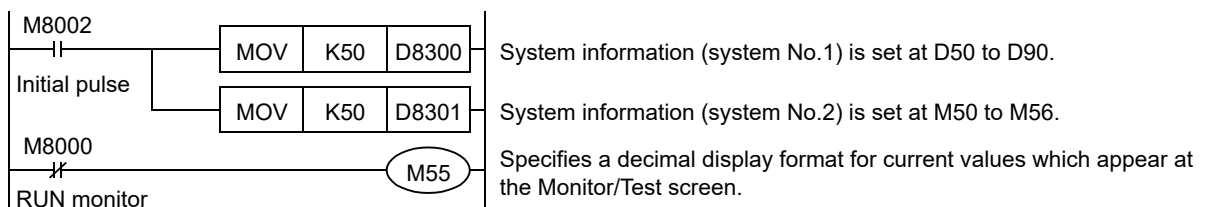

19.22 Display Screen Protect Function

The display screen protect function prevents accidental operation by restricting the display module functions. The display screen protect function is enabled when no entry code is registered. The display screen protect function's protection level is specified in the system information (system signal 1) "D□□+8".

→ Refer to Section 19.4 for display module function.
→ Refer to Subsection 19.13.5 for the "entry code cancel" procedure.
→ Refer to Section 19.18 for system information setting.

19.22.1 Keyword (Entry code) & display screen protect function levels and corresponding restrictions

If an entry code has been registered, that entry code related restriction takes priority over the "display screen protect function"

✓ : Usable
△ : Timer and counter settings cannot be changed
▲ : Only monitor function is usable (test function is not available)
□ : Unusable

| Function Name | | Entry code | | | | Display Screen Protect | | |
|--|-------------------------------|------------|----------------------------------|--------------------------------------|--------------------------------|------------------------|---|---|
| 16-digit entry code*1 setting--> | | None | All online operations prohibited | Writing prohibited | Reading/ writing prohibited | None | 1 | 2 |
| 8-digit entry code setting (level) --> | | | A (All operations prohibited) | B (Read/ Incorrect write protection) | C (Erroneous write prohibited) | | | |
| Top screen (time display) | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| Monitor/Test | Device | ✓ | □ | △ | △ | ✓ | □ | ▲ |
| | User (User-registered device) | ✓ | □ | ✓ | ✓ | ✓ | □ | ▲ |
| ScanTime (Scan time display) | | ✓ | □ | ✓ | ✓ | ✓ | □ | ✓ |
| PLC status | | ✓ | □ | ✓ | ✓ | ✓ | □ | ✓ |
| ErrorCheck | | ✓ | □ | ✓ | ✓ | ✓ | □ | ✓ |
| User message display | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| Display screen protect function | | ✓ | □ | □ | □ | ✓ | ✓ | ✓ |
| Menu display language setting | | ✓ | □ | ✓ | ✓ | ✓ | □ | □ |
| Contrast adjustment | | ✓ | □ | ✓ | ✓ | ✓ | □ | □ |
| Time | Display | ✓ | ✓ | ✓ | ✓ | ✓ | □ | ✓ |
| | Setting | ✓ | □ | ✓ | ✓ | ✓ | □ | □ |
| Entry code (cancel) | | — | ✓ | ✓ | ✓ | ✓ | □ | □ |
| Clear all device (Device all-clear) | | ✓ | □ | ✓ | ✓ | ✓ | □ | □ |
| Memory cassette transfer | | ✓ | □ | □ | □ | ✓ | □ | □ |

*1. Customer keyword / permanent PLC lock included. However, permanent PLC lock does not have a keyword input.
FX3U PLC Ver. 2.61 or later supports the customer keyword and permanent PLC lock.

19.22.2 Relationship between keyword (entry code) & display screen protect function

If the PLC's entry code registration function is used, that entry code related restriction takes priority over the display module's "display screen protect function". The relationship between entry codes and the display screen protect function is shown below.

| Entry code registration | Entry code Status | Display Screen Protect Status | Function Restrictions |
|------------------------------|------------------------------|-------------------------------|---|
| Entry code is registered | Entry code is not canceled | Entry code is being used | Restriction of functions is according to the entry code level. |
| | | Entry code is not being used | |
| | Entry code is canceled | Entry code is being used | All functions are enabled (no restrictions). |
| | | Entry code is not being used | |
| Entry code is not registered | Entry code is being used | | Restriction of functions is according to the display screen protect function. |
| | Entry code is not being used | | All functions are enabled (no restrictions). |

19.22.3 Keyword (Entry code) levels

1. For versions prior to Ver. 2.20

| 8-Digit Entry code Level | Entry code Content | Entry code Input Example |
|-------------------------------------|---|--------------------------|
| A (All operations prohibited) | 8-digit hexadecimal value beginning with "A" or "0 to 9" numeral. | 0ABCDEF2 AABCD345 |
| B (Read/Incorrect write protection) | 8-digit hexadecimal value beginning with "B". | B1234567 BABCDEF7 |
| C (Erroneous write prohibited) | 8-digit hexadecimal value beginning with "C". | C8904567 CDEF567F |

2. For Ver. 2.20 and later

16-digit entry codes^{*1} are used.

If an 8-digit entry code is specified, processing occurs in the same manner as in versions prior to Ver. 2.20.

| 16-Digit Entry code Setting Content | Entry code Content | Entry code Input Example |
|-------------------------------------|------------------------------------|--------------------------------------|
| All online operations prohibited | "A to F", "0 to 9" 16-digit value. | 0ABCDEF262297529 AABCDEFB34523724 |
| Writing prohibited | "A to F", "0 to 9" 16-digit value. | B123456789012345 7ABCDEF73DAEB93A |
| Reading/writing prohibited | "A to F", "0 to 9" 16-digit value. | 2890445234817567 CDEF567FABDFEA46 |

- *1. Customer keyword / permanent PLC lock included. However, permanent PLC lock does not have a keyword input.
FX3U PLC Ver. 2.61 or later supports the customer keyword and permanent PLC lock.

19.22.4 System information - display screen protect function

1. System signal 1

| System Information | Setting Content (Level) | Function Restriction Summary |
|--------------------|-------------------------|---|
| D□□+8 | 1 | All functions except the "user message display" and "top screen (time display)" functions are disabled. |
| | 2 | The following functions are disabled: "monitor/test's 'test' function", "device all-clear", "time change", "contrast setting", "memory cassette transfer", and "menu display language setting". |
| | Other values | All functions are enabled. |


2. System signal 2

System signal 2 is unrelated to this function.

19.22.5 Program example (screen protect function setting)

In this program example, the display screen protect function is set to "level 2". Use this program as a reference when other level settings are specified.

In this program example, system information is assigned from D50 to D90 and from M50 to M56.

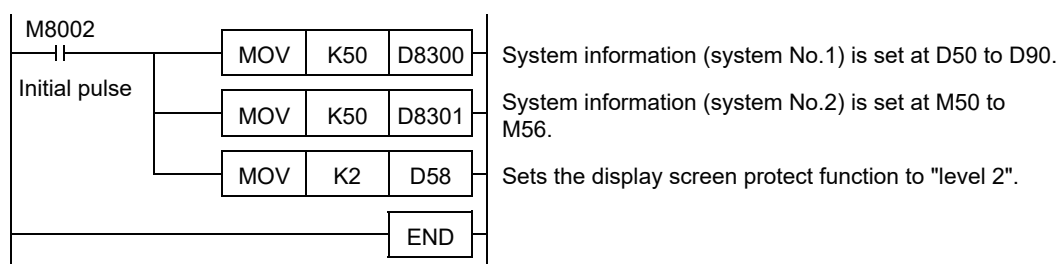

19.22.6 Pointers for using the display screen protect function

The display screen protect function settings should be specified in a sequence program.

- The protect function is enabled by using the display module's "monitor/test function" to change the system information's (system signal 1) "D□□+8" current value to "1" or "2".
- Once the setting is made, it cannot be canceled from the display module.
- To cancel the setting, use the programming tool to change the system information's (system signal 1) "D□□+8" current value to a value other than "1" and "2".
If the system information's (system signal 1) "D□□+8" is set in a general purpose data register, however, the display screen protect function can be canceled by turning the power off, then on again.

19.23 User Message Display Function

The user message display function allows a user-prepared message to appear in place of the "top screen (time display)".

The [OK] button is then pressed to switch from the "user message screen" to the "menu screen".

If using fixed user messages, the messages (created in GX Works2 or GX Developer's "device memory" window) should be saved individually at D□□+9 to D□□+40 of the file register (D), extended register (R), and extended file register (ER).

→ Refer to Section 19.18 for system information setting.

→ Refer to Subsection 19.23.7 for character data input.

19.23.1 System information - user message display function

1. System signal 1

| System Information | Description |
|--------------------|--|
| D□□+9 | Device where the user message character string is saved. |
| ι | |
| D□□+40 | |

1) Displayable Characters & Codes

| Character Type | Code |
|----------------|-----------------------------------|
| Alphanumeric | 20H to 7DH, A1H to DFH ASCII code |
| Japanese | Shift JIS Level 1-, 2 |

2) System information's (system signal 1) D□□+9 to D□□+40 and display position

| | | Row (horizontal character position) | | | | | | | | | | | | | | | |
|------------------------------------|---|-------------------------------------|--------------|-------------|--------------|-------------|--------------|-------------|--------------|-------------|--------------|-------------|--------------|-------------|--------------|-------------|--------------|
| | | [1] | [2] | [3] | [4] | [5] | [6] | [7] | [8] | [9] | [10] | [11] | [12] | [13] | [14] | [15] | [16] |
| Line (vertical character position) | 1 | D□□+9 | | D□□+10 | | D□□+11 | | D□□+12 | | D□□+13 | | D□□+14 | | D□□+15 | | D□□+16 | |
| | | Lower order | Higher order | Lower order | Higher order | Lower order | Higher order | Lower order | Higher order | Lower order | Higher order | Lower order | Higher order | Lower order | Higher order | Lower order | Higher order |
| | 2 | D□□+17 | | D□□+18 | | D□□+19 | | D□□+20 | | D□□+21 | | D□□+22 | | D□□+23 | | D□□+24 | |
| | | Lower order | Higher order | Lower order | Higher order | Lower order | Higher order | Lower order | Higher order | Lower order | Higher order | Lower order | Higher order | Lower order | Higher order | Lower order | Higher order |
| | 3 | D□□+25 | | D□□+26 | | D□□+27 | | D□□+28 | | D□□+29 | | D□□+30 | | D□□+31 | | D□□+32 | |
| | | Lower order | Higher order | Lower order | Higher order | Lower order | Higher order | Lower order | Higher order | Lower order | Higher order | Lower order | Higher order | Lower order | Higher order | Lower order | Higher order |
| | 4 | D□□+33 | | D□□+34 | | D□□+35 | | D□□+36 | | D□□+37 | | D□□+38 | | D□□+39 | | D□□+40 | |
| | | Lower order | Higher order | Lower order | Higher order | Lower order | Higher order | Lower order | Higher order | Lower order | Higher order | Lower order | Higher order | Lower order | Higher order | Lower order | Higher order |

2. System signal 2

| System Information | Setting Content | Screen Display |
|--------------------|-----------------|--|
| M△△+4 | ON | User message display command. This command is enabled only when the "top screen (time display)" is displayed. |
| | OFF | Cancels the user message display, and displays the "top screen (time display)". |
| M△△+6 | ON | ON when the "user-registered device monitor screen" or the "user message screen" is displayed. |
| | OFF | OFF when other screens are displayed. |

19.23.2 Shift JIS code arrangement precautions

To prevent garbled characters when a 2-byte character (shift JIS code) arrangement extends into the next line, the system replaces those characters with 2 spaces.

[Ex] If a full-size character arrangement exists at D□□+16 (higher order) + D□□+17 (lower order), spaces will display at those positions. Therefore, the use of full-size characters (shift JIS code) should be avoided at the shaded areas shown in the above table.

19.23.3 Displaying a word device current value as a message

A numeric value can be displayed at the user message by combining BCD (FNC 18), ASCII (FNC 82), and BMOV (FNC 15) instructions.

→ Refer to Subsection 19.23.6 for a program example.

19.23.4 Program example 1 (user messages display switching)

The following program example is for user messages that appear according to the ON/OFF status of auxiliary relays M100 to M102.

Note that user messages do not appear when a screen other than the "top screen (time display)" is displayed.

1. Operation

The 3 messages shown below appear according to the ON/OFF status of auxiliary relays M100 to M102. When auxiliary relays are ON simultaneously, the messages appear in the No.1 --> No.2 --> No.3 order. The following is a program example in which the system information has been assigned from D50 to D90 and from M50 to M56.

| No.1 M100 is ON | No.2 M101 is ON | No.3 M102 is ON |
|------------------------------------|---|---|
| PLC Processmachinery Ver.2.0 | In preparation Rise to preset temperature | RUNNING Process No.05 Mounting hole Processing |


2. Character data

User message data to be displayed is created in GX Works2 or GX Developer, and is assigned to the file registers shown below.

→ Refer to Subsection 19.23.7 for character data input.

| Message No. | File Register Where Saved |
|-------------|---------------------------|
| 1 | D1000 to D1031 |
| 2 | D1032 to D1063 |
| 3 | D1064 to D1095 |

3. Program

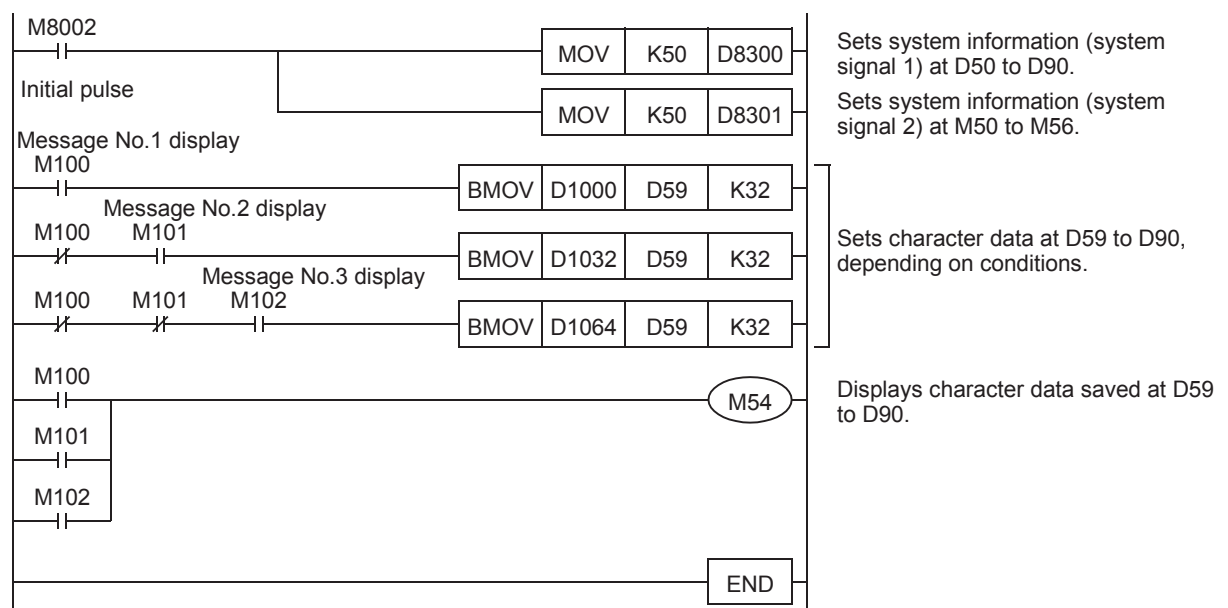


19.23.5 Program example 2 ([+] / [-] buttons for user message switching)

The following is a program example in which the [+] / [-] buttons are used to switch the displayed user message. Note that user messages do not appear when a screen other than the "top screen (time display)" is displayed.

1. Operation

The No.1 message shown below appears when auxiliary relay M100 switches on, and the [+] / [-] buttons can be used at that time to switch to the other messages as shown below.

The system information is assigned from D50 to D90 and from M50 to M56.

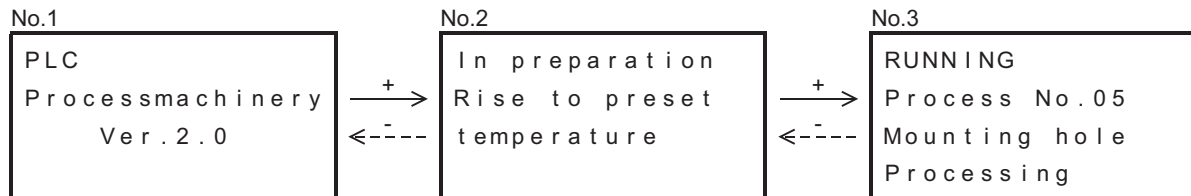


2. Character data

User message data to be displayed is created in GX Works2 or GX Developer, and is assigned to the file registers shown below.

→ Refer to Subsection 19.23.7 for character data input.

| Message No. | File Register Where Saved |
|-------------|---------------------------|
| 1 | D1000 to D1031 |
| 2 | D1032 to D1063 |
| 3 | D1064 to D1095 |

3. Program

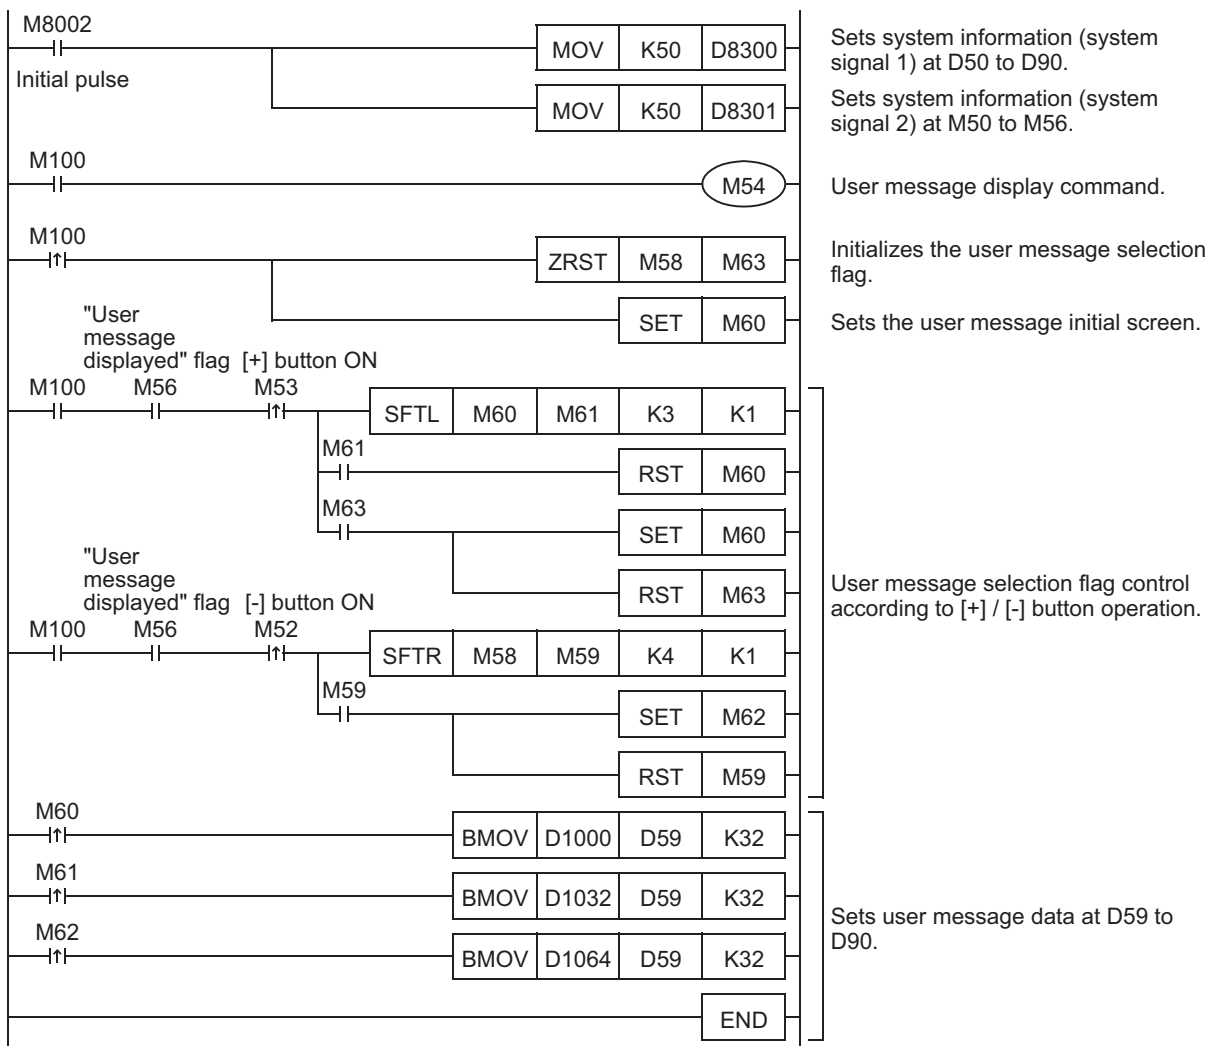

19.23.6 Program example 3 (user messages plus data display)

The following is a program example in which the counter's current value appears at the user message.
Note that user messages do not appear when a screen other than the "top screen (time display)" is displayed.

1. Operation

The message shown below appears when auxiliary relay M100 switches on.

In this program example, the system information is assigned from D50 to D90 and from M50 to M56.

| <Production> | |
|--------------|-----|
| Target | * 1 |
| Production | * 1 |
| Remaining | * 1 |

- *1. The current values of the devices shown below appear as the target quantity, the production quantity, and the remaining quantity.

| Item | Device | Remarks |
|------------|--------|---|
| Target | D200 | Specifies the C0 setting. |
| Production | C0 | Counts the number of M101 ON operations. |
| Remaining | D201 | Remaining (D201) = target (D200) - production (C0). |

2. Displaying a word device current value as a message


A numeric value can be displayed at the user message by combining BCD (FNC 18), ASCII (FNC 82), and BMOV (FNC 15) instructions, etc.

3. Character data


User message data to be displayed is created in GX Works2 or GX Developer, and is assigned to file registers D1000 to D1031.

→ Refer to Subsection 19.23.7 for character data input.

4. Program

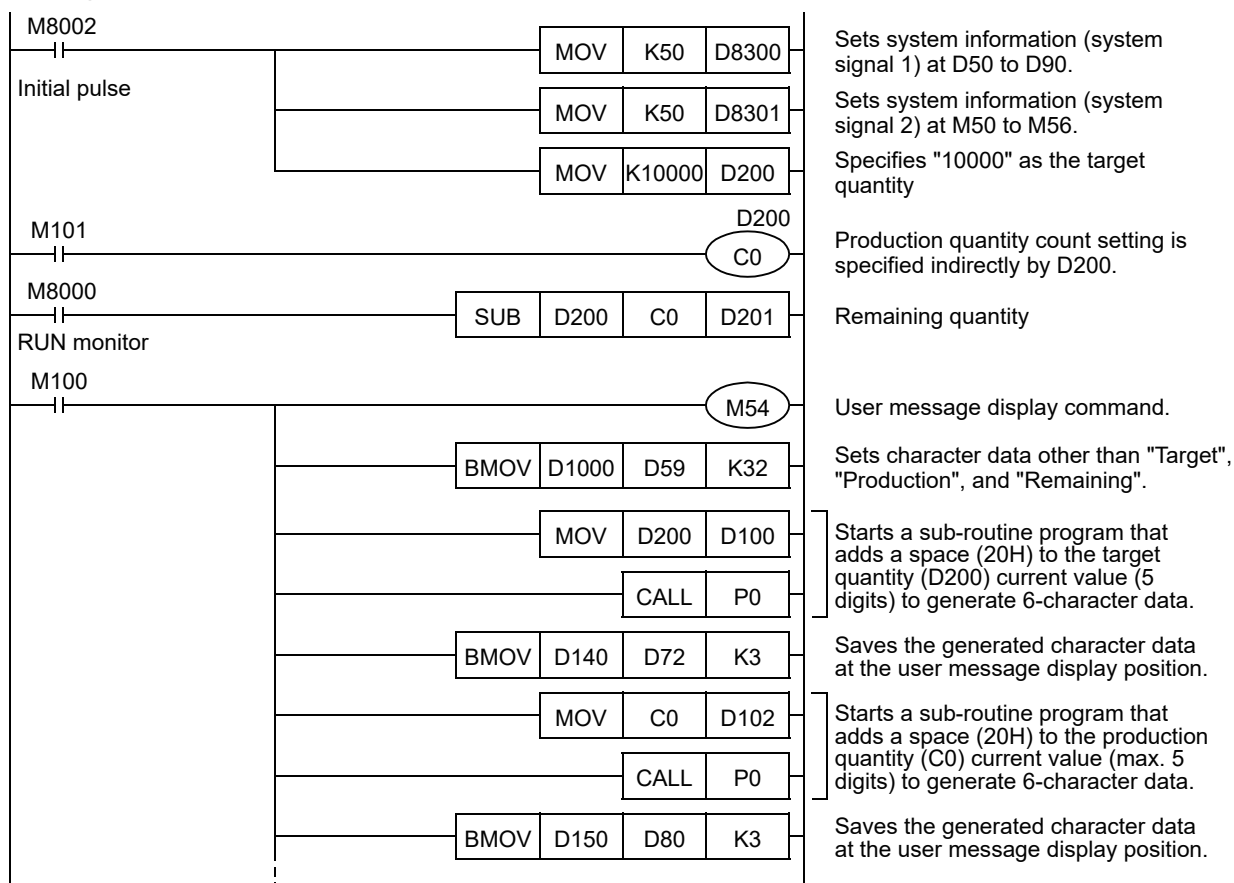


Continued from previous page

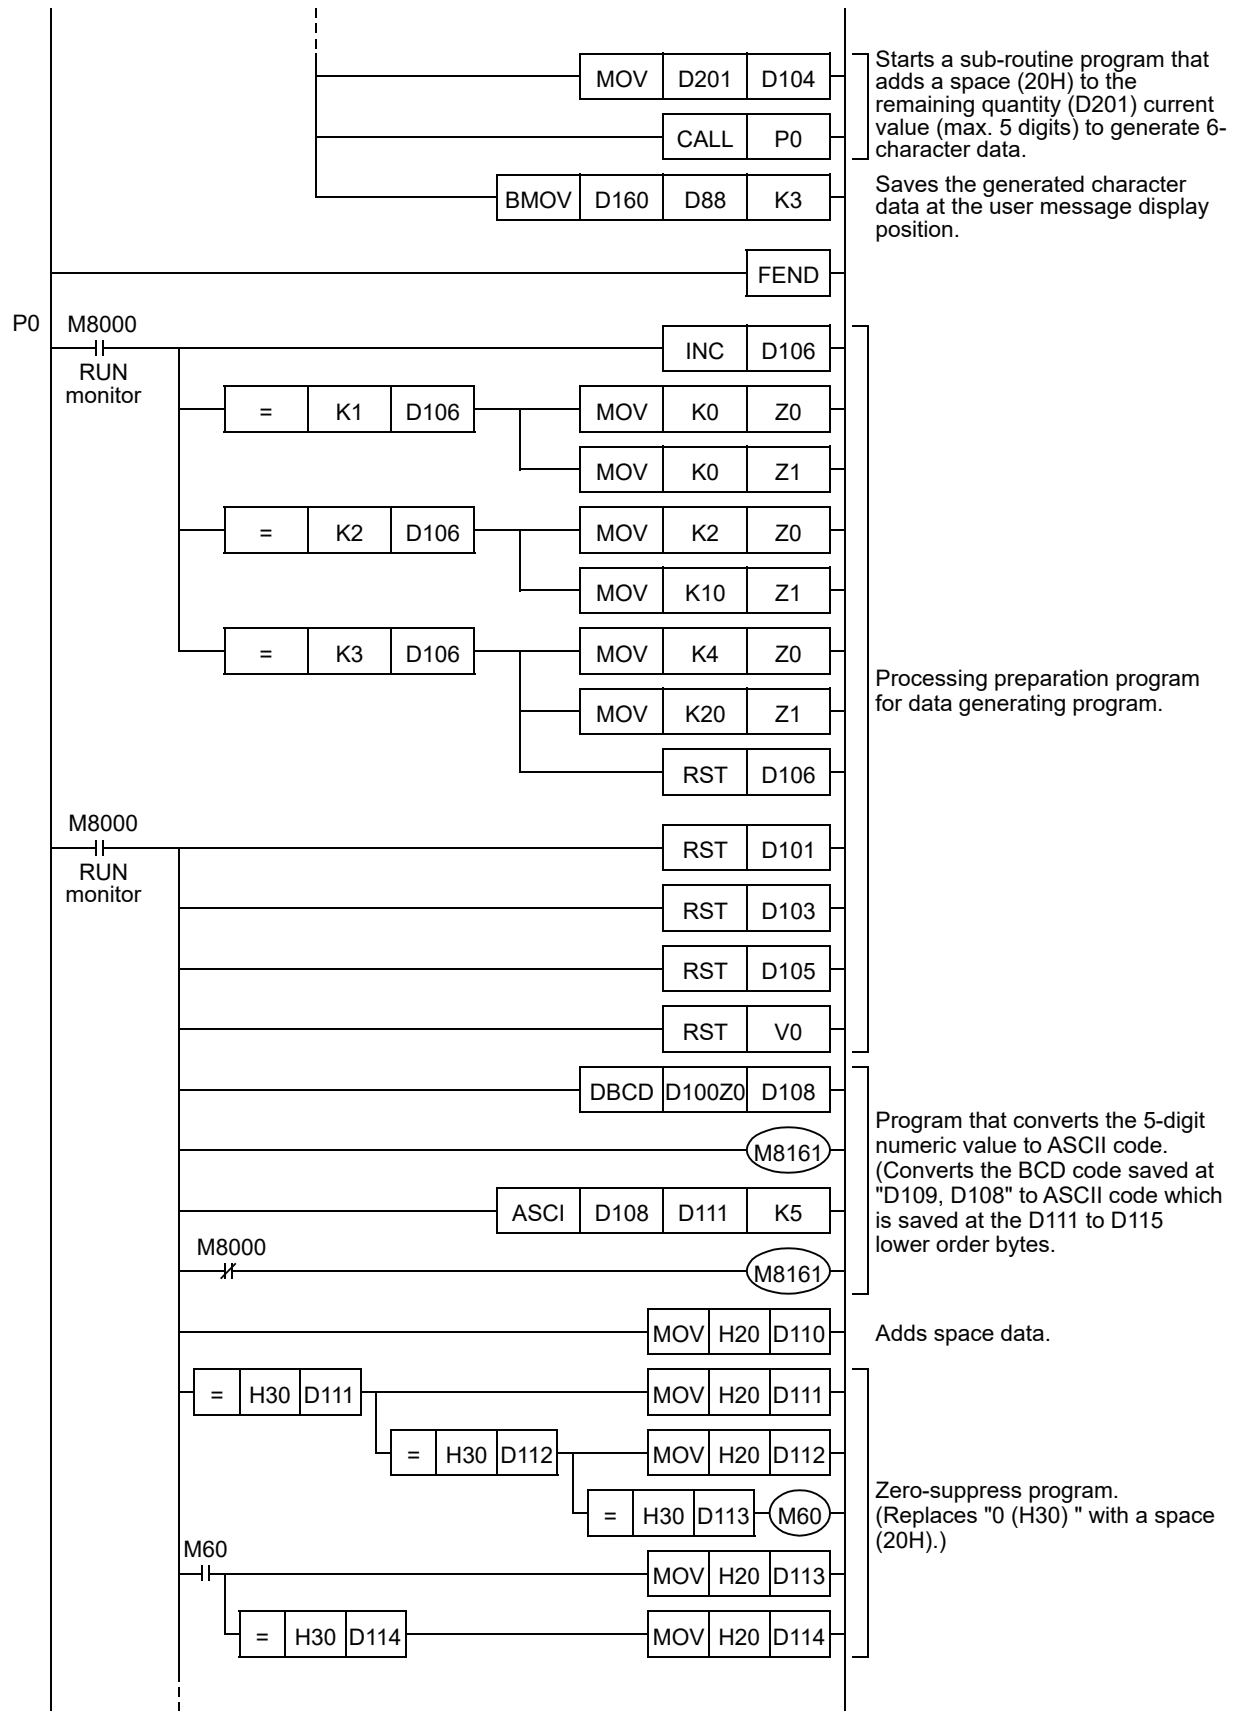

Continued on next page

Continued from previous page

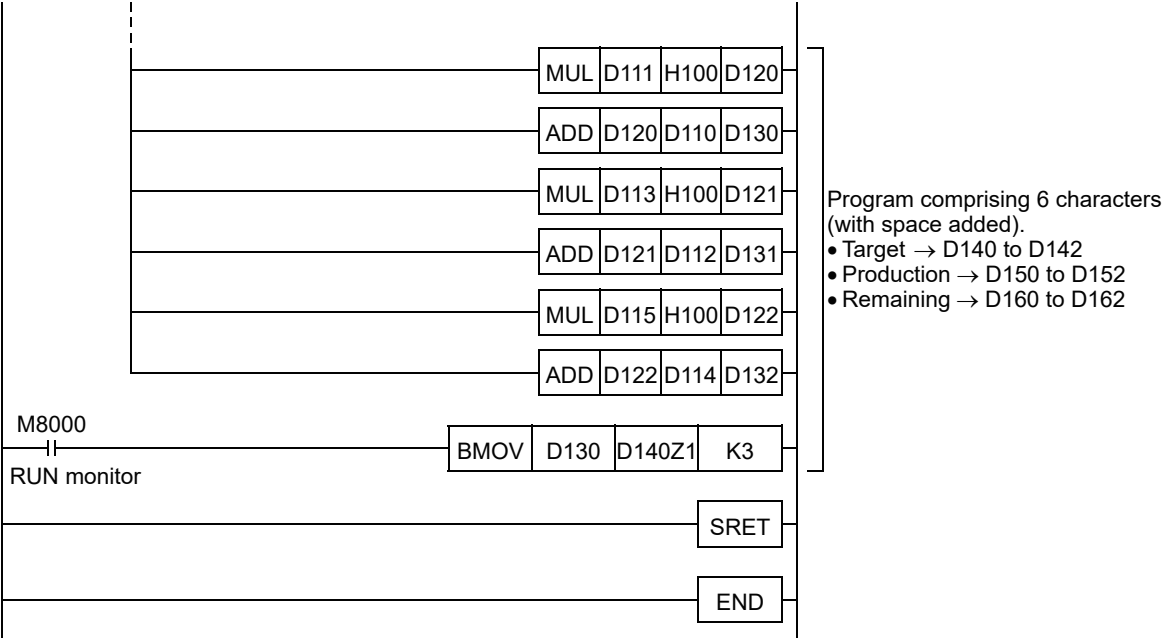

11

High-Speed
Counters

12

Output Wiring

13

Wiring for
Various Uses

14

Test Run,
Maintenance,
Troubleshooting

15

Input/Output
Powered
Extension Units

16

Input/Output
Extension
Blocks

17

Extension
Power Supply
Unit

18

Other Extension
Units and
Options

19

Display Module

20

Terminal Block

19.23.7 Character data input procedure

User messages are entered and assigned to file registers in advance, using GX Works2 or GX Developer. Messages are displayed by a file register → data register transfer, with the message being created in place of the numeric values, etc.

32 data register points are assigned to each message.


This subsection explains the operation procedure using GX Developer.

1 Setting The PLC Model Name

Set the "PLC series" and the "PLC Type" settings as shown below.

| Required Setting Items | Setting Content |
|------------------------|-----------------------|
| PLC series | FXCPU |
| PLC Type | FX3U(C) ^{*1} |

*1. For Ver. 8.18U to 8.24A of GX Developer, the PLC type is FX3UC.


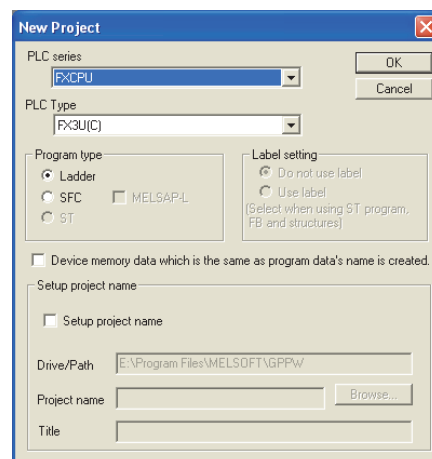


2 Parameter Settings

To specify the parameter settings, select "PLC parameter" from the project data list.


If the project data list does not display, click the toolbar's [Display] - [Project data list] items.

Click the "Memory capacity" tab to perform file register assignments.

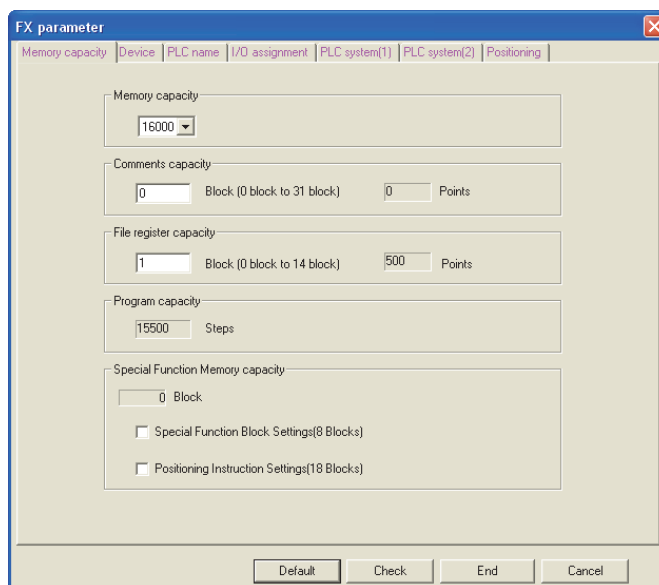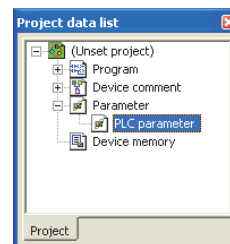


3 Selecting The File Register

1. From the project data list, select "Device memory", then right-click and select [New] at the submenu.
2. The "New" dialog box then appears. Click [OK]

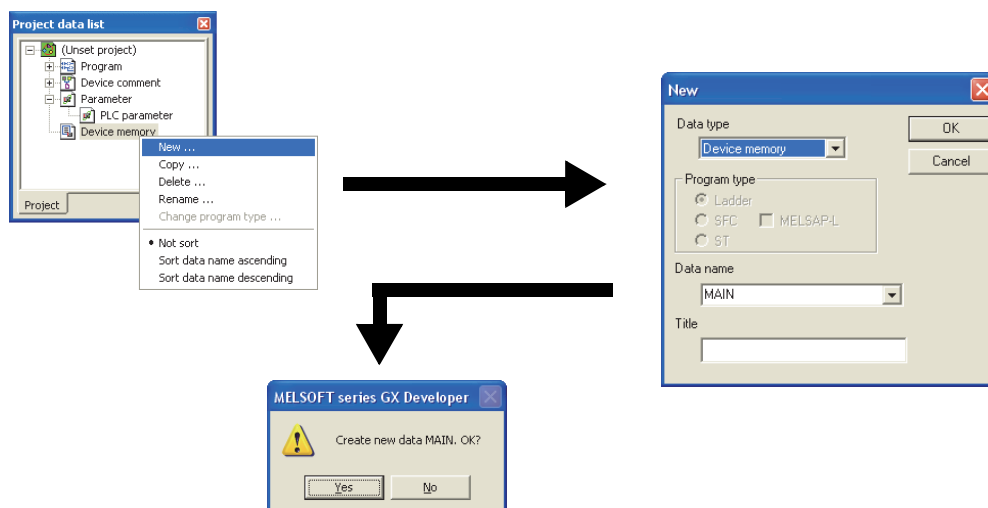

A confirmation dialog box then appears. Click [Yes].

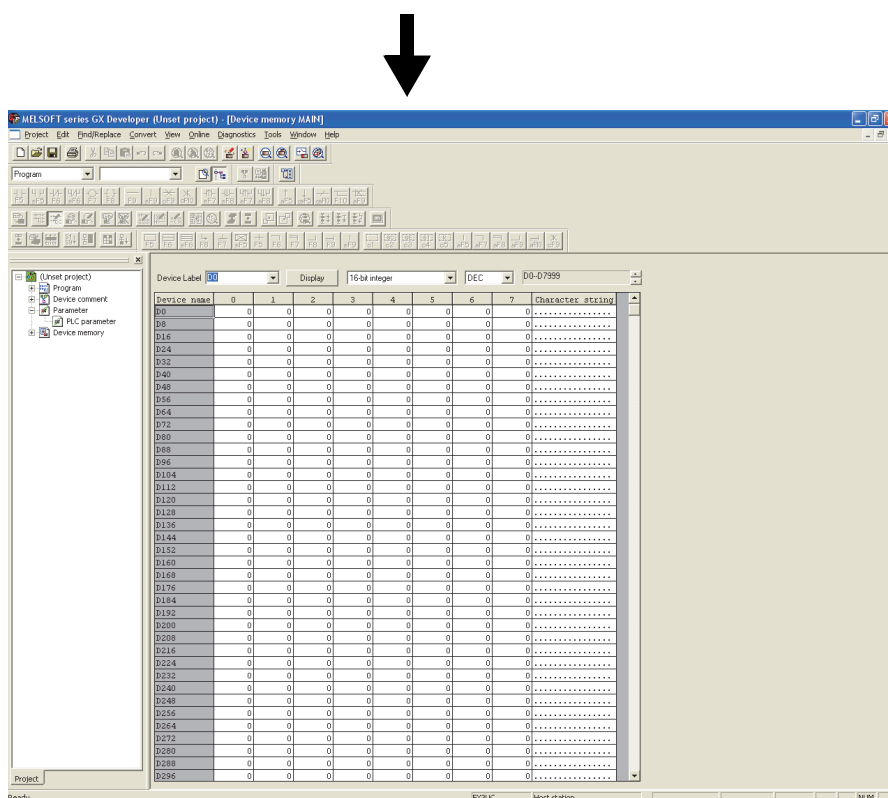

3. Enter "D1000" at the device, then click [Display].
(The first No. of the file register is selected.)
4. At the 2 selection boxes next to the input area, select "16-bit integer" and "HEX".


4 Entering User Messages

As shown in the illustration below, the dialog box for character string inputs is opened by double-clicking on GX Developer's character string display area or the data register display area.

When entering Japanese scripts (Chinese characters, etc.), data input automatically occurs in the lower order → higher order sequence, and the input can therefore be used as it is at the display module's user message display.

The GX Developer screen's character string shown below is for "program example 1".

→ Refer to Subsection 19.23.4 for "program example 1" details.

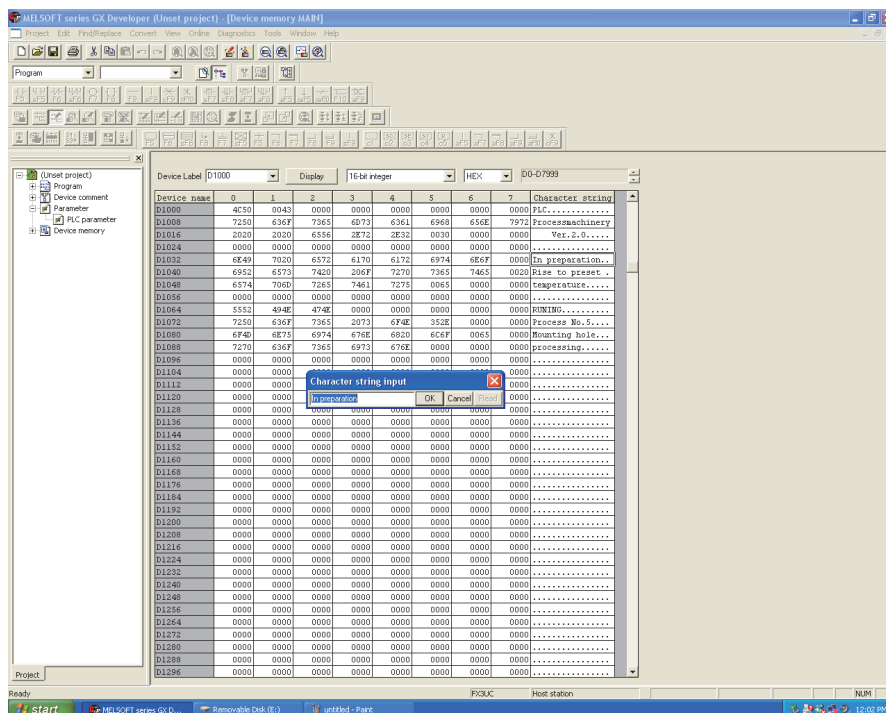

GX Developer character arrangement precautions:

A single line is comprised of 8 data registers.

To prevent garbled characters when a 2-byte character (shift JIS code) arrangement extends into the next line, the system replaces those characters with 2 spaces.

([Ex] spaces display at the end of the 1st line and at the beginning of the 2nd line.)

The condition of the display module line must therefore be considered when entering the characters.

Moreover, the 1st character device should be specified for displaying a 1-line character input.

19.24 Operation Error Messages & Corrective Actions

The following is a list of error messages which the system displays after an operation is performed.

| Relevant Menu Screen | English | Japanese | Corrective Action |
|---|---|----------------------------------|---|
| • All menus | Entry Code error | 操作できません キーワードによって 保護されています | Cancel the entry code, then attempt the operation again. |
| • Entry code | The Entry Code is not set | キーワードが設定されていません | No entry code has been registered. Entry codes cannot be registered from the display module. A programming tool such as GX Works2, etc., is required to register entry codes. |
| | Incorrect Entry Code! | キーワード 不一致 | The entered entry code does not match the registered entry code. Verify the registered entry code, then enter the correct entry code. |
| • Monitor/test (user-registered devices) | The wrong device is registered | 存在しないデバイスが登録されています | A device has been specified that does not exist among the system information (system signal 1) "user-registered device" monitor devices. Check the program. |
| • Monitor/test (setting change) • Memory cassette transfer | PLC is running | RUN中です！ | Stop the PLC, then attempt the operation again. |
| | Memory Cassette is write-protected | 書き込み禁止です | Turn the memory cassette's write-protected status to OFF, then attempt the operation again. |
| | Write error | 書き込みエラー | Writing failed. Verify that the memory cassette is properly installed. |
| | Read error | 読み込みエラー | Reading failed. Verify that the memory cassette is properly installed. |
| • PLC Status • Monitor/test (setting change) • Memory cassette transfer | Fatal error occurred | フェータルエラー発生中 | → Refer to Subsection 19.24.1 for details. |
| • Memory cassette transfer | Memory Cassette is misconnected | メモリカセットが装着されていません | Turn the PLC power OFF, install the memory cassette, then attempt the operation again. |
| | The Entry Code is set in the Internal Memory | 内蔵メモリにキーワードが設定されています | Remove the memory cassette, restart the unit (power OFF→ON), then use the programming tool to cancel the entry code in the internal RAM. |
| • Memory cassette transfer (consistency check) | Programs match | プログラムが一致しています | The memory cassette program matches the RAM program. |
| | Programs don't match | プログラム不一致 | The memory cassette program does not match the RAM program. |
| • Memory cassette transfer (reading/writing) | Transfer completed | 転送成功しました | Transfer successful. |
| | Transfer failed | 転送失敗しました | Check if the memory cassette is properly installed. |
| | The Program size exceeds target memory capacity | 転送先の容量を超えています | The transfer origin memory capacity exceeds the transfer destination memory capacity. Check the memory capacity. |

19.24.1 When a "Fatal error occurred" message appears

Operation is possible with the "Level C" or "Level B" entry code function restrictions.

However, the system is probably in one of the statuses described below. Check these statuses in the order shown below, and take the appropriate corrective action.

1. Perform an error check at the display module, and if an error is active, take the appropriate corrective action.

→ Refer to Section 19.9 for the error check procedure.

If a program error is active:

The fatal error was probably activated due to a program error.

Use the programming tool to correct the program.

→ Refer to Section 14.6 for error codes and corrective actions.

→ Refer to Subsection 14.5.3 for watchdog timer error corrective actions.

If no program error is active:

There may be a problem with the PLC's memory content. Perform the following procedure.

- 1) Use the programming tool to perform a program memory all-clear.
- 2) Rewrite the program.
- 3) Stop the PLC, turn the power ON, display the "PLC Status (1/3)" screen and check to refer to if the "Fatal error occurred" message appears.
 - If the "Fatal error occurred" message appears, perform the corrective action described at item "2" below.
 - If the "Fatal error occurred" message does not appear, set the PLC to a RUN state, then check again if the message appears.

If the message appears, a watchdog timer error has probably occurred. In this case, the program should be re-examined.

→ Refer to Subsection 14.5.3 for watchdog timer error corrective actions.

2. If the "Fatal error occurred" message still appears after performing the corrective actions described in item 1 above, perform the following procedure to check for symptom changes.

Turn the power OFF and disconnect all extension devices.

(extension connectors, extension cables, and expansion board connectors)

Turn the power ON again at the main unit, display the "PLC Status(1/3)" screen again, and check if the "Fatal error occurred" message appears.

- 1) If the "Fatal error occurred" message appears:

The main unit hardware may have failed. Contact your local Mitsubishi Electric representative.
- 2) If the "Fatal error occurred" message does not appear:

Turn the power OFF, connect the extension devices, then operate the system again to check for errors. If the problem persists, there may be main unit or extension device hardware failure. Contact your local Mitsubishi Electric representative.

19.25 Menu Display Characters - Japanese & English Display Character Correspondence Table

| Menu Screen | English | Japanese |
|---|----------------------------|----------------------------|
| Menu | Monitor/Test | モニタ/テスト |
| | ErrorCheck | エラーチェック |
| | LANGUAGE | LANGUAGE |
| | Contrast | コントラスト |
| | ClockMenu | 時刻設定 |
| | EntryCode | キーワード |
| | ClearAllDev | デバイスオールクリア |
| | PLC Status | PCステータス |
| ErrorCheck | ScanTime | スキャンタイム表示 |
| | Cassette | メモリカセット転送 |
| | ErrorCheck | エラーチェック |
| ErrorCheck | No errors | エラー無し |
| | Error code | エラーコード |
| LANGUAGE (Menu display language setting) | LANGUAGE 日本語 English | LANGUAGE 日本語 English |
| Contrast | Contrast | コントラスト |
| ClockMenu (Current time setting) | Current time | 現在時刻 |
| | Clock setting | 時刻変更 |
| | Clock setting | 時刻変更 |
| EntryCode | Current time is set | 現在時刻を設定しました |
| | Please, input Entry Code | キーワードを入力してください |
| | ***** | ***** |
| | Make Entry Code valid? | キーワードを有効にしますか |
| | OK→Execute | OK→実行 |
| | ESC→Cancel | ESC→キャンセル |
| | All operation is possible | 操作が可能になりました |
| | Incorrect Entry Code | キーワード 不一致 |
| ClearAllDev (Device all-clear) | Clear all devices | デバイスオールクリア |
| | OK→Execute | OK→実行 |
| | ESC→Cancel | ESC→キャンセル |
| | All device were cleared | デバイスオールクリアしました |

| Menu Screen | English | Japanese |
|--|-----------------|---|
| PLC Status | PLC status(1) | PLC Status(1/3) Ver. -- -- |
| | | Fatal error occurred |
| | | The Entry Code is not set |
| | | PLC operation is limited |
| | | All operation is unrestricted |
| | | PLC operation is unavailable |
| | PLC status(2) | PLC Status(2/3) |
| | | Internal Memory |
| | | Memory Cassette |
| | | Protection -- |
| | PLC status(3) | Capacity --K |
| | | PLC Status(3/3) |
| | | Battery --V |
| ScanTime (Scan time display) | Comments | |
| | 登録コメント数 | |
| Cassette (Memory cassette transfer) | ScanTime | |
| | Curr: --ms | |
| | Max: --ms | |
| | Min: --ms | |
| | Memory Cassette | |
| | Cassette←RAM | |
| | Cassette→RAM | |
| | Cassette:RAM | |
| | Cassette←RAM | Cassette←RAM (Write) Please wait... |
| | Cassette→RAM | Cassette→RAM (Read) Please wait... |
| Cassette:RAM | Cassette←RAM | Transfer completed |
| | | Transfer failed |
| | Cassette:RAM | Cassette:RAM (Verify) Please wait... |
| | | Programs match |
| | | Programs don't match |
| | | |

11

High-Speed
Counters

12

Output Wiring

13

Wiring for
Various Uses

14

Test Run,
Maintenance,
Troubleshooting

15

Input/Output
Powered
Extension Units

16

Input/Output
Extension
Blocks

17

Extension
Power Supply
Unit

18

Other Extension
Units and
Options

19

Display Module

20

Terminal Block

20. FX-16/32E*-*-TB (Terminal Block)

DESIGN PRECAUTIONS



WARNING

- Make sure to have the following safety circuits outside of the PLC to ensure safe system operation even during external power supply problems or PLC failure.
Otherwise, malfunctions may cause serious accidents.
 - 1) Most importantly, have the following: an emergency stop circuit, a protection circuit, an interlock circuit for opposite movements (such as normal vs. reverse rotation), and an interlock circuit (to prevent damage to the equipment at the upper and lower positioning limits).
 - 2) Note that when the PLC CPU detects an error, such as a watchdog timer error, during self-diagnosis, all outputs are turned off. Also, when an error that cannot be detected by the PLC CPU occurs in an input/output control block, output control may be disabled.
External circuits and mechanisms should be designed to ensure safe machinery operation in such a case.
 - 3) Note that the output current of the 24V DC service power supply varies depending on the model and the absence/presence of extension blocks. If an overload occurs, the voltage automatically drops, inputs in the PLC are disabled, and all outputs are turned off.
External circuits and mechanisms should be designed to ensure safe machinery operation in such a case.
 - 4) Note that when an error occurs in a relay, triac or transistor output device, the output could be held either on or off.
For output signals that may lead to serious accidents, external circuits and mechanisms should be designed to ensure safe machinery operation in such a case.

DESIGN PRECAUTIONS



CAUTION

- Do not bundle the control line together with or lay it close to the main circuit or power line. As a guideline, lay the control line at least 100mm (3.94") or more away from the main circuit or power line.
Noise may cause malfunctions.
- Install module so that excessive force will not be applied to peripheral device connectors.
Failure to do so may result in wire damage/breakage or PLC failure.

SECURITY PRECAUTIONS



WARNING

- To maintain the security (confidentiality, integrity, and availability) of the programmable controller and the system against unauthorized access, denial-of-service (DoS) attacks, computer viruses, and other cyberattacks from unreliable networks and devices via network, take appropriate measures such as firewalls, virtual private networks (VPNs), and antivirus solutions.

INSTALLATION PRECAUTIONS



WARNING

- Make sure to cut off all phases of the power supply externally before attempting installation or wiring work.
Failure to do so may cause electric shock or damage to the product.

INSTALLATION PRECAUTIONS



- Use the product within the generic environment specifications described in section 4.1 of this manual. Never use the product in areas with excessive dust, oily smoke, conductive dusts, corrosive gas (salt air, Cl₂, H₂S, SO₂ or NO₂), flammable gas, vibration or impacts, or expose it to high temperature, condensation, or rain and wind. If the product is used in such conditions, electric shock, fire, malfunctions, deterioration or damage may occur.
- Do not touch the conductive parts of the product directly. Doing so may cause device failures or malfunctions.
- Install the product securely using a DIN rail or mounting screws.

| | |
|--|-----------------------------|
| FX2N-10GM, FX2N-20GM, and terminal block | DIN rail only |
| Main unit, FX2N Series I/O extension unit/block, and FX0N/FX2N/FX3U Series special extension block/special adapter | DIN rail or direct mounting |

- Install the product on a flat surface. If the mounting surface is rough, undue force will be applied to the PC board, thereby causing nonconformities.
- When drilling screw holes or wiring, make sure that cutting and wiring debris do not enter the ventilation slits. Failure to do so may cause fire, equipment failures or malfunctions.
- Be sure to remove the dust proof sheet from the PLC's ventilation port when installation work is completed. Failure to do so may cause fire, equipment failures or malfunctions.
- Connect the extension cables, peripheral device cables, input/output cables and battery connecting cable securely to their designated connectors. Loose connections may cause malfunctions.
- Turn off the power to the PLC before attaching or detaching the following devices. Failure to do so may cause device failures or malfunctions.
 - Peripheral devices, display modules, expansion boards and special adapters
 - Extension units/blocks and FX Series terminal blocks
 - Battery and memory cassette

WIRING PRECAUTIONS



- Make sure to cut off all phases of the power supply externally before attempting installation or wiring work. Failure to do so may cause electric shock or damage to the product.
- Make sure to attach the terminal cover, offered as an accessory, before turning on the power or initiating operation after installation or wiring work. Failure to do so may cause electric shock.
- The temperature rating of the cable should be 80°C or more.

WIRING PRECAUTIONS



- Connect the AC power supply wiring to the dedicated terminals described in this manual. If an AC power supply is connected to a DC input/output terminal or DC power supply terminal, the PLC will burn out.
- Connect the DC power supply wiring to the dedicated terminals described in this manual. If an AC power supply is connected to a DC input/output terminal or DC power supply terminal, the PLC will burn out.
- Do not wire vacant terminals externally. Doing so may damage the product.
- When drilling screw holes or wiring, make sure that cutting and wiring debris do not enter the ventilation slits. Failure to do so may cause fire, equipment failures or malfunctions.
- Make sure to properly wire to the FX Series terminal blocks in accordance with the following precautions. Failure to do so may cause electric shock, equipment failures, a short-circuit, wire breakage, malfunctions, or damage to the product.
 - The disposal size of the cable end should follow the dimensions described in the manual.
 - Tightening torque should follow the specifications in the manual.
 - Tighten the screws using a Phillips-head screwdriver No.2 (shaft diameter 6mm (0.24") or less). Make sure that the screwdriver does not touch the partition part of the terminal block.

11

High-Speed
Counters

12

Output Wiring

13

Wiring for
Various Uses

14

Test Run,
Maintenance,
Troubleshooting

15

Input/Output
Powered
Extension Units

16

Input/Output
Extension
Blocks

17

Extension
Power Supply
Unit

18

Other Extension
Units and
Options

19


Display Module

20

Terminal Block

20.1 Overview

A terminal block is used to convert connector type input/output terminals into a terminal block. Moreover, dedicated input and output terminal blocks (built-in element types) can be used to receive AC input signals for conversion to relay / transistor / triac output types.

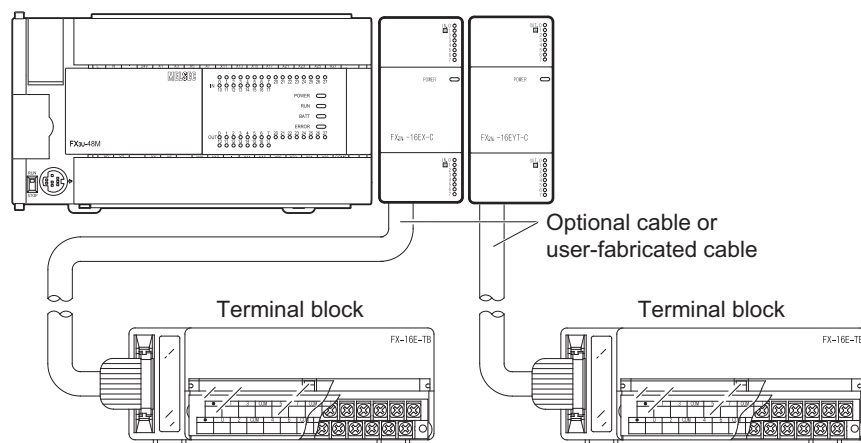

20.1.1 Product configuration

The connection destinations shown below are products which can be connected by "connector ⇔ connector" cables. An individual-wire type can also be used for wiring to the terminal blocks of PLC-side input/output products.

| Model Name | Number of Input Points | Number of Output Points | Function | Connection Destination | Drive Power Supply |
|-----------------|---|-------------------------|--|--|--------------------|
| FX-16E-TB | 16 input points or 16 output points | | Connects directly to PLC input/output terminals. | FX2N-16EX-C (sink input) FX2N-16EYT-C (sink output) | *1 |
| FX-32E-TB | 32 input points, 32 output points, or 16 input & 16 output points | | | | |
| FX-16EX-A1-TB*2 | 16 | — | 100V AC input type | FX2N-16EX-C (sink input) | *4 |
| FX-16EYR-TB*3 | | 16 | Relay output type | FX2N-16EYT-C (sink output) | 24V DC 80 mA |
| FX-16EYS-TB*3 | — | 16 | Triac output type | FX2N-16EYT-C (sink output) | 24V DC 112 mA |
| FX-16EYT-TB*3 | — | 16 | Transistor output (sink) type | FX2N-16EYT-C (sink output) | 24V DC 112 mA |
| FX-16EYT-H-TB*3 | — | 16 | Transistor output (sink) type | FX2N-16EYT-C (sink output) | 24V DC 112 mA |

- *1. A power supply for the input circuit is required when connected to the FX2N-16EX-C. The current consumption is shown in the table below.

| | Power Supply Voltage | Current Consumption |
|-------------|----------------------|---------------------|
| FX2N-16EX-C | 24V DC | 112 mA |

- *2. The applications shown below are not supported.

| | Unsupported Applications |
|-----------------------|--|
| High-speed processing | High-speed counter, input interruption, pulse catch, speed detection (SPD) instruction |
| Time division input | Input matrix (MTR) instruction, hexadecimal input (HKY) instruction, digital switch (DSW) instruction, arrow switch (ARWS) instruction |
| Other | Refresh and filter adjust (REFF) instruction, ten key input (TKY) instruction, absolute current value read (ABS) instruction |

- *3. The applications shown below are not supported.


| | Unsupported Applications |
|----------------------|---|
| Pulse output | Pulse Y output (PLSY) instruction, acceleration/deceleration setup (PLSR) instruction, pulse width modulation (PWM) instruction, DOG search zero return (DSZR) instruction, interruption positioning (DVIT) instruction, batch data positioning mode (TBL) instruction, absolute current value read (ABS) instruction, zero return (ZRN) instruction, variable speed pulse output (PLSV) instruction, drive to increment (DRVI) instruction, drive to absolute (DRVA) instruction |
| Time division input | Input matrix (MTR) instruction, hexadecimal input (HKY) instruction, digital switch (DSW) instruction, arrow switch (ARWS) instruction |
| Time division output | Seven segment with latch (SEGL) instruction, print (ASCII Code) (PR) instruction |

- *4. A power supply for the input circuit is required when connected to the FX2N-16EX-C. The current consumption is shown in the table below.


| | Power Supply Voltage | Current Consumption |
|-------------|----------------------|---------------------|
| FX2N-16EX-C | 24V DC | 160 mA |

20.2 External Dimensions & Component Names


FX-16E-TB

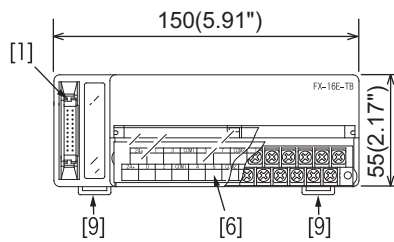


FX-32E-TB

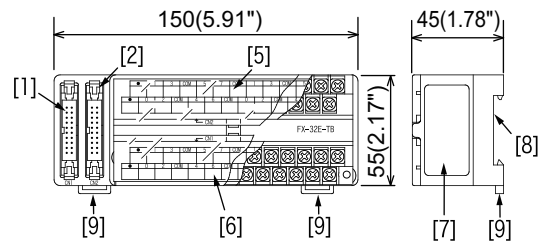

FX-16EX-A1-TB

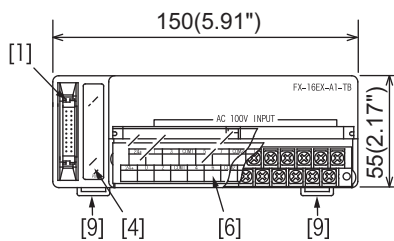

FX-16EYR-TB
FX-16EYS-TB
FX-16EYT-TB, FX-16EYT-H-TB

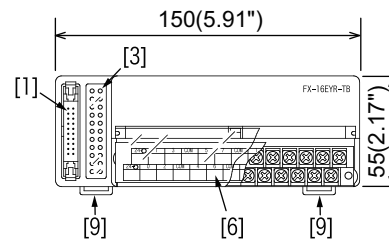

Units:

Accessories:

mm (inches)


Input/output No. labels, terminal block arrangement cards

| No. | Name | Remarks |
|-----|---|--|
| [1] | CN1 connector | — |
| [2] | CN2 connector | Present at FX-32E-TB. |
| [3] | Operation indicator LED | Present at FX-16EYR-TB, FX-16EYS-TB, FX-16EYT-TB, FX-16EYT-H-TB. |
| [4] | POWER LED | Present at FX-16EX-A1-TB. |
| [5] | CN2 terminal block (M3.5 screws) | Present at FX-32E-TB. |
| [6] | CN1 terminal block (M3.5 screws) | — |
| [7] | Nameplate | — |
| [8] | DIN rail mounting groove (DIN rail width: 35mm(1.38")) | — |
| [9] | DIN rail mounting hook | — |

20.3 Terminal Arrangement


1. FX-16E-TB

When connected to the FX2N-16EYT-C

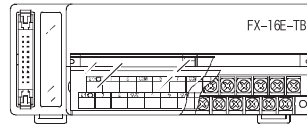

| Lower numbers | | | | | | | | Higher numbers | | | | | | | |
|---------------|---|---|-----|---|---|-----|--|----------------|---|-----|---|---|-----|--|--|
| • | 1 | 3 | COM | 5 | 7 | COM | | 1 | 3 | COM | 5 | 7 | COM | | |
| • | 0 | 2 | COM | 4 | 6 | COM | | 0 | 2 | COM | 4 | 6 | COM | | |

When connected to the FX2N-16EX-C

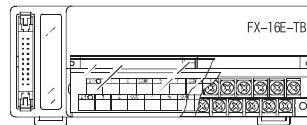


| Lower numbers | | | | | | | | Higher numbers | | | | | | | |
|---------------|---|---|---|---|---|---|--|----------------|---|---|---|---|---|--|--|
| 24+ | 1 | 3 | • | 5 | 7 | • | | 1 | 3 | • | 5 | 7 | • | | |
| 24+ | 0 | 2 | • | 4 | 6 | • | | 0 | 2 | • | 4 | 6 | • | | |

2. FX-32E-TB

When connected to the FX2N-16EYT-C


| Lower numbers | | | | | | | | Higher numbers | | | | | | | |
|---------------|---|---|---|-----|---|---|-----|----------------|---|-----|---|---|-----|--|--|
| CN2 | • | 1 | 3 | COM | 5 | 7 | COM | 1 | 3 | COM | 5 | 7 | COM | | |
| | • | 0 | 2 | COM | 4 | 6 | COM | 0 | 2 | COM | 4 | 6 | COM | | |

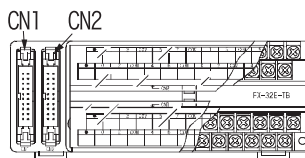

| Lower numbers | | | | | | | | Higher numbers | | | | | | | |
|---------------|---|---|---|-----|---|---|-----|----------------|---|-----|---|---|-----|--|--|
| CN1 | • | 1 | 3 | COM | 5 | 7 | COM | 1 | 3 | COM | 5 | 7 | COM | | |
| | • | 0 | 2 | COM | 4 | 6 | COM | 0 | 2 | COM | 4 | 6 | COM | | |


When connected to the FX2N-16EX-C

| Lower numbers | | | | | | | | Higher numbers | | | | | | | |
|---------------|-----|---|---|---|---|---|---|----------------|---|---|---|---|---|--|--|
| CN2 | 24+ | 1 | 3 | • | 5 | 7 | • | 1 | 3 | • | 5 | 7 | • | | |
| | 24+ | 0 | 2 | • | 4 | 6 | • | 0 | 2 | • | 4 | 6 | • | | |

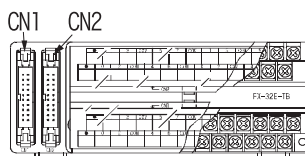


| Lower numbers | | | | | | | | Higher numbers | | | | | | | |
|---------------|-----|---|---|---|---|---|---|----------------|---|---|---|---|---|--|--|
| CN1 | 24+ | 1 | 3 | • | 5 | 7 | • | 1 | 3 | • | 5 | 7 | • | | |
| | 24+ | 0 | 2 | • | 4 | 6 | • | 0 | 2 | • | 4 | 6 | • | | |

3. FX-16EX-A1-TB

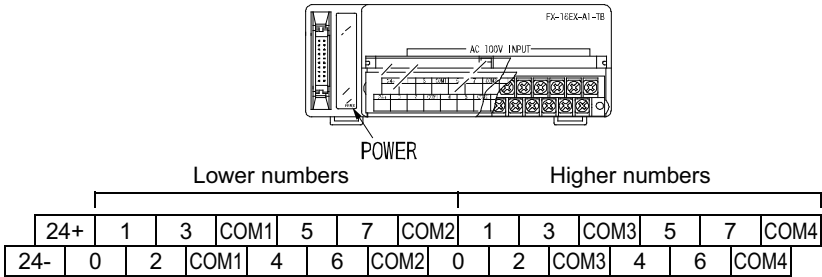

4. FX-16EYR-TB, FX-16EYS-TB, FX-16EYT-TB, FX-16EYT-H-TB

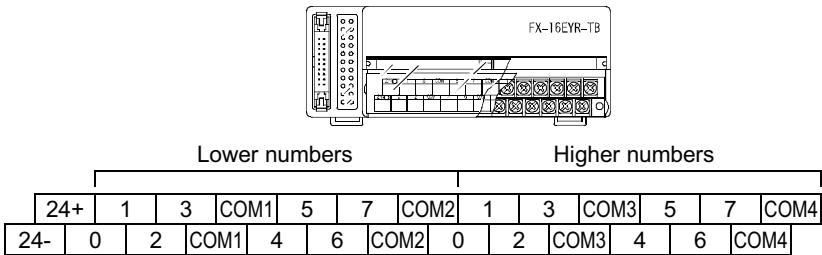


20.4 Installation Work

→ Refer to Section 8.2 for installation location.


20.4.1 Mounting

- 1** Turn OFF all power supplies connected to the PLC, input/output devices, and terminal blocks.
- 2** Align the top side of the "DIN rail mounting groove" (refer to Fig.1 at right) with the DIN rail.
- 3** Press the product onto the DIN rail (refer to Fig.2 at right).

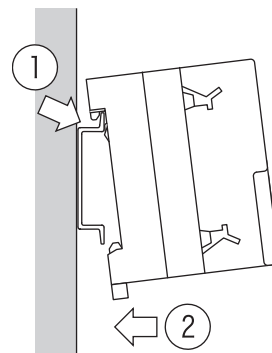

20.4.2 Removal


- 1** Turn the power supply OFF.
- 2** Disconnect the wiring and input/output cables.
- 3** Place a flathead screwdriver against the DIN rail mounting hook in the posture shown (refer to Fig.1 at right)
- 4** Move the flathead screwdriver in direction shown at right (refer to Fig.2) to detach the DIN rail mounting hook from the DIN rail.
- 5** Remove the product from the DIN rail.

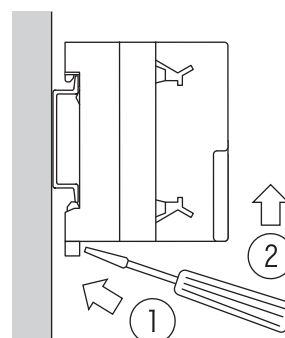

20.4.3 Input/output cable connection

The terminal block's CN1 and CN2 connectors comply with the MIL-83503 standard.

→ Refer to Subsection 9.2.2 for input/output cable information.

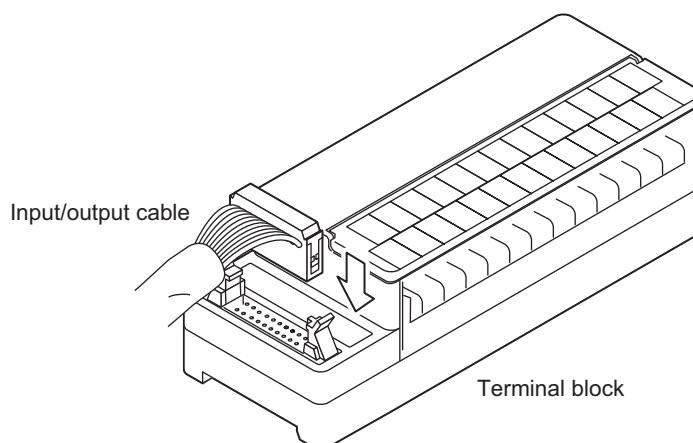

| | |
|----|--|
| 11 | High-Speed Counters |
| 12 | Output Wiring |
| 13 | Wiring for Various Uses |
| 14 | Test Run, Maintenance, Troubleshooting |
| 15 | Input/Output Powered Extension Units |
| 16 | Input/Output Extension Blocks |
| 17 | Extension Power Supply Unit |
| 18 | Other Extension Units and Options |
| 19 | Display Module |
| 20 | Terminal Block |

20.4.4 Connection to terminal block

1. The product terminal screws are as shown in the table below.

| Model Name | Terminal Screw Size |
|---|---------------------|
| <ul style="list-style-type: none"> FX-16E-TB, FX-32E-TB FX-16EX-A1-TB FX-16EYR-TB FX-16EYS-TB FX-16EYT-TB, FX-16EYT-H-TB | M3.5 |

2. Crimp terminal sizes vary according to the wiring method.

Use the sizes shown below.


Tighten the terminals to a torque of 0.5 to 0.8 N•m.

Do not tighten terminal screws with a torque outside the above-mentioned range.

Failure to do so may cause equipment failures or malfunctions.


- When 1 wire is connected to 1 terminal:

Use a crimp terminal of the size shown below, and install it as shown in the lower right figure.

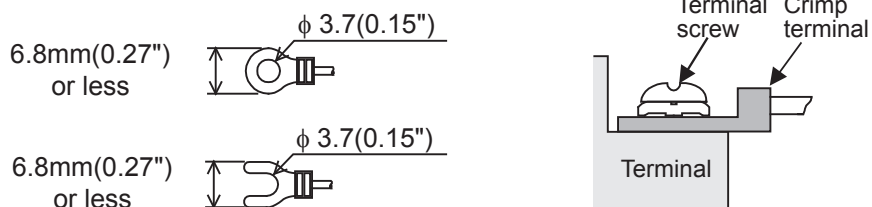

- When 2 wires are connected to 1 terminal:

Use a crimp terminal of the size shown below, and install it as shown in the lower right figure.

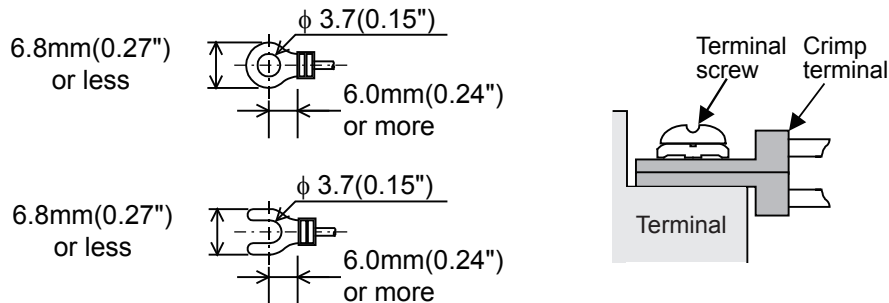


20.5 FX-16E-TB, FX-32E-TB

The FX-16E-TB and FX-32E-TB items must be connected using an FX2N series input/output connector type extension block.

| | Input Connector | Output Connector |
|--------------------|--------------------------|----------------------------|
| Connectable models | FX2N-16EX-C (sink input) | FX2N-16EYT-C (sink output) |

20.5.1 Internal circuit

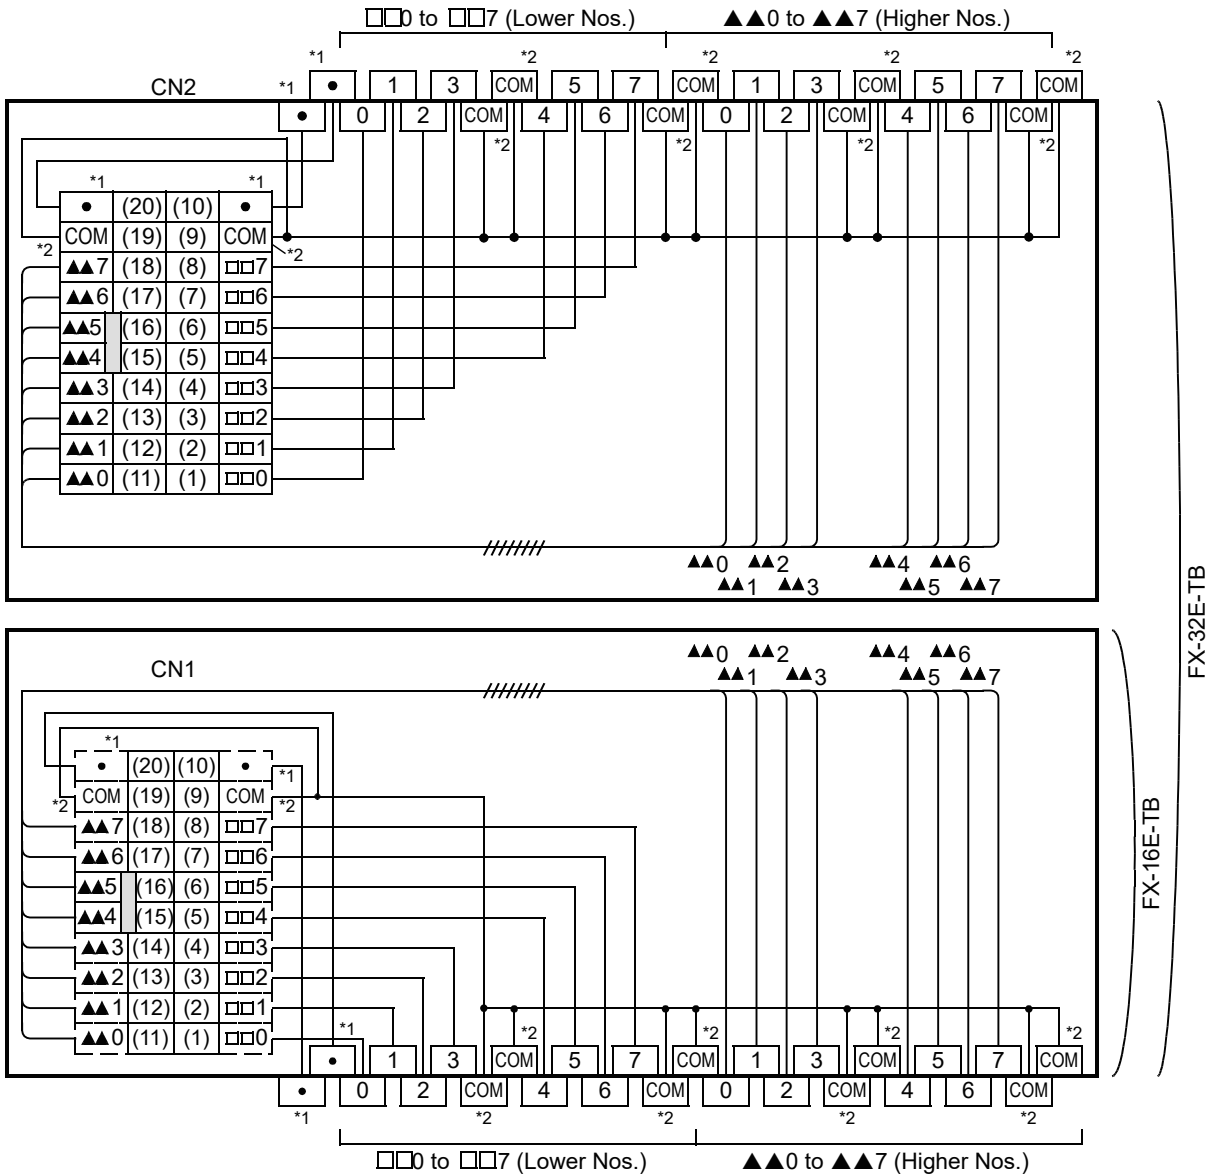

*1 "24+" when connected to FX2N-16EX-C.
*2 "•" when connected to FX2N-16EX-C.

| | |
|----|--|
| 11 | High-Speed Counters |
| 12 | Output Wiring |
| 13 | Wiring for Various Uses |
| 14 | Test Run, Maintenance, Troubleshooting |
| 15 | Input/Output Powered Extension Units |
| 16 | Input/Output Extension Blocks |
| 17 | Extension Power Supply Unit |
| 18 | Other Extension Options |
| 19 | Display Module |
| 20 | Terminal Block |


20.5.2 Example of input external wiring

WIRING PRECAUTIONS



- Do not wire vacant terminals externally.
Doing so may damage the product.

1. When connected to an FX_{2N}-16EX-C (sink input) input extension block:

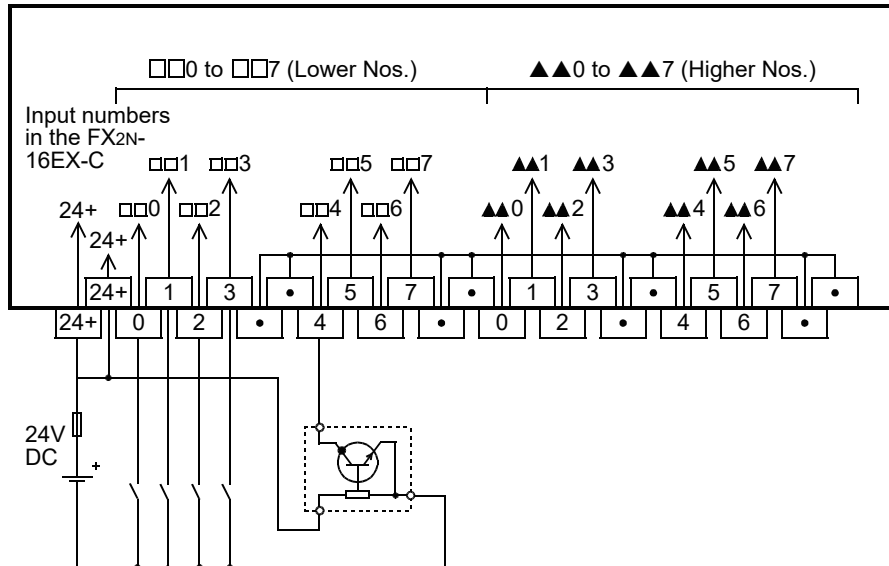


20.5.3 Output external wiring

WIRING PRECAUTIONS



- Do not wire vacant terminals externally.
Doing so may damage the product.

1. When connected to an FX_{2N}-16EYT-C (sink output) output extension block:

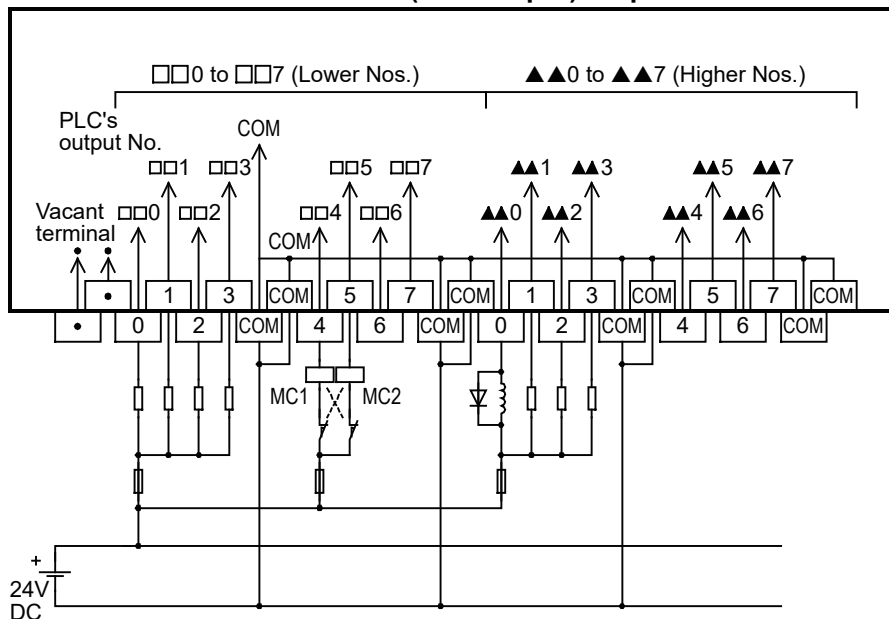

20.6 FX-16EX-A1-TB

The FX-16EX-A1-TB is used by connecting it to the FX_{2N} series input extension block (24V DC).

| | Input Connector |
|--------------------|---------------------------------------|
| Connectable models | FX _{2N} -16EX-C (sink input) |

The applications shown below are not supported.

| | Unsupported Applications |
|-----------------------|--|
| High-speed processing | High-speed counter, input interruption, pulse catch, speed detection (SPD) instruction |
| Time division input | Input matrix (MTR) instruction, hexadecimal input (HKY) instruction, digital switch (DSW) instruction, arrow switch (ARWS) instruction |
| Other | Refresh and filter adjust (REFF) instruction, ten key input (TKY) instruction, absolute current value read (ABS) instruction |


20.6.1 Specifications

| Item | AC Input Type | | | | |
|-----------------------------|---|----|-------------------------|-----|-------------------------|
| Input/output circuitry | | | | | |
| Input signal voltage | 100 to 120V AC +10%, -15% 50 / 60 Hz | | | | |
| Input signal current | 4.7 mA / 100V AC 50 Hz 6.2 mA / 110V AC 60 Hz | | | | |
| Input impedance | Approx. 21 kΩ / 50 Hz Approx. 18 kΩ / 60 Hz | | | | |
| Input sensitivity | <table> <tr> <td>ON</td> <td>3.8 mA / 80V AC or more</td> </tr> <tr> <td>OFF</td> <td>1.7 mA / 30V AC or less</td> </tr> </table> | ON | 3.8 mA / 80V AC or more | OFF | 1.7 mA / 30V AC or less |
| ON | 3.8 mA / 80V AC or more | | | | |
| OFF | 1.7 mA / 30V AC or less | | | | |
| Response time ^{*1} | 30 ms or less | | | | |
| Input signal format | Voltage contact | | | | |
| Circuit isolation | Photocoupler isolation | | | | |
| Input operation display | No input LEDs (equipped with 24V power supply LED indicator) | | | | |
| Power consumption | 1.2 W (48 mA 24V DC) ^{*2} | | | | |


*1. This response time does not include the response delay at the PLC.

*2. 3.9W (160mA, 24V DC) is required when connected to the FX_{2N}-16EX-C.

20.6.2 Internal circuit

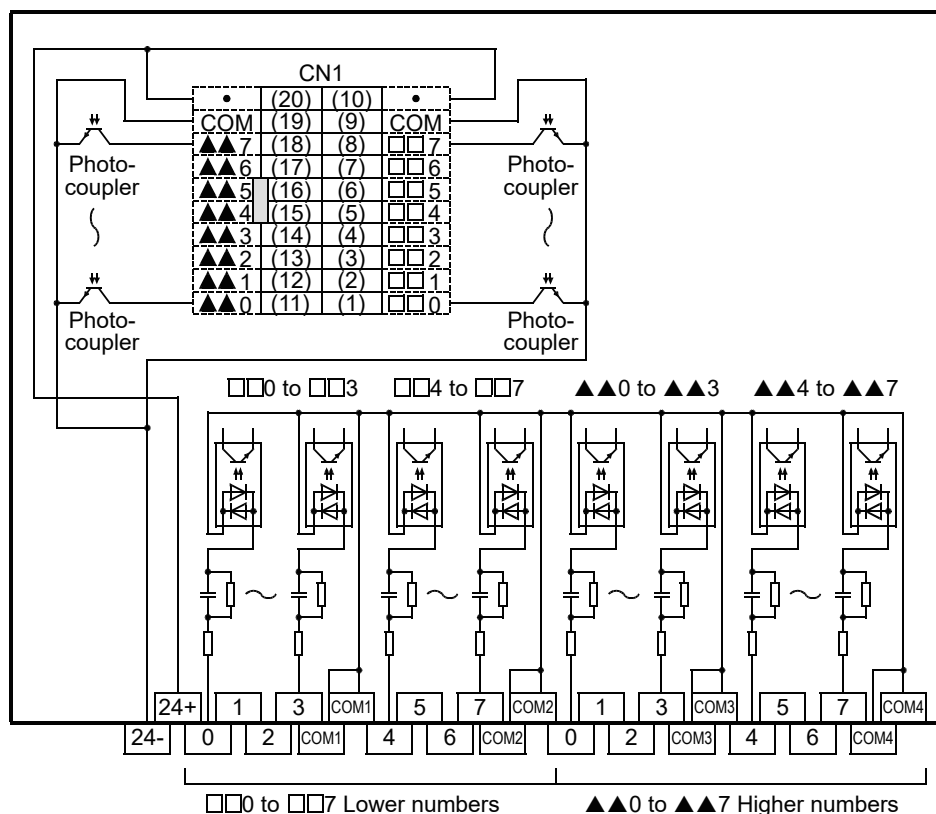

20.6.3 Example of input external wiring

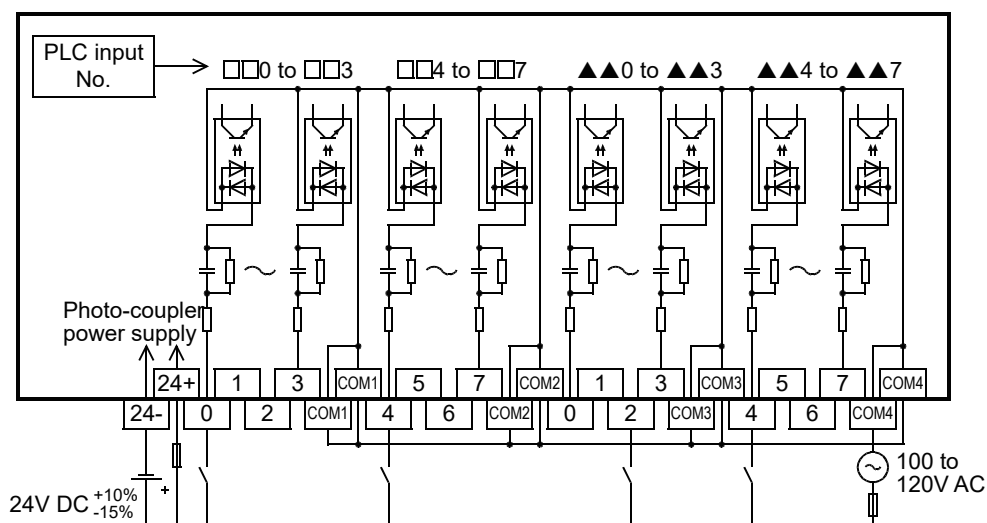

20.7 FX-16EYR-TB

The FX-16EYR-TB is available by connecting it to a FX2N series output extension block (transistor).

| | Output Connector |
|--------------------|----------------------------|
| Connectable models | FX2N-16EYT-C (sink output) |

The applications shown below are not supported.

| | Unsupported Applications |
|----------------------|---|
| Pulse outputs | Pulse Y output (PLSY) instruction, acceleration/deceleration setup (PLSR) instruction, pulse width modulation (PWM) instruction, DOG search zero return (DSZR) instruction, interruption positioning (DVIT) instruction, batch data positioning mode (TBL) instruction, absolute current value read (ABS) instruction, zero return (ZRN) instruction, variable speed pulse output (PLSV) instruction, drive to increment (DRVI) instruction, drive to absolute (DRVA) instruction |
| Time division input | Input matrix (MTR) instruction, hexadecimal input (HKY) instruction, digital switch (DSW) instruction, arrow switch (ARWS) instruction |
| Time division output | Seven segment with latch (SEGL) instruction, print (ASCII Code) (PR) instruction |

20.7.1 Specifications


| Item | Relay output |
|------------------------------|--|
| Input/output circuitry | |
| Load voltage | 250V AC or less, 30V DC or less |
| Max. load | 2 A / point |
| Resistance load | The total load current of resistance loads per common terminal should be the following value: • 4 output points/common terminal : 8 A or less |
| Inductive load | 80 VA |
| Min. load | 5V DC, 2mA Reference value |
| Open-circuit leakage current | — |
| Response time *1 | Approx. 10 ms |
| Circuit isolation | Mechanical isolation |
| Operation indicators | LED is lit when relay coil power is supplied |
| Power consumption | 1.92 W (80 mA 24V DC) |

*1. This response time does not include the response delay of the PLC.

20.7.4 External wiring precautions

1. Protection circuit for load short-circuits

A short-circuit at a load connected to an output terminal could cause burnout at the output element or the PCB. To prevent this, a protection fuse should be inserted at the output.

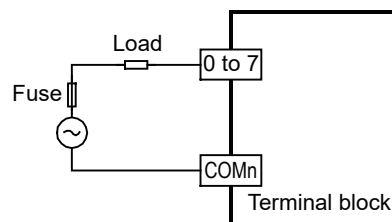

2. Contact protection circuit for inductive loads


An internal protection circuit for the relays is not provided for the relay output circuit in the terminal block. It is recommended to use inductive loads with built-in protection circuits. When using loads without built-in protection circuits, insert an external contact protection circuit, etc. to reduce noise and extend the product life.

1) DC circuit

Connect a diode (for commutation) parallel to the load.

The diode (for commutation) must comply with the following specifications.

| Item | Guide |
|-----------------|--------------------------------|
| Reverse voltage | 5 to 10 times the load voltage |
| Forward current | Load current or more |

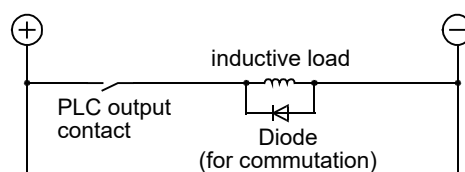


2) AC circuit

Connect the surge absorber (combined CR components such as a surge killer and spark killer, etc.), parallel to the load.

Select the rated voltage of a surge absorber that is suitable for the load being used. Refer to the table below for other specifications.

| Item | Guide |
|-----------------------------|---------------------|
| Static electricity capacity | Approx. 0.1μF |
| Resistance value | Approx. 100 to 200Ω |

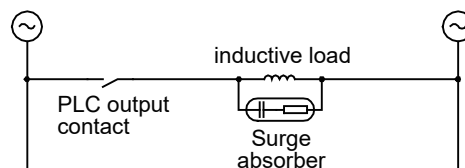


Reference

| Manufacturer | Model name |
|-------------------------------------|------------|
| Okaya Electric Industries Co., Ltd. | CR-10201 |

| Manufacturer | Model name |
|---------------------|----------------------|
| Rubycon Corporation | 250MCRA104100M B0325 |


3. Interlock

For loads such as forward/reverse contactors, etc., where a hazardous condition could result if switched ON simultaneously, an external interlock should be provided for interlocking the PLC's internal programs as shown to the right.

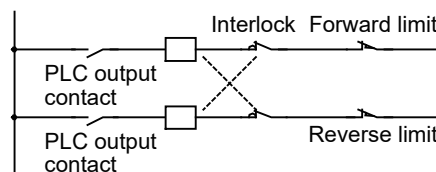

4. In-phase

PLC output contacts (*) should be used in an "in-phase" manner.

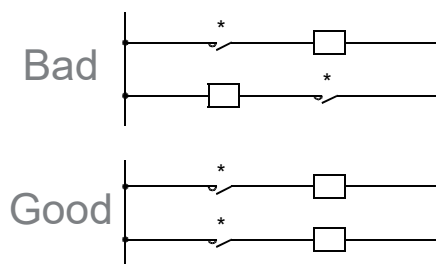

20.7.5 Product life of relay output contacts

The product life of relay contacts varies considerably depending on the load type used. Take care that loads generating reverse electromotive force or rush current may cause poor contact or deposition of contacts which may lead to considerable reduction of the contact product life.

1. Inductive load

Inductive loads generate large reverse electromotive force between contacts at shutdown, which may cause arcing. At a fixed current consumption, as the power factor (phase between current and voltage) gets smaller, the arc energy gets larger.

The standard life of contacts used for Inductive loads, such as contactors and solenoid valves, is 500,000 operations at 35 VA.

The following table shows the approximate life of a relay based on the results of an operation life test.

Test conditions: 1 sec. ON / 1 sec. OFF

| Load Capacity | | Contact Life |
|---------------|------------------|-----------------|
| 35VA | 0.35 A / 100V AC | 3,000,000 times |
| | 0.17 A / 200V AC | |
| 80VA | 0.8 A / 100V AC | 1,000,000 times |
| | 0.4 A / 200V AC | |
| 120VA | 1.2 A / 100V AC | 200,000 times |
| | 0.6 A / 200V AC | |

The product life of relay contacts becomes considerably shorter than the above conditions when the rush overcurrent is shut down.

→ **For precautions on inductive loads, refer to Subsection 20.7.4 2**

Some types of inductive loads generate rush current 5 to 15 times the stationary current at activation. Make sure that the rush current does not exceed the current corresponding to the maximum specified resistance load.

2. Lamp load

Lamp loads generally generate rush current 10 to 15 times the stationary current. Make sure that the rush current does not exceed the current corresponding to the maximum specified resistance load.

3. Capacitive load

Capacitive loads can generate rush current 20 to 40 times the stationary current. Make sure that the rush current does not exceed the current corresponding to the maximum specified resistance load. Capacitive loads such as capacitors may be present in electronic circuit loads including inverters.

→ **For the maximum specified resistance load, refer to Subsection 20.7.1**

20.8 FX-16EYT-TB, FX-16EYT-H-TB



The FX-16EYT(H)-TB is available by connecting it to a FX2N series output extension block (transistor).

| | Output Connector |
|--------------------|----------------------------|
| Connectable models | FX2N-16EYT-C (sink output) |

The applications shown below are not supported.


| | Unsupported Applications |
|----------------------|---|
| Pulse outputs | Pulse Y output (PLSY) instruction, acceleration/deceleration setup (PLSR) instruction, pulse width modulation (PWM) instruction, DOG search zero return (DSZR) instruction, interruption positioning (DVIT) instruction, batch data positioning mode (TBL) instruction, absolute current value read (ABS) instruction, zero return (ZRN) instruction, variable speed pulse output (PLSV) instruction, drive to increment (DRVI) instruction, drive to absolute (DRVA) instruction |
| Time division input | Input matrix (MTR) instruction, hexadecimal input (HKY) instruction, digital switch (DSW) instruction, arrow switch (ARWS) instruction |
| Time division output | Seven segment with latch (SEGL) instruction, print (ASCII Code) (PR) instruction |

20.8.1 Specifications

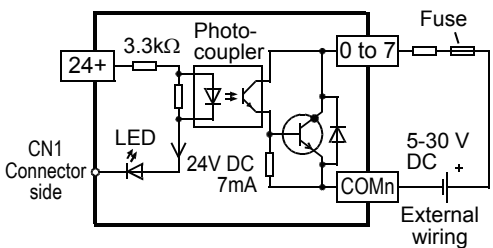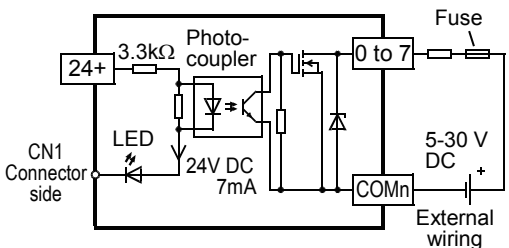
| Item | | Transistor output | |
|------------------------------|-----------------|---|---|
| | | FX-16EYT-TB | FX-16EYT-H-TB |
| Input/output circuitry | |  |  |
| Load voltage | | 5-30 V DC | 5-30 V DC |
| Max. load | Resistance load | 0.5 A / point The total load current of resistance loads per common terminal should be the following value: • 4 output points/common terminal: 0.8A or less | 1 A / point The total load current of resistance loads per common terminal should be the following value: • 4 output points/common terminal: 3A or less |
| | Inductive load | 12 W/24V DC | 24 W/24V DC |
| Open-circuit leakage current | | 0.1 mA / 30V DC | 0.1 mA / 30V DC |
| Response time *1 | OFF→ON*1 | 0.2 ms or less / 24V DC | 0.3 ms or less / 24V DC |
| | ON→OFF*1 | 1.5 ms or less / 24V DC | 4 ms or less / 24V DC |
| Output element's ON voltage | | 1.5 V | 1.5 V |
| Circuit isolation | | Photo-coupler isolation | Photo-coupler isolation |
| Operation indicators | | LED is lit when photo-coupler power is supplied | LED is lit when photo-coupler power is supplied |
| Power consumption | | 2.7 W (112 mA 24V DC) | 2.7 W (112 mA 24V DC) |

*1. This response time does not include the response delay of the PLC.


20.8.2 Internal circuit

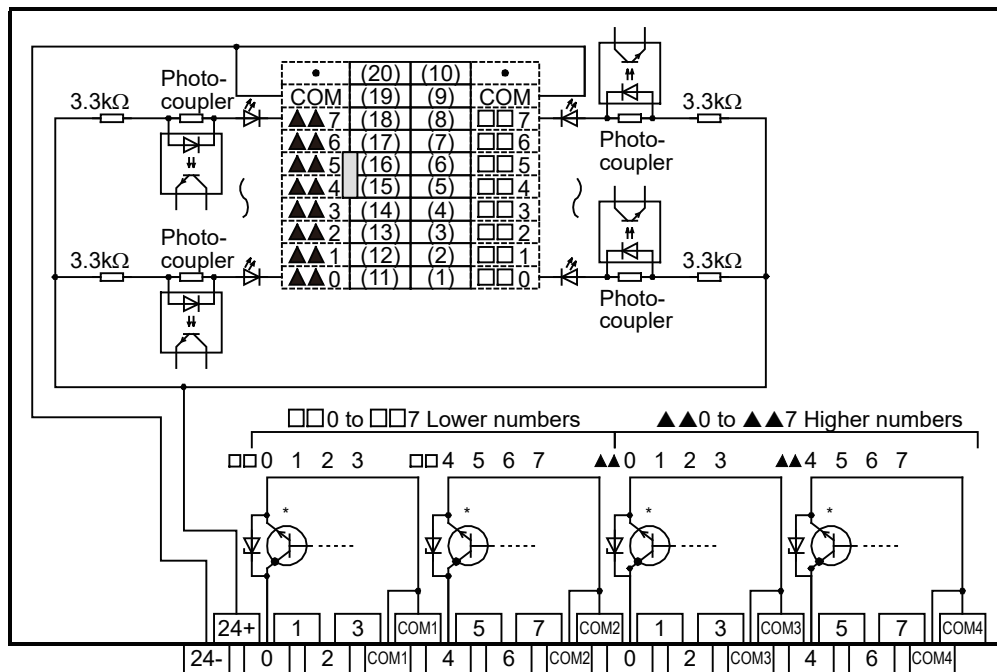

 
* For the FX-16EYT-H-TB, the output transistor elements are as shown in the figure below.



20.8.3 Example of output external wiring

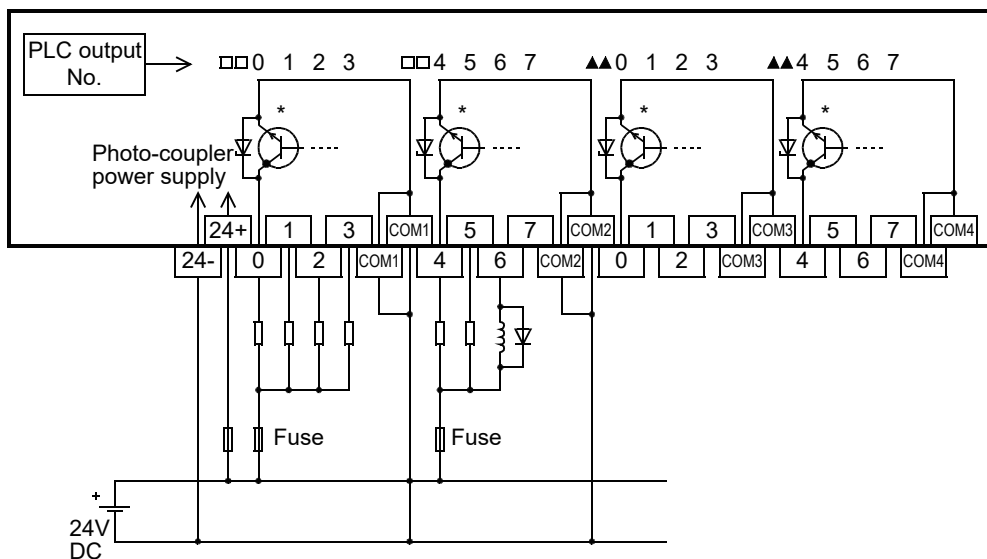

 
* For the FX-16EYT-H-TB, the output transistor elements are as shown in the figure below.



20.8.4 External wiring precautions

1. Protection circuit for load short-circuits


A short-circuit at a load connected to an output terminal could cause burnout at the output element or the PCB. To prevent this, a protection fuse should be inserted at the output. Use a load power supply capacity that is at least 2 times larger than the total rated fuse capacity.

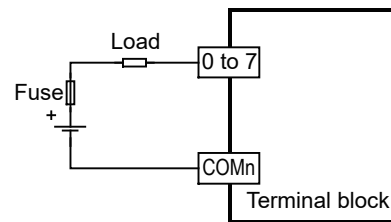

2. Transistor protection circuit for inductive loads


The transistor output circuit in the terminal block is equipped with a Zener diode (50V) for protection. When an inductive load is connected, however, a diode should be connected parallel to the load when required. The diode must comply with the specifications shown below.

| | |
|-----------------|-----------------------------------|
| Counter voltage | 5 to 10 times of the load voltage |
| Forward current | Load current or more |

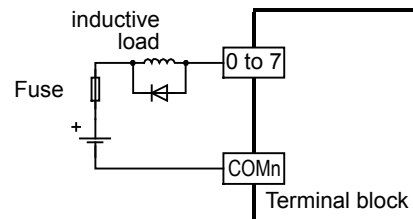

3. Interlock

For loads such as forward/reverse contactors, etc., where a hazardous condition could result if switched ON simultaneously, an external interlock should be provided for interlocking the PLC's internal programs as shown to the right.

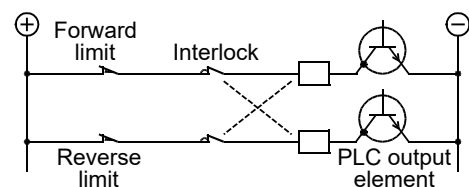

11

High-Speed
Counters

12

Output Wiring

13

Wiring for
Various Uses

14

Test Run,
Maintenance,
Troubleshooting

15

Input/Output
Powered
Extension Units

16

Input/Output
Extension
Blocks

17

Extension
Power Supply
Unit

18

Other Extension
Units and
Options

19

Display Module

20

Terminal Block

20.9 FX-16EYS-TB

The FX-16EYS-TB is available by connecting it to a FX2N series output extension block (transistor).

| | Output Connector |
|--------------------|----------------------------|
| Connectable models | FX2N-16EYT-C (sink output) |

The applications shown below are not supported.

| | Unsupported Applications |
|-----------------------|---|
| Pulse outputs | Pulse Y output (PLSY) instruction, acceleration/deceleration setup (PLSR) instruction, pulse width modulation (PWM) instruction, DOG search zero return (DSZR) instruction, interruption positioning (DVIT) instruction, batch data positioning mode (TBL) instruction, absolute current value read (ABS) instruction, zero return (ZRN) instruction, variable speed pulse output (PLSV) instruction, drive to increment (DRVI) instruction, drive to absolute (DRVA) instruction |
| Time division inputs | Input matrix (MTR) instruction, hexadecimal input (HKY) instruction, digital switch (DSW) instruction, arrow switch (ARWS) instruction |
| Time division outputs | Seven segment with latch (SEGL) instruction, print (ASCII Code) (PR) instruction |


20.9.1 Specifications

| Item | TRIAC output | |
|------------------------------|---|--|
| Input/output circuitry | | |
| Load voltage | 85 to 242 V AC | |
| Max. load | Resistance load | 0.3 A / point*1 The total load current of resistance loads per common terminal should be the following value: • 4 output points/common terminal: 0.8 A or less |
| | Inductive load | 15 VA / 100 V AC 36 VA / 200 V AC |
| Min. load | 0.4 VA / 100 V AC 1.6 VA / 200 V AC | |
| Open-circuit leakage current | 1 mA / 100 V AC 2 mA / 200 V AC | |
| Response time*2 | 2 ms or less | |
| Circuit isolation | Photocoupler isolation | |
| Operation indicator | LED is lit when photo-thyristor power is supplied | |
| Power consumption | 2.7 W (112 mA 24 V DC) | |

*1. In systems where frequent large-load ON/OFF switching occurs due to rush currents, the root mean square current should be 0.2 A or less.


<Example>

$$\sqrt{\frac{4^2 \times 0.02 + 0.4^2 \times 0.7}{0.02 + 0.7 + 10}} = 0.2\text{A}$$

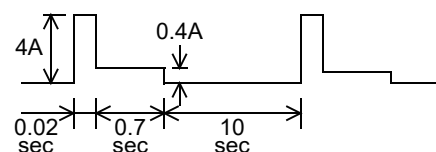


*2. This response time does not include the response delay of the PLC.

20.9.2 Internal circuit

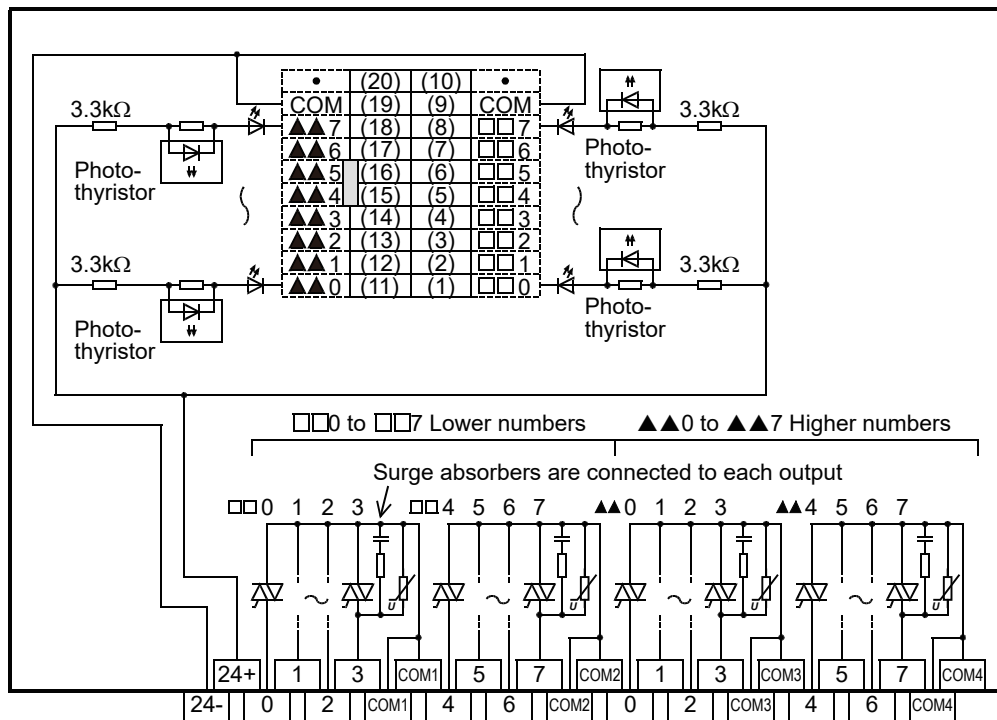


20.9.3 Example of output external wiring

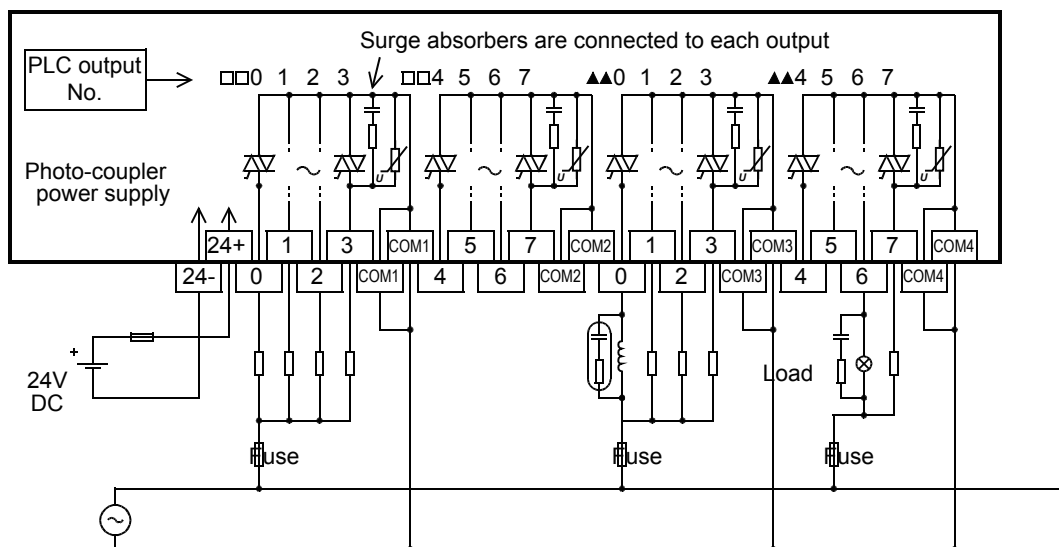

20.9.4 External wiring precautions

1. Protection circuit for load short-circuits


A short-circuit at a load connected to an output terminal could cause burnout at the output element or the PCB. To prevent this, a protection fuse should be inserted at the output.

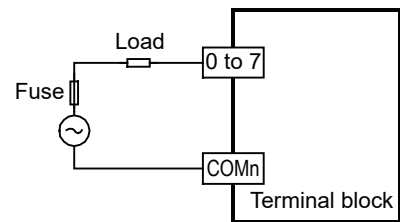

2. Micro current load

The PLC's internal Triac output circuit is equipped with a turn-off C-R absorber. When connecting a very low current load of "0.4VA/100V AC or less or 1.6 VA/200V AC or less", please connect a surge absorber parallel to the load.

Select the rated voltage of a surge absorber that is suitable for the load being used. Refer to the table below for other specifications.

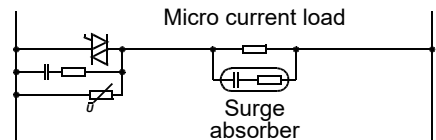

| Item | Guide |
|-----------------------------|---------------------|
| Static electricity capacity | Approx. 0.1μF |
| Resistance value | Approx. 100 to 200Ω |


Reference

| Manufacturer | Model name |
|-------------------------------------|------------|
| Okaya Electric Industries Co., Ltd. | CR-10201 |

| Manufacturer | Model name |
|---------------------|----------------------|
| Rubycon Corporation | 250MCRA104100M B0325 |


3. Interlock

For loads such as forward/reverse contactors, etc., where a hazardous condition could result if switched ON simultaneously, an external interlock should be provided for interlocking the PLC's internal programs as shown to the right.

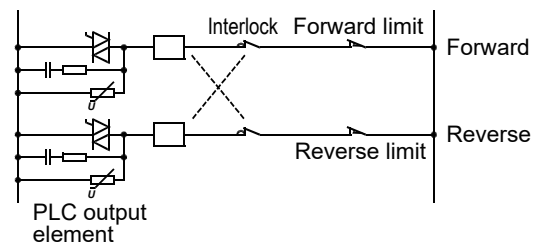

4. In-phase

PLC output contacts (*) should be used in an "in-phase" manner.

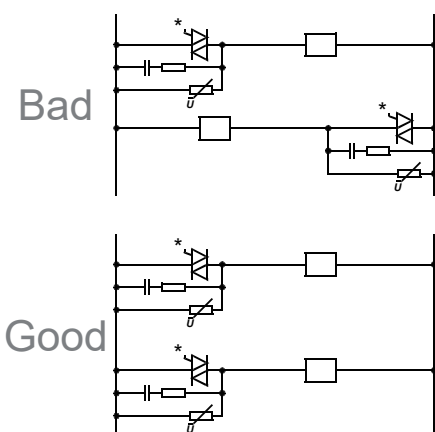

21. FX3U-FLROM-16/64/64L/1M (Memory Cassette)

STARTUP AND MAINTENANCE PRECAUTIONS



- Turn off the power to the PLC before attaching or detaching the memory cassette. If the memory cassette is attached or detached while the PLC's power is on, the data in the memory may be destroyed, or the memory cassette may be damaged.
- Do not disassemble or modify the PLC.
Doing so may cause fire, equipment failures, or malfunctions.
For repair, contact your local Mitsubishi Electric representative.

This chapter explains the memory cassette specifications and functions.
The memory cassette can be installed at the main unit, and when installed, the memory cassette's internal program is used in place of the internal RAM memory.


21.1 Specifications

21.1.1 Electrical specifications


| Model Name | Max. Memory Capacity | Memory Type | Max. Allowable Write | PROTECT Switch | Loader Function | Compatible Versions |
|----------------|--|--------------|----------------------|----------------|-----------------|----------------------------|
| FX3U-FLROM-1M | 64000 steps (2k/4k/8k/16k/32k selectable) (There is an area (1300 kB) dedicated to the storage of symbolic information.) | Flash memory | 10,000 times | Provided | NA | Ver. 3.00 or later |
| FX3U-FLROM-64L | 64000 steps (2k/4k/8k/16k/32k selectable) | Flash memory | 10,000 times | Provided | Provided | 1st article (Ver. 2.20) |
| FX3U-FLROM-64 | 64000 steps (2k/4k/8k/16k/32k selectable) | Flash memory | 10,000 times | Provided | NA | |
| FX3U-FLROM-16 | 16000 steps (2k/4k/8k selectable) | Flash memory | 10,000 times | Provided | NA | |

21.1.2 Component names & external dimensions

1. FX3U-FLROM-64L

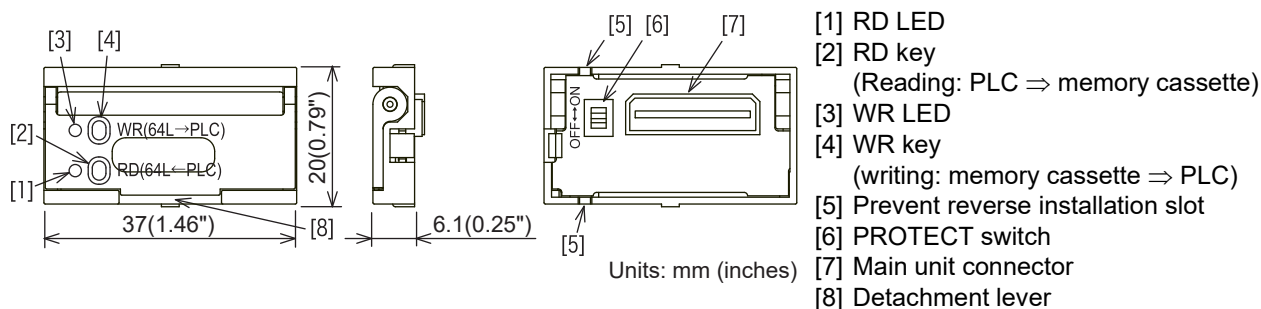

2. FX3U-FLROM-1M, FX3U-FLROM-64, FX3U-FLROM-16

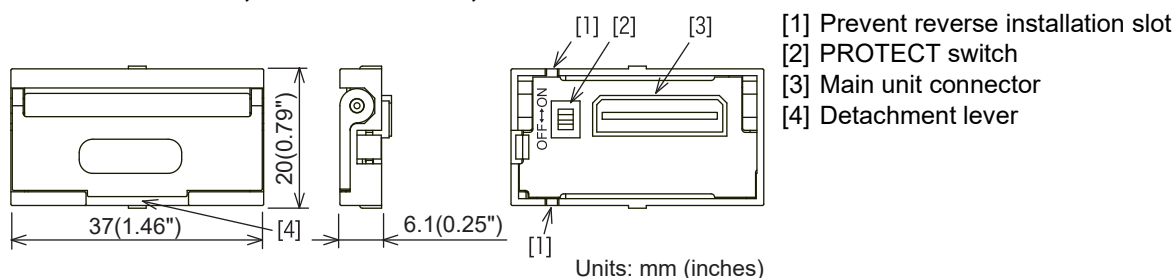


21.2 Installation & Removal

If a display module (FX3U-7DM) and a display module holder (FX3U-7DM-HLD) are installed, remove these items before installing or removing the memory cassette. Be sure that the power is OFF when installing/removing the memory cassette.

21.2.1 Memory cassette installation


1 Remove the top cover.

While pressing the top cover hook ("A"), remove the top cover ("B") as shown in the figure to the right.

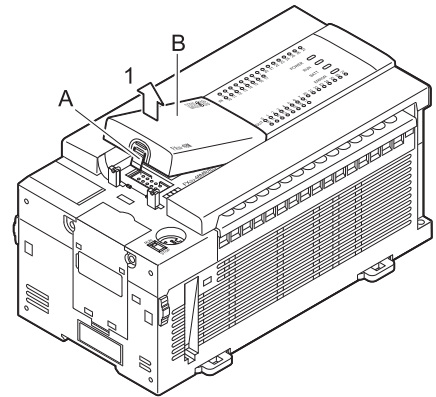


2 Raise the memory cassette detachment lever.

Raise the memory cassette detachment lever ("C").

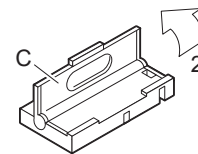

3 Install the memory cassette.

Align the cassette with the "prevent reverse installation slot" ("D"), then press it all the way in (when pressed all the way in, the cassette is approx. 0.4mm (0.02") lower than the surrounding surface.)


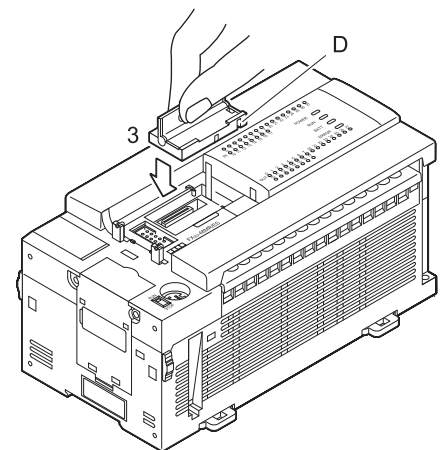


Installation precaution




- Connect the memory cassette securely to the appropriate connector. Loose connections may cause malfunctions. Installing the cassette in a raised or tilted posture can also cause malfunctions.

Cross-section drawing (memory cassette installation condition)

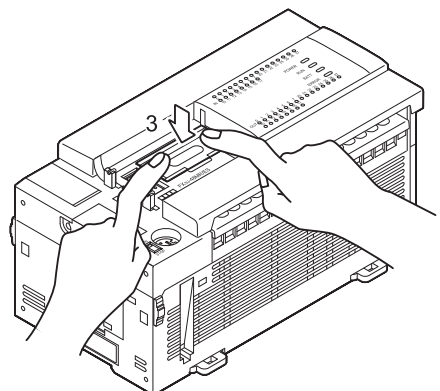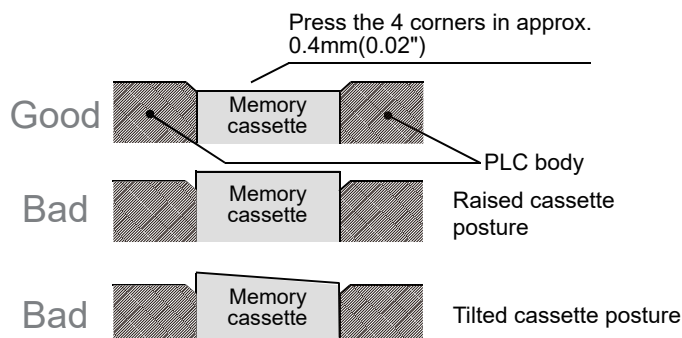


4 Attach the top cover ("B").

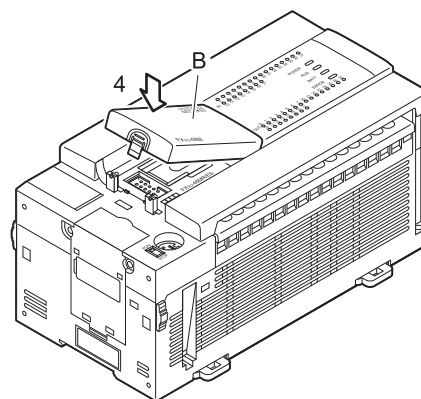

21.2.2 Memory cassette removal


1 Remove the top cover.

While pressing the top cover hook ("A"), remove the top cover ("B") as shown in the figure to the right.

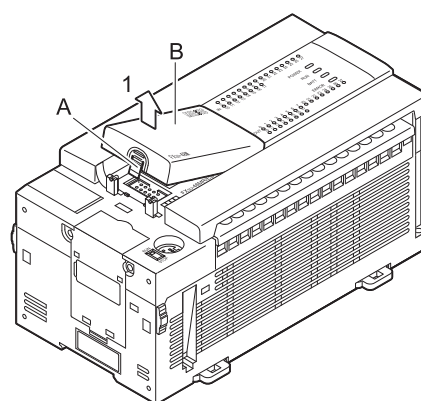

2 Raise the memory cassette detachment lever.

Raise the memory cassette detachment lever ("C").

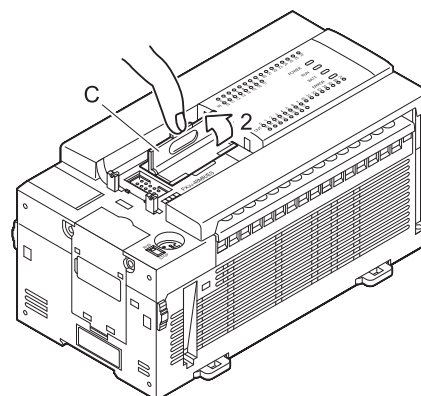


3 Grasp the detachment lever and pull it.

Grasp the detachment lever ("C") and pull it vertically to remove the memory cassette.

Caution:

Take care to avoid twisting the detachment lever when removing the memory cassette.

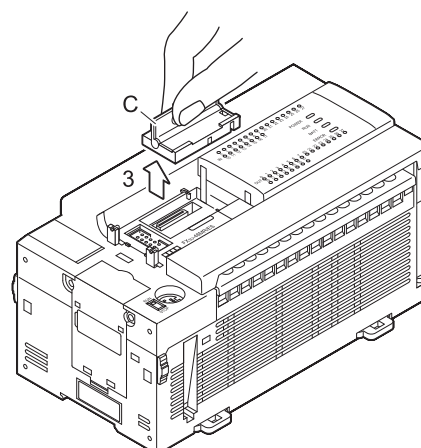

21

Memory
Cassette

22

Battery

A

Special Devices
(M8000-, D8000-)

B

Instruction List

C

Character-code

D

Discontinued
models

E

Precautions for
battery
transportation

F

Handling of
batteries in EU
member states

21.3 Saved Data Content

The following data is saved on the memory cassette.

| Item | | Description | Saving Method |
|-------------------------|----------------------|---|---|
| Program Memory | Parameters | <ul style="list-style-type: none"> Memory capacity setting <ul style="list-style-type: none"> Memory capacity (default setting: 16k steps) 2k/4k/8k/16k steps (FX3U-FLROM-16) 2k/4k/8k/16k/32k/64k steps (FX3U-FLROM-64/64L/1M) Comment capacity File register capacity Special Function Memory capacity Device latch range settings (keep device) Modem initializing settings, battery-free operation, RUN terminal settings RS/RS2 instructions / computer link function communication settings Positioning Instruction Settings Special Function Block Settings Special parameters^{*1*2} | Programming tool ^{*4} |
| | Sequence programs | User-created sequence programs | |
| | Comments | Max. 6350 points (0 to 127 blocks, 1 block = 50 points / 500 steps) | |
| | File registers | Max. 7000 points (0 to 14 blocks, 1 block = 500 points / 500 steps) | |
| | Symbolic information | <ul style="list-style-type: none"> FX3U-FLROM-16, FX3U-FLROM-64/64L Symbolic information capacity = Max. capacity of memory cassette - Memory capacity set by parameters FX3U-FLROM-1M Symbolic information can be stored in the dedicated area (1300 kB). | GX Works2 ^{*5} |
| Extended file registers | | ER0 to ER32767 (32768 points) | <ul style="list-style-type: none"> Sequence program GX Works2 GX Developer |

- *1. This function is supported in FX3U PLC Ver. 3.10 or later.
Do not connect a memory cassette with special parameters saved to any FX3U PLC earlier than Ver. 3.10.
- *2. This function is supported in GX Works2 Ver. 1.73B or later.
- *3. The total size of the programs + comments + file registers must not exceed the maximum capacity of the memory cassette.
- *4. The maximum number of points for the memory capacity, comments, and file registers, can be specified when the FX3U(C) programming tool is selected. The maximum number of points cannot be specified when a programming tool other than the FX3U(C) is selected.
- *5. It is possible to check the symbolic information capacity using the memory capacity calculation (offline) of GX Works2.
Refer to the GX Works2 Version 1 Operating Manual (Common) for details.

Cautions on using the symbolic information

The FX3U PLC Ver. 3.00 or later can store symbolic information.
Note the following cautions when using symbolic information.

- When symbolic information is stored, it is deleted if the memory capacity set by parameters is changed. After changing the memory capacity, write the symbolic information again.
- Memory cassettes (except for the FX3U-FLROM-1M) which are storing symbolic information can be used by FX3U PLCs whose version is earlier than Ver. 3.00. In this case, the FX3U PLC operates, but the written symbolic information is invalid.
- For writing symbolic information and changing the set values of timers and counters using a peripheral device, it is recommended to create programs with set values specified indirectly.
If the set values are specified directly, programs cannot be restored from symbolic information after the set values are changed.


21.4 PROTECT Switch

21.4.1 PROTECT switch setting

Reading from and writing to memory cassette operations can be performed by using the programming tool.

Because sequence programs are written by an electronic format, a special ROM writer and ultraviolet eraser are not required.

The PROTECT switch must be turned OFF to enable writing.

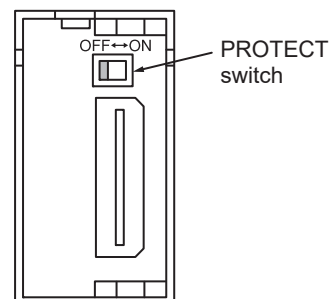


21.4.2 PROTECT switch operation

1. Preparing the operation tools


Set the PROTECT switch knob by using the tip of a pair of tweezers, a precision screwdriver, or a tool with a tip width of approx. 0.8mm (0.04").

Do not use objects with round tips, as the round tip can easily slip off the switch knob, possibly resulting in an incorrect setting.

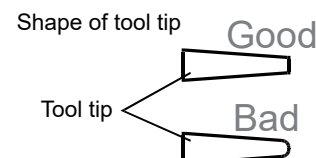

2. Switch operation procedure

As shown in the figure below, the switch knob can be "pushed" or "pulled". When setting the switch, do not set it in an intermediate position.

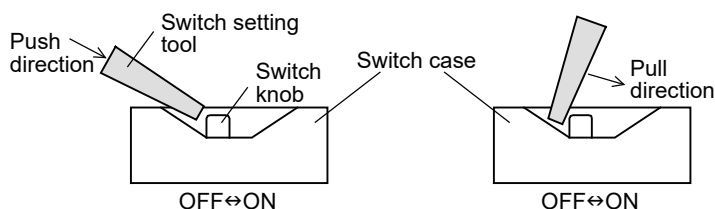

21.4.3 Precautions when setting and using the switch

- Leaving the switch knob at an intermediate position for an extended period can cause an equipment failure.
- Also use care to avoid scratching the PCB when setting the switch.

21

Memory
Cassette

22

Battery

A

Special Devices
(M8000-, D8000-)

B

Instruction List

C

Character-code

D

Discontinued
models

E

Precautions for
battery
transportation

F

Handling of
batteries in EU
member states

21.5 Memory Cassette <-> PLC (RAM Memory) Transfers Using the Loader Function

The FX3U-FLROM-64L loader function ([WR] and [RD] key operation) is explained in this section.

- Program transfers (reading/writing) are possible between the memory cassette and the PLC's internal RAM memory.
- The loader function is enabled while the PLC is stopped.

21.5.1 Tool for pressing the [WR] and [RD] keys

Use an insulated tool (plastic, ceramic, etc.) to press the [WR] and [RD] keys. The area around the keys is not insulated. Using a metal screwdriver, etc can cause equipment damage.

21.5.2 Writing (WR: 64L → PLC)

A memory cassette program is written to the PLC's internal RAM memory.

Required condition: The PLC must be stopped.

1 Install the memory cassette on the main unit.

(Setting the PROTECT switch to ON (on memory cassette's rear face) prevents accidental overwriting of memory cassette program.)


→ Refer to Subsection 21.2.1 for the installation procedure.

- Verify that the PLC power is OFF, then install the memory cassette on the PLC.
- Turn the PLC power ON.
- Raise the memory cassette's eject lever.

2 Press the [WR] key 1 time.

The [WR] LED is lit, and a preparation status is established.

- To cancel, press the [RD] key.

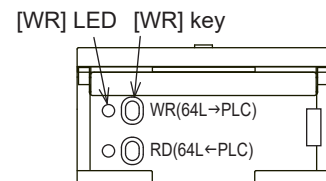

3 Press the [WR] key again.

Writing is executed, and the [WR] LED turns off.


- Writing to the built-in RAM is completed instantaneously, and the LED will turn off in a short time.

4 Remove the memory cassette from the main unit.

Writing is completed when the [WR] LED turns off.

After turning the PLC power OFF, remove the memory cassette from the PLC.

→ Refer to Subsection 21.2.2 for the removal procedure.

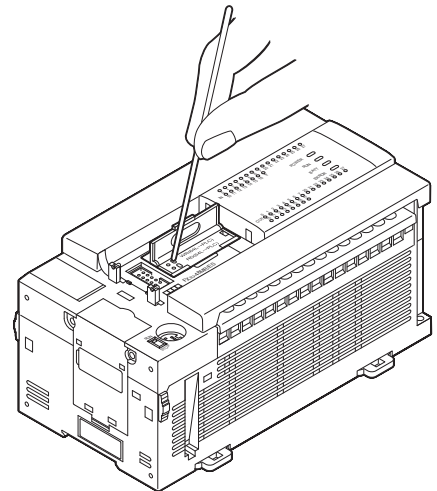

21.5.3 Reading (RD: 64L ← PLC)

Programs are read from the PLC's internal RAM memory to the memory cassette.

Required condition: The PLC must be stopped, and the PROTECT switch must be OFF.

1 Turn the PROTECT switch OFF on the back of the memory cassette.

The memory cassette must be removed from the PLC in order to turn the PROTECT switch OFF. Make sure that the PLC power is OFF before removing the memory cassette.

→ Refer to Subsection 21.2.2 for the removal procedure.

2 Install the memory cassette on the main unit.

→ Refer to Subsection 21.2.1 for the installation procedure.

- Verify that the PLC power is OFF, then install the memory cassette on the PLC.
- Turn the PLC power ON.
- Raise the memory cassette's eject lever.

3 Press the [RD] key 1 time.

The [RD] LED is lit, and a preparation status is established.

- To cancel, press the [WR] key.

4 Press the [RD] key again.


Reading is executed, and the [RD] LED blinks.

5 Remove the memory cassette from the main unit.

Reading is completed when the [RD] LED turns off.

After turning the PLC power OFF, remove the memory cassette from the PLC, then turn the PROTECT switch ON.

→ Refer to Subsection 21.2.2 for the removal procedure.

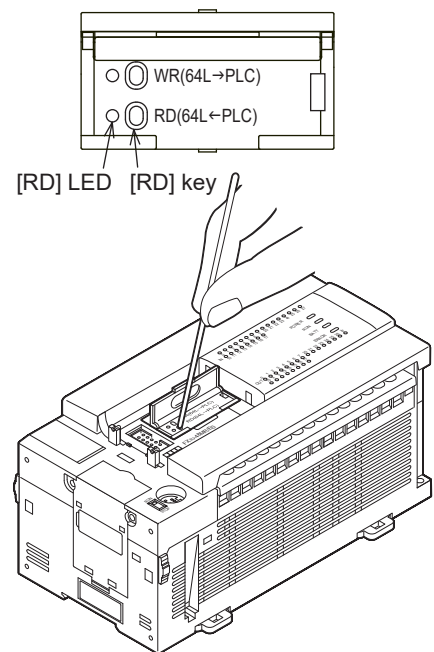

21.6 Transfers By Display Module Operation

Programs can be transferred (reading/writing) between the memory cassette and the PLC's internal RAM memory by a display module operation.

→ Refer to Section 19.17 for the memory cassette transfer function.

21.7 Operation Precautions

Observe the following precautions when writing to file registers (D) and extended file registers (ER) by program.

1. Flash memory writing count

10,000 writing operations are permitted at the flash memory.

2. Precaution for file register usage

Writing to the flash memory occurs at each PLC operation cycle if BMOV instructions are used in a continuous execution format with regard to a file register.

To prevent this, be sure to use "pulse execution format" BMOV_P instructions.

Writing data to the flash memory is executed also by writing data to file registers from peripheral equipment (programming software, handy programming panels, and display units).

3. Precaution for extended file register (ER) usage

Do not use continuous constant-execution SAVER and LOGR instructions with regard to extended file registers. Use the individual instructions only when required.

Writing data to the flash memory is executed also by writing data to extended file registers from peripheral equipment (programming software, handy programming panels, and display units).

22. FX3U-32BL (Battery)

STARTUP AND MAINTENANCE PRECAUTIONS



WARNING

- Use the battery for memory backup correctly in conformance to this manual.
 - Use the battery only for the specified purpose.
 - Connect the battery correctly.
 - Do not charge, disassemble, heat, put in fire, short-circuit, connect reversely, weld, swallow or burn the battery, or apply excessive forces (vibration, impact, drop, etc.) to the battery.
 - Do not store or use the battery at high temperatures or expose to direct sunlight.
 - Do not expose to water, bring near fire or touch liquid leakage or other contents directly.
 - Incorrect handling of the battery may cause heat excessive generation, bursting, ignition, liquid leakage or deformation, and lead to injury, fire or failures and malfunctions of facilities and other equipment.
 - When replacing the battery, make sure to use our specified product (FX3U-32BL).
 - When a battery error occurs ("BATT" LED is lit in red), follow the description in this manual.

STARTUP AND MAINTENANCE PRECAUTIONS



CAUTION

- Turn off the power to the PLC before attaching or detaching the following devices.
Failure to do so may cause equipment failures or malfunctions.
 - Peripheral devices, display module, expansion boards, and special adapters
 - Extension units/blocks and FX Series terminal blocks
 - Battery and memory cassette

TRANSPORTATION AND STORAGE PRECAUTIONS



CAUTION

- Before transporting the PLC, turn on the power to the PLC to check that the BATT LED is off.
If the PLC is transported with the BATT LED on or the battery exhausted, the battery-backed data may be unstable during transportation.
- When transporting lithium batteries, follow required transportation regulations.
(For details of the regulated products, refer to Appendix E)

The main unit of the PLC has a built-in battery.
When the battery voltage drops, the BATT LED is lit, and the special auxiliary relay (M8005 or M8006) turns on. In this case, replace the battery FX3U-32BL.

22.1 Battery Purpose

The battery is required to retain (backup) program memory and "latched device" data and maintain clock operation in the event of a power outage.

| | Data Retained By Backup Battery |
|----------------|---|
| Program memory | Internal RAM parameters, programs, device comments, file registers, symbolic information |
| Device memory | <ul style="list-style-type: none"> • Auxiliary relay, state (for annunciator included), timer (cumulative type), counter, data register latched device • Extended register • Sampling trace result |
| Current time | Current time clock |



22.2 Specifications

| Item | Specifications | Remarks |
|-----------------|----------------|--|
| Nominal voltage | 3V | Battery voltage can be monitored with PLC data register D8005. |

22.2.1 Differences between main unit's internal battery and the optional battery

Although the optional battery (FX3U-32BL) serves as the same as the main unit's internal battery, they differ in the ways described below.

They may also have different external colors based on the time of manufacture.
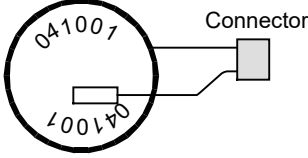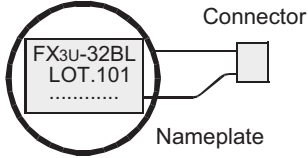
| | Main Unit Internal Battery | Optional Battery (Spare) |
|---------------------|---|---|
| External appearance |  | <p>A nameplate label with the product model and lot No. is affixed.</p>  |

22.3 Battery Handling


When the battery voltage is low, a "BATT" LED is lit (red) while the power is ON, and M8005 and M8006 are switches ON.

Although the battery will continue to function for approximately 1 month after the "BATT" LED switches ON, a replacement battery should be ordered and installed as soon as possible.

22.3.1 Battery life & replacement guidelines

FX3U-32BL battery life : Approx. 5 years (ambient temperature : 25°C(77°F))


The life of the battery changes with respect to ambient temperature. When planning for battery replacement, please estimate the battery life according to the graph to the right and order replacement batteries in advance.

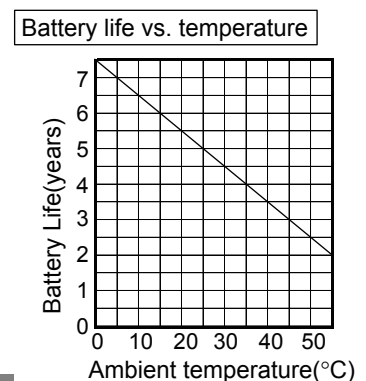

22.3.2 Reading the date of manufacture

1. Reading the optional battery's lot No. (reference)

Batteries with affixed nameplate labels are optional batteries.

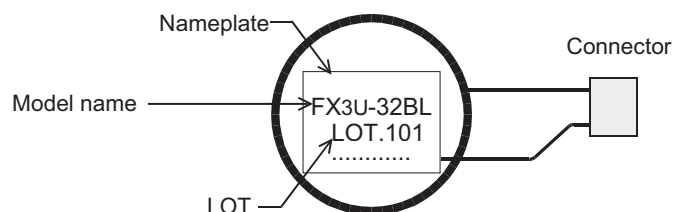

<Product during December, 2009 or earlier>


9 Z
 └─ Month (Example: Dec):
 1 to 9 = Jan to Sept,
 X = Oct, Y = Nov, Z = Dec
 └─ Year (Example: 2009)
 Last digit of year

<Product from January, 2010>

1 0 1
 └─ Month (Example: Jan):
 1 to 9 = Jan to Sept,
 X = Oct, Y = Nov, Z = Dec
 └─ Year (Example: 2010)
 Last two digit of year

2. Reading the battery's year/month of manufacture [main unit's internal battery] (reference)


Batteries without affixed nameplate labels (refer to item 1. above) are main unit internal batteries.

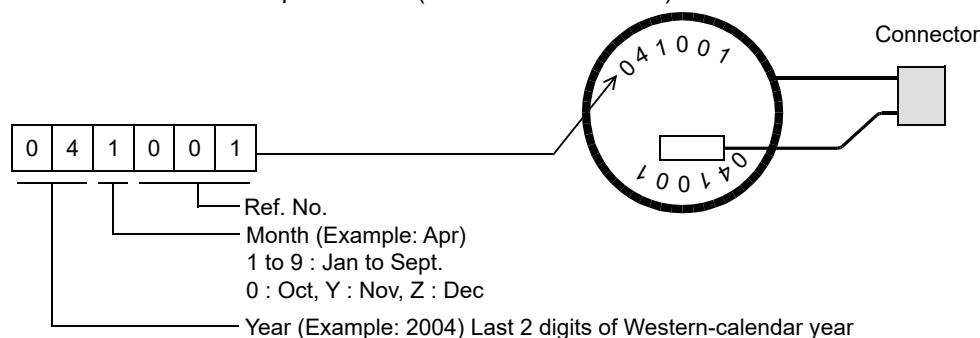

22.3.3 Special "battery low-voltage" device & notification program example

Prepare a system which allows constant external monitoring of the battery status, using an indicator lamp, etc.

 - M8005



- M8006
Battery low-voltage is latched.
- D8005
Battery voltage can be monitored.

22.4 Battery-Free Operation

FX3U series operation is possible without a battery (PLC's internal battery removed) when the following conditions are satisfied.

→ Refer to the FX3U / FX3UC Programming Manuals for details concerning battery-free operation.

1. A memory cassette must be installed.
2. The following devices must not be used as "keep" devices.
Auxiliary relays, state (for annunciator included), timers (cumulative type), counters, data register "keep" device, extended registers.
3. The sampling trace function must be disabled.
4. The clock function must be disabled.

22.5 Battery Replacement

Before replacing the battery

Before starting replacement, turn the PLC power ON for 10 sec. or more.

Before starting replacement, back up the data of the main unit with the programming tool.



Battery replacement steps 5 and 6 must be completed within the power interruption time (20 sec.).

Even with the battery removed, the built-in capacitor holds the data of the memory for 20 sec. If the time taken for battery replacement is longer than the power interruption time, the data of the memory may be lost.

- 1 Turn the power ON.**
- 2 Back up the data of the main unit with the programming tool.**
- 3 Turn the power OFF.**
- 4 Remove the battery cover.**

Slightly lift the "B" side of the battery cover ("A").

Grasp the cover ("A") between your fingers and remove it.

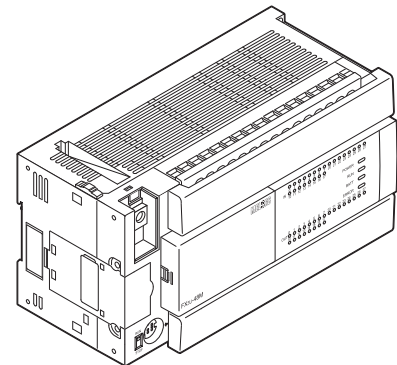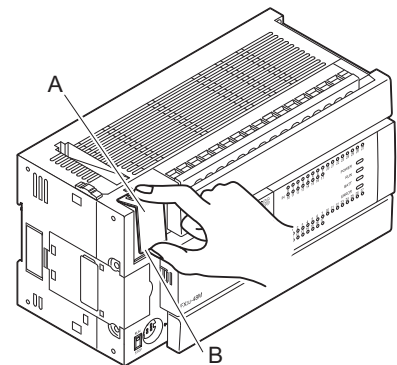


- 5 Remove the old battery.**

Extract the old battery from the battery holder, and disconnect the battery connector.

When extracting the old battery, hold the root part of the cable and pull the old battery straight out.

- 6 Install the new battery.**

Connect the battery connector ("C") to the new battery, and insert the battery into the battery holder ("D").

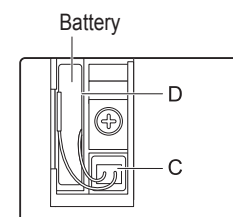

- 7 Attach the battery cover ("A").**

Caution

- 1) Battery replacement requires users to verify data integrity such as the PLC program (when a memory cassette is not attached), latched (battery backed) device values and RTC values. Before switching the PLC to RUN, ensure the safety of the operation.
- 2) If the battery backed data becomes unstable, clear the latched (battery backed) devices, and transfer the data again. Set the RTC and default values again if necessary.
→ **For the clear method of keeping devices, refer to the programming manual.**
- 3) If a long time has passed since the battery voltage is reduced, the data may not be retained by the battery. Make sure to back up the data of the main unit with the programming tool before battery replacement.

22.6 Battery Related Precautions

1. **The FX3U series uses a different battery type than those used for the FX2N (F2-40BL) and FX2NC (FX2NC-32BL) series.**
 - Not for use with the FX3U series.
2. **When performing battery-free operation, the clock stops when the main unit power is turned OFF.**

21

Memory
Cassette

22

Battery

A

Special Devices
(M8000-.D8000-)

B

Instruction List

C

Character-code

D

Discontinued
models

E

Precautions for
battery
transportation

F

Handling of
batteries in EU
member states

Appendix A: Operation of Special Devices (M8000 -, D8000 -)

The device numbers and functions of the special auxiliary relays (indicated as "special M" in tables) and special data registers (indicated as "special D" in tables) are shown below.

Note that functions of certain devices vary depending on the series of the PLC.

Do not use the undefined / blank special auxiliary relays and special data registers in the sequence program since they are occupied by the CPU.

In addition, do not activate or write to the devices with brackets on the first letter such as [M]8000 or [D]8001 in the program.

→ For detailed explanation, refer to the Programming Manual.

Appendix A-1 Special Auxiliary Relay (M8000 to M8511)

| Number and name | Operation and function | Corresponding special device | Number and name | Operation and function | Corresponding special device |
|--|--|------------------------------|---|---|------------------------------|
| PLC Status | | | Clock | | |
| [M]8000 RUN monitor NO contact | | — | [M]8010 | Not used | — |
| [M]8001 RUN monitor NC contact | | — | [M]8011 10 ms clock pulse | ON and OFF in 10 ms cycle (ON: 5 ms, OFF: 5 ms) | — |
| [M]8002 Initial pulse NO contact | | — | [M]8012 100 ms clock pulse | ON and OFF in 100 ms cycle (ON: 50 ms, OFF: 50 ms) | — |
| [M]8003 Initial pulse NC contact | | — | [M]8013 1 sec clock pulse | ON and OFF in 1 sec cycle (ON: 500 ms, OFF: 500 ms) | — |
| | | — | [M]8014 1 min clock pulse | ON and OFF in 1 min cycle (ON: 30 sec, OFF: 30 sec) | — |
| [M]8004 Error occurrence | ON when either M8060, M8061, M8064, M8065, M8066, or M8067 is ON. | D8004 | M 8015 | Clock stop and preset For real time clock | — |
| [M]8005 Battery voltage low | ON when battery voltage is below the value set in D8006. | D8005 | M 8016 | Time read display is stopped For real time clock | — |
| [M]8006 Battery error latch | It is set when battery voltage low is detected. | D8006 | M 8017 | ±30 seconds correction For real time clock | — |
| [M]8007 Momentary power failure | ON for 1 scan, when detecting momentary power failure Even if M8007 turns ON, PLC continues to RUN mode in case duration of power loss is within period of time specified in D8008. | D8007 D8008 | [M]8018 | Installation detection (Always ON) For real time clock | — |
| [M]8008 Power failure detected | It is set when momentary power failure is detected. If power loss time is longer than period of time specified in D8008, M8008 is reset and PLC is turned in STOP mode.(M8000=OFF). | D8008 | M 8019 | Real time clock (RTC) error For real time clock | — |
| [M]8009 24V DC down | ON when 24V DC power fails in any I/O extension unit or special function unit/block. | D8009 | Flag | | |
| | | | [M]8020 Zero | ON when the result of addition/subtraction is 0. | — |
| | | | [M]8021 Borrow | ON when the result of subtraction is less than the min. negative number. | — |
| | | | M 8022 Carry | ON when 'carry' occurs as a result of addition or when an overflow occurs as a result of shift operation. | — |
| | | | [M]8023 | Not used | — |
| | | | M 8024*1 | BMOV direction specification (FNC 15) | — |
| | | | M 8025*1 | HSC mode (FNC 53 to 55) | — |
| | | | M 8026*1 | RAMP mode (FNC 67) | — |
| | | | M 8027*1 | PR mode (FNC 77) | — |
| | | | M 8028 | Interrupt permission during FROM/TO (FNC 78 and 79) instruction execution | — |
| | | | [M]8029 Instruction execution complete | ON when operation such as DSW (FNC 72) is completed. | — |

*1. Cleared when PLC switches from RUN to STOP.

| Number and name | Operation and function | Corresponding special device |
|--|--|------------------------------|
| PLC Mode | | |
| M 8030* ¹ Battery LED OFF | When M8030 set to ON, LED on PLC is not lit even if low battery voltage is detected. | — |
| M 8031* ¹ Non-latch memory all clear | If this special auxiliary relay is activated, the ON/OFF image memory of Y, M, S, T, and C, and present values of T, C, D, special data registers and R are cleared to zero. | — |
| M 8032* ¹ Latch memory all clear | However, file registers (D) in program memory, and extension file registers (ER) in the memory cassette are not cleared. | — |
| M 8033 Memory hold STOP | When PLC is switched from RUN to STOP, image memory and data memory are retained. | — |
| M 8034* ¹ All outputs disable | All external output contacts of PLC are turned OFF. | — |
| M 8035 Forced RUN mode | →Refer to Programming Manual for details. | — |
| M 8036 Forced RUN signal | | — |
| M 8037 Forced STOP signal | | — |
| [M]8038 Parameter setting | Communication parameter setting flag (for N:N network setting) | D8176 to D8180 |
| M 8039 Constant scan mode | When M8039 is ON, PLC waits until scan time specified in D8039 and then executes cyclic operation. | D8039 |

*1. Executed at END instruction

| | | |
|---|--|----------------|
| Step Ladder and Annunciator | | |
| M 8040 Transfer disable | While M8040 is turned ON, transfer between states is disabled. | — |
| [M]8041* ² Transfer start | Transfer from initial state is enabled in automatic operation mode. | — |
| [M]8042 Start pulse | Pulse output is given in response to a start input. | — |
| M 8043* ² Zero return complete | Set this in the last state of zero return mode. | — |
| M 8044* ² Zero point condition | Set this when machine zero return is detected. | — |
| M 8045 All output reset disable | Disables the 'all output reset' function when the operation mode is changed. | — |
| [M]8046* ³ STL state ON | ON when M8047 is ON and either of S0 to S899 or S1000 to S4095 is active. | M8047 |
| M 8047* ³ STL monitoring enable | D8040 to D8047 are enabled when M8047 is ON. | D8040 to D8047 |
| [M]8048* ³ Annunciator operate | ON when M8049 is ON and either of S900 to S999 is ON. | — |
| M 8049* ² Annunciator enable | D8049 is enabled when M8049 is ON. | D8049 M8048 |

*2. Cleared when PLC switches from RUN to STOP.

*3. Executed at END instruction.

| Number and name | Operation and function | Corresponding special device |
|--|--|------------------------------|
| Interrupt Disable | | |
| M8050 (input interrupt) I00□ disable* ⁴ | <ul style="list-style-type: none"> If an input interrupt or timer interrupt occurs while a special auxiliary relay for that interrupt (M8050 - M8058) is ON, the interrupt will not operate. For example, turning M8050 ON disables the I00□ interrupt; hence, the interrupt routine is not processed even in an allowable program area. If an input interrupt or timer interrupt occurs while a special auxiliary relay for that interrupt (M8050 - M8058) is OFF, <ul style="list-style-type: none"> a) The interrupt will be accepted. b) The interrupt routine will be processed promptly if it is permitted by the EI (FNC 04) instruction. However, if the DI (FNC 05) instruction disables interrupts, the interrupt program will not be processed until EI (FNC 04) permits the interrupts. | — |
| M8051 (input interrupt) I10□ disable* ⁴ | | — |
| M8052 (input interrupt) I20□ disable* ⁴ | | — |
| M8053 (input interrupt) I30□ disable* ⁴ | | — |
| M8054 (input interrupt) I40□ disable* ⁴ | | — |
| M8055 (input interrupt) I50□ disable* ⁴ | | — |
| M8056 (Timer interrupt) I6□□ disable* ⁴ | | — |
| M8057 (Timer interrupt) I7□□ disable* ⁴ | | — |
| M8058 (Timer interrupt) I8□□ disable* ⁴ | | — |
| M8059 Counter interrupt disable* ⁴ | Interrupt of I010 to I060 disabled | — |

*4. Cleared when PLC switches from RUN to STOP.

| | | |
|-------------------------|------------------------------------|----------------------------------|
| Error Detection | | |
| [M]8060 | I/O configuration error | D8060 |
| [M]8061 | PLC hardware error | D8061 |
| [M]8062 | Not used | — |
| [M]8063* ^{5,6} | Serial communication error 1 [ch1] | D8063 |
| [M]8064 | Parameter error | D8064 |
| [M]8065 | Syntax error | D8065 D8069 D8314 D8315 |
| [M]8066 | Ladder error | D8066 D8069 D8314 D8315 |
| [M]8067* ⁷ | Operation error | D8067 D8069 D8314 D8315 |
| M 8068 | Operation error latch | D8068 D8312 D8313 |
| M 8069* ⁸ | I/O bus check | — |

*5. Cleared when PLC power supply is turned from OFF to ON.

*6. Serial communication error 2 [ch2] PLC is detected by M8438.

*7. Cleared when PLC switches from STOP to RUN.

*8. When M8069 is ON, I/O bus check is executed.

21

Memory Cassette

22

Battery

A

Special Devices (M8000-, D8000-)

B

Instruction List

C

Character-code

D

Discontinued models

E

Precautions for battery transportation

F

Handling of batteries in EU member states

| Number and name | Operation and function | Corresponding special device |
|----------------------|---|------------------------------|
| Parallel Link | | |
| M 8070*1 | Parallel link Set M8070 when using master station. | — |
| M 8071*1 | Parallel link Set M8071 when using slave station. | — |
| [M]8072 | Parallel link ON when operating | — |
| [M]8073 | Parallel link ON when M8070 or M8071 setting is incorrect | — |

*1. Cleared when PLC switches from STOP to RUN.

| | | |
|-----------------------|-------------------------------------|----------------|
| Sampling Trace | | |
| [M]8074 | Not used | — |
| [M]8075 | Ready request for sampling trace | D8075 to D8098 |
| [M]8076 | Start request for sampling trace | |
| [M]8077 | ON during sampling trace | |
| [M]8078 | ON when sampling trace is completed | |
| [M]8079 | Sampling trace system area | |
| [M]8080 | Not used | — |
| [M]8081 | | — |
| [M]8082 | | — |
| [M]8083 | | — |
| [M]8084 | | — |
| [M]8085 | | — |
| [M]8086 | | — |
| [M]8087 | | — |
| [M]8088 | | — |
| [M]8089 | | — |

| | | |
|-------------|--|---|
| Flag | | |
| [M]8090 | BKCMP (FNC194 to FNC199) instructions - Block comparison signal | — |
| M 8091 | COMRD (FNC182) and BINDA (FNC261) instructions - Output character quantity selector signal | — |
| [M]8092 | Not used | — |
| [M]8093 | | — |
| [M]8094 | | — |
| [M]8095 | | — |
| [M]8096 | | — |
| [M]8097 | | — |
| [M]8098 | | — |

| | | |
|--------------------------------|---|-------|
| High-Speed Ring Counter | | |
| M 8099*2 | High-speed ring counter operation (in 0.1ms units, 16 bits) | D8099 |
| [M]8100 | Not used | — |

*2. 0.1ms high-speed ring counter D8099 will operate after M8099 turns ON.

| Number and name | Operation and function | Corresponding special device |
|---------------------------|-----------------------------------|------------------------------|
| Memory Information | | |
| [M]8101 | Not used | — |
| [M]8102 | | — |
| [M]8103 | | — |
| [M]8104 | | — |
| [M]8105 | ON during writing in RUN mode*3 | — |
| [M]8106 | Not used | — |
| [M]8107 | Device comment registration check | D8107 |
| [M]8108 | Not used | — |

| | | |
|-----------------------------|----------------------|---|
| Output Refresh Error | | |
| [M]8109 | Output refresh error | — |
| [M]8110 | Not used | — |
| [M]8111 | | — |
| M 8112 | | — |
| M 8113 | | — |
| M 8114 | | — |
| M 8115 | | — |
| M 8116 | | — |
| M 8117 | | — |
| [M]8118 | | — |
| [M]8119 | | — |

| | | |
|--|---|-------------------------|
| RS (FNC 80) and Computer Link [ch1] | | |
| [M]8120 | Not used | — |
| [M]8121*4 | RS (FNC 80) instruction: Send wait flag | — |
| M 8122*4 | RS (FNC 80) instruction: Send request | D8122 |
| M 8123*4 | RS (FNC 80) instruction: Receive complete flag | D8123 |
| [M]8124 | RS (FNC 80) instruction: Carrier detection flag | — |
| [M]8125 | Not used | — |
| [M]8126 | Computer link [ch1]: Global ON | D8127 D8128 D8129 |
| [M]8127 | Computer link [ch1]: On-demand send processing | |
| M 8128 | Computer link [ch1]: On-demand error flag | |
| M 8129 | Computer link [ch1]: On-demand Word/Byte changeover RS (FNC 80) instruction: Time-out check flag | |

*3. Enabled only when a memory cassette is installed.

*4. Cleared when PLC switches from RUN to STOP or RS instruction is OFF.

| Number and name | Operation and function | Corresponding special device | |
|--|---|------------------------------|---|
| High-Speed Counter Comparison, High-Speed Table, and | | Positioning | |
| M 8130 | HSZ (FNC 55) instruction: Table comparison mode | D8130 | |
| [M]8131 | HSZ (FNC 55) instruction: Table comparison mode completion flag | | |
| M 8132 | HSZ (FNC 55) and PLSY (FNC 57) instructions: Speed pattern mode | D8131 to D8134 | |
| [M]8133 | HSZ (FNC 55) and PLSY (FNC 57) instructions: Speed pattern mode completion flag | | |
| [M]8134 | Not used | | — |
| [M]8135 | | | — |
| [M]8136 | | | — |
| [M]8137 | | — | |
| [M]8138 | HSCT (FNC280) instruction: Instruction execution complete flag | D8138 | |
| [M]8139 | HSCS(FNC 53), HSCR(FNC 54), HS2(FNC 55), HSCT(FNC280) instructions: High-speed counter comparison instruction executing | D8139 | |
| M 8140 | ZRN (FNC156) instruction: CLR signal output function enable | — | |
| [M]8141 | Not used | — | |
| [M]8142 | | — | |
| [M]8143 | | — | |
| [M]8144 | | — | |
| M 8145 | | — | |
| M 8146 | | — | |
| [M]8147 | | — | |
| [M]8148 | | — | |
| [M]8149 | | — | |
| Inverter Communication Function | | | |
| [M]8150 | Not used | — | |
| [M]8151 | Inverter communication in execution [ch1] | D8151 | |
| [M]8152 ^{*1} | Inverter communication error [ch1] | D8152 | |
| [M]8153 ^{*1} | Inverter communication error latch [ch1] | D8153 | |
| [M]8154 ^{*1} | IVBWR (FNC274) instruction error [ch1] | D8154 | |
| [M]8155 | Not used | — | |
| [M]8156 | Inverter communication in execution [ch2] | D8156 | |
| [M]8157 ^{*1} | Inverter communication error [ch2] | D8157 | |
| [M]8158 ^{*1} | Inverter communication error latch [ch2] | D8158 | |
| [M]8159 ^{*1} | IVBWR (FNC274) instruction error [ch2] | D8159 | |

*1. Cleared when PLC switches from STOP to RUN.

| Number and name | Operation and function | Corresponding special device |
|--------------------------|---|------------------------------|
| Advanced Function | | |
| M 8160*2 | SWAP function of XCH (FNC 17) | — |
| M 8161*2*3 | 8-bit process mode | — |
| M 8162 | High-speed parallel link mode | — |
| [M]8163 | Not used | — |
| M 8164 | | — |
| M 8165*2 | SORT2 (FNC149) instruction: Sorting in descending order | — |
| [M]8166 | Not used | — |
| M 8167*2 | HKY (FNC 71) instruction: HEX data handling function | — |
| M 8168*2 | SMOV (FNC 13) instruction: HEX data handling function | — |
| [M]8169 | Not used | — |

*2. Cleared when PLC switches from RUN to STOP.

*3. Applicable to ASC (FNC 76), RS (FNC 80), ASCI (FNC 82), HEX (FNC 83), CCD (FNC 84), and CRC (FNC188) instructions.

| Pulse Catch | | |
|--------------------|------------------------|---|
| M 8170*4 | Input X000 pulse catch | — |
| M 8171*4 | Input X001 pulse catch | — |
| M 8172*4 | Input X002 pulse catch | — |
| M 8173*4 | Input X003 pulse catch | — |
| M 8174*4 | Input X004 pulse catch | — |
| M 8175*4 | Input X005 pulse catch | — |
| M 8176*4 | Input X006 pulse catch | — |
| M 8177*4 | Input X007 pulse catch | — |

*4. Cleared when PLC switches from STOP to RUN. EI (FNC 04) instruction is necessary.

| Communication Port Channel Setting | | |
|---|---|---|
| M 8178 | Parallel link channel switch (OFF: ch1/ON: ch2) | — |
| M 8179 | N:N network channel switch*5 | — |

*5. The channel is specified by either creating or not creating M8179 in setting program.

•ch1: not creating M8179 in setting program

•ch2: creating M8179 in setting program

| Number and name | Operation and function | Corresponding special device |
|---|---|------------------------------|
| N:N Network | | |
| [M]8180 | Not used | — |
| [M]8181 | | — |
| [M]8182 | | — |
| [M]8183 | Data communication error (Master station) | D8201 to D8218 |
| [M]8184 | Data communication error (Slave station No.1) | |
| [M]8185 | Data communication error (Slave station No.2) | |
| [M]8186 | Data communication error (Slave station No.3) | |
| [M]8187 | Data communication error (Slave station No.4) | |
| [M]8188 | Data communication error (Slave station No.5) | |
| [M]8189 | Data communication error (Slave station No.6) | |
| [M]8190 | Data communication error (Slave station No.7) | |
| [M]8191 | Data communication in execution | |
| [M]8192 | Not used | — |
| [M]8193 | | — |
| [M]8194 | | — |
| [M]8195 | | — |
| [M]8196 | | — |
| [M]8197 | | — |
| High-Speed Counter Edge Count Specification | | |
| M 8198*1*2 | C251, C252, C254: 1/4 edge count selector | — |
| M 8199*1*2 | C253, C255, or C253 (OP): 1/4 edge count selector | — |

*1. OFF: 1 edge count
ON: 4 edge count

*2. Cleared when PLC switches from RUN to STOP.

| Number and name | | Operation and function | Corresponding special device |
|--------------------|---------|--|------------------------------|
| Counter | Up/down | Counter Counting Direction | |
| M 8200 | C200 | When M8□□□ is ON, the corresponding C□□□ is changed to down mode. • ON: Down count operation • OFF: Up count operation | — |
| M 8201 | C201 | | — |
| M 8202 | C202 | | — |
| M 8203 | C203 | | — |
| M 8204 | C204 | | — |
| M 8205 | C205 | | — |
| M 8206 | C206 | | — |
| M 8207 | C207 | | — |
| M 8208 | C208 | | — |
| M 8209 | C209 | | — |
| M 8210 | C210 | | — |
| M 8211 | C211 | | — |
| M 8212 | C212 | | — |
| M 8213 | C213 | | — |
| M 8214 | C214 | | — |
| M 8215 | C215 | | — |
| M 8216 | C216 | | — |
| M 8217 | C217 | | — |
| M 8218 | C218 | | — |
| M 8219 | C219 | | — |
| M 8220 | C220 | | — |
| M 8221 | C221 | | — |
| M 8222 | C222 | | — |
| M 8223 | C223 | | — |
| M 8224 | C224 | — | |
| M 8225 | C225 | — | |
| M 8226 | C226 | — | |
| M 8227 | C227 | — | |
| M 8228 | C228 | — | |
| M 8229 | C229 | — | |
| M 8230 | C230 | — | |
| M 8231 | C231 | — | |
| M 8232 | C232 | — | |
| M 8233 | C233 | — | |
| M 8234 | C234 | — | |
| High-Speed Counter | | Up/down Counter Counting Direction | |
| M 8235 | C235 | When M8□□□ is ON, the corresponding C□□□ is changed to down mode. • ON: Down count operation • OFF: Up count operation | — |
| M 8236 | C236 | | — |
| M 8237 | C237 | | — |
| M 8238 | C238 | | — |
| M 8239 | C239 | | — |
| M 8240 | C240 | | — |
| M 8241 | C241 | | — |
| M 8242 | C242 | | — |
| M 8243 | C243 | | — |
| M 8244 | C244 | | — |
| M 8245 | C245 | | — |

| Number and name | Operation and function | Corresponding special device |
|---|------------------------|------------------------------|
| High-Speed Counter Up/down Counter Monitoring | | |
| [M]8246 | C246 | — |
| [M]8247 | C247 | — |
| [M]8248 | C248 | — |
| [M]8249 | C249 | — |
| [M]8250 | C250 | — |
| [M]8251 | C251 | — |
| [M]8252 | C252 | — |
| [M]8253 | C253 | — |
| [M]8254 | C254 | — |
| [M]8255 | C255 | — |
| [M]8256 to [M]8259 | Not used | — |
| Analog Special Adapter (Refer to Appendix A-3 for details) | | |
| M 8260 to M 8269 ^{*1} | 1st special adapter | — |
| M 8270 to M 8279 ^{*1} | 2nd special adapter | — |
| M 8280 to M 8289 ^{*1} | 3rd special adapter | — |
| M 8290 to M 8299 ^{*1} | 4th special adapter | — |

*1. The number of connected analog special adapters is counted from the main unit side.

| | | |
|-----------------------------|---|---|
| Flag | | |
| [M]8300 to [M]8303 | Not used | — |
| [M]8304 ^{*2} Zero | Turns ON when the multiplication or division result is 0. | — |
| [M]8305 | Not used | — |
| [M]8306 ^{*2} Carry | Turns ON when the division result overflows. | — |
| [M]8307 to [M]8315 | Not used | — |

*2. Supported in Ver. 2.30 or later

| | | |
|---|--|----------------|
| Unconnected I/O Designation Error and flag | | |
| [M]8316 ^{*3} | Unconnected I/O designation error | D8316 D8317 |
| [M]8317 | Not used | — |
| [M]8318 | BFM initialization failure ON when a FROM/TO error has occurred in a special function block/unit as specified in the BFM initialization function at changing PLC from STOP to RUN. When M8318 turns ON, the unit number in which the error has occurred is stored in D8318, and the BFM number is stored in D8319. | D8318 D8319 |
| [M]8319 to [M]8327 | Not used | — |
| [M]8328 | Instruction non-execution | — |
| [M]8329 | Instruction execution abnormal end | — |

*3. If the I/O device numbers are unavailable, M8316 turns ON when its directly designated to device numbers including LD, AND, OR, and OUT instructions or indirectly designated by index.

| Number and name | Operation and function | Corresponding special device |
|----------------------|---|------------------------------|
| Timing Clock | | |
| [M]8330 | DUTY (FNC186) instruction: Timing clock output 1 | D8330 |
| [M]8331 | DUTY (FNC186) instruction: Timing clock output 2 | D8331 |
| [M]8332 | DUTY (FNC186) instruction: Timing clock output 3 | D8332 |
| [M]8333 | DUTY (FNC186) instruction: Timing clock output 4 | D8333 |
| [M]8334 | DUTY (FNC186) instruction: Timing clock output 5 | D8334 |
| [M]8335 | Not used | — |
| Positioning | | |
| M 8336 ^{*4} | DVIT (FNC151) instruction: Interrupt input specification function enabled | D8336 |
| [M]8337 | Not used | — |
| M 8338 | PLSV (FNC157) instruction: Acceleration/deceleration operation | — |
| [M]8339 | Not used | — |
| [M]8340 | [Y000] Pulse output monitor (ON: BUSY/ OFF: READY) | — |
| M 8341 ^{*4} | [Y000] Clear signal output function enable | — |
| M 8342 ^{*4} | [Y000] Zero return direction specification | — |
| M 8343 | [Y000] Forward limit | — |
| M 8344 | [Y000] Reverse limit | — |
| M 8345 ^{*4} | [Y000] DOG signal logic reverse | — |
| M 8346 ^{*4} | [Y000] Zero point signal logic reverse | — |
| M 8347 ^{*4} | [Y000] Interrupt signal logic reverse | — |
| [M]8348 | [Y000] Positioning instruction activation | — |
| M 8349 ^{*4} | [Y000] Pulse output stop command | — |

*4. Cleared when PLC switches from RUN to STOP.

21

Memory
Cassette

22

Battery

A

Special Devices
(M8000-, D8000-)

B

Instruction List

C

Character-code

D

Discontinued
models

E

Precautions for
battery
transportation

F

Handling of
batteries in EU
member states

| Number and name | Operation and function | Corresponding special device |
|------------------------|--|------------------------------|
| Positioning | | |
| [M]8350 | [Y001] Pulse output monitor (ON: BUSY/ OFF: READY) | — |
| M 8351 ^{*1} | [Y001] Clear signal output function enable | — |
| M 8352 ^{*1} | [Y001] Zero return direction specification | — |
| M 8353 | [Y001] Forward limit | — |
| M 8354 | [Y001] Reverse limit | — |
| M 8355 ^{*1} | [Y001] DOG signal logic reverse | — |
| M 8356 ^{*1} | [Y001] Zero point signal logic reverse | — |
| M 8357 ^{*1} | [Y001] Interrupt signal logic reverse | — |
| [M]8358 | [Y001] Positioning instruction activation | — |
| M 8359 ^{*1} | [Y001] Pulse output stop command | — |
| [M]8360 | [Y002] Pulse output monitor (ON: BUSY/ OFF: READY) | — |
| M 8361 ^{*1} | [Y002] Clear signal output function enable | — |
| M 8362 ^{*1} | [Y002] Zero return direction specification | — |
| M 8363 | [Y002] Forward limit | — |
| M 8364 | [Y002] Reverse limit | — |
| M 8365 ^{*1} | [Y002] DOG signal logic reverse | — |
| M 8366 ^{*1} | [Y002] Zero point signal logic reverse | — |
| M 8367 ^{*1} | [Y002] Interrupt signal logic reverse | — |
| [M]8368 | [Y002] Positioning instruction activation | — |
| M 8369 ^{*1} | [Y002] Pulse output stop command | — |
| [M]8370 ^{*2} | [Y003] Pulse output monitor (ON: BUSY/ OFF: READY) | — |
| M 8371 ^{*1*2} | [Y003] Clear signal output function enable | — |
| M 8372 ^{*1*2} | [Y003] Zero return direction specification | — |
| M 8373 ^{*2} | [Y003] Forward limit | — |
| M 8374 ^{*2} | [Y003] Reverse limit | — |
| M 8375 ^{*1*2} | [Y003] DOG signal logic reverse | — |
| M 8376 ^{*1*2} | [Y003] Zero point signal logic reverse | — |
| M 8377 ^{*1*2} | [Y003] Interrupt signal logic reverse | — |
| [M]8378 ^{*2} | [Y003] Positioning instruction activation | — |
| M 8379 ^{*1*2} | [Y003] Pulse output stop command | — |

*1. Cleared when PLC switches from RUN to STOP.

*2. Available only when two FX3U-2HSY-ADP units are connected to an FX3U PLC.

| Number and name | Operation and function | Corresponding special device |
|------------------------------------|--|------------------------------|
| High-Speed Counter Function | | |
| [M]8380 ^{*3} | Operation status of C235, C241, C244, C246, C247, C249, C251, C252, and C254 | — |
| [M]8381 ^{*3} | Operation status of C236 | — |
| [M]8382 ^{*3} | Operation status of C237, C242, and C245 | — |
| [M]8383 ^{*3} | Operation status of C238, C248, C248 (OP), C250, C253, and C255 | — |
| [M]8384 ^{*3} | Operation status of C239 and C243 | — |
| [M]8385 ^{*3} | Operation status of C240 | — |
| [M]8386 ^{*3} | Operation status of C244 (OP) | — |
| [M]8387 ^{*3} | Operation status of C245 (OP) | — |
| [M]8388 | Contact for high-speed counter function change | — |
| M 8389 | External reset input logic reverse | — |
| M 8390 | Function changeover device for C244 | — |
| M 8391 | Function changeover device for C245 | — |
| M 8392 | Function changeover device for C248 and C253 | — |

*3. Cleared when PLC switches from STOP to RUN.

| | | |
|--------------------------|---|-------|
| Interrupt Program | | |
| [M]8393 | Contact for delay time setting | D8393 |
| [M]8394 | HCMOV (FNC189): Drive contact for interrupt program | — |
| [M]8395 | Not used | — |
| [M]8396 | | — |
| [M]8397 | | — |

| | | |
|---------------------|--|--------------|
| Ring Counter | | |
| M 8398 | Ring counter operation (in 1ms units, 32 bits) ^{*4} | D8398, D8399 |
| [M]8399 | Not used | — |

*4. 1ms ring counter (D8399, D8398) will operate after M8398 turns ON.

| | | |
|---------------------------|--|-------|
| RS2 (FNC 87) [ch1] | | |
| [M]8400 | Not used | — |
| [M]8401 ^{*5} | RS2 (FNC 87) [ch1] Send wait flag | — |
| M 8402 ^{*5} | RS2 (FNC 87) [ch1] Send request | D8402 |
| M 8403 ^{*5} | RS2 (FNC 87) [ch1] Receive complete flag | D8403 |
| [M]8404 | RS2 (FNC 87) [ch1] Carrier detection flag | — |
| [M]8405 ^{*6} | RS2 (FNC 87) [ch1] Data set ready (DSR) flag | — |
| [M]8406 | Not used | — |
| [M]8407 | | — |
| [M]8408 | | — |
| M 8409 | RS2 (FNC 87) [ch1] Time-out check flag | — |

*5. Cleared when PLC switches from RUN to STOP or when the RS2 instruction [ch1] is OFF.

*6. Supported in Ver. 2.30 or later

| Number and name | Operation and function | Corresponding special device |
|---|--|------------------------------|
| RS2 (FNC 87) [ch2] and Computer Link [ch2] | | |
| [M]8410 to [M]8420 | Not used | — |
| [M]8421 ^{*1} | RS2 (FNC 87) [ch2] Send wait flag | — |
| M 8422 ^{*1} | RS2 (FNC 87) [ch2] Send request | D8422 |
| M 8423 ^{*1} | RS2 (FNC 87) [ch2] Receive complete flag | D8423 |
| [M]8424 | RS2 (FNC 87) [ch2] Carrier detection flag | — |
| [M]8425 ^{*2} | RS2 (FNC 87) [ch2] Data set ready (DSR) flag | — |
| [M]8426 | Computer link [ch2] Global ON | D8427 D8428 D8429 |
| [M]8427 | Computer link [ch2] On-demand send processing | |
| M 8428 | Computer link [ch2] On-demand error flag | |
| M 8429 | Computer link [ch2] On-demand Word/Byte changeover RS2 (FNC 87) [ch2] Time-out check flag | |

*1. Cleared when PLC switches from RUN to STOP or when RS2 instruction [ch2] is OFF.

*2. Supported in Ver. 2.30 or later

| | | |
|--|--------------------------------------|-------|
| MODBUS communication [ch1] | | |
| [M]8401 ^{*3} | MODBUS request in process | — |
| [M]8402 ^{*3} | MODBUS communication error | D8402 |
| [M]8403 ^{*3} | MODBUS communication error (latched) | D8403 |
| [M]8404 ^{*3} | Listen only mode | — |
| [M]8405 to [M]8407 | Not used | — |
| [M]8408 ^{*3} | Retry | — |
| [M]8409 ^{*3} | Timeout | — |
| [M]8410 | Not used | — |
| MODBUS communication [ch2] | | |
| [M]8421 ^{*3} | MODBUS request in process | — |
| [M]8422 ^{*3} | MODBUS communication error | D8422 |
| [M]8423 ^{*3} | MODBUS communication error (latched) | D8423 |
| [M]8424 ^{*3} | Listen only mode | — |
| [M]8425 to [M]8427 | Not used | — |
| [M]8428 ^{*3} | Retry | — |
| [M]8429 ^{*3} | Timeout | — |
| [M]8430 | Not used | — |
| MODBUS communication [ch1, ch2] | | |
| M 8411 ^{*3} | MODBUS configuration request flag | — |

*3. Supported in Ver. 2.40 or later.

| Number and name | Operation and function | Corresponding special device |
|--------------------------|------------------------------|------------------------------|
| FX3U-CF-ADP [ch1] | | |
| [M]8402 ^{*4} | CF-ADP instruction executing | — |
| [M]8403 | Not used | — |
| [M]8404 ^{*4} | CF-ADP unit ready | — |
| [M]8405 ^{*4} | CF card mount status | — |
| [M]8406 to [M]8409 | Not used | — |
| M 8410 ^{*4} | CF-ADP status renewal stop | — |
| [M]8411 to [M]8417 | Not used | — |
| M 8418 ^{*4*5} | CF-ADP instruction error | — |
| FX3U-CF-ADP [ch2] | | |
| [M]8422 ^{*4} | CF-ADP instruction executing | — |
| [M]8423 | Not used | — |
| [M]8424 ^{*4} | CF-ADP unit ready | — |
| [M]8425 ^{*4} | CF card mount status | — |
| [M]8426 to [M]8429 | Not used | — |
| M 8430 ^{*4} | CF-ADP status renewal stop | — |
| [M]8431 to [M]8437 | Not used | — |
| M 8438 ^{*4*5} | CF-ADP instruction error | — |

*4. Supported in Ver. 2.61 or later.

*5. Cleared when the PLC mode is changed from STOP to RUN.

| | | |
|----------------------------|--------------------------|-------|
| FX3U-ENET-ADP [ch1] | | |
| [M]8404 ^{*6} | FX3U-ENET-ADP unit ready | — |
| [M]8405 | Not used | — |
| [M]8406 ^{*6*7} | Time setting execution | — |
| [M]8407 to [M]8410 | Not used | — |
| M 8411 ^{*6*7} | Execute time setting | — |
| [M]8063 ^{*6} | Error occurrence | D8063 |
| FX3U-ENET-ADP [ch2] | | |
| [M]8424 ^{*6} | FX3U-ENET-ADP unit ready | — |
| [M]8425 | Not used | — |
| [M]8426 ^{*6*7} | Time setting execution | — |
| [M]8427 to [M]8430 | Not used | — |
| M 8431 ^{*6*7} | Execute time setting | — |
| [M]8438 ^{*6} | Error occurrence | D8438 |

*6. Supported in Ver. 3.10 or later.

*7. Used when the SNTP function setting is set to "Use" in the time setting parameters.

| Number and name | Operation and function | Corresponding special device |
|------------------------|---|------------------------------|
| Error Detection | | |
| [M]8430 to [M]8437 | Not used | — |
| M 8438 ^{*1} | Serial communication error 2 [ch2] | D8438 |
| [M]8439 to [M]8448 | Not used | — |
| [M]8449 | Special block error flag | D8449 |
| [M]8450 to [M]8459 | Not used | — |
| Positioning | | |
| M 8460 | DVIT (FNC151) instruction [Y000] User interrupt input command | D8336 |
| M 8461 | DVIT (FNC151) instruction [Y001] User interrupt input command | D8336 |
| M 8462 | DVIT (FNC151) instruction [Y002] User interrupt input command | D8336 |
| M 8463 ^{*2} | DVIT (FNC151) instruction [Y003] User interrupt input command | D8336 |
| M 8464 | DSZR (FNC150), ZRN (FNC156) instructions [Y000] Clear signal device specification function enabled | D8464 |
| M 8465 | DSZR (FNC150), ZRN (FNC156) instructions [Y001] Clear signal device specification function enabled | D8465 |
| M 8466 | DSZR (FNC150), ZRN (FNC156) instructions [Y002] Clear signal device specification function enabled | D8466 |
| M 8467 ^{*2} | DSZR (FNC150), ZRN (FNC156) instructions [Y003] Clear signal device specification function enabled | D8467 |
| Error Detection | | |
| [M]8468 to [M]8488 | Not used | — |
| [M]8489 ^{*3} | Special parameter error | D8489 |
| [M]8490 to [M]8511 | Not used | — |

*1. Cleared when PLC power supply is turned from OFF to ON.

*2. Available only when two FX3U-2HSY-ADP adapters are connected to a PLC.

*3. Supported in Ver. 3.10 or later.

Appendix A-2 Special Data Register (D8000 to D8511)

| Number and name | Content of register | Corresponding special device |
|--|--|------------------------------|
| PLC Status | | |
| D 8000 Watchdog timer | Default value is 200ms (in 1ms steps) (Writes from system ROM at power ON) Value overwritten by program is valid after the END or WDT instruction execution. | — |
| [D]8001 PLC type and system version | <div> <div>24220</div> <div> Version 2.20 FX3U, FX3UC, FX2N, FX2NC Series </div> </div> | D8101 |
| [D]8002 Memory capacity | <ul style="list-style-type: none"> • 2...2K steps • 4...4K steps • 8...8K steps • If 16K steps or more "8" is written to D8002 and "16" or "64" is written to D8102. | D8102 |
| [D]8003 Memory type | Type of cassette or ON/OFF status of memory protect switch is stored.*1 | — |
| [D]8004 Error number M | <div> <div>8060</div> <div>8060 to 8068 (when M8004 is ON)</div> </div> | M8004 |
| [D]8005 Battery voltage | <div> <div>30</div> <div>(in 0.1V units)</div> </div> Battery voltage present value (Example: 3.0V) | M8005 |
| [D]8006 Low battery voltage detection level | Default: 2.7V (in 0.1V units) (Writes from system ROM at power ON) | M8006 |
| [D]8007 Momentary power failure count | Operation frequency of M8007 is stored. Cleared at power OFF. | M8007 |
| D 8008 Power failure detection | Default: 10 ms (AC power supply type) 5 ms (DC power supply type) | M8008 |
| [D]8009 24V DC failed device | Lowest input device number of the I/O extension units in which 24V DC power has failed | M8009 |

*1. D8003 becomes the undermentioned content.

| Present value | Type of memory | Protect switch |
|---------------|------------------------|----------------|
| 02H | Flash memory cassette | OFF |
| 0AH | Flash memory cassette | ON |
| 10H | Built-in memory in PLC | — |

| Number and name | Content of register | Corresponding special device |
|--------------------------------|---|------------------------------|
| Clock | | |
| [D]8010 Present scan time*2 | Accumulated instruction-execution time from step 0 (in 0.1ms units) | — |
| [D]8011 Minimum scan time*2 | Minimum value of scan time (in 0.1ms units) | — |
| [D]8012 Maximum scan time*2 | Maximum value of scan time (in 0.1ms units) | — |
| D 8013 Second data | 0 to 59 seconds (for real time clock) | — |
| D 8014 Minute data | 0 to 59 minutes (for real time clock) | — |
| D 8015 Hour data | 0 to 23 hours (for real time clock) | — |
| D 8016 Day data | 1 to 31 days (for real time clock) | — |
| D 8017 Month data | 1 to 12 months (for real time clock) | — |
| D 8018 Year data | 2 digits of year data (0 to 99) (for real time clock) | — |
| D 8019 Day-of-the-week data | 0 (Sunday) to 6 (Saturday) (for real time clock) | — |

*2. Indicated value includes waiting time of constant scan operations (when M8039 is activated).

| Input Filter | | |
|-----------------------------------|--|---|
| D 8020 Input filter adjustment | Input filter value of X000 to X017*3 (Default: 10 ms) | — |
| [D]8021 | Not used | — |
| [D]8022 | | — |
| [D]8023 | | — |
| [D]8024 | | — |
| [D]8025 | | — |
| [D]8026 | | — |
| [D]8027 | | — |
| Index Register Z0 and V0 | | |
| [D]8028 | Value of Z0 (Z) register*4 | — |
| [D]8029 | Value of V0 (V) register*4 | — |

*3. X000 to X007 in FX3U-16M□.

*4. The values of Z1 to Z7 and V1 to V7 are stored in D8182 to D8195.

21

Memory
Cassette

22

Battery

A

Special Devices
(M8000-, D8000-)

B

Instruction List

C

Character-code

D

Discontinued
models

E

Precautions for
battery
transportation

F

Handling of
batteries in EU
member states

| Number and name | Content of register | Corresponding special device |
|--|---|------------------------------|
| Constant Scan | | |
| [D]8030 | Not used | — |
| [D]8031 | | — |
| [D]8032 | | — |
| [D]8033 | | — |
| [D]8034 | | — |
| [D]8035 | | — |
| [D]8036 | | — |
| [D]8037 | | — |
| [D]8038 | | — |
| D 8039 Constant scan duration | Default: 0 ms (in 1 ms steps) (Writes from system ROM at power ON) Can be overwritten by program | M8039 |
| Stepladder and Annunciator | | |
| [D]8040* ¹ ON state number 1 | The smallest number out of active state ranging from S0 to S899 and S1000 to S4095 is stored in D8040 and the second-smallest state number is stored in D8041. Active state numbers are then sequentially stored in registers up to D8047 (Max. 8 points). | M8047 |
| [D]8041* ¹ ON state number 2 | | |
| [D]8042* ¹ ON state number 3 | | |
| [D]8043* ¹ ON state number 4 | | |
| [D]8044* ¹ ON state number 5 | | |
| [D]8045* ¹ ON state number 6 | | |
| [D]8046* ¹ ON state number 7 | | |
| [D]8047* ¹ ON state number 8 | | |
| [D]8048 | Not used | — |
| [D]8049* ¹ On state minimum number | When M8049 is ON, the smallest number out of active annunciator relay ranging from S900 to S999 is stored in D8049. | M8049 |
| [D]8050 to [D]8059 | Not used | — |

*1. Executed at END instruction.

| Number and name | Content of register | Corresponding special device |
|---|---|------------------------------|
| Error Detection (For the error code, refer to Subsection 14.6.4) | | |
| [D]8060 | If the unit or block corresponding to a programmed I/O number is not actually loaded, M8060 is set to ON and the first device number of the erroneous block is written to D8060. Example: If X020 is unconnected. <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; padding: 2px; margin-right: 10px;"> 1 0 2 0 </div> <div> BCD converted value Device number 10 to 337 1: Input X 0: Output Y </div> </div> | M8060 |
| [D]8061 | Error code for PLC hardware error | M8061 |
| [D]8062* ² | Error code for PLC/PP communication error | M8062 |
| [D]8063* ² | Error code for serial communication error 1 [ch1] | M8063 |
| [D]8064 | Error code for parameter error | M8064 |
| [D]8065 | Error code for syntax error | M8065 |
| [D]8066 | Error code for ladder error | M8066 |
| [D]8067* ³ | Error code for operation error | M8067 |
| D 8068 | Operation error step number latched* ⁴ | M8068 |
| [D]8069* ³ | Error step number of M8065 to M8067* ⁵ | M8065 to M8067 |

*2. Cleared when PLC power supply is turned from OFF to ON.

*3. Cleared when PLC switches from STOP to RUN.

*4. In case of 32K steps or more, step number is stored in [D8313, D8312].

*5. In case of 32K steps or more, step number is stored in [D8315, D8314].

| Parallel Link (Refer to Data Communication Edition for details.) | | |
|---|---|---|
| [D]8070 | Parallel link error time-out check time: 500 ms | — |
| [D]8071 | Not used | — |
| [D]8072 | | — |
| [D]8073 | | — |

| Number and name | Content of register | Corresponding special device |
|-------------------------|---|------------------------------|
| Sampling Trace*1 | | |
| [D]8074 | These devices are occupied by the PLC system when the sampling trace function is used in the personal computer*1. | M8075 to M8079 |
| [D]8075 | | |
| [D]8076 | | |
| [D]8077 | | |
| [D]8078 | | |
| [D]8079 | | |
| [D]8080 | | |
| [D]8081 | | |
| [D]8082 | | |
| [D]8083 | | |
| [D]8084 | | |
| [D]8085 | | |
| [D]8086 | | |
| [D]8087 | | |
| [D]8088 | | |
| [D]8089 | | |
| [D]8090 | | |
| [D]8091 | | |
| [D]8092 | | |
| [D]8093 | | |
| [D]8094 | | |
| [D]8095 | | |
| [D]8096 | | |
| [D]8097 | | |
| [D]8098 | | |

*1. The sampling trace devices are used by peripheral equipment.

| | | |
|--------------------------------|--|-------|
| High-Speed Ring Counter | | |
| D 8099 | Up-operation high-speed ring counter of 0 to 32,767 (in 0.1ms units, 16-bit)*2 | M8099 |
| [D]8100 | Not used | — |

*2. 0.1ms high-speed ring counter D8099 will operate after M8099 turns ON.

| | | |
|--|---|-------|
| Memory Information | | |
| [D]8101 PLC type and system version | <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; padding: 2px; margin-right: 5px;">1 6 2 2 0</div> <div style="display: flex; flex-direction: column; align-items: center; margin-right: 5px;"> ↑ FX3U/ FX3UC </div> <div style="display: flex; align-items: center;"> ↑ Version 2.20 </div> </div> | — |
| [D]8102 | 2 2K steps 4 4K steps 8 8K steps 16 16K steps 64 64K steps | — |
| [D]8103 | Not used | — |
| [D]8104 | | — |
| [D]8105 | | — |
| [D]8106 | | — |
| [D]8107 | Number of registered device comments | M8107 |
| [D]8108 | Number of special function units/blocks connected | — |

| Number and name | Content of register | Corresponding special device |
|--|--|------------------------------|
| Output Refresh Error | | |
| [D]8109 | Y number where output refresh error occurs | M8109 |
| [D]8110 to [D]8119 | Not used | — |
| RS (FNC 80) and Computer Link [ch1] | | |
| D 8120*3 | RS (FNC 80) instruction and computer link [ch1] Communication format setting | — |
| D 8121*3 | Computer link [ch1] Station number setting | — |
| [D]8122*4 | RS (FNC 80) instruction: Remaining points of transmit data | M8122 |
| [D]8123*4 | RS (FNC 80) instruction: Monitoring receive data points | M8123 |
| D 8124 | RS (FNC 80) instruction: Header <Default: STX> | — |
| D 8125 | RS (FNC 80) instruction: Terminator <Default: ETX> | — |
| [D]8126 | Not used | — |
| D 8127 | Computer link [ch1] Specification of on-demand head device register | M8126 to M8129 |
| D 8128 | Computer link [ch1] Specification of on-demand data length register | |
| D 8129*3 | RS (FNC 80) instruction, computer link [ch1] Time-out time setting | |

*3. Latched (battery backed) device. For details, refer to the programming manual.

*4. Cleared when PLC switches from RUN to STOP.

| Number and name | Content of register | | Corresponding special device |
|--|---|---|------------------------------|
| High-Speed Counter Comparison, High-Speed Table, and Positioning | | | |
| [D]8130 | HSZ (FNC 55) instruction: High-speed comparison table counter | | M8130 |
| [D]8131 | HSZ (FNC 55) and PLSY (FNC 57) instructions: Speed pattern table counter | | M8132 |
| [D]8132 | Lower | HSZ (FNC 55) and PLSY (FNC 57) instructions: Speed pattern frequency | M8132 |
| [D]8133 | Upper | | |
| [D]8134 | Lower | HSZ (FNC 55) and PLSY (FNC 57) instructions: Number of target pulses for speed pattern | M8132 |
| [D]8135 | Upper | | |
| D 8136 | Lower | PLSY (FNC 57), PLSR (FNC 59) instructions: Accumulated total number of pulses output to Y000 and Y001 | — |
| D 8137 | Upper | | |
| [D]8138 | HSCT (FNC280) instruction: Table count | | D8138 |
| [D]8139 | HSCS (FNC 53), HSCR (FNC 54), HSZ (FNC 55), and HSCT (FNC280) instructions: Number of instructions being executed | | D8139 |
| D 8140 | Lower | Accumulated number of pulses output to Y000 for PLSY (FNC 57) and PLSR (FNC 59) instructions | — |
| D 8141 | Upper | | |
| D 8142 | Lower | Accumulated number of pulses output to Y001 for PLSY (FNC 57) and PLSR (FNC 59) instructions | — |
| D 8143 | Upper | | |
| [D]8144 | Not used | | — |
| D 8145 | | | — |
| D 8146 | | | — |
| D 8147 | | | — |
| D 8148 | | | — |
| [D]8149 | | | — |
| Inverter Communication Function | | | |
| D 8150 ^{*1} | Response wait time of inverter communication [ch1] | | — |
| [D]8151 | Step number of instruction during inverter communication [ch1] Default: -1 | | M8151 |
| [D]8152 ^{*2} | Error code for inverter communication [ch1] | | M8152 |
| [D]8153 ^{*2} | Inverter communication error step number latched [ch1] Default: -1 | | M8153 |
| [D]8154 ^{*2} | Parameter number when error occurs during IVBWR (FNC274) instruction [ch1] Default: -1 | | M8154 |

| Number and name | Content of register | Corresponding special device |
|-----------------------|---|------------------------------|
| D 8155 ^{*1} | Response wait time of inverter communication [ch2] | - |
| [D]8156 | Step number of instruction during inverter communication [ch2] Default: -1 | M8156 |
| [D]8157 ^{*2} | Error code for inverter communication [ch2] | M8157 |
| [D]8158 ^{*2} | Inverter communication error step number latched [ch2] Default: -1 | M8158 |
| [D]8159 ^{*2} | Parameter number when error occurs during IVBWR (FNC274) instruction [ch2] Default: -1 | M8159 |

^{*1}. Cleared when PLC power supply is turned from OFF to ON.

^{*2}. Cleared when PLC switches from STOP to RUN.

| Advanced Function | | |
|--------------------------|---|---|
| [D]8160 | Not used | - |
| [D]8161 | | - |
| [D]8162 | | - |
| [D]8163 | | - |
| D 8164 | | - |
| [D]8165 | | - |
| [D]8166 ^{*3} | Special block error condition | - |
| [D]8167 | Not used | - |
| [D]8168 | | - |
| [D]8169 | Access restriction status ^{*4} | - |

^{*3}. Supported in Ver. 3.00 or later.

For details on the special block error condition, refer to Subsection 14.6.4 Error Code List and Action.

^{*4}. Access restriction status

| Present value | Access restriction status | Program | | Monitoring | Present value change |
|---------------------|---------------------------------|-----------------|-----------------|-----------------|----------------------|
| | | Read | Write | | |
| H**00 ^{*6} | 2nd keyword is not set. | ✓ ^{*5} | ✓ ^{*5} | ✓ ^{*5} | ✓ ^{*5} |
| H**10 ^{*6} | Write protection | ✓ | - | ✓ | ✓ |
| H**11 ^{*6} | Read / write protection | - | - | ✓ | ✓ |
| H**12 ^{*6} | All online operation protection | - | - | - | - |
| H**20 ^{*6} | Keyword cancel | ✓ | ✓ | ✓ | ✓ |

^{*5}. The accessibility is restricted depending on the keyword setting status.

^{*6}. "****" indicates areas used by the system.

| Number and name | Content of register | Corresponding special device |
|---|------------------------------------|------------------------------|
| N:N Network (setting) | | |
| [D]8170 | Not used | — |
| [D]8171 | | — |
| [D]8172 | | — |
| [D]8173 | Station number | — |
| [D]8174 | Total number of slave stations | — |
| [D]8175 | Refresh range | — |
| D 8176 | Station number setting | M8038 |
| D 8177 | Total slave station number setting | |
| D 8178 | Refresh range setting | |
| D 8179 | Retry count setting | |
| D 8180 | Comms time-out setting | |
| [D]8181 | Not used | — |
| Index Register Z1 to Z7 and V1 to V7 | | |
| [D]8182 | Value of Z1 register | — |
| [D]8183 | Value of V1 register | — |
| [D]8184 | Value of Z2 register | — |
| [D]8185 | Value of V2 register | — |
| [D]8186 | Value of Z3 register | — |
| [D]8187 | Value of V3 register | — |
| [D]8188 | Value of Z4 register | — |
| [D]8189 | Value of V4 register | — |
| [D]8190 | Value of Z5 register | — |
| [D]8191 | Value of V5 register | — |
| [D]8192 | Value of Z6 register | — |
| [D]8193 | Value of V6 register | — |
| [D]8194 | Value of Z7 register | — |
| [D]8195 | Value of V7 register | — |
| [D]8196 | Not used | — |
| [D]8197 | | — |
| [D]8198 | | — |
| [D]8199 | | — |

| Number and name | Content of register | Corresponding special device |
|---------------------------------|---|------------------------------|
| N:N Network (monitoring) | | |
| [D]8200 | Not used | — |
| [D]8201 | Current link scan time | — |
| [D]8202 | Maximum link scan time | — |
| [D]8203 | Number of communication error at master station | M8183 to M8191 |
| [D]8204 | Number of communication error at slave station No.1 | |
| [D]8205 | Number of communication error at slave station No.2 | |
| [D]8206 | Number of communication error at slave station No.3 | |
| [D]8207 | Number of communication error at slave station No.4 | |
| [D]8208 | Number of communication error at slave station No.5 | |
| [D]8209 | Number of communication error at slave station No.6 | |
| [D]8210 | Number of communication error at slave station No.7 | |
| [D]8211 | Code of communication error at master station | |
| [D]8212 | Code of communication error at slave station No.1 | |
| [D]8213 | Code of communication error at slave station No.2 | |
| [D]8214 | Code of communication error at slave station No.3 | |
| [D]8215 | Code of communication error at slave station No.4 | |
| [D]8216 | Code of communication error at slave station No.5 | |
| [D]8217 | Code of communication error at slave station No.6 | |
| [D]8218 | Code of communication error at slave station No.7 | |
| [D]8219 to [D]8259 | Not used | — |
| Analog Special Adapter | | |
| D 8260 to D 8269 | 1st special adapter*1 | |
| D 8270 to D 8279 | 2nd special adapter*1 | |
| D 8280 to D 8289 | 3rd special adapter*1 | |
| D 8290 to D 8299 | 4th special adapter*1 | |

*1. The number of connected analog special adapters is counted from the main unit side.

| Number and name | Content of register | Corresponding special device |
|---|--|------------------------------|
| Display Module Function FX3U-7DM | | |
| D 8300 | Control device (D) for display module • Default: K-1 | — |
| D 8301 | Control device (M) for display module • Default: K-1 | — |
| [D]8302*1 | Language display setting • Japanese: K0 • English: Other than K0 | — |
| [D]8303 | LCD contrast setting value • Default: K0 | — |
| [D]8304 to [D]8309 | Not used | — |

*1. Latch (battery backed) device

| RND (FNC184) | | | |
|--|---|---|----------------|
| [D]8310 | Lower | RND (FNC184) instruction: Data for generating random number • Default: K1 | — |
| [D]8311 | Upper | | |
| Syntax, Circuit, Operation, or Unconnected I/O Designation Error Step Number | | | |
| D 8312 | Lower | Operation error step number latched (32-bit) | M8068 |
| D 8313 | Upper | | |
| [D]8314* ² | Lower | Error step number of M8065 to M8067 (32-bit) | M8065 to M8067 |
| [D]8315* ² | Upper | | |
| [D]8316 | Lower | Step number of instruction specifying an unconnected I/O number (directly or indirectly using index register) | M8316 |
| [D]8317 | Upper | | |
| [D]8318 | BFM initialization function: Error unit number | | M8318 |
| [D]8319 | BFM initialization function: Error BFM number | | M8318 |
| [D]8320 to [D]8329 | Not used | | — |

*2. Cleared when PLC switches from STOP to RUN.

| Timing Clock | | | |
|--------------------|---|---|-------|
| [D]8330 | DUTY (FNC186) instruction: Scan counting for timing clock output 1 | | M8330 |
| [D]8331 | DUTY (FNC186) instruction: Scan counting for timing clock output 2 | | M8331 |
| [D]8332 | DUTY (FNC186) instruction: Scan counting for timing clock output 3 | | M8332 |
| [D]8333 | DUTY (FNC186) instruction: Scan counting for timing clock output 4 | | M8333 |
| [D]8334 | DUTY (FNC186) instruction: Scan counting for timing clock output 5 | | M8334 |
| [D]8335 | Not used | | — |
| Positioning | | | |
| D 8336 | DVIT (FNC151) instruction: Specification of interrupt input | | M8336 |
| [D]8337 to [D]8339 | Not used | | — |
| D 8340 | Lower | [Y000] Current value register • Default: 0 | — |
| D 8341 | Upper | | |
| D 8342 | [Y000] | Bias speed Default: 0 | — |
| D 8343 | Lower | [Y000] Maximum speed • Default: 100000 | — |
| D 8344 | Upper | | |

| Number and name | Content of register | | Corresponding special device |
|--------------------|--|---|------------------------------|
| D 8345 | [Y000] Creep speed • Default: 1000 | | — |
| D 8346 | Lower | [Y000] Zero return speed Default: 50000 | — |
| D 8347 | Upper | | |
| D 8348 | [Y000] Acceleration time • Default: 100 | | — |
| D 8349 | [Y000] Deceleration time • Default: 100 | | — |
| | | | |
| D 8350 | Lower | [Y001] Current value register • Default: 0 | — |
| D 8351 | Upper | | |
| D 8352 | [Y001] Bias speed Default: 0 | | — |
| D 8353 | Lower | [Y001] Maximum speed • Default: 100000 | — |
| D 8354 | Upper | | |
| D 8355 | [Y001] Creep speed • Default: 1000 | | — |
| D 8356 | Lower | [Y001] Zero return speed • Default: 50000 | — |
| D 8357 | Upper | | |
| D 8358 | [Y001] Acceleration time • Default: 100 | | — |
| D 8359 | [Y001] Deceleration time • Default: 100 | | — |
| | | | |
| D 8360 | Lower | [Y002] Current value register • Default: 0 | — |
| D 8361 | Upper | | |
| D 8362 | [Y002] Bias speed Default: 0 | | — |
| D 8363 | Lower | [Y002] Maximum speed • Default: 100000 | — |
| D 8364 | Upper | | |
| D 8365 | [Y002] Creep speed • Default: 1000 | | — |
| D 8366 | Lower | [Y002] Zero return speed • Default: 50000 | — |
| D 8367 | Upper | | |
| D 8368 | [Y002] Acceleration time • Default: 100 | | — |
| D 8369 | [Y002] Deceleration time • Default: 100 | | — |
| | | | |
| D 8370*3 | Lower | [Y003] Current value register • Default: 0 | — |
| D 8371*3 | Upper | | — |
| D 8372*3 | [Y003] Bias speed Default: 0 | | — |
| D 8373*3 | Lower | [Y003] Maximum speed • Default: 100000 | — |
| D 8374*3 | Upper | | — |
| D 8375*3 | [Y003] Creep speed Default: 1000 | | — |
| D 8376*3 | Lower | [Y003] Zero return speed • Default: 50000 | — |
| D 8377*3 | Upper | | — |
| D 8378*3 | [Y003] Acceleration time • Default: 100 | | — |
| D 8379*3 | [Y003] Deceleration time • Default: 100 | | — |
| [D]8380 to [D]8392 | Not used | | — |

*3. Available only when two FX3U-2HSY-ADP adapters are connected to an PLC.

| Number and name | Content of register | | Corresponding special device |
|-------------------|--|--|------------------------------|
| Interrupt Program | | | |
| D 8393 | Delay time | | M8393 |
| [D]8394 | Not used | | — |
| [D]8395*1 | Symbolic Information, Block password status *2 | | — |
| [D]8396 | Not used | | — |
| [D]8397 | | | — |
| Ring Counter | | | |
| D 8398 | Lower | Up-operation ring counter of 0 to 2,147,483,647 (in 1ms units, 32-bit)*4 | M8398 |
| D 8399 | Upper | | |

*1. Supported in Ver. 3.00 or later.

*2. Symbolic information storage status and execution program protection status using the block password.

| Present value | Symbolic information storage | Protection of execution program |
|---------------|------------------------------|---------------------------------|
| H**00*3 | None | None |
| H**01*3 | None | Provided |
| H**10*3 | Provided | None |
| H**11*3 | Provided | Provided |

*3. "****" indicates areas used by the system.

*4. 1ms ring counter (D8399, D8398) will operate after M8398 turns ON.

| | | | |
|---------------------------|--|--|-------|
| RS2 (FNC 87) [ch1] | | | |
| D 8400 | RS2 (FNC 87) [ch1] Communication format setting | | — |
| [D]8401 | Not used | | — |
| [D]8402*5 | RS2 (FNC 87) [ch1] Remaining points of transmit data | | M8402 |
| [D]8403*5 | RS2 (FNC 87) [ch1] Monitoring receive data points | | M8403 |
| [D]8404 | Not used | | — |
| [D]8405 | Communication parameter display [ch1] | | — |
| [D]8406 | Not used | | — |
| [D]8407 | | | — |
| [D]8408 | | | — |
| D 8409 | RS2 (FNC 87) [ch1] Time-out time setting | | — |
| D 8410 | RS2 (FNC 87) [ch1] Header 1 and 2 <Default: STX> | | — |
| D 8411 | RS2 (FNC 87) [ch1] Header 3 and 4 | | — |
| D 8412 | RS2 (FNC 87) [ch1] Terminator 1 and 2 <Default: ETX> | | — |
| D 8413 | RS2 (FNC 87) [ch1] Terminator 3 and 4 | | — |
| [D]8414 | RS2 (FNC 87) [ch1] Receive sum (received data) | | — |
| [D]8415 | RS2 (FNC 87) [ch1] Receive sum (calculated result) | | — |
| [D]8416 | RS2 (FNC 87) [ch1] Send sum | | — |
| [D]8417 | Not used | | — |
| [D]8418 | | | — |
| [D]8419 | Operation mode display [ch1] | | — |

*5. Cleared when PLC switches from RUN to STOP.

| Number and name | Content of register | Corresponding special device |
|--|--|------------------------------|
| RS2 (FNC 87) [ch2] and Computer Link [ch2] | | |
| D 8420 | RS2 (FNC 87) [ch2] Communication format setting | — |
| D 8421 | Computer link [ch2] Station number setting | — |
| [D]8422*6 | RS2 (FNC 87) [ch2] Remaining points of transmit data | M8422 |
| [D]8423*6 | RS2 (FNC 87) [ch2] Monitoring receive data points | M8423 |
| [D]8424 | Not used | — |
| [D]8425 | Communication parameter display [ch2] | — |
| [D]8426 | Not used | — |
| D 8427 | Computer link [ch2] Specification of on-demand head device register | M8426 to M8429 |
| D 8428 | Computer link [ch2] Specification of on-demand data length register | |
| D 8429 | RS2 (FNC 87) [ch2], computer link [ch2] Time-out time setting | |
| D 8430 | RS2 (FNC 87) [ch2] Header 1 and 2 <Default: STX> | — |
| D 8431 | RS2 (FNC 87) [ch2] Header 3 and 4 | — |
| D 8432 | RS2 (FNC 87) [ch2] Terminator 1 and 2 <Default: ETX> | — |
| D 8433 | RS2 (FNC 87) [ch2] Terminator 3 and 4 | — |
| [D]8434 | RS2 (FNC 87) [ch2] Receive sum (received data) | — |
| [D]8435 | RS2 (FNC 87) [ch2] Receive sum (calculated result) | — |
| [D]8436 | RS2 (FNC 87) [ch2] Send sum | — |
| [D]8437 | Not used | — |

*6. Cleared when PLC switches from RUN to STOP.

21

Memory Cassette

22

Battery

A

Special Devices (M8000-, D8000-)

B

Instruction List

C

Character-code

D

Discontinued models

E

Precautions for battery transportation

F

Handling of batteries in EU member states

| Number and name | Content of register | Corresponding special device |
|----------------------------|---|------------------------------|
| MODBUS communication [ch1] | | |
| D 8400 ^{*1} | Communication format | — |
| D 8401 ^{*1} | Protocol | — |
| D 8402 ^{*1} | Communication error code | M8402 |
| D 8403 ^{*1} | Error details | M8403 |
| D 8404 ^{*1} | Error step numbe | — |
| [D]8405 ^{*1} | Communication format display | — |
| D 8406 ^{*1} | ASCII input delimiter | — |
| [D]8407 ^{*1} | Step number being executed | — |
| [D]8408 ^{*1} | Current retry value | — |
| D 8409 ^{*1} | Slave response timeout | — |
| D 8410 ^{*1} | Turn around delay | — |
| D 8411 ^{*1} | Message to message delay | — |
| D 8412 ^{*1} | Number of retries | — |
| [D]8413 | Not used | — |
| D 8414 ^{*1} | Slave node address | — |
| D 8415 ^{*1} | Communication status information setup | — |
| D 8416 ^{*1} | Communication status device range setup | — |
| [D]8417 to 8418 | Not used | — |
| [D]8419 ^{*1} | Communication mode | — |
| MODBUS communication [ch2] | | |
| D 8420 ^{*1} | Communication format | — |
| D 8421 ^{*1} | Protocol | — |
| D 8422 ^{*1} | Communication error code | M8422 |
| D 8423 ^{*1} | Error details | M8423 |
| D 8424 ^{*1} | Error step numbe | — |
| [D]8425 ^{*1} | Communication format display | — |
| D 8426 ^{*1} | ASCII input delimiter | — |
| [D]8427 ^{*1} | Step number being executed | — |
| [D]8428 ^{*1} | Current retry value | — |
| D 8429 ^{*1} | Slave response timeout | — |
| D 8430 ^{*1} | Turn around delay | — |
| D 8431 ^{*1} | Message to message delay | — |
| D 8432 ^{*1} | Number of retries | — |
| [D]8433 | Not used | — |
| D 8434 ^{*1} | Slave node address | — |
| D 8435 ^{*1} | Communication status information setup | — |
| D 8436 ^{*1} | Communication status device range setup | — |
| [D]8437 to 8438 | Not used | — |
| [D]8439 ^{*1} | Communication mode | — |

| Number and name | Content of register | | Corresponding special device |
|---------------------------------|---------------------|-------------------------|------------------------------|
| MODBUS communication [ch1, ch2] | | | |
| D 8470 ^{*1} | Lower | MODBUS device mapping 1 | — |
| D 8471 ^{*1} | Upper | | |
| D 8472 ^{*1} | Lower | MODBUS device mapping 2 | — |
| D 8473 ^{*1} | Upper | | |
| D 8474 ^{*1} | Lower | MODBUS device mapping 3 | — |
| D 8475 ^{*1} | Upper | | |
| D 8476 ^{*1} | Lower | MODBUS device mapping 4 | — |
| D 8477 ^{*1} | Upper | | |
| D 8478 ^{*1} | Lower | MODBUS device mapping 5 | — |
| D 8479 ^{*1} | Upper | | |
| D 8480 ^{*1} | Lower | MODBUS device mapping 6 | — |
| D 8481 ^{*1} | Upper | | |
| D 8482 ^{*1} | Lower | MODBUS device mapping 7 | — |
| D 8483 ^{*1} | Upper | | |
| D 8484 ^{*1} | Lower | MODBUS device mapping 8 | — |
| D 8485 ^{*1} | Upper | | |

*1. Supported in Ver. 2.40 or later.

| Number and name | Content of register | | Corresponding special device |
|---------------------------|------------------------------------|---|------------------------------|
| FX3U-CF-ADP [ch1] | | | |
| [D]8400 to [D]8401 | Not used | | — |
| [D]8402 ^{*1*2} | Lower | Step number of executing CF-ADP instruction | — |
| [D]8403 ^{*1*2} | Upper | | |
| [D]8404 to [D]8405 | Not used | | — |
| [D]8406 ^{*1} | CF-ADP status | | — |
| [D]8407 | Not used | | — |
| [D]8408 ^{*1} | CF-ADP version | | — |
| [D]8409 to [D]8413 | Not used | | — |
| [D]8414 ^{*1*2} | Lower | Error step number of M8418 | — |
| [D]8415 ^{*1*2} | Upper | | |
| [D]8416 to [D]8417 | Not used | | — |
| [D]8418 ^{*1*2*3} | Error code for CF-ADP instructions | | — |
| [D]8419 ^{*1} | Operation mode display | | — |
| FX3U-CF-ADP [ch2] | | | |
| [D]8420 to [D]8421 | Not used | | — |
| [D]8422 ^{*1*2} | Lower | Step number of executing CF-ADP instruction | — |
| [D]8423 ^{*1*2} | Upper | | |
| [D]8424 to [D]8425 | Not used | | — |
| [D]8426 ^{*1} | CF-ADP status | | — |
| [D]8427 | Not used | | — |
| [D]8428 ^{*1} | CF-ADP version | | — |
| [D]8429 to [D]8433 | Not used | | — |
| [D]8434 ^{*1*2} | Lower | Error step number of M8438 | — |
| [D]8435 ^{*1*2} | Upper | | |
| [D]8436 to [D]8437 | Not used | | — |
| [D]8438 ^{*1*2*3} | Error code for CF-ADP instructions | | — |
| [D]8439 ^{*1} | Operation mode display | | — |

*1. Supported in Ver. 2.61 or later.

*2. Cleared when the PLC mode is changed from STOP to RUN.

*3. For details on the error code is stored in special data register, refer to the FX3U-CF-ADP User's Manual.

| Number and name | Content of register | Corresponding special device |
|----------------------|---|------------------------------|
| FX3U-ENET-ADP [ch1] | | |
| [D]8400*4 | IP Address (Low-order) | — |
| [D]8401*4 | IP Address (High-order) | — |
| [D]8402*4 | Subnet mask (Low-order) | — |
| [D]8403*4 | Subnet mask (High-order) | — |
| [D]8404*4 | Default router IP Address (Low-order) | — |
| [D]8405*4 | Default router IP Address (High-order) | — |
| [D]8406*4 | Status information | — |
| [D]8407*4 | Connection condition of the Ethernet port | — |
| [D]8408*4 | FX3U-ENET-ADP version | — |
| D 8409*4 | Communication timeout time | — |
| D 8410*4 | Connection forcible nullification | — |
| [D]8411*4 | Time setting functional operation result | — |
| [D]8412 to [D]8414*4 | Host MAC address | — |
| [D]8415 | Not used | — |
| [D]8416*4 | Model code | — |
| [D]8417*4 | Error code of the Ethernet adapter | — |
| [D]8418 | Not used | — |
| [D]8063 | Error code | M8063 |
| [D]8419*4 | Operation mode display | — |
| FX3U-ENET-ADP [ch2] | | |
| [D]8420*4 | IP Address (Low-order) | — |
| [D]8421*4 | IP Address (High-order) | — |
| [D]8422*4 | Subnet mask (Low-order) | — |
| [D]8423*4 | Subnet mask (High-order) | — |
| [D]8424*4 | Default router IP Address (Low-order) | — |
| [D]8425*4 | Default router IP Address (High-order) | — |
| [D]8426*4 | Status information | — |
| [D]8427*4 | Connection condition of the Ethernet port | — |
| [D]8428*4 | FX3U-ENET-ADP version | — |
| D 8429*4 | Communication timeout time | — |
| D 8430*4 | Connection forcible nullification | — |
| [D]8431*4 | Time setting functional operation result | — |
| [D]8432 to [D]8434*4 | Host MAC address | — |
| [D]8435 | Not used | — |
| [D]8436*4 | Model code | — |
| [D]8437*4 | Error code of the Ethernet adapter | — |
| [D]8438 | Error code | M8438 |
| [D]8439*4 | Operation mode display | — |

*4. Supported in Ver. 3.10 or later.

21

Memory Cassette

22

Battery

A

Special Devices (M8000-, D8000-)

B

Instruction List

C

Character-code

D

Discontinued models

E

Precautions for battery transportation

F

Handling of batteries in EU member states

| Number and name | Content of register | Corresponding special device |
|---|---|------------------------------|
| Error Detection | | |
| [D]8438*1 | Error code for serial communication error 2 [ch2] | M8438 |
| RS2 (FNC 87) [ch2] and Computer Link [ch2] | | |
| [D]8439 | Operation mode display [ch2] | — |
| Error Detection | | |
| [D]8440 to [D]8448 | Not used | — |
| [D]8449 | Special block error code | M8449 |
| [D]8450 to [D]8459 | Not used | — |
| Positioning [FX3U and FX3UC PLCs] | | |
| [D]8460 to [D]8463 | Not used | — |
| D 8464 | DSZR (FNC150) and ZRN (FNC156) instructions: [Y000] Clear signal device specification | M8464 |
| D 8465 | DSZR (FNC150) and ZRN (FNC156) instructions: [Y001] Clear signal device specification | M8465 |
| D 8466 | DSZR (FNC150) and ZRN (FNC156) instructions: [Y002] Clear signal device specification | M8466 |
| D 8467*2 | DSZR (FNC150) and ZRN (FNC156) instructions: [Y003] Clear signal device specification | M8467 |
| Error Detection | | |
| [D]8468 to [D]8488 | Not used | — |
| [D]8489*3 | Error code for special parameter error | M8489 |
| [D]8490 to [D]8511 | Not used | — |

*1. Cleared when PLC power supply is turned from OFF to ON.

*2. Available only when two FX3U-2HSY-ADP adapters are connected to an PLC.

*3. Supported in Ver. 3.10 or later.

Appendix A-3 Analog special adapters [M8260 to M8299 and D8260 to D8299]

When analog special adapters are connected, operations and functions are assigned to the devices shown in the tables below according to the number of connected analog special adapters.
Devices which cannot be written are shaded in the "Operation and function" columns.

→ For details, refer to the manual of each product.

Appendix A-3-1 Special auxiliary relays (M8260 to M8299)

| Number | Operation and function | | |
|-----------------------------------|--------------------------|-----------------------------|--|
| | FX3U-4AD-ADP | FX3U-4DA-ADP | FX3U-3A-ADP |
| Applicable version | From first version | From first version | Ver. 2.61 or later |
| 1st analog special adapter | | | |
| M 8260 | Input mode switching Ch1 | Output mode switching Ch1 | Input mode switching Ch1 |
| M 8261 | Input mode switching Ch2 | Output mode switching Ch2 | Input mode switching Ch2 |
| M 8262 | Input mode switching Ch3 | Output mode switching Ch3 | Output mode switching |
| M 8263 | Input mode switching Ch4 | Output mode switching Ch4 | Not used |
| M 8264 | Not used | Output hold mode cancel Ch1 | Not used |
| M 8265 | Not used | Output hold mode cancel Ch2 | Not used |
| M 8266 | Not used | Output hold mode cancel Ch3 | Output hold mode cancel |
| M 8267 | Not used | Output hold mode cancel Ch4 | Sets whether or not input channel 1 is used. |
| M 8268 | Not used | Not used | Sets whether or not input channel 2 is used. |
| M 8269 | Not used | Not used | Sets whether or not output channel is used. |
| 2nd analog special adapter | | | |
| M 8270 | Input mode switching Ch1 | Output mode switching Ch1 | Input mode switching Ch1 |
| M 8271 | Input mode switching Ch2 | Output mode switching Ch2 | Input mode switching Ch2 |
| M 8272 | Input mode switching Ch3 | Output mode switching Ch3 | Output mode switching |
| M 8273 | Input mode switching Ch4 | Output mode switching Ch4 | Not used |
| M 8274 | Not used | Output hold mode cancel Ch1 | Not used |
| M 8275 | Not used | Output hold mode cancel Ch2 | Not used |
| M 8276 | Not used | Output hold mode cancel Ch3 | Output hold mode cancel |
| M 8277 | Not used | Output hold mode cancel Ch4 | Sets whether or not input channel 1 is used. |
| M 8278 | Not used | Not used | Sets whether or not input channel 2 is used. |
| M 8279 | Not used | Not used | Sets whether or not output channel is used. |
| 3rd analog special adapter | | | |
| M 8280 | Input mode switching Ch1 | Output mode switching Ch1 | Input mode switching Ch1 |
| M 8281 | Input mode switching Ch2 | Output mode switching Ch2 | Input mode switching Ch2 |
| M 8282 | Input mode switching Ch3 | Output mode switching Ch3 | Output mode switching |
| M 8283 | Input mode switching Ch4 | Output mode switching Ch4 | Not used |
| M 8284 | Not used | Output hold mode cancel Ch1 | Not used |
| M 8285 | Not used | Output hold mode cancel Ch2 | Not used |
| M 8286 | Not used | Output hold mode cancel Ch3 | Output hold mode cancel |
| M 8287 | Not used | Output hold mode cancel Ch4 | Sets whether or not input channel 1 is used. |
| M 8288 | Not used | Not used | Sets whether or not input channel 2 is used. |
| M 8289 | Not used | Not used | Sets whether or not output channel is used. |
| 4th analog special adapter | | | |
| M 8290 | Input mode switching Ch1 | Output mode switching Ch1 | Input mode switching Ch1 |
| M 8291 | Input mode switching Ch2 | Output mode switching Ch2 | Input mode switching Ch2 |
| M 8292 | Input mode switching Ch3 | Output mode switching Ch3 | Output mode switching |
| M 8293 | Input mode switching Ch4 | Output mode switching Ch4 | Not used |
| M 8294 | Not used | Output hold mode cancel Ch1 | Not used |
| M 8295 | Not used | Output hold mode cancel Ch2 | Not used |
| M 8296 | Not used | Output hold mode cancel Ch3 | Output hold mode cancel |
| M 8297 | Not used | Output hold mode cancel Ch4 | Sets whether or not input channel 1 is used. |
| M 8298 | Not used | Not used | Sets whether or not input channel 2 is used. |
| M 8299 | Not used | Not used | Sets whether or not output channel is used. |

| Number | Operation and function | | |
|-----------------------------------|----------------------------|----------------------------|----------------------------|
| | FX3U-4AD-PT(W)-ADP | FX3U-4AD-TC-ADP | FX3U-4AD-PNK-ADP |
| Applicable version | From first version | From first version | From first version |
| 1st analog special adapter | | | |
| M 8260 | Temperature unit selection | Temperature unit selection | Temperature unit selection |
| M 8261 | Not used | Type-K/-J switching | Input sensor selection |
| M 8262 | Not used | Not used | Not used |
| M 8263 | Not used | Not used | Not used |
| M 8264 | Not used | Not used | Not used |
| M 8265 | Not used | Not used | Not used |
| M 8266 | Not used | Not used | Not used |
| M 8267 | Not used | Not used | Not used |
| M 8268 | Not used | Not used | Not used |
| M 8269 | Not used | Not used | Not used |
| 2nd analog special adapter | | | |
| M 8270 | Temperature unit selection | Temperature unit selection | Temperature unit selection |
| M 8271 | Not used | Type-K/-J switching | Input sensor selection |
| M 8272 | Not used | Not used | Not used |
| M 8273 | Not used | Not used | Not used |
| M 8274 | Not used | Not used | Not used |
| M 8275 | Not used | Not used | Not used |
| M 8276 | Not used | Not used | Not used |
| M 8277 | Not used | Not used | Not used |
| M 8278 | Not used | Not used | Not used |
| M 8279 | Not used | Not used | Not used |
| 3rd analog special adapter | | | |
| M 8280 | Temperature unit selection | Temperature unit selection | Temperature unit selection |
| M 8281 | Not used | Type-K/-J switching | Input sensor selection |
| M 8282 | Not used | Not used | Not used |
| M 8283 | Not used | Not used | Not used |
| M 8284 | Not used | Not used | Not used |
| M 8285 | Not used | Not used | Not used |
| M 8286 | Not used | Not used | Not used |
| M 8287 | Not used | Not used | Not used |
| M 8288 | Not used | Not used | Not used |
| M 8289 | Not used | Not used | Not used |
| 4th analog special adapter | | | |
| M 8290 | Temperature unit selection | Temperature unit selection | Temperature unit selection |
| M 8291 | Not used | Type-K/-J switching | Input sensor selection |
| M 8292 | Not used | Not used | Not used |
| M 8293 | Not used | Not used | Not used |
| M 8294 | Not used | Not used | Not used |
| M 8295 | Not used | Not used | Not used |
| M 8296 | Not used | Not used | Not used |
| M 8297 | Not used | Not used | Not used |
| M 8298 | Not used | Not used | Not used |
| M 8299 | Not used | Not used | Not used |

Appendix A-3-2 Special data registers (D8260 to D8299)

| Number | Operation and function | | |
|-----------------------------------|---|--------------------|---|
| | FX3U-4AD-ADP | FX3U-4DA-ADP | FX3U-3A-ADP |
| Applicable version | From first version | From first version | Ver. 2.61 or later |
| 1st analog special adapter | | | |
| D 8260 | Input data Ch1 | Output data Ch1 | Input data Ch1 |
| D 8261 | Input data Ch2 | Output data Ch2 | Input data Ch2 |
| D 8262 | Input data Ch3 | Output data Ch3 | Output data |
| D 8263 | Input data Ch4 | Output data Ch4 | Not used |
| D 8264 | Number of averaging times for Ch1 (1 to 4095) | Not used | Number of averaging times for Ch1 (1 to 4095) |
| D 8265 | Number of averaging times for Ch2 (1 to 4095) | Not used | Number of averaging times for Ch2 (1 to 4095) |
| D 8266 | Number of averaging times for Ch3 (1 to 4095) | Not used | Not used |
| D 8267 | Number of averaging times for Ch4 (1 to 4095) | Not used | Not used |
| D 8268 | Error status | Error status | Error status |
| D 8269 | Model code: K1 | Model code: K2 | Model code: K50 |
| 2nd analog special adapter | | | |
| D 8270 | Input data Ch1 | Output data Ch1 | Input data Ch1 |
| D 8271 | Input data Ch2 | Output data Ch2 | Input data Ch2 |
| D 8272 | Input data Ch3 | Output data Ch3 | Output data |
| D 8273 | Input data Ch4 | Output data Ch4 | Not used |
| D 8274 | Number of averaging times for Ch1 (1 to 4095) | Not used | Number of averaging times for Ch1 (1 to 4095) |
| D 8275 | Number of averaging times for Ch2 (1 to 4095) | Not used | Number of averaging times for Ch2 (1 to 4095) |
| D 8276 | Number of averaging times for Ch3 (1 to 4095) | Not used | Not used |
| D 8277 | Number of averaging times for Ch4 (1 to 4095) | Not used | Not used |
| D 8278 | Error status | Error status | Error status |
| D 8279 | Model code: K1 | Model code: K2 | Model code: K50 |
| 3rd analog special adapter | | | |
| D 8280 | Input data Ch1 | Output data Ch1 | Input data Ch1 |
| D 8281 | Input data Ch2 | Output data Ch2 | Input data Ch2 |
| D 8282 | Input data Ch3 | Output data Ch3 | Output data |
| D 8283 | Input data Ch4 | Output data Ch4 | Not used |
| D 8284 | Number of averaging times for Ch1 (1 to 4095) | Not used | Number of averaging times for Ch1 (1 to 4095) |
| D 8285 | Number of averaging times for Ch2 (1 to 4095) | Not used | Number of averaging times for Ch2 (1 to 4095) |
| D 8286 | Number of averaging times for Ch3 (1 to 4095) | Not used | Not used |
| D 8287 | Number of averaging times for Ch4 (1 to 4095) | Not used | Not used |
| D 8288 | Error status | Error status | Error status |
| D 8289 | Model code: K1 | Model code: K2 | Model code: K50 |
| 4th analog special adapter | | | |
| D 8290 | Input data Ch1 | Output data Ch1 | Input data Ch1 |
| D 8291 | Input data Ch2 | Output data Ch2 | Input data Ch2 |
| D 8292 | Input data Ch3 | Output data Ch3 | Output data |
| D 8293 | Input data Ch4 | Output data Ch4 | Not used |
| D 8294 | Number of averaging times for Ch1 (1 to 4095) | Not used | Number of averaging times for Ch1 (1 to 4095) |
| D 8295 | Number of averaging times for Ch2 (1 to 4095) | Not used | Number of averaging times for Ch2 (1 to 4095) |
| D 8296 | Number of averaging times for Ch3 (1 to 4095) | Not used | Not used |
| D 8297 | Number of averaging times for Ch4 (1 to 4095) | Not used | Not used |
| D 8298 | Error status | Error status | Error status |
| D 8299 | Model code: K1 | Model code: K2 | Model code: K50 |

| Number | Operation and function | | |
|-----------------------------------|---|---|---|
| | FX3U-4AD-PT(W)ADP | FX3U-4AD-TC-ADP | FX3U-4AD-PNK-ADP |
| Applicable version | From first version | From first version | From first version |
| 1st analog special adapter | | | |
| D 8260 | Measured temperature Ch1 | Measured temperature Ch1 | Measured temperature Ch1 |
| D 8261 | Measured temperature Ch2 | Measured temperature Ch2 | Measured temperature Ch2 |
| D 8262 | Measured temperature Ch3 | Measured temperature Ch3 | Measured temperature Ch3 |
| D 8263 | Measured temperature Ch4 | Measured temperature Ch4 | Measured temperature Ch4 |
| D 8264 | Number of averaging times for Ch1 (1 to 4095) | Number of averaging times for Ch1 (1 to 4095) | Number of averaging times for Ch1 (1 to 4095) |
| D 8265 | Number of averaging times for Ch2 (1 to 4095) | Number of averaging times for Ch2 (1 to 4095) | Number of averaging times for Ch2 (1 to 4095) |
| D 8266 | Number of averaging times for Ch3 (1 to 4095) | Number of averaging times for Ch3 (1 to 4095) | Number of averaging times for Ch3 (1 to 4095) |
| D 8267 | Number of averaging times for Ch4 (1 to 4095) | Number of averaging times for Ch4 (1 to 4095) | Number of averaging times for Ch4 (1 to 4095) |
| D 8268 | Error status | Error status | Error status |
| D 8269 | Model code: K20 (PT), K21 (PTW) | Model code: K10 | Model code: K11 |
| 2nd analog special adapter | | | |
| D 8270 | Measured temperature Ch1 | Measured temperature Ch1 | Measured temperature Ch1 |
| D 8271 | Measured temperature Ch2 | Measured temperature Ch2 | Measured temperature Ch2 |
| D 8272 | Measured temperature Ch3 | Measured temperature Ch3 | Measured temperature Ch3 |
| D 8273 | Measured temperature Ch4 | Measured temperature Ch4 | Measured temperature Ch4 |
| D 8274 | Number of averaging times for Ch1 (1 to 4095) | Number of averaging times for Ch1 (1 to 4095) | Number of averaging times for Ch1 (1 to 4095) |
| D 8275 | Number of averaging times for Ch2 (1 to 4095) | Number of averaging times for Ch2 (1 to 4095) | Number of averaging times for Ch2 (1 to 4095) |
| D 8276 | Number of averaging times for Ch3 (1 to 4095) | Number of averaging times for Ch3 (1 to 4095) | Number of averaging times for Ch3 (1 to 4095) |
| D 8277 | Number of averaging times for Ch4 (1 to 4095) | Number of averaging times for Ch4 (1 to 4095) | Number of averaging times for Ch4 (1 to 4095) |
| D 8278 | Error status | Error status | Error status |
| D 8279 | Model code: K20 (PT), K21 (PTW) | Model code: K10 | Model code: K11 |
| 3rd analog special adapter | | | |
| D 8280 | Measured temperature Ch1 | Measured temperature Ch1 | Measured temperature Ch1 |
| D 8281 | Measured temperature Ch2 | Measured temperature Ch2 | Measured temperature Ch2 |
| D 8282 | Measured temperature Ch3 | Measured temperature Ch3 | Measured temperature Ch3 |
| D 8283 | Measured temperature Ch4 | Measured temperature Ch4 | Measured temperature Ch4 |
| D 8284 | Number of averaging times for Ch1 (1 to 4095) | Number of averaging times for Ch1 (1 to 4095) | Number of averaging times for Ch1 (1 to 4095) |
| D 8285 | Number of averaging times for Ch2 (1 to 4095) | Number of averaging times for Ch2 (1 to 4095) | Number of averaging times for Ch2 (1 to 4095) |
| D 8286 | Number of averaging times for Ch3 (1 to 4095) | Number of averaging times for Ch3 (1 to 4095) | Number of averaging times for Ch3 (1 to 4095) |
| D 8287 | Number of averaging times for Ch4 (1 to 4095) | Number of averaging times for Ch4 (1 to 4095) | Number of averaging times for Ch4 (1 to 4095) |
| D 8288 | Error status | Error status | Error status |
| D 8289 | Model code: K20 (PT), K21 (PTW) | Model code: K10 | Model code: K11 |
| 4th analog special adapter | | | |
| D 8290 | Measured temperature Ch1 | Measured temperature Ch1 | Measured temperature Ch1 |
| D 8291 | Measured temperature Ch2 | Measured temperature Ch2 | Measured temperature Ch2 |
| D 8292 | Measured temperature Ch3 | Measured temperature Ch3 | Measured temperature Ch3 |
| D 8293 | Measured temperature Ch4 | Measured temperature Ch4 | Measured temperature Ch4 |
| D 8294 | Number of averaging times for Ch1 (1 to 4095) | Number of averaging times for Ch1 (1 to 4095) | Number of averaging times for Ch1 (1 to 4095) |
| D 8295 | Number of averaging times for Ch2 (1 to 4095) | Number of averaging times for Ch2 (1 to 4095) | Number of averaging times for Ch2 (1 to 4095) |
| D 8296 | Number of averaging times for Ch3 (1 to 4095) | Number of averaging times for Ch3 (1 to 4095) | Number of averaging times for Ch3 (1 to 4095) |
| D 8297 | Number of averaging times for Ch4 (1 to 4095) | Number of averaging times for Ch4 (1 to 4095) | Number of averaging times for Ch4 (1 to 4095) |
| D 8298 | Error status | Error status | Error status |
| D 8299 | Model code: K20 (PT), K21 (PTW) | Model code: K10 | Model code: K11 |

Appendix B: Instruction List

Appendix B-1 Basic Instructions

| Mnemonic | Function |
|-------------------------------|---|
| Contact Instruction | |
| LD | Initial logical operation contact type NO (normally open) |
| LDI | Initial logical operation contact type NC (normally closed) |
| LDP | Initial logical operation of Rising edge pulse |
| LDF | Initial logical operation of Falling/trailing edge pulse |
| AND | Serial connection of NO (normally open) contacts |
| ANI | Serial connection of NC (normally closed) contacts |
| ANDP | Serial connection of Rising edge pulse |
| ANDF | Serial connection of Falling/trailing edge pulse |
| OR | Parallel connection of NO (normally open) contacts |
| ORI | Parallel connection of NC (normally closed) contacts |
| ORP | Parallel connection of Rising edge pulse |
| ORF | Parallel connection of Falling/trailing edge pulse |
| Connection Instruction | |
| ANB | Serial connection of multiple parallel circuits |
| ORB | Parallel connection of multiple contact circuits |
| MPS | Stores the current result of the internal PLC operations |
| MRD | Reads the current result of the internal PLC operations |
| MPP | Pops (recalls and removes) the currently stored result |
| INV | Invert the current result of the internal PLC operations |
| MEP | Conversion of operation result to leading edge pulse*1 |
| MEF | Conversion of operation result to trailing edge pulse*1 |

*1. Supported in Ver. 2.30 or later

| Mnemonic | Function |
|-----------------------------------|---|
| Out Instruction | |
| OUT | Final logical operation type coil drive |
| SET | SET Bit device latch ON |
| RST | RESET Bit device OFF |
| PLS | Rising edge pulse |
| PLF | Falling/trailing edge pulse |
| Master Control Instruction | |
| MC | Denotes the start of a master control block |
| MCR | Denotes the end of a master control block |
| Other Instruction | |
| NOP | No operation or null step |
| End Instruction | |
| END | Program END, I/O refresh and Return to Step 0 |

Appendix B-2 Step Ladder Instructions

| Mnemonic | Function |
|----------|-----------------------|
| STL | Starts step ladder |
| RET | Completes step ladder |

21

Memory
Cassette

22

Battery

A

Special Devices
(M8000-D8000-)

B

Instruction List

C

Character-code

D

Discontinued
models

E

Precautions for
battery
transportation

F

Handling of
batteries in EU
member states

Appendix B-3 Applied Instructions ... in Ascending Order of FNC Number

| FNC No. | Mnemonic | Function |
|---|----------|------------------------------------|
| Program Flow | | |
| 00 | CJ | Conditional Jump |
| 01 | CALL | Call Subroutine |
| 02 | SRET | Subroutine Return |
| 03 | IRET | Interrupt Return |
| 04 | EI | Enable Interrupt |
| 05 | DI | Disable Interrupt |
| 06 | FEND | Main Routine Program End |
| 07 | WDT | Watchdog Timer Refresh |
| 08 | FOR | Start a FOR/NEXT Loop |
| 09 | NEXT | End a FOR/NEXT Loop |
| Move and Compare | | |
| 10 | CMP | Compare |
| 11 | ZCP | Zone Compare |
| 12 | MOV | Move |
| 13 | SMOV | Shift Move |
| 14 | CML | Complement |
| 15 | BMOV | Block Move |
| 16 | FMOV | Fill Move |
| 17 | XCH | Exchange |
| 18 | BCD | Conversion to Binary Coded Decimal |
| 19 | BIN | Conversion to Binary |
| Arithmetic and Logical Operation (+, −, ×, ÷) | | |
| 20 | ADD | Addition |
| 21 | SUB | Subtraction |
| 22 | MUL | Multiplication |
| 23 | DIV | Division |
| 24 | INC | Increment |
| 25 | DEC | Decrement |
| 26 | WAND | Logical Word AND |
| 27 | WOR | Logical Word OR |
| 28 | WXOR | Logical Exclusive OR |
| 29 | NEG | Negation |
| Rotation and Shift Operation | | |
| 30 | ROR | Rotation Right |
| 31 | ROL | Rotation Left |
| 32 | RCR | Rotation Right with Carry |
| 33 | RCL | Rotation Left with Carry |
| 34 | SFTR | Bit Shift Right |
| 35 | SFTL | Bit Shift Left |
| 36 | WSFR | Word Shift Right |
| 37 | WSFL | Word Shift Left |
| 38 | SFWR | Shift Write [FIFO/FILO Control] |
| 39 | SFRD | Shift Read [FIFO Control] |

| FNC No. | Mnemonic | Function |
|------------------------|----------|------------------------------------|
| Data Operation | | |
| 40 | ZRST | Zone Reset |
| 41 | DECO | Decode |
| 42 | ENCO | Encode |
| 43 | SUM | Sum of Active Bits |
| 44 | BON | Check Specified Bit Status |
| 45 | MEAN | Mean |
| 46 | ANS | Timed Annunciator Set |
| 47 | ANR | Annunciator Reset |
| 48 | SQR | Square Root |
| 49 | FLT | Conversion to Floating Point |
| High-Speed Processing | | |
| 50 | REF | Refresh |
| 51 | REFF | Refresh and Filter Adjust |
| 52 | MTR | Input Matrix |
| 53 | HSCS | High-Speed Counter Set |
| 54 | HSCR | High-Speed Counter Reset |
| 55 | HSZ | High-Speed Counter Zone Compare |
| 56 | SPD | Speed Detection |
| 57 | PLSY | Pulse Y Output |
| 58 | PWM | Pulse Width Modulation |
| 59 | PLSR | Acceleration/Deceleration Setup |
| Handy Instruction | | |
| 60 | IST | Initial State |
| 61 | SER | Search a Data Stack |
| 62 | ABSD | Absolute Drum Sequencer |
| 63 | INCD | Incremental Drum Sequencer |
| 64 | TTMR | Teaching Timer |
| 65 | STMR | Special Timer |
| 66 | ALT | Alternate State |
| 67 | RAMP | Ramp Variable Value |
| 68 | ROTC | Rotary Table Control |
| 69 | SORT | SORT Tabulated Data |
| External FX I/O Device | | |
| 70 | TKY | Ten Key Input |
| 71 | HKY | Hexadecimal Input |
| 72 | DSW | Digital Switch (Thumbwheel Input) |
| 73 | SEGD | Seven Segment Decoder |
| 74 | SEGL | Seven Segment With Latch |
| 75 | ARWS | Arrow Switch |
| 76 | ASC | ASCII Code Data Input |
| 77 | PR | Print (ASCII Code) |
| 78 | FROM | Read From A Special Function Block |
| 79 | TO | Write To A Special Function Block |

| FNC No. | Mnemonic | Function |
|---------------------------|----------|--|
| External FX Device | | |
| 80 | RS | Serial Communication |
| 81 | PRUN | Parallel Run (Octal Mode) |
| 82 | ASCI | Hexadecimal to ASCII Conversion |
| 83 | HEX | ASCII to Hexadecimal Conversion |
| 84 | CCD | Check Code |
| 85 | VRRD | Volume read *1 |
| 86 | VRSC | Volume scale *1 |
| 87 | RS2 | Serial Communication 2 |
| 88 | PID | PID Control Loop |
| 89 to 99 | – | |
| Data Transfer 2 | | |
| 100, 101 | – | |
| 102 | ZPUSH | Batch Store of Index Register |
| 103 | ZPOP | Batch POP of Index Register |
| 104 to 109 | – | |
| Floating Point | | |
| 110 | ECMP | Floating Point Compare |
| 111 | EZCP | Floating Point Zone Compare |
| 112 | EMOV | Floating Point Move |
| 113 to 115 | – | |
| 116 | ESTR | Floating Point to Character String Conversion |
| 117 | EVAL | Character String to Floating Point Conversion |
| 118 | EBCD | Floating Point to Scientific Notation Conversion |
| 119 | EBIN | Scientific Notation to Floating Point Conversion |
| 120 | EADD | Floating Point Addition |
| 121 | ESUB | Floating Point Subtraction |
| 122 | EMUL | Floating Point Multiplication |
| 123 | EDIV | Floating Point Division |
| 124 | EXP | Floating Point Exponent |
| 125 | LOGE | Floating Point Natural Logarithm |
| 126 | LOG10 | Floating Point Common Logarithm |
| 127 | ESQR | Floating Point Square Root |
| 128 | ENEG | Floating Point Negation |
| 129 | INT | Floating Point to Integer Conversion |
| 130 | SIN | Floating Point Sine |
| 131 | COS | Floating Point Cosine |
| 132 | TAN | Floating Point Tangent |
| 133 | ASIN | Floating Point Arc Sine |
| 134 | ACOS | Floating Point Arc Cosine |
| 135 | ATAN | Floating Point Arc Tangent |
| 136 | RAD | Floating Point Degree to Radian Conversion |

| FNC No. | Mnemonic | Function |
|--------------------------------|----------|--|
| 137 | DEG | Floating Point Radian to Degree Conversion |
| 138, 139 | – | |
| Data Operation 2 | | |
| 140 | WSUM | Sum of Word Data |
| 141 | WTOB | WORD to BYTE |
| 142 | BTOW | BYTE to WORD |
| 143 | UNI | 4-bit Linking of Word Data |
| 144 | DIS | 4-bit Grouping of Word Data |
| 145, 146 | – | |
| 147 | SWAP | Byte Swap |
| 148 | – | |
| 149 | SORT2 | Sort Tabulated Data 2 |
| Positioning Control | | |
| 150 | DSZR | DOG Search Zero Return |
| 151 | DVIT | Interrupt Positioning |
| 152 | TBL | Batch Data Positioning Mode |
| 153, 154 | – | |
| 155 | ABS | Absolute Current Value Read |
| 156 | ZRN | Zero Return |
| 157 | PLSV | Variable Speed Pulse Output |
| 158 | DRVI | Drive to Increment |
| 159 | DRVA | Drive to Absolute |
| Real Time Clock Control | | |
| 160 | TCMP | RTC Data Compare |
| 161 | TZCP | RTC Data Zone Compare |
| 162 | TADD | RTC Data Addition |
| 163 | TSUB | RTC Data Subtraction |
| 164 | HTOS | Hour to Second Conversion |
| 165 | STOH | Second to Hour Conversion |
| 166 | TRD | Read RTC data |
| 167 | TWR | Set RTC data |
| 168 | – | |
| 169 | HOUR | Hour Meter |
| External Device | | |
| 170 | GRY | Decimal to Gray Code Conversion |
| 171 | GBIN | Gray Code to Decimal Conversion |
| 172 to 175 | – | |
| 176 | RD3A | Read form Dedicated Analog Block |
| 177 | WR3A | Write to Dedicated Analog Block |
| 178, 179 | – | |
| Extension Function | | |
| 180 | – | |

21

Memory
Cassette

22

Battery

A

Special Devices
(M8000-,D8000-)

B

Instruction List

C

Character-code

D

Discontinued
models

E

Precautions for
battery
transportation

F

Handling of
batteries in EU
member states

| FNC No. | Mnemonic | Function |
|---------------------------------|----------|---|
| Others | | |
| 181 | – | |
| 182 | COMRD | Read Device Comment Data |
| 183 | – | |
| 184 | RND | Random Number Generation |
| 185 | – | |
| 186 | DUTY | Timing Pulse Generation |
| 187 | – | |
| 188 | CRC | Cyclic Redundancy Check |
| 189 | HCMOV | High-Speed Counter Move |
| Block Data Operation | | |
| 190, 191 | – | |
| 192 | BK+ | Block Data Addition |
| 193 | BK- | Block Data Subtraction |
| 194 | BKCOMP= | Block Data Compare $(S1) = (S2)$ |
| 195 | BKCOMP> | Block Data Compare $(S1) > (S2)$ |
| 196 | BKCOMP< | Block Data Compare $(S1) < (S2)$ |
| 197 | BKCOMP<> | Block Data Compare $(S1) \neq (S2)$ |
| 198 | BKCOMP<= | Block Data Compare $(S1) \leq (S2)$ |
| 199 | BKCOMP>= | Block Data Compare $(S1) \geq (S2)$ |
| Character String Control | | |
| 200 | STR | BIN to Character String Conversion |
| 201 | VAL | Character String to BIN Conversion |
| 202 | \$+ | Link Character Strings |
| 203 | LEN | Character String Length Detection |
| 204 | RIGHT | Extracting Character String Data from the Right |
| 205 | LEFT | Extracting Character String Data from the Left |
| 206 | MIDR | Random Selection of Character Strings |
| 207 | MIDW | Random Replacement of Character Strings |
| 208 | INSTR | Character string search |
| 209 | \$MOV | Character String Transfer |
| Data Operation 3 | | |
| 210 | FDEL | Deleting Data from Tables |
| 211 | FINS | Inserting Data to Tables |
| 212 | POP | Shift Last Data Read [FILO Control] |
| 213 | SFR | Bit Shift Right with Carry |
| 214 | SFL | Bit Shift Left with Carry |
| 215 to 219 | – | |

| FNC No. | Mnemonic | Function |
|-----------------------------|----------|------------------------------------|
| Data Comparison | | |
| 220 to 223 | – | |
| 224 | LD= | Load Compare $(S1) = (S2)$ |
| 225 | LD> | Load Compare $(S1) > (S2)$ |
| 226 | LD< | Load Compare $(S1) < (S2)$ |
| 227 | – | |
| 228 | LD<> | Load Compare $(S1) \neq (S2)$ |
| 229 | LD<= | Load Compare $(S1) \leq (S2)$ |
| 230 | LD>= | Load Compare $(S1) \geq (S2)$ |
| 231 | – | |
| 232 | AND= | AND Compare $(S1) = (S2)$ |
| 233 | AND> | AND Compare $(S1) > (S2)$ |
| 234 | AND< | AND Compare $(S1) < (S2)$ |
| 235 | – | |
| 236 | AND<> | AND Compare $(S1) \neq (S2)$ |
| 237 | AND<= | AND Compare $(S1) \leq (S2)$ |
| 238 | AND>= | AND Compare $(S1) \geq (S2)$ |
| 239 | – | |
| Data Comparison | | |
| 240 | OR= | OR Compare $(S1) = (S2)$ |
| 241 | OR> | OR Compare $(S1) > (S2)$ |
| 242 | OR< | OR Compare $(S1) < (S2)$ |
| 243 | – | |
| 244 | OR<> | OR Compare $(S1) \neq (S2)$ |
| 245 | OR<= | OR Compare $(S1) \leq (S2)$ |
| 246 | OR>= | OR Compare $(S1) \geq (S2)$ |
| 247 to 249 | – | |
| Data Table Operation | | |
| 250 to 255 | – | |
| 256 | LIMIT | Limit Control |
| 257 | BAND | Dead Band Control |
| 258 | ZONE | Zone Control |
| 259 | SCL | Scaling (Coordinate by Point Data) |
| 260 | DABIN | Decimal ASCII to BIN Conversion |
| 261 | BINDA | BIN to Decimal ASCII Conversion |
| 262 to 268 | – | |
| 269 | SCL2 | Scaling 2 (Coordinate by X/Y Data) |

| FNC No. | Mnemonic | Function |
|--|----------|--|
| External Device Communication | | |
| 270 | IVCK | Inverter Status Check |
| 271 | IVDR | Inverter Drive |
| 272 | IVRD | Inverter Parameter Read |
| 273 | IVWR | Inverter Parameter Write |
| 274 | IVBWR | Inverter Parameter Block Write |
| 275 | IVMC | Inverter Multi Command ^{*1} |
| 276 | ADPRW | MODBUS Read/Write ^{*2} |
| 277 | — | |
| Data Transfer 3 | | |
| 278 | RBFM | Divided BFM Read |
| 279 | WBFM | Divided BFM Write |
| High-Speed Processing 2 | | |
| 280 | HSCT | High-Speed Counter Compare With Data Table |
| 281 to 289 | — | |
| Extension File Register Control | | |
| 290 | LOADR | Load From ER |
| 291 | SAVER | Save to ER |
| 292 | INITR | Initialize R and ER |
| 293 | LOGR | Logging R and ER |
| 294 | RWER | Rewrite to ER |
| 295 | INITER | Initialize ER |
| 296 to 299 | — | |
| FX3U-CF-ADP | | |
| 300 | FLCRT | File create/check ^{*3} |
| 301 | FLDEL | File delete/CF card format ^{*3} |
| 302 | FLWR | Data write ^{*3} |
| 303 | FLRD | Data read ^{*3} |
| 304 | FLCMD | FX3U-CF-ADP command ^{*3} |
| 305 | FLSTRD | FX3U-CF-ADP status read ^{*3} |

*1. Supported in Ver. 2.70 or later.

*2. Supported in Ver. 2.40 or later.

*3. Supported in Ver. 2.61 or later.

21

Memory
Cassette

22

Battery

A

Special Devices
(M8000-.D8000-)

B

Instruction List

C

Character-code

D

Discontinued
models

E

Precautions for
battery
transportation

F

Handling of
batteries in EU
member states

Appendix C: Character-code

Appendix C-1 ASCII Code Table

- ¥ (ASCII Code: 5C) symbol is displayed as " ¥ " even if the language display setting at FX3U-7DM is set to English (LANGUAGE: ENGLISH).
- The Character at ASCII Code: 7E "~" is not displayed.

1. ASCII code table (7-bit code expressed in hexadecimal)

Example . "A " becomes 41H(hexadecimal number) by ASCII code.

| Hexadecimal | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | A | B | C | D | E | F |
|-------------|---|---|----|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 0 | | | SP | 0 | @ | P | ` | p | | | As for this range, the Japanese syllabary is displayed. | | | | | |
| 1 | | | ! | 1 | A | Q | a | q | | | | | | | | |
| 2 | | | " | 2 | B | R | b | r | | | | | | | | |
| 3 | | | # | 3 | C | S | c | s | | | | | | | | |
| 4 | | | \$ | 4 | D | T | d | t | | | | | | | | |
| 5 | | | % | 5 | E | U | e | u | | | | | | | | |
| 6 | | | & | 6 | F | V | f | v | | | | | | | | |
| 7 | | | ' | 7 | G | W | g | w | | | | | | | | |
| 8 | | | (| 8 | H | X | h | x | | | | | | | | |
| 9 | | |) | 9 | I | Y | i | y | | | | | | | | |
| A | | | * | : | J | Z | j | z | | | | | | | | |
| B | | | + | ; | K | [| k | { | | | | | | | | |
| C | | | , | < | L | ¥ | l | | | | | | | | | |
| D | | | — | = | M |] | m | } | | | | | | | | |
| E | | | . | > | N | ^ | n | | | | | | | | | |
| F | | | / | ? | O | _ | o | | | | | | | | | |

2. Examples of ASCII codes

| Decimal | ASCII (hexadecimal) | Alphabet | ASCII (hexadecimal) | Alphabet | ASCII (hexadecimal) | Symbol | ASCII (hexadecimal) |
|---------|------------------------|----------|------------------------|----------|------------------------|--------|------------------------|
| 0 | 30 | A | 41 | N | 4E | # | 23 |
| 1 | 31 | B | 42 | O | 4F | & | 26 |
| 2 | 32 | C | 43 | P | 50 | = | 3D |
| 3 | 33 | D | 44 | Q | 51 | ¥ | 5C |
| 4 | 34 | E | 45 | R | 52 | | |
| 5 | 35 | F | 46 | S | 53 | | |
| 6 | 36 | G | 47 | T | 54 | | |
| 7 | 37 | H | 48 | U | 55 | | |
| 8 | 38 | I | 49 | V | 56 | | |
| 9 | 39 | J | 4A | W | 57 | | |
| | | K | 4B | K | 58 | | |
| | | L | 4C | Y | 59 | | |
| | | M | 4D | Z | 5A | | |

MEMO

21
Memory
Cassette

22
Battery

A
Special Devices
(M8000-.D8000-)

B
Instruction List

C
Character-code

D
Discontinued
models

E
Precautions for
battery
transportation

F
Handling of
batteries in EU
member states

Appendix D: Discontinued models

The table below lists the discontinued MELSEC-F Series PLC models and programming tools described in this manual.

| Discontinued model | Production stop date | Repair acceptance period |
|---------------------------|----------------------|--------------------------|
| FX _{2N} -2LC | March 31, 2018 | Until March 31, 2025 |
| FX-10DM(-E)(-SET0) | September 30, 2017 | Until September 30, 2024 |
| FX _{2N} -1PG(-E) | December 31, 2015 | Until December 31, 2022 |
| FX _{2N} -20PSU | | |
| FX _{2N} -4AD | | |
| FX _{2N} -4DA | | |
| FX _{2N} -4AD-PT | | |
| FX _{2N} -4AD-TC | | |
| FX _{0N} -3A | | |
| FX _{3U} -232ADP | September 30, 2013 | Until September 30, 2020 |
| FX _{3U} -485ADP | | |
| FX-PCS/WIN(-E) | March 31, 2013 | — |
| FX-20P(-E) | December 31, 2012 | Until December 31, 2019 |
| FX-10DU(-E) | | |
| FX _{2N} -16CCL-M | September 30, 2012 | Until September 30, 2019 |
| FX _{2N} -16LNK-M | | |
| FX _{2N} -32ASI-M | June 30, 2010 | Until June 30, 2017 |
| FX-16EYT-H-TB | August 31, 2009 | Until August 31, 2016 |
| FX-10P(-E) | June 30, 2008 | Until June 30, 2015 |
| FX-232AW | September 30, 2004 | Until September 30, 2011 |
| FX-232AWC | June 30, 2004 | Until June 30, 2011 |

MEMO

21
 Memory
 Cassette

22
 Battery

A
 Special Devices
 (M8000-.D8000-)

B
 Instruction List

C
 Character-code

D
 Discontinued
 models

E
 Precautions for
 battery
 transportation

F
 Handling of
 batteries in EU
 member states

Appendix E: Precautions for Battery Transportation

When transporting lithium batteries, follow the transportation regulations.
The batteries for the FX3U Series CPU unit are classified as shown in following table.

Appendix E-1 Regulated FX3U Series products

- 1) Included modules and batteries

| Series name/product name | Used battery name | Battery type | Product supply status | Lithium Content (gram/unit) |
|--------------------------|-------------------|-----------------------|-----------------------|-----------------------------|
| FX3U Series main unit | FX3U-32BL | lithium metal battery | Cell | 0.15 |

- 2) Batteries to be built in modules (spare parts and optional parts)

| Product name | Battery type | Product supply status | Lithium Content (gram/unit) | Mass*1 (gram/unit) |
|--------------|-----------------------|-----------------------|-----------------------------|--------------------|
| FX3U-32BL | lithium metal battery | Cell | 0.15 | 30 |

*1. The value indicates the mass with packaging.

Appendix E-2 Transport guidelines

Comply with IATA Dangerous Goods Regulations, IMDG code and the local transport regulations when transporting products listed above.
Also, consult with the shipping carrier.

| | | |
|------|--|--|
| MEMO | | 21 Memory Cassette |
| | | 22 Battery |
| | | A Special Devices (M8000-.D8000-) |
| | | B Instruction List |
| | | C Character-code |
| | | D Discontinued models |
| | | E Precautions for battery transportation |
| | | F Handling of batteries in EU member states |
| | | |
| | | |


Appendix F: Handling of Batteries and Devices with Built-in Batteries in EU Member States

This section describes the precautions for disposing of waste batteries in EU member states and exporting batteries and/or devices with built-in batteries to EU member states.

Appendix F-1 Disposal precautions

In EU member states, there is a separate collection system for waste batteries. Dispose of batteries properly at the local community waste collection/recycling center.

The symbol shown in following figure is printed on the batteries and packaging of batteries and devices with built-in batteries used for Mitsubishi programmable controllers.

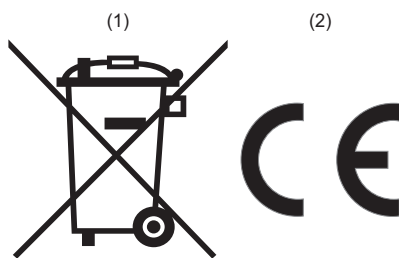

This symbol to the left is specified as below:

(1): EU Battery Directive (2006/66/EC)

(to be repealed on 18 August 2025)

(1)(2): EU Battery Regulation (EU 2023/1542)

- The symbol (1) indicates that batteries need to be disposed of separately from other wastes.
- If the chemical symbol is printed beneath the symbol (1) shown overleaf, this chemical symbol means that the battery or accumulator contains a heavy metal at a certain concentration. This will be indicated as follows:
 - Hg: mercury (0.0005%)
 - Cd: cadmium (0.002%)
 - Pb: lead (0.004%)

Appendix F-2 Exportation precautions

EU Battery Directive (2006/66/EC) and EU Battery Regulation (EU 2023/1542) requires the following when marketing or exporting batteries and/or devices with built-in batteries to EU member states.

- To print the symbol on batteries, where that is not possible, on their manuals and their packaging.
- To explain the symbol in the manuals of the products.

1) Labelling

To market or export batteries and/or devices with built-in batteries, which have no symbol (1)(2), to EU member states on August 18, 2024 or later, print the symbol (1)(2) shown in the figure above on the batteries, or their manuals and their packaging.

To market or export batteries and/or devices with built-in batteries, which have no symbol (1)(2), to EU member states on August 17, 2024 or before, print the symbol (1) shown in the figure above on the batteries, or their packaging.

2) Explaining the symbol in the manuals

To export devices incorporating Mitsubishi programmable controller to EU member states on August 18, 2024 or later, provide the latest manuals that include the explanation of the symbol (1)(2).

If no Mitsubishi manuals or any old manuals without the explanation of the symbol (1)(2) are provided, separately attach an explanatory note regarding the symbol (1)(2) to each manual of the devices.

POINT

The requirements apply to batteries and/or devices with built-in batteries manufactured before the enforcement date of EU Battery Directive (2006/66/EC), or EU Battery Regulation (EU 2023/1542).

Appendix F-3 Regulated FX3U Series products

- 1) Included modules and batteries

| Series name/product name | Used battery name | Battery type |
|--------------------------|-------------------|-----------------------------------|
| FX3U Series main unit | FX3U-32BL | Lithium Manganese Dioxide Battery |

- 2) Batteries to be built in modules (spare parts and optional parts)

| Product name | Battery type |
|--------------|-----------------------------------|
| FX3U-32BL | Lithium Manganese Dioxide Battery |

21

Memory
Cassette

22

Battery

A

Special Devices
(M8000-.D8000-)

B

Instruction List

C

Character-code

D

Discontinued
models

E

Precautions for
battery
transportation

F

Handling of
batteries in EU
member states

Warranty

Please confirm the following product warranty details before using this product.

1. Gratis Warranty Term and Gratis Warranty Range

If any faults or defects (hereinafter "Failure") found to be the responsibility of Mitsubishi occurs during use of the product within the gratis warranty term, the product shall be repaired at no cost via the sales representative or Mitsubishi Service Company. However, if repairs are required onsite at domestic or overseas location, expenses to send an engineer will be solely at the customer's discretion. Mitsubishi shall not be held responsible for any re-commissioning, maintenance, or testing on-site that involves replacement of the failed module.

[Gratis Warranty Term]

The gratis warranty term of the product shall be for one year after the date of purchase or delivery to a designated place. Note that after manufacture and shipment from Mitsubishi, the maximum distribution period shall be six (6) months, and the longest gratis warranty term after manufacturing shall be eighteen (18) months. The gratis warranty term of repair parts shall not exceed the gratis warranty term before repairs.

[Gratis Warranty Range]

- (1) The range shall be limited to normal use within the usage state, usage methods and usage environment, etc., which follow the conditions and precautions, etc., given in the instruction manual, user's manual and caution labels on the product.
- (2) Even within the gratis warranty term, repairs shall be charged for in the following cases.
 1. Failure occurring from inappropriate storage or handling, carelessness or negligence by the user. Failure caused by the user's hardware or software design.
 2. Failure caused by unapproved modifications, etc., to the product by the user.
 3. When the Mitsubishi product is assembled into a user's device, Failure that could have been avoided if functions or structures, judged as necessary in the legal safety measures the user's device is subject to or as necessary by industry standards, had been provided.
 4. Failure that could have been avoided if consumable parts (battery, backlight, fuse, etc.) designated in the instruction manual had been correctly serviced or replaced.
 5. Relay failure or output contact failure caused by usage beyond the specified Life of contact (cycles).
 6. Failure caused by external irresistible forces such as fires or abnormal voltages, and failure caused by force majeure such as earthquakes, lightning, wind and water damage.
 7. Failure caused by reasons unpredictable by scientific technology standards at time of shipment from Mitsubishi.
 8. Any other failure found not to be the responsibility of Mitsubishi or that admitted not to be so by the user.

2. Onerous repair term after discontinuation of production

- (1) Mitsubishi shall accept onerous product repairs for seven (7) years after production of the product is discontinued.
Discontinuation of production shall be notified with Mitsubishi Technical Bulletins, etc.
- (2) Product supply (including repair parts) is not available after production is discontinued.

3. Overseas service

Overseas, repairs shall be accepted by Mitsubishi's local overseas FA Center. Note that the repair conditions at each FA Center may differ.

4. Exclusion of loss in opportunity and secondary loss from warranty liability

Regardless of the gratis warranty term, Mitsubishi shall not be liable for compensation to:

- (1) Damages caused by any cause found not to be the responsibility of Mitsubishi.
- (2) Loss in opportunity, lost profits incurred to the user by Failures of Mitsubishi products.
- (3) Special damages and secondary damages whether foreseeable or not, compensation for accidents, and compensation for damages to products other than Mitsubishi products.
- (4) Replacement by the user, maintenance of on-site equipment, start-up test run and other tasks.

5. Changes in product specifications

The specifications given in the catalogs, manuals or technical documents are subject to change without prior notice.

6. Product application

- (1) In using the Mitsubishi MELSEC programmable logic controller, the usage conditions shall be that the application will not lead to a major accident even if any problem or fault should occur in the programmable logic controller device, and that backup and fail-safe functions are systematically provided outside of the device for any problem or fault.
- (2) The Mitsubishi programmable logic controller has been designed and manufactured for applications in general industries, etc. Thus, applications in which the public could be affected such as in nuclear power plants and other power plants operated by respective power companies, and applications in which a special quality assurance system is required, such as for Railway companies or Public service purposes shall be excluded from the programmable logic controller applications.
In addition, applications in which human life or property that could be greatly affected, such as in aircraft, medical applications, incineration and fuel devices, manned transportation, equipment for recreation and amusement, and safety devices, shall also be excluded from the programmable logic controller range of applications.
However, in certain cases, some applications may be possible, providing the user consults their local Mitsubishi representative outlining the special requirements of the project, and providing that all parties concerned agree to the special circumstances, solely at the users discretion.
- (3) Mitsubishi shall have no responsibility or liability for any problems involving programmable controller trouble and system trouble caused by DoS attacks, unauthorized access, computer viruses, and other cyberattacks.

Revised History

| Date | Revision | Description |
|--------|----------|---|
| 7/2005 | A | First Edition |
| 2/2006 | B | <ul style="list-style-type: none"> The following products are added: <ul style="list-style-type: none"> Main unit of transistor output type FX3U-16MT/ES, FX3U-16MT/ESS, FX3U-32MT/ES, FX3U-32MT/ESS, FX3U-48MT/ES, FX3U-48MT/ESS, FX3U-64MT/ES, FX3U-64MT/ESS, FX3U-80MT/ES, FX3U-80MT/ESS Contents are added to product introduction (Chapter 3), specifications, external dimensions, terminal layout (Chapter 4), examination of system configuration (Chapter 6), wiring examples for each purpose (Chapter 13), etc. Main unit of AC power type FX3U-128MR/ES, FX3U-128MT/ES, FX3U-128MT/ESS Main unit of DC power type FX3U-16MR/DS, FX3U-16MT/DS, FX3U-16MT/DSS FX3U-32MR/DS, FX3U-32MT/DS, FX3U-32MT/DSS FX3U-48MR/DS, FX3U-48MT/DS, FX3U-48MT/DSS FX3U-64MR/DS, FX3U-64MT/DS, FX3U-64MT/DSS FX3U-80MR/DS, FX3U-80MT/DS, FX3U-80MT/DSS Contents are added to product introduction (Chapter 3), specifications, external dimensions, terminal layout (Chapter 4), examination of system configuration (Chapter 6), installation in enclosure (Chapter 8), example of power supply wiring (Chapter 9), example of input wiring (Chapter 10), example of output wiring (Chapter 12), etc. Input/output powered extension unit of DC power type FX2N-48ER-DS, FX2N-48ET-DSS, FX2N-48ER-D, FX2N-48ET-D Contents are added to product introduction (Chapter 3), examination of system configuration (Chapter 6), installation in enclosure (Chapter 8), example of power supply wiring (Chapter 9), input/output powered extension units (Chapter 15), etc. 8-point type input/output extension block FX2N-8ER-ES/UL, FX2N-8ER, FX2N-8EX-ES/UL, FX2N-8EX, FX2N-8EX-UA1/UL, FX2N-8EYR-ES/UL, FX2N-8EYR, FX2N-8EYT-ESS/UL, FX2N-8EYT, FX2N-8EYT-H Contents are added to product introduction (Chapter 3), examination of system configuration (Chapter 6), input/output extension block (Chapter 16), etc. Special function blocks FX3U-4AD, FX3U-4DA, FX3U-20SSC-H Contents are added to product introduction (Chapter 3), examination of system configuration (Chapter 6), installation in enclosure (Chapter 8), other extension devices (Chapter 18), etc. Extension power supply unit FX3U-1PSU-5V Contents are added to product introduction (Chapter 3), examination of system configuration (Chapter 6), installation in enclosure (Chapter 8), example of power supply wiring (Chapter 9), etc. Chapter 17 added for Extension power supply unit Ver. 2.30 is supported. <ul style="list-style-type: none"> Two types of instructions are added (Appendix B-1). For the details of these instructions, refer to the programming manual. Special auxiliary relays and special data registers are added (Appendix A). Cautions on write during RUN are added (Subsection 5.2.4). The applicability of other peripheral equipment is added (Section 5.5). |
| 5/2006 | C | <ul style="list-style-type: none"> EN61131-2:2003 added to EMC directive and LVD directive in FX2N series. |

| Date | Revision | Description |
|---------|----------|---|
| 3/2007 | D | <ul style="list-style-type: none"> • Tightening Torque at the Time of Loading /Unloading System Terminal Block Anchoring, Notice Addition (Subsection 2.2.1, 8.5.4, 9.1.2 and 15.2.2). • Life Details Addition of Relay Output Contact (Subsection 4.4.2, 12.2.2, 14.4.3 and 20.7.5). • Caution Addition (Section 6.1) for Extension-Equipment Selection. • Caution Addition for Time of Wiring (Subsection 12.2.4 and 20.7.4) • Various Corrections and Table Additions (Subsection 14.4.2 and 22.3.1) for the Service Life of the Battery. • Notice Addition at the Time of Battery Replacement (Subsection 22.5) • Production Stop Addition (Appendix D) |
| 6/2007 | E | <ul style="list-style-type: none"> • Explanation corrections for reading the battery's year/month of manufacture. |
| 11/2008 | F | Errors are corrected. |
| 11/2009 | G | <ul style="list-style-type: none"> • The following products are added: <ul style="list-style-type: none"> - Special function blocks FX3U-64CCL Contents are added to product introduction (Chapter 3), examination of system configuration (Chapter 6), installation in enclosure (Chapter 8), other extension devices (Chapter 18), etc. - Special adapters FX3U-3A-ADP, FX3U-4AD-PTW-ADP, FX3U-4AD-PNK-ADP, FX3U-CF-ADP Contents are added to product introduction (Chapter 3), examination of system configuration (Chapter 6), installation in enclosure (Chapter 8), other extension devices (Chapter 18), etc. - Programming tool FX-30P Contents are added to programming tool applicability (Section 5.2), etc. • Ver. 2.41 is supported. <ul style="list-style-type: none"> - The baud rate "38400 bps" is supported in RS and RS2 instructions, inverter communication and computer link. • Ver. 2.61 is supported. <ul style="list-style-type: none"> - Supports FX3U-CF-ADP Six types of instructions are added (Appendix B-1) For the details of these instructions, refer to the FX3U-CF-ADP user's manual. Special auxiliary relays and special data registers are added (Appendix A) - Supports FX3U-3A-ADP Special auxiliary relays and special data registers are added (Appendix A) - Customer keyword / permanent PLC lock is supported. • Cautions on connecting peripheral equipment by way expansion board or special adapter are added (Subsection 5.2.4) • The applicability of other peripheral equipment is added (Section 5.5) • Precautions for Battery Transportation are added (Appendix E) • Handling of Batteries and Devices with Built-in Batteries in EU Member States are added (Appendix F) • Errors are corrected. |
| 3/2010 | H | <ul style="list-style-type: none"> • Explanation corrections for manufacturer's serial number and lot number. • Explanation corrections for battery's lot number. |

| Date | Revision | Description |
|--------|----------|---|
| 9/2010 | J | <ul style="list-style-type: none"> The following products are added: <ul style="list-style-type: none"> Main unit of triac output type FX3U-32MS/ES, FX3U-64MS/ES Main unit of AC input type FX3U-32MR/UA1, FX3U-64MR/UA1 Contents are added to product introduction (Chapter 3), specifications, external dimensions, terminal layout (Chapter 4), examination of system configuration (Chapter 6), installation in enclosure (Chapter 8), example of power supply wiring (Chapter 9), example of input wiring (Chapter 10), example of output wiring (Chapter 12), etc. Input/output extension block FX2N-8EYR-S-ES/UL Contents are added to product introduction (Chapter 3), FX2N-8/16E*-* (Input/Output Extension Blocks) (Chapter 16), etc. Special function blocks FX3U-2HC, FX3U-4LC Contents are added to product introduction (Chapter 3), examination of system configuration (Chapter 6), installation in enclosure (Chapter 8), other extension devices (Chapter 18), etc. Expansion board FX3U-8AV-BD Contents are added to product introduction (Chapter 3), examination of system configuration (Chapter 6), other extension devices (Chapter 18), etc. Ver. 2.70 is supported. <ul style="list-style-type: none"> Three types of instructions are added (Appendix B-3) For the details of these instructions, refer to the FX3G/FX3U/FX3UC Programming Manuals. Supports connection of following analog volume expansion board. FX3U-8AV-BD Supports the under-scale detection function of the FX3U-4AD-ADP and FX3U-3A-ADP. GX Works2 is added. Errors are corrected. |
| 7/2011 | K | <ul style="list-style-type: none"> The following product is added: <ul style="list-style-type: none"> Memory cassette FX3U-FLROM-1M Contents are added to product introduction (Chapter 3), FX3U-FLROM-16/64/64L/1M (Memory Cassette) (Chapter 21), etc. Ver. 3.00 is supported. <ul style="list-style-type: none"> Supports storage of symbolic information. Support of the setting "Read-protect the execution program." for block passwords. Special block error condition (D8166) is added. Supports connection of following memory cassette. FX3U-FLROM-1M Errors are corrected. |
| 3/2012 | L | <ul style="list-style-type: none"> The following product is added: <ul style="list-style-type: none"> Special function block FX3U-16CCL-M Contents are added to product introduction (Chapter 3), Other Extension Devices (Chapter 18), etc. Ver. 3.10 is supported. <ul style="list-style-type: none"> Supports parameter setting in the FX3U-16CCL-M. Supports accessing the other station from CC-Link. Special parameter error (M8489 and D8489) is added. Description of special auxiliary relays and special data registers is added. (Appendix A) The error code for parameter error is added. (Subsection 14.6.4) The error code for special block error is added. (Subsection 14.6.4) Errors are corrected. |

| Date | Revision | Description |
|---------|----------|--|
| 11/2013 | M | <ul style="list-style-type: none"> The following products are added: <ul style="list-style-type: none"> Special adapter FX3U-ENET-ADP Contents are added to product introduction (Chapter 3), Other Extension Devices (Chapter 18), etc. Special function block FX3U-1PG, FX3U-128ASL-M Contents are added to product introduction (Chapter 3), Other Extension Devices (Chapter 18), etc. Ver. 2.40 is supported. <ul style="list-style-type: none"> Supports MODBUS communication function. Description of special auxiliary relays and special data registers for MODBUS communication is added. (Appendix A) One types of instructions are added (Appendix B-1). Ver. 3.10 is supported. <ul style="list-style-type: none"> Description of special auxiliary relays and special data registers for FX3U-ENET-ADP is added. (Appendix A) "Maximum number of input/output points when AnyWireASLINK master is used" is added. (Subsection 6.3.3) Errors are corrected. |
| 4/2015 | N | <ul style="list-style-type: none"> A part of the cover design is changed. |
| 2/2018 | P | <ul style="list-style-type: none"> The contents of standards are changed. |
| 10/2018 | Q | <ul style="list-style-type: none"> The contents of standards are changed. |
| 11/2018 | R | <ul style="list-style-type: none"> The contents of standards are changed. |
| 1/2020 | S | <ul style="list-style-type: none"> The following product is added: <ul style="list-style-type: none"> Special function block FX3U-64DP-M, FX3U-32DP Contents are added to product introduction (Chapter 3), examination of system configuration (Chapter 6), installation in enclosure (Chapter 8), Other Extension Devices (Chapter 18), etc. Errors are corrected. |
| 4/2021 | T | <ul style="list-style-type: none"> Precautions for product security are added. Notes are added for Precaution for file register (D) usage and Precaution for extended file register (ER) usage. (Section 21.7) The contents of Procedures for replacing battery are changed. (Section 22.5) |
| 7/2021 | U | <ul style="list-style-type: none"> Extension bus error is added. (Subsection 14.6.4) |
| 12/2021 | V | <ul style="list-style-type: none"> Compliance with UKCA marking is added. |
| 8/2022 | W | <ul style="list-style-type: none"> The input response time is changed. |
| 11/2023 | X | <ul style="list-style-type: none"> The contents of the terminal layout are changed. |
| 6/2024 | Y | <ul style="list-style-type: none"> The contents of EU Battery Regulation are added. (Appendix F) |
| | | |

Japanese manual number: JY997D16101AA

FX3U SERIES PROGRAMMABLE CONTROLLERS

USER'S MANUAL

Hardware Edition

MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE: TOKYO BUILDING, 2-7-3 MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN

| | |
|------------|-----------|
| MODEL | FX3U-HW-E |
| MODEL CODE | 09R516 |